



(BAT)
(IG)
(ACC)
(IG)
7. 5A
DOME
7. 5A
ECU–IG
No. 1
7. 5A
ACC
10A
INJ
H77(A), H78(B)
Junction
Connector
H78(B)
Junction
Connector
H79(A)
Junction
Connector
A27(A), D56(B)
ECM
#10
CANL
CANH
d1
Fuel Injection Assembly
No. 1
I22
Accessory Meter Assembly
B
IG
ACC
E
TX–
H115
Junction Connector
H24(A)
A/C Amplifier
Assembly
SG–2
TAM
A47
Junction Connector
A18
Ambient Temperature Sensor
(No. 1 Cooler Thermistor)
H85
Junction Connector
H1
H2


* 2 : w/ Electronic Modulated Air Suspension
* 3 : w/o Electronic Modulated Air Suspension
(BAT)
(IG)
5A
MET–B
7. 5A
MET
Speed Sensors
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CANH
CANL
A19
ABS and Traction
Actuator Assembly
H37
Combination Meter Assembly
Power Circuit
B
IG+
+B
IG
CANL
CANH
TX+
L
E3
E1
H119
Junction Connector
O41(A)
Junction Connector
Q1
Fuel Sender Gage Assembly
H85
Junction Connector
AH9
AH10
OH3
OH2
OQ2
H1
H2


A 18
Black

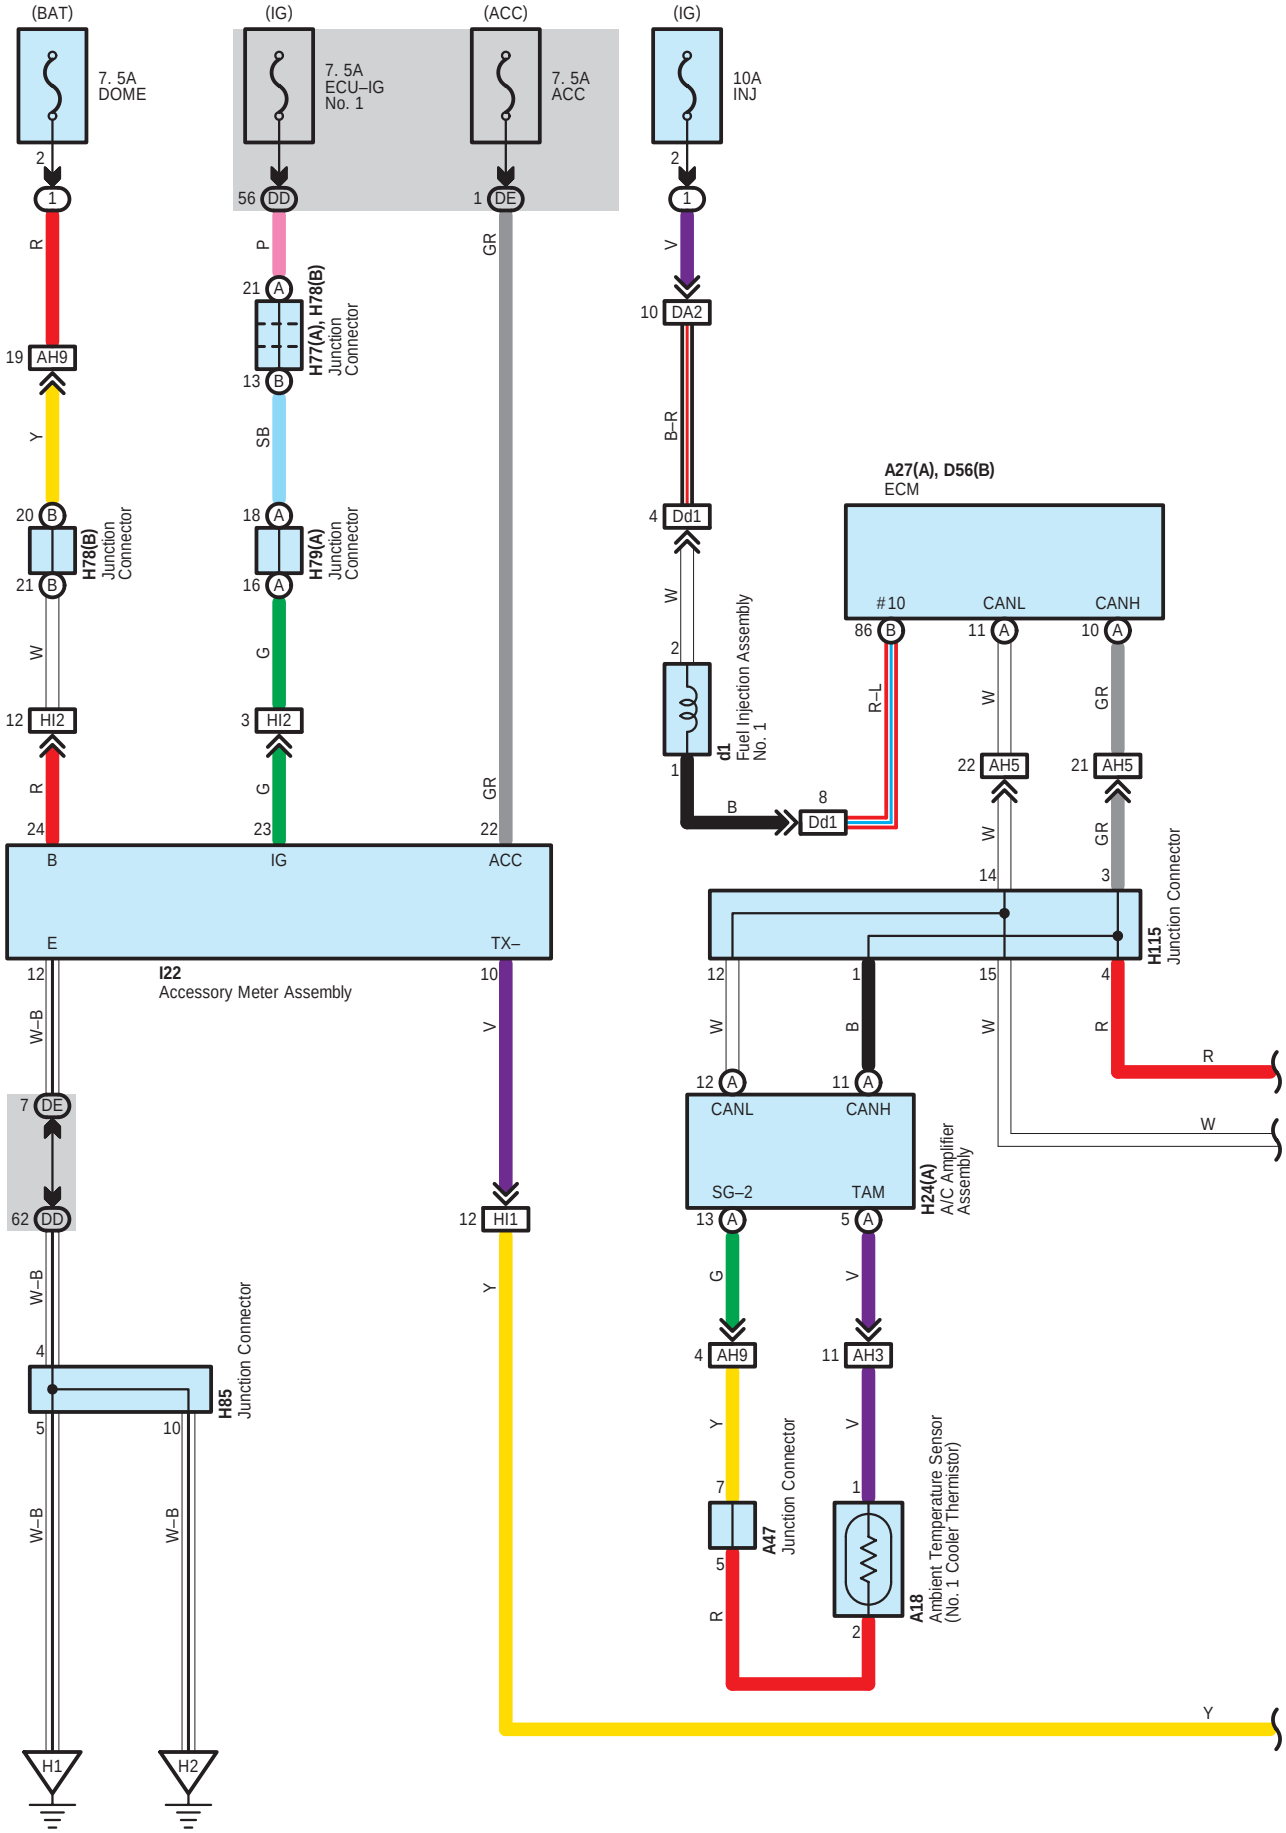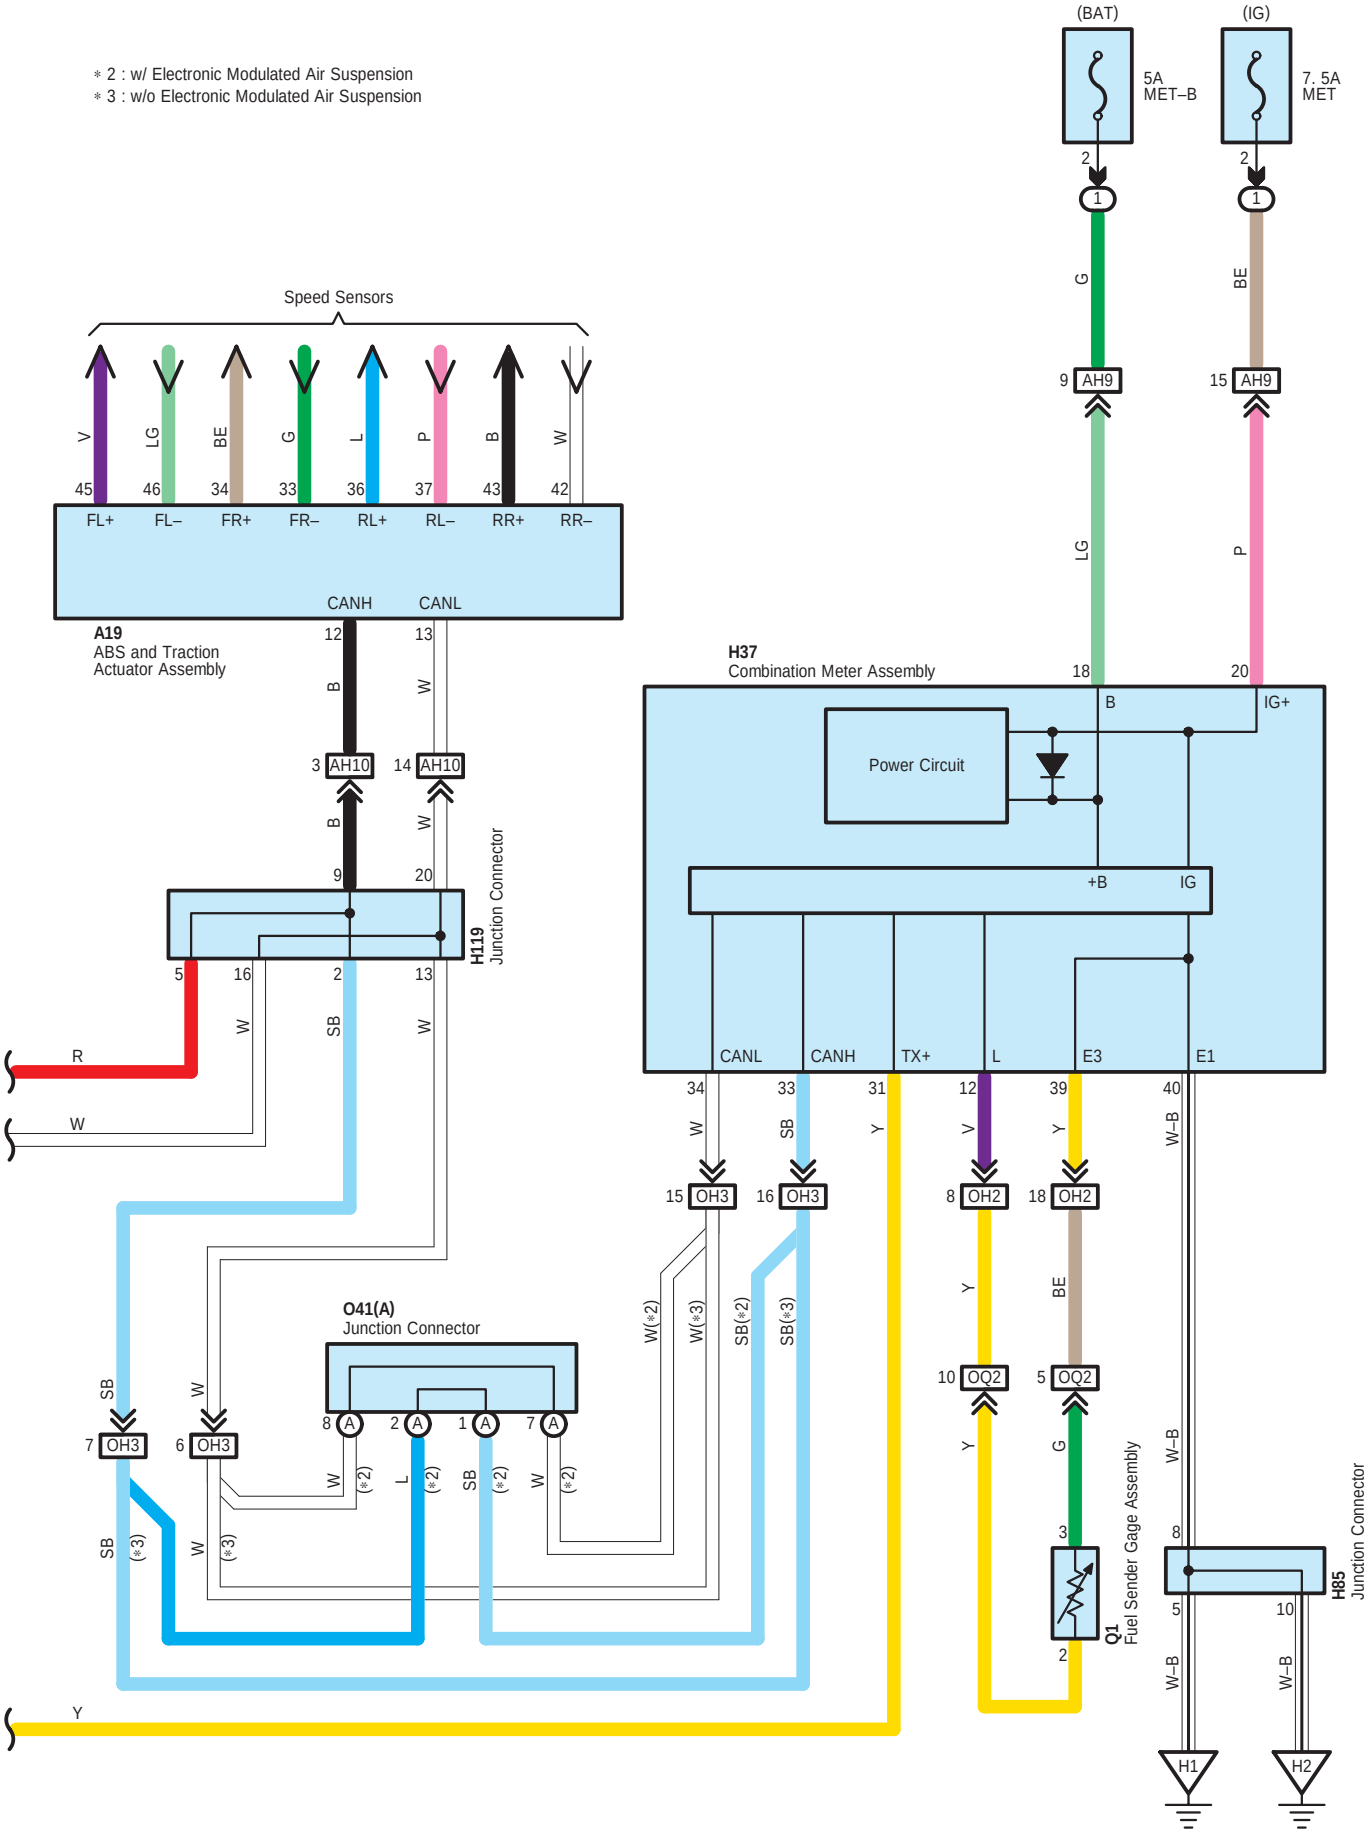


A 19
Black

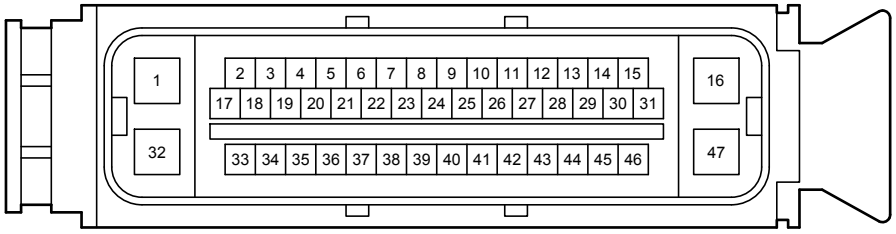


A 27
Black

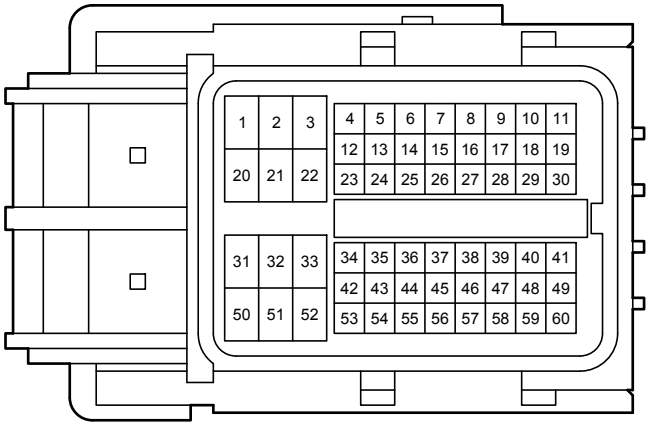


A 47
White

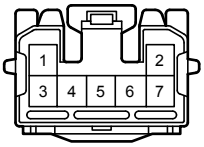


D 56
Black

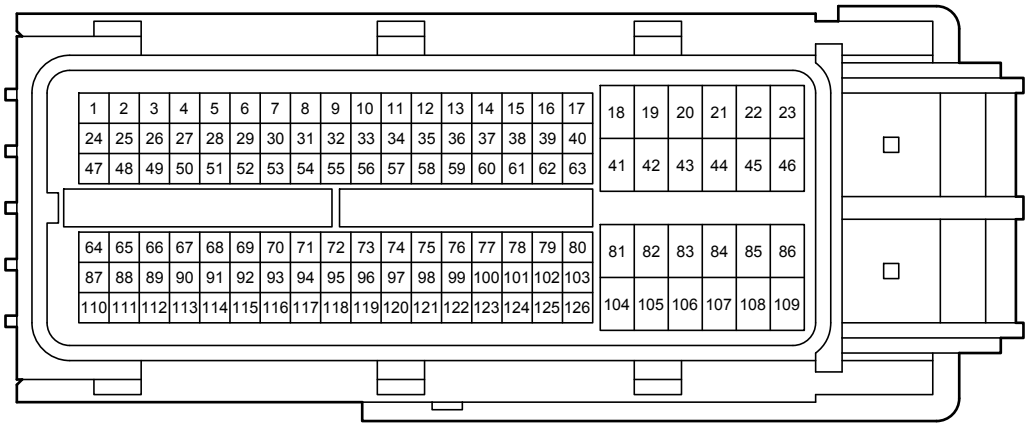


H 24
White

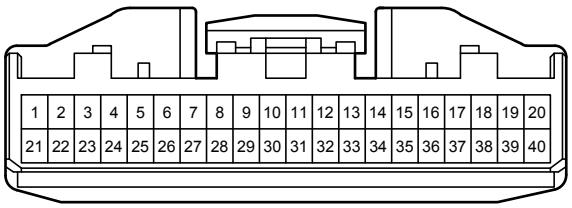


H 37
White

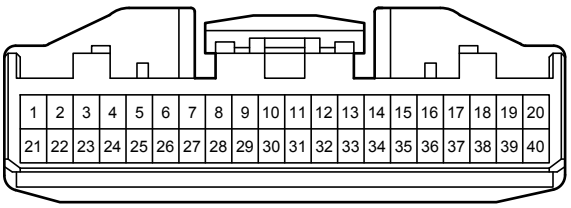


H 77
Black

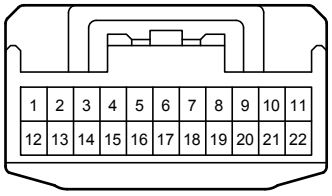


H 78
Black

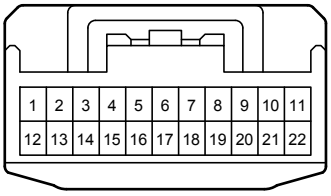


H 79
Black

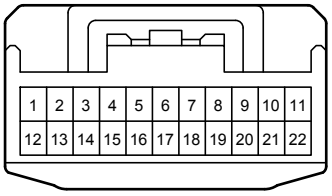


H 85
White

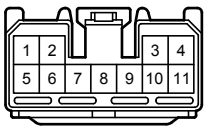


H115
Gray

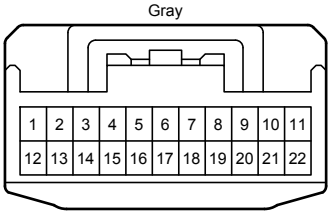


H119
Gray

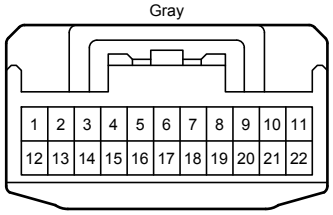

I 22
White

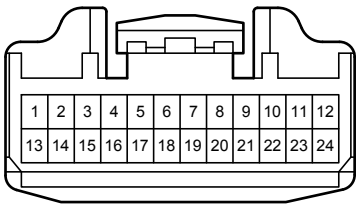


O 41
White

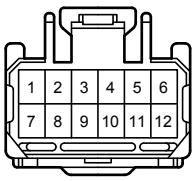


Q 1
White




d 1
Black

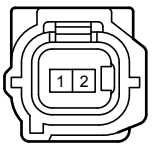


DD
White

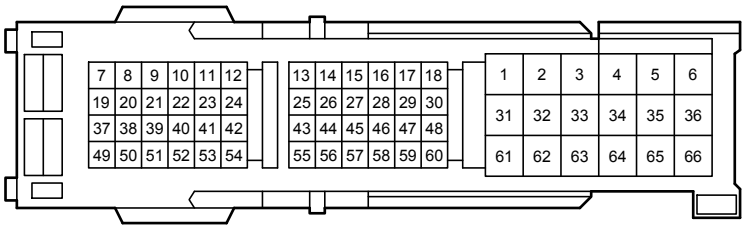


DE
White

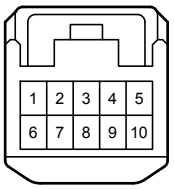


AH3
White

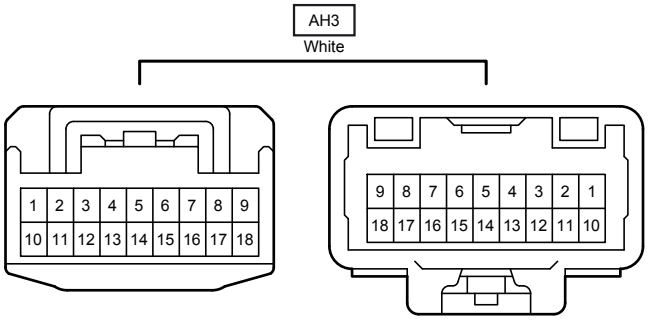


AH5
White

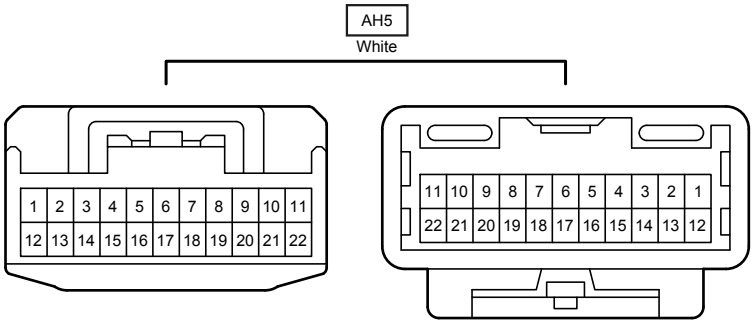


AH9
Gray

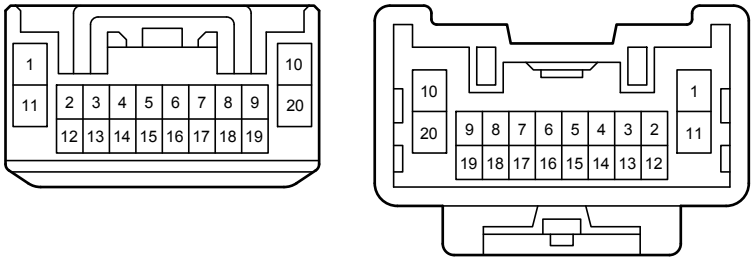


AH10
Gray

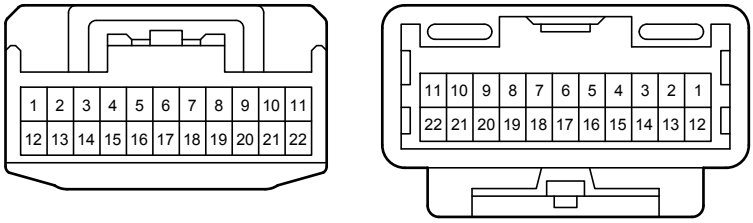


DA2
White

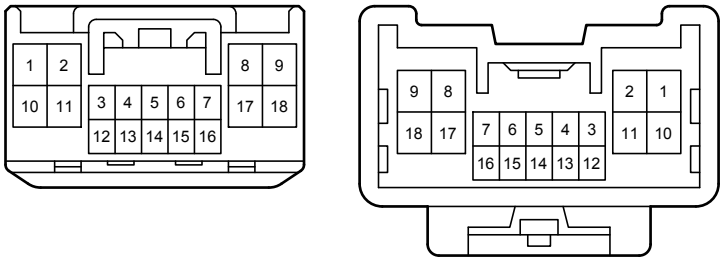


Dd1
Gray

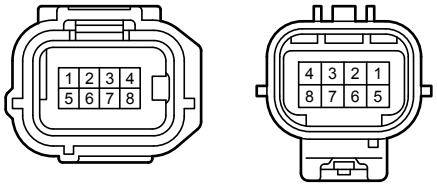


HI1
White

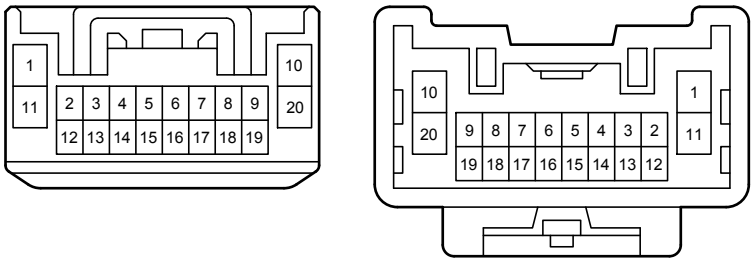


HI2
White

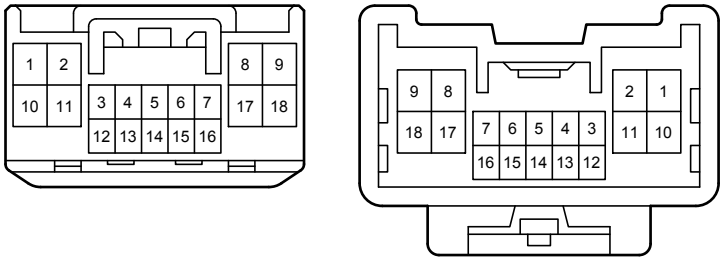

OH2
Black

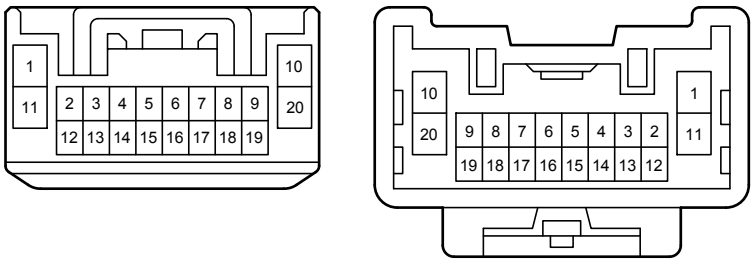

OH3
White

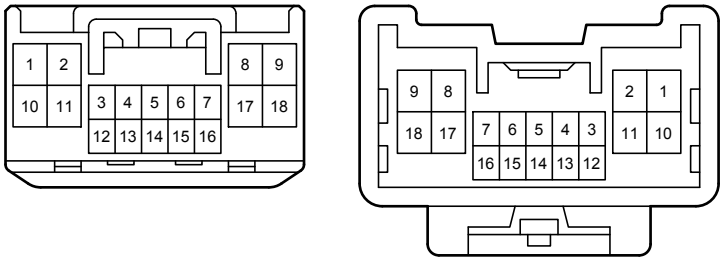

OQ2
Black

