




(BAT)
7. 5A
ECU–B1
(IG)
7. 5A
ECU–IG
No. 2
(BAT)
30A
POWER
No. 5
H88(A), H89(B)
Junction
Connector
H88(A)
Junction
Connector
BECU
SIG
BDR
V2(A), V3(B)
Back Door ECU
HSW–
HSW+
GND
BDCY
CTYE
V6
Back Door Opener Switch Assembly
Courtesy
ACT+
ACT–
V5
With Motor Back
Door Lock Assembly
V19(A)
Junction Connector
O40
Junction Connector
O1



(BAT)
(ACC)
(IG)
(BAT)
7. 5A ECU–B1
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
H2(B), H4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND2
GND1
6
15
22
26
4
5
2
1
13
DB
62
DD
GR
GR
W–B
W–B
4
H85
Junction Connector
5
10
W–B
W–B
B
B
H1
H2

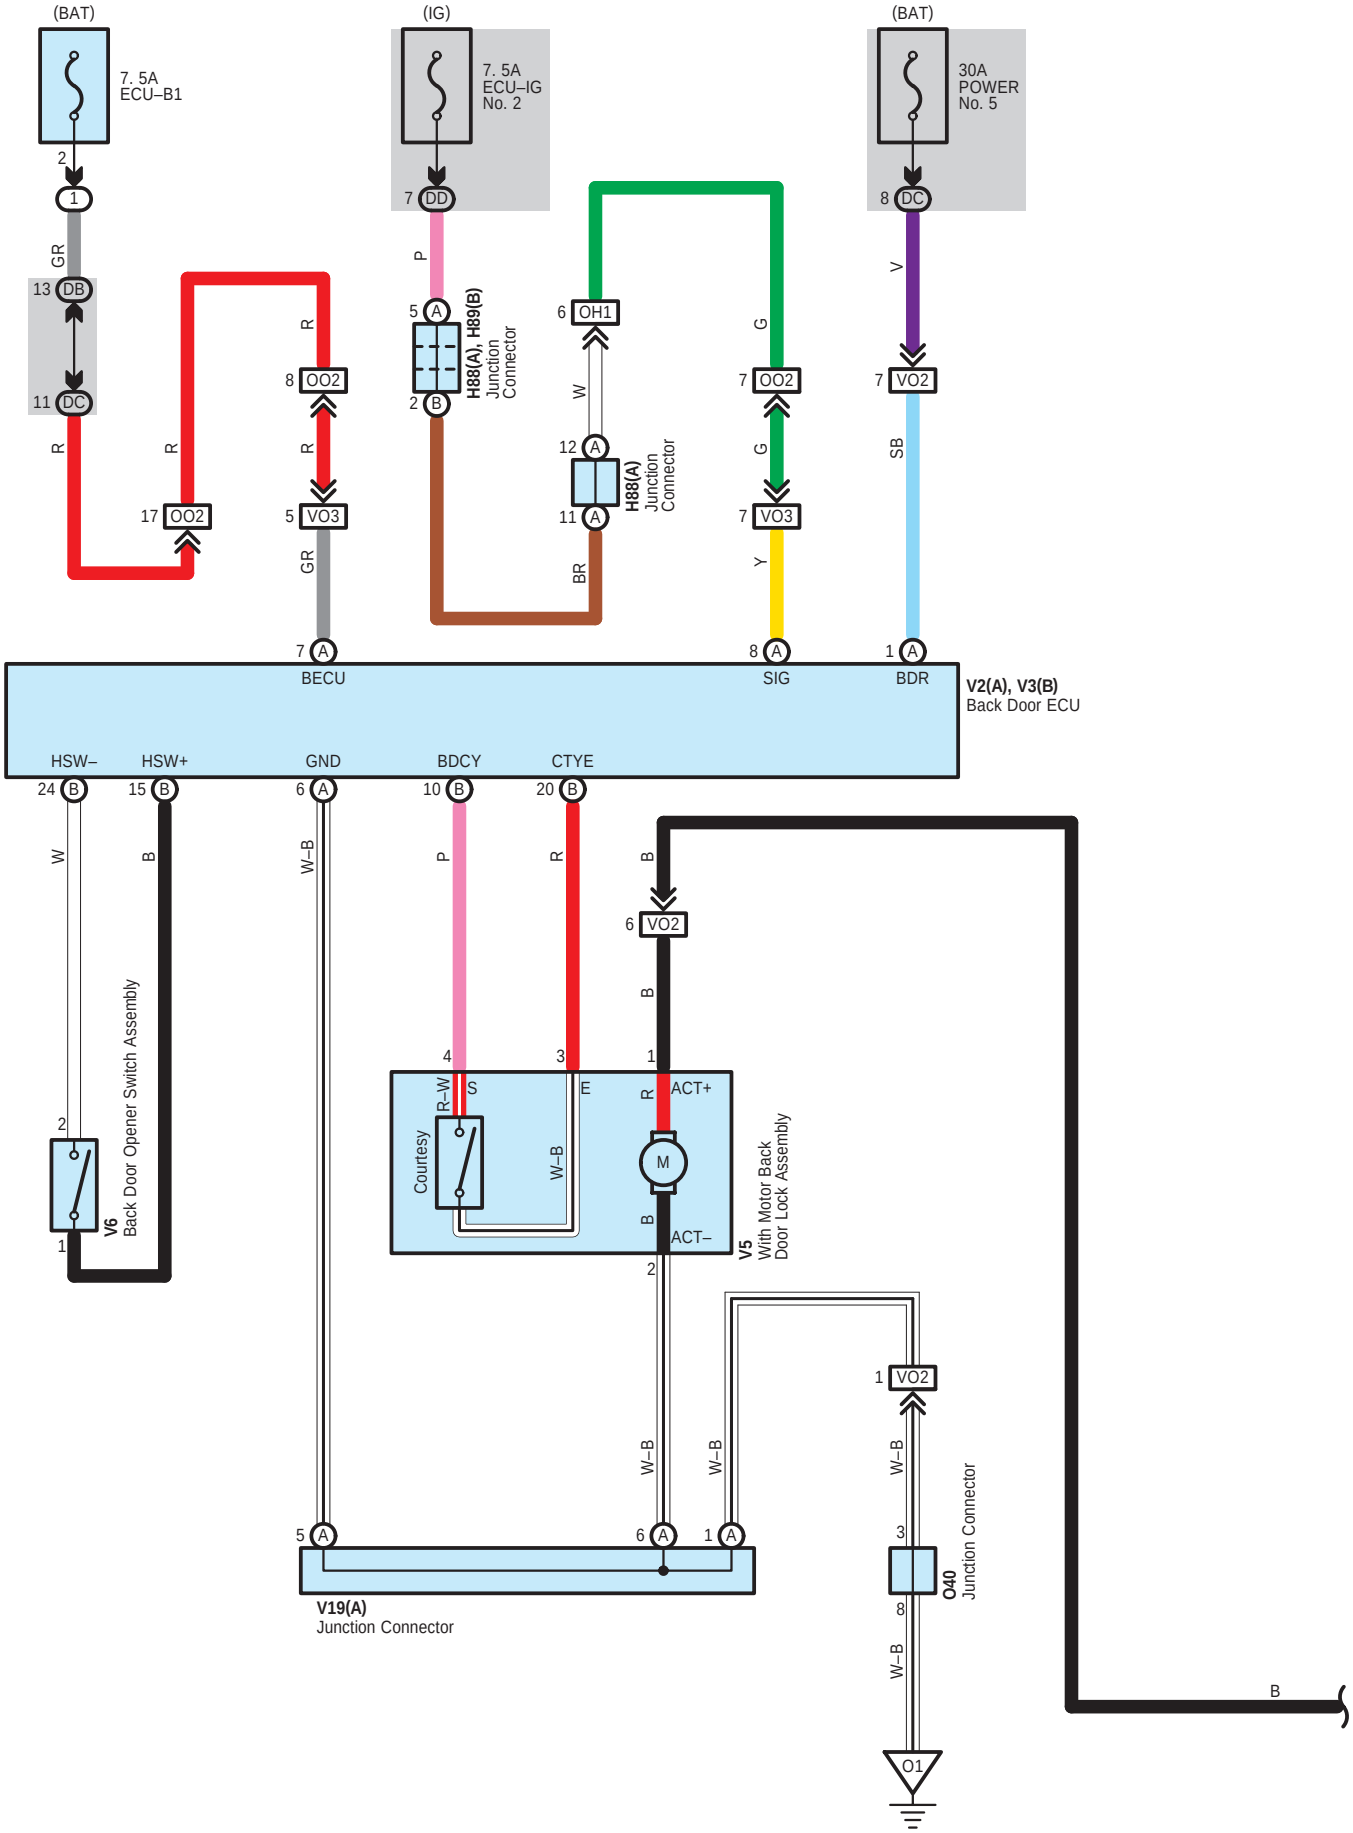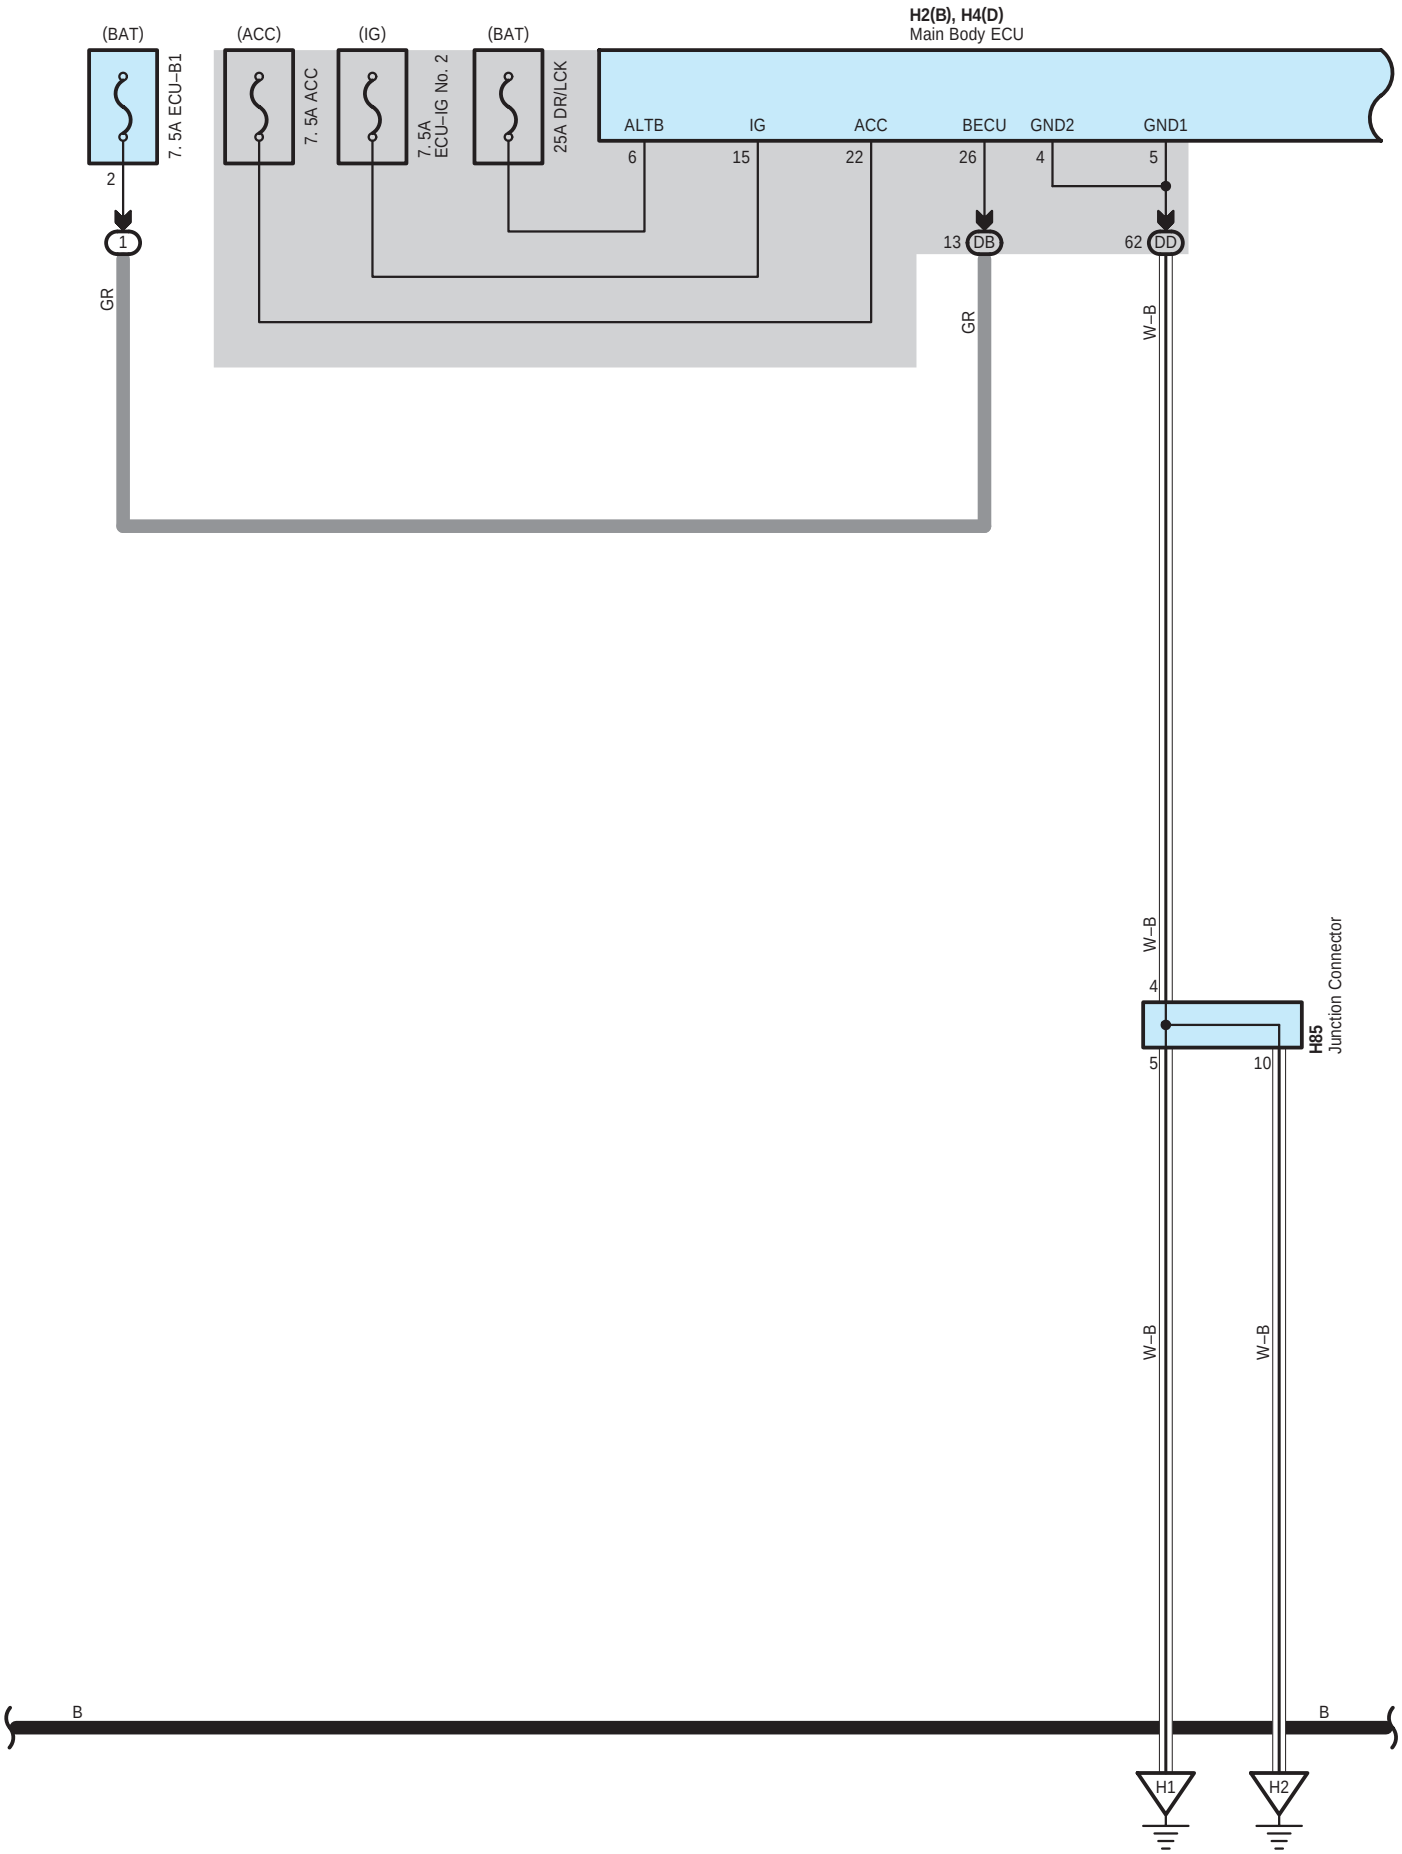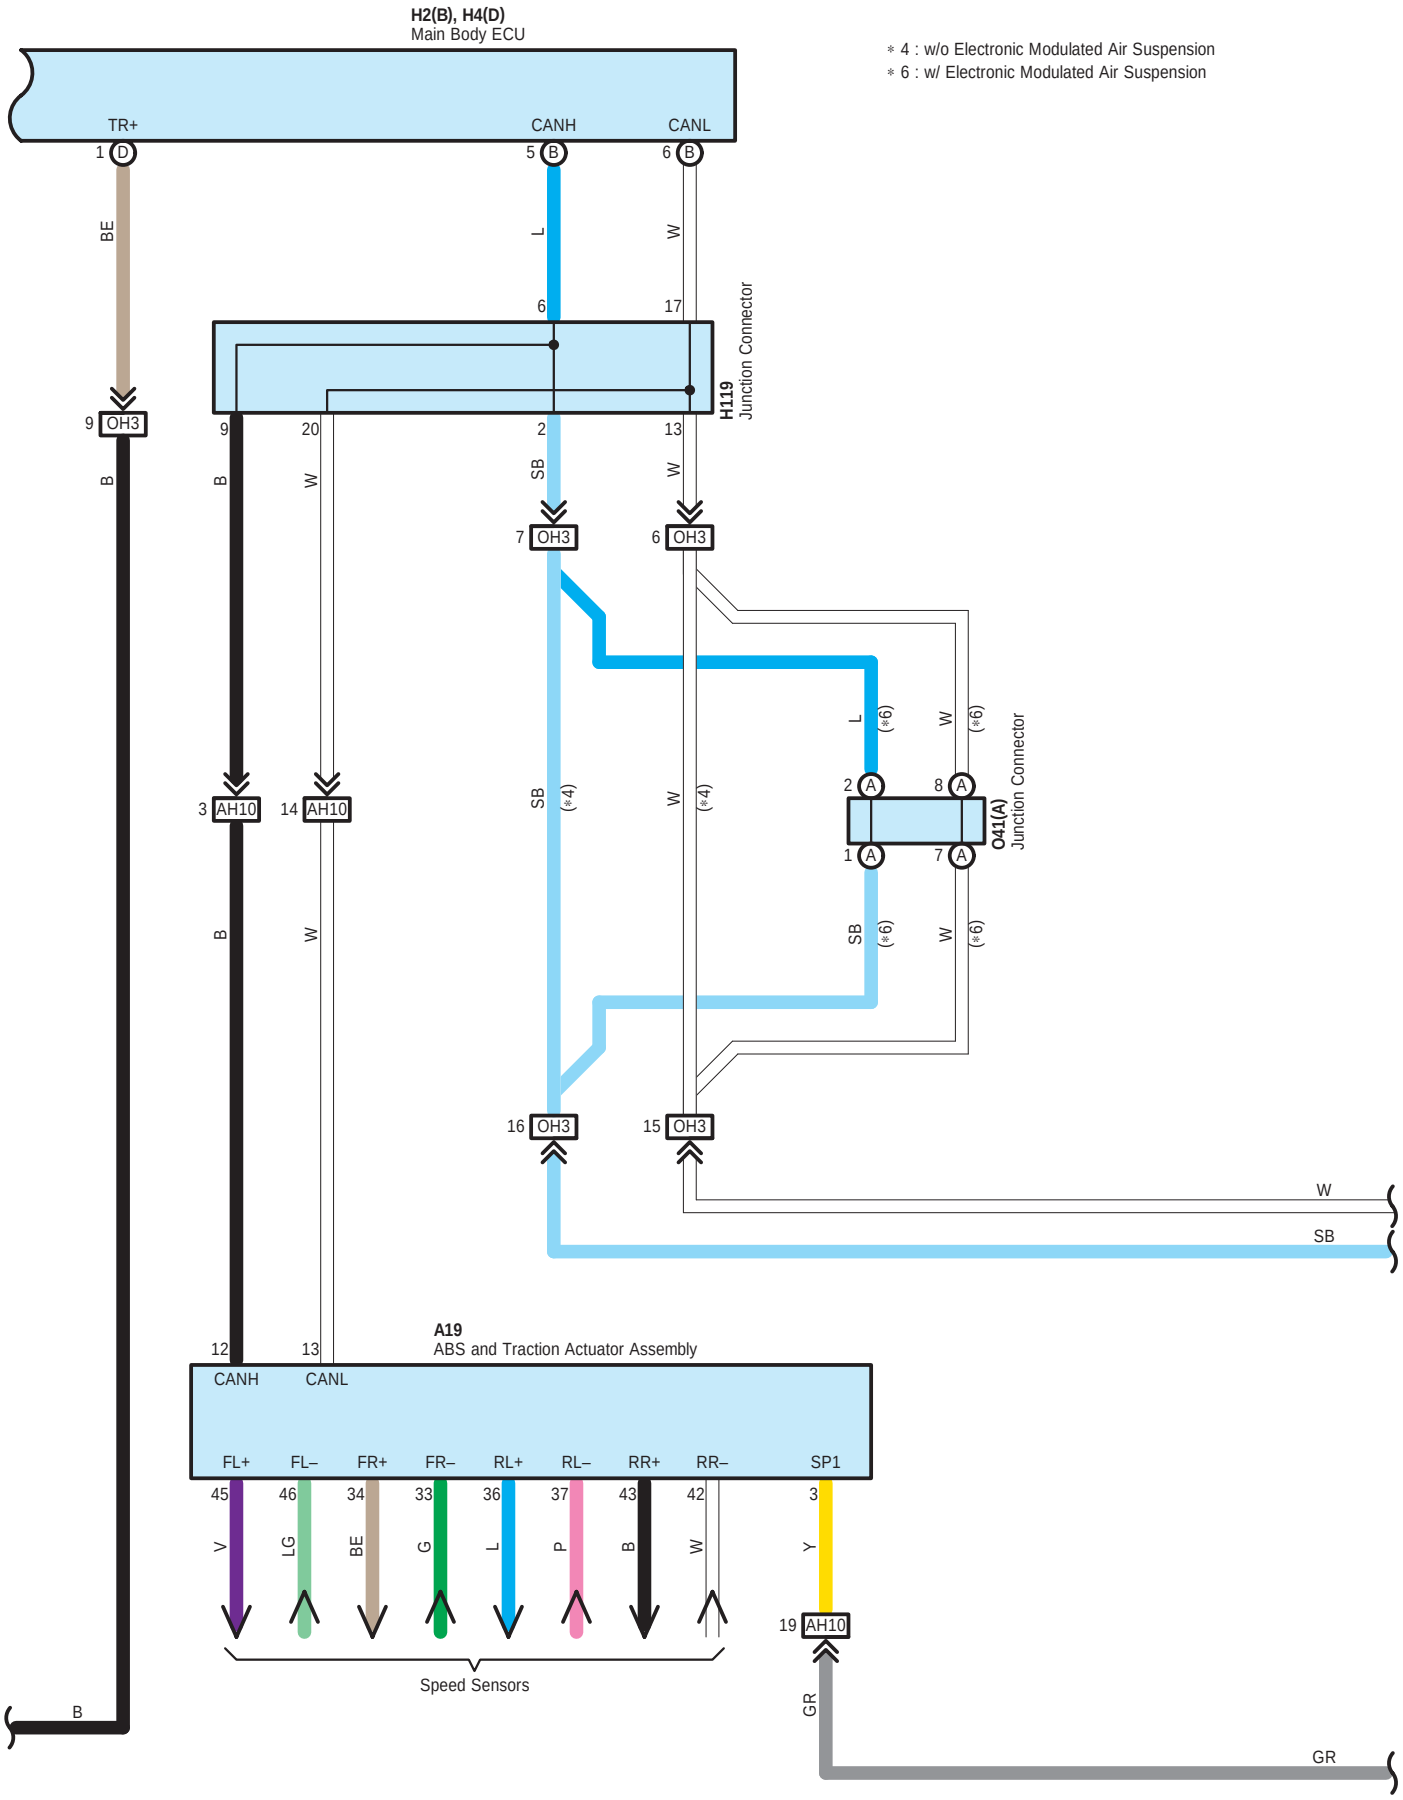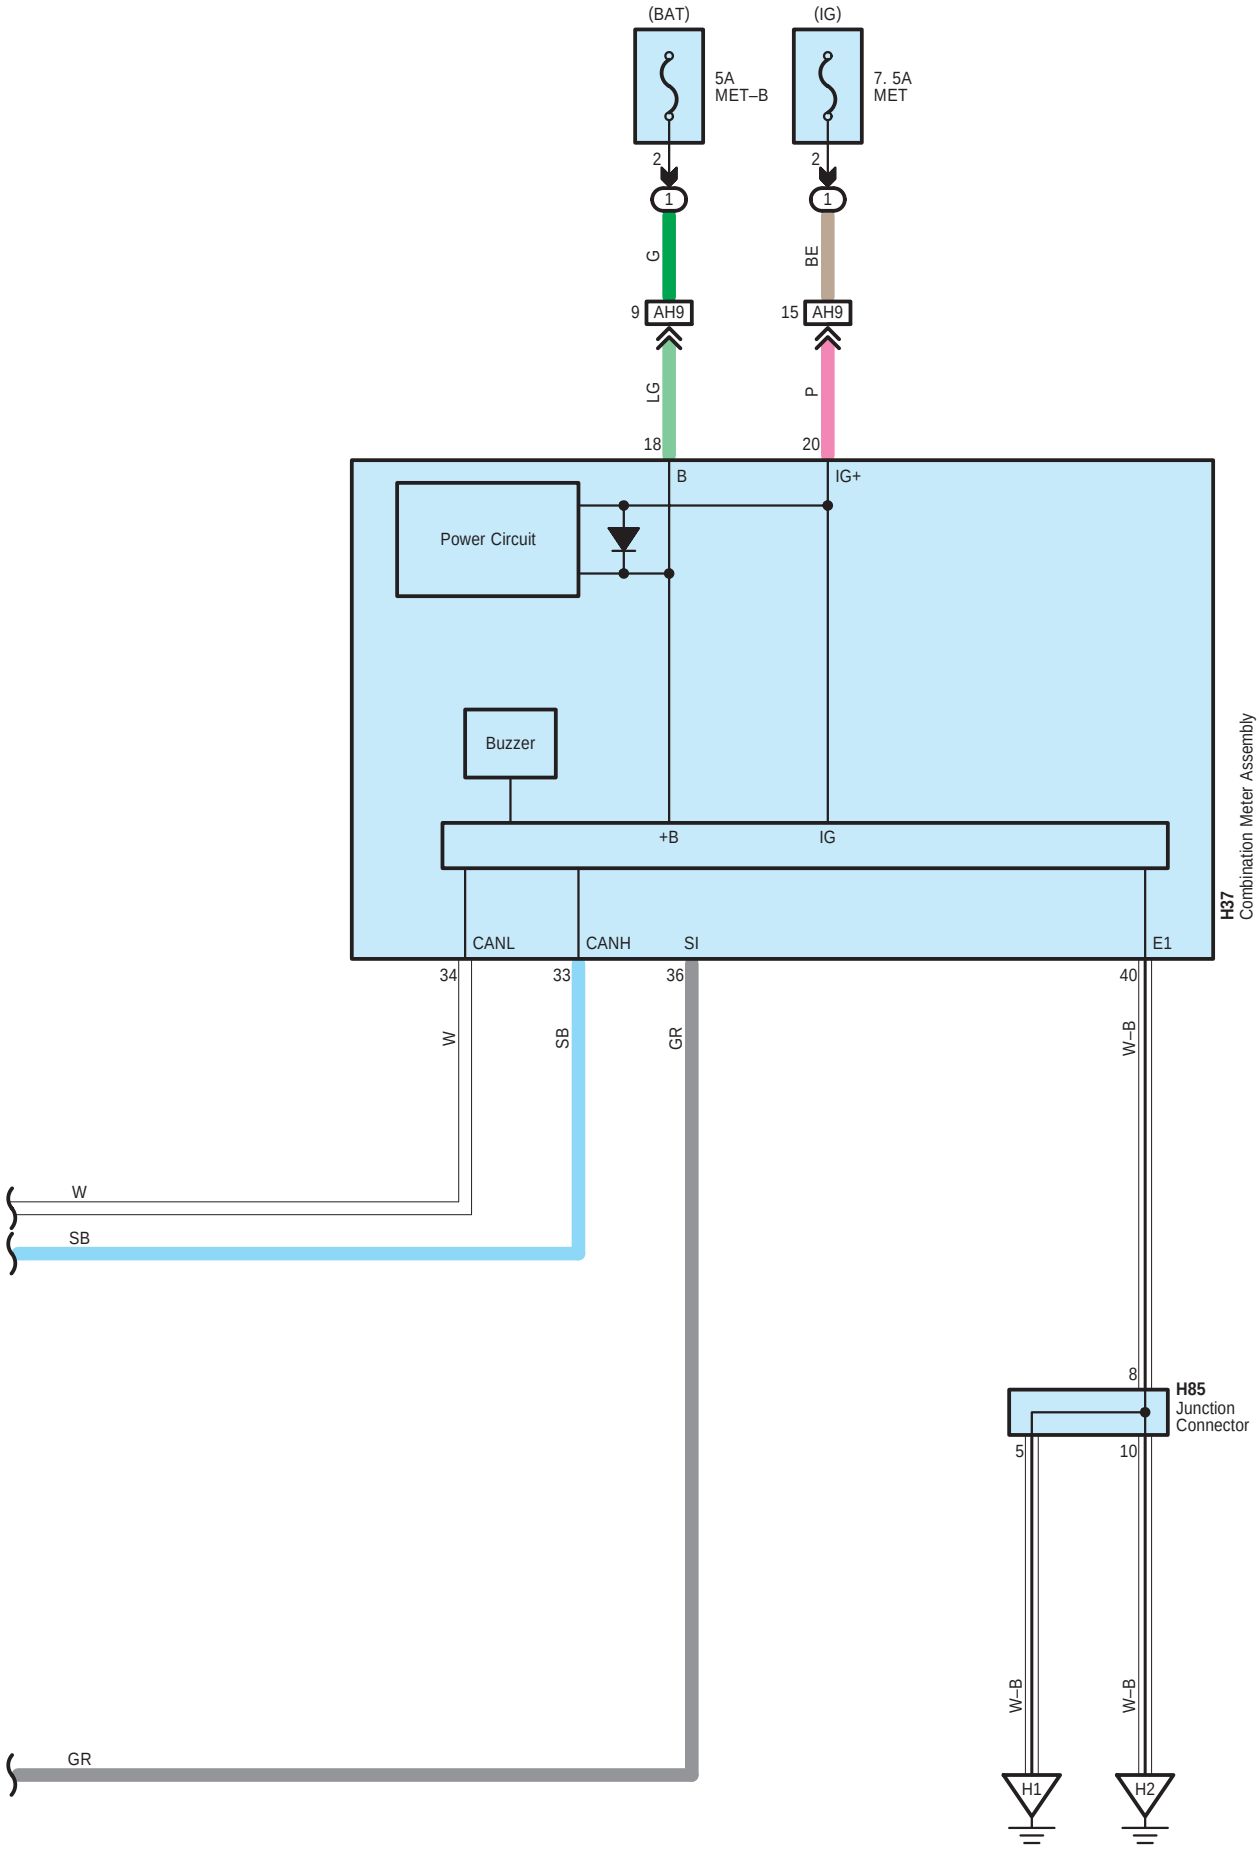


＊4 : w/o Electronic Modulated Air Suspension
＊6 : w/ Electronic Modulated Air Suspension


(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
1
G
BE
9 AH9
15 AH9
LG
P
18
20
B
IG+
Power Circuit
Buzzer
+B
IG
CANL
CANH
SI
E1
H37
Combination Meter Assembly
34
33
36
40
W
SB
GR
W–B
W
SB
GR
8
H85
Junction
Connector
5
10
W–B
W–B
H1
H2


A 19
Black

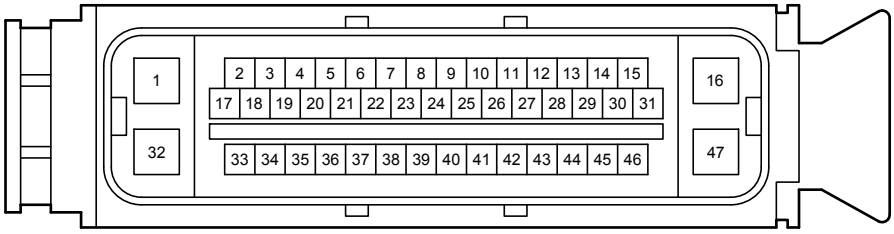


H 2
White

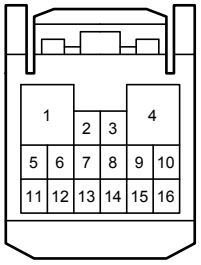


H 4
White

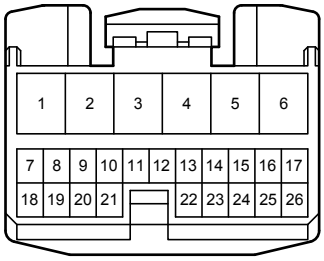


H 37
White

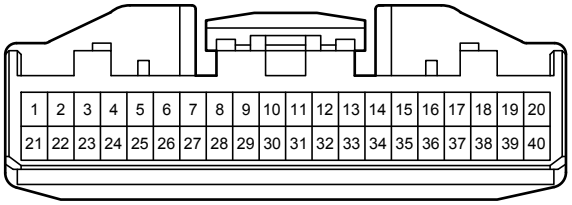


H 85
White

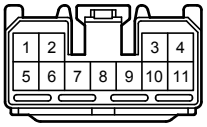


H 88
White

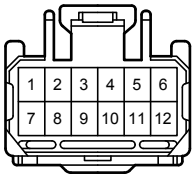


H 89
White

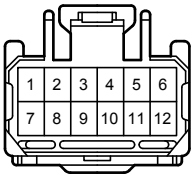


H119
Gray

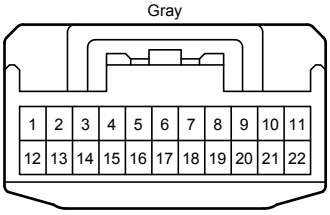


O 40
White

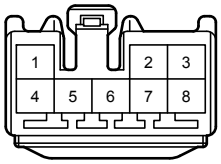


O 41
White

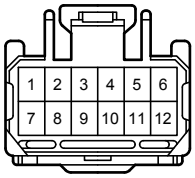


V 2
White

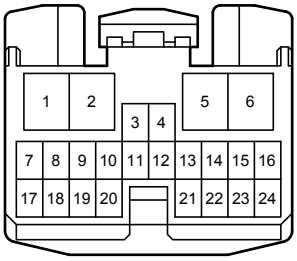


V 3
White

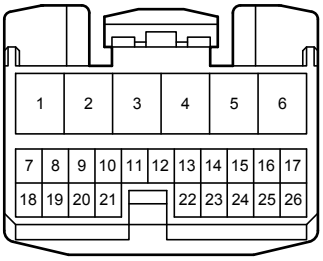


V 5
White

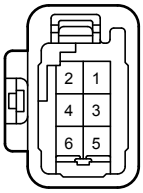


V 6
White

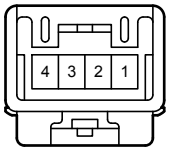


V 19
Gray

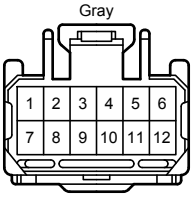


DB
White

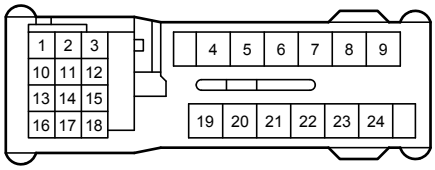


DC
White

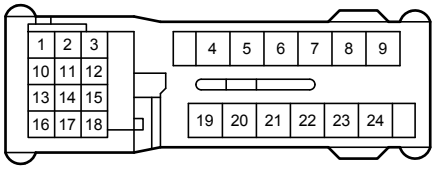


DD
White

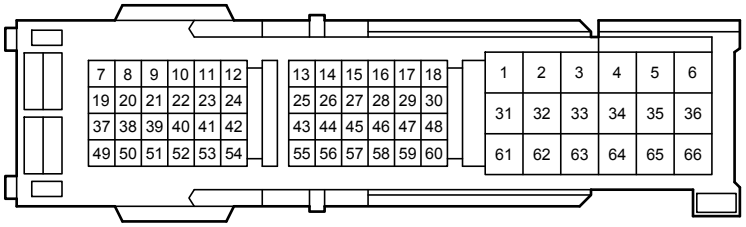


AH9
Gray

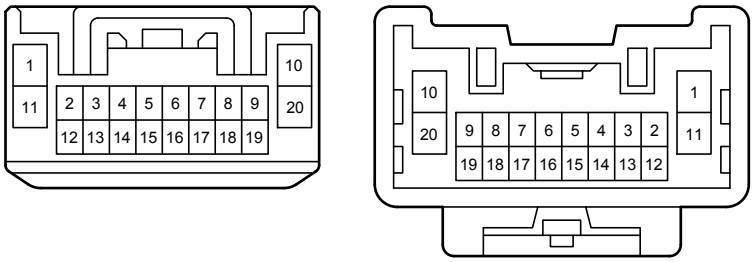


AH10
Gray

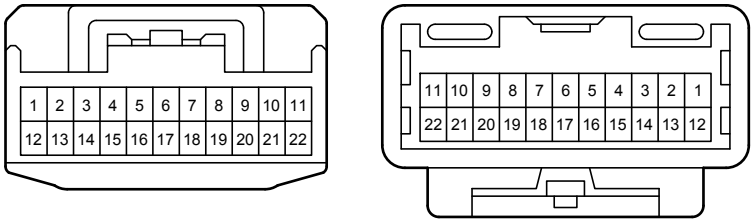


OH1
Black

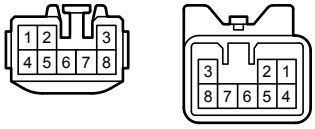


OH3
White

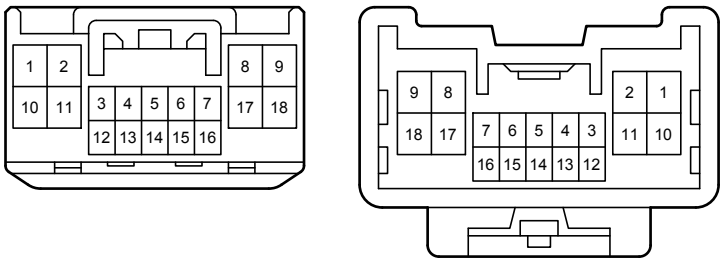


OO2
White

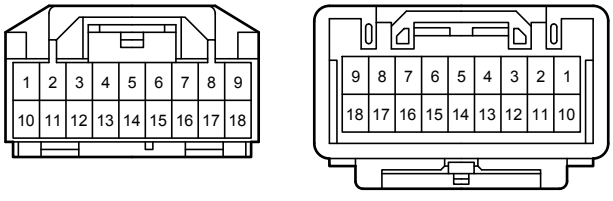

VO2
White

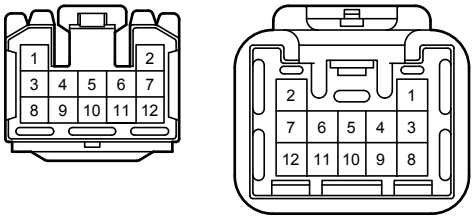

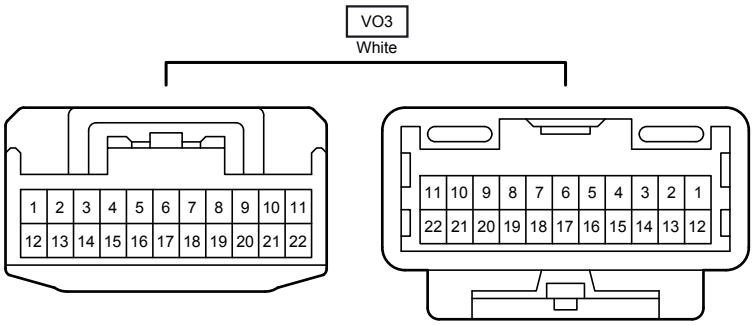
VO3
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12