




H67
A/C Amplifier Assembly
SHP+
AD–5
SG–5
S5–2
AD–4
SHD+
10
16
6
8
15
9
BE
W
BR
SB
GR
W
3
HP2
6
OH2
V
B
5
PW1
20
9
4
OX1
H126
Junction Connector
BE
X13
Seat Cushion Climate
Control Blower LH
3
SIGN
21
22
10
11
CTB
GND
IG
L
G
Y
B
SB
2
4
1
B
G
G
W–B
2
IG
GND
X14
Seat Back Climate
Control Blower LH
1
W–B
W–B
GR
SB
Y
B
G
W
L



(IG)
V
V
20A
SEAT–HTR
5 DD
6 DC
X12
Front Seat Heater Control Sub–Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
(IG)
7. 5A
LH–IG
55 DD
GR
9 OX1
G
SB
H77(A), H78(B)
Junction
Connector
10 A
1 B
2 B
4
6
5
1
G
W–B
Y
P
2 OX1
1 OX1
V
P
11 OX1
2 OH2
3 OH2
W–B
W–B
L
P
6
2
8
B
V
V
G
RV
SW
IG
H47
Front Seat Heater Switch LH
BLLH
SW+
SW–
E
5
10
4
3
GR
SB
Y
W–B
W–B
W–B
2
H85
Junction
Connector
5
10
W–B
W–B
GR
SB
Y
B
G
W
L
B
G
W
L
O1
H1
H2


W8
Front Seat Heater Control Sub–Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
SWR
THR
E
B1
V
5 HP1
Y
2 PW2
P
1
5
6
4
R
LG
W–B
2 PW1
1 PW1
L
W
10 HP2
11 HP2
BE
GR
4
10
P
W14
Junction Connector
13
4
10
9
W–B
W–B
W–B
1
GND
IG
W17
Seat Back Climate
Control Blower RH
2
B
3 PW2
4
2
1
GND
CTB
IG
SIGN
3
L
W16
Seat Cushion Climate
Control Blower RH
V
12
IG
SW
RV
H49
Front Seat Heater Switch RH
E
SVS5
SVSG
BLRH
3
14
6
7
W–B
B
G
W
L
P1


H 47
Black

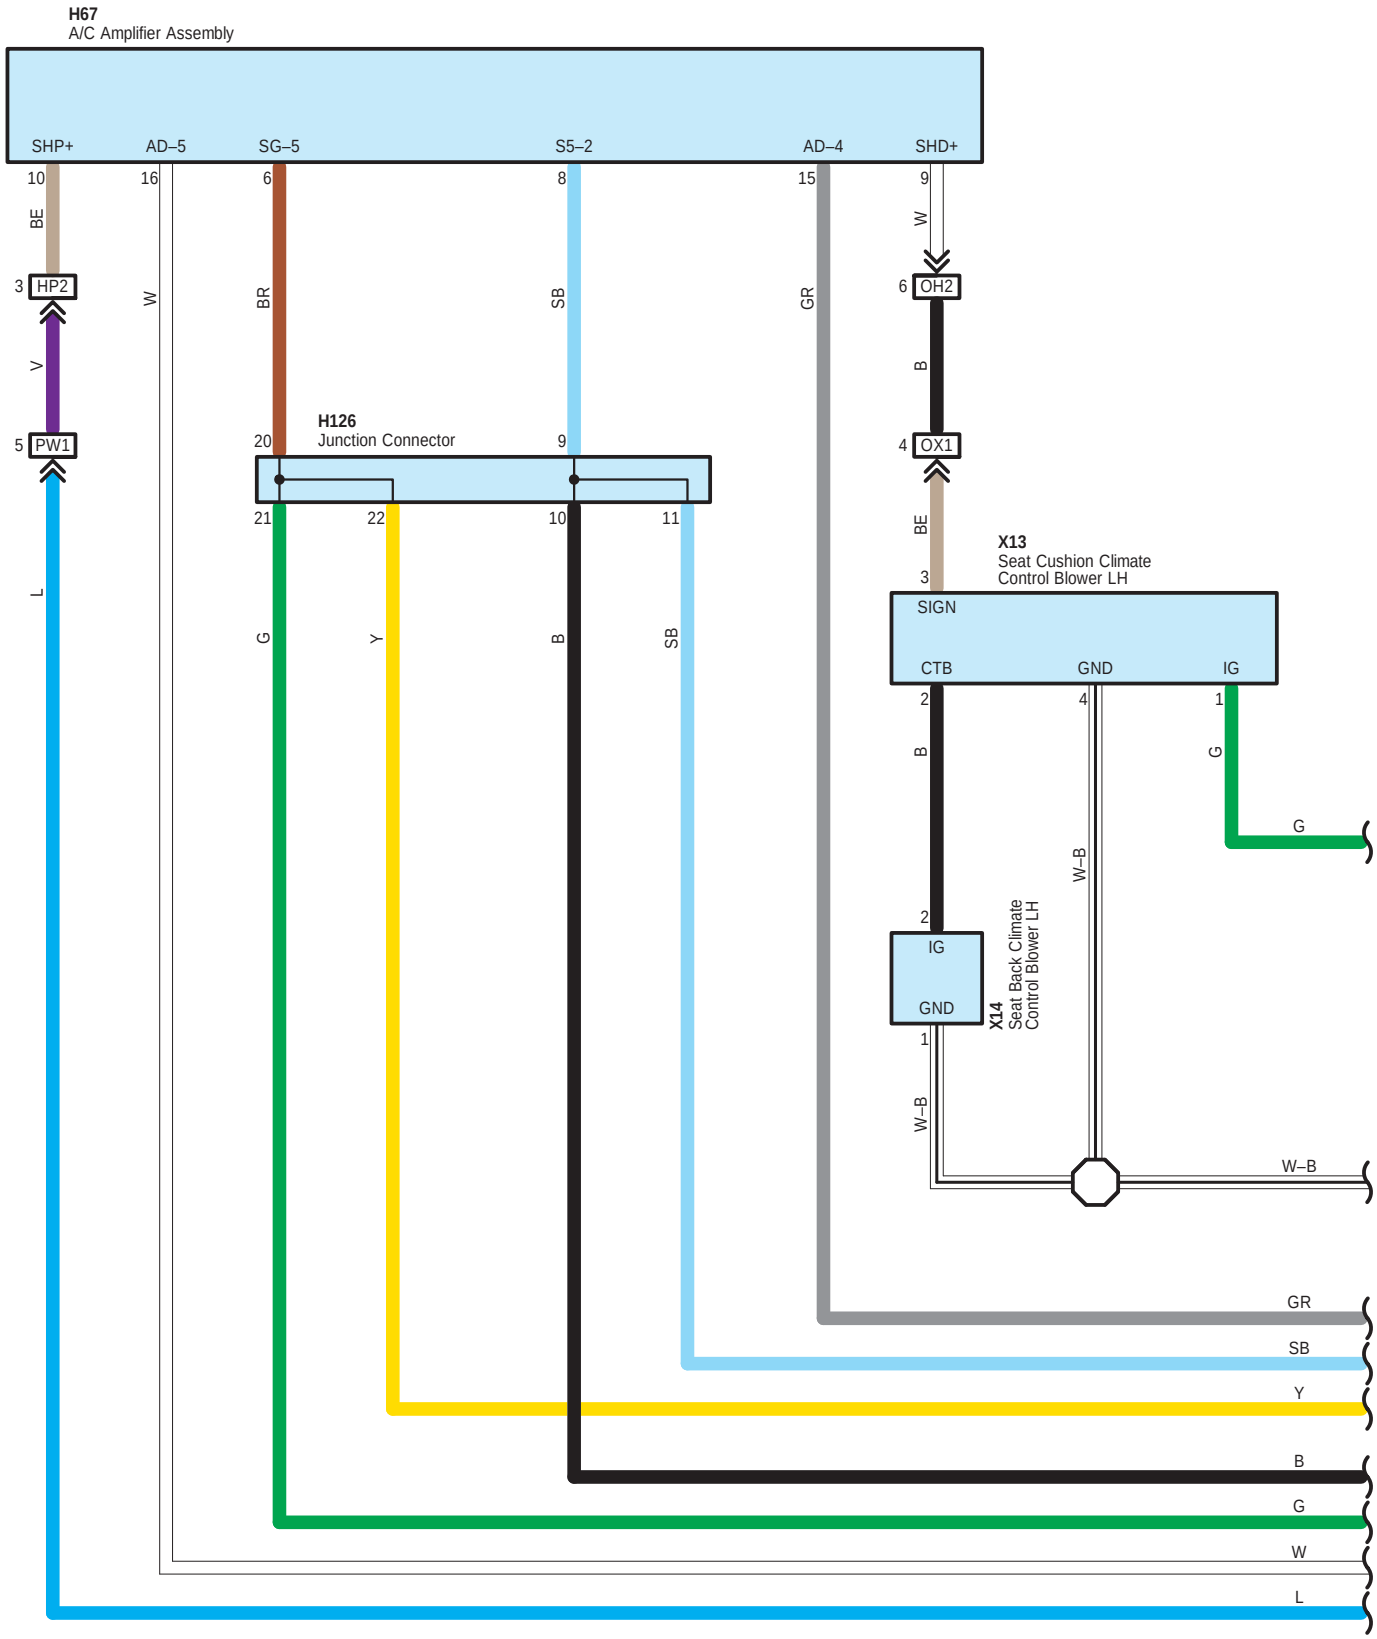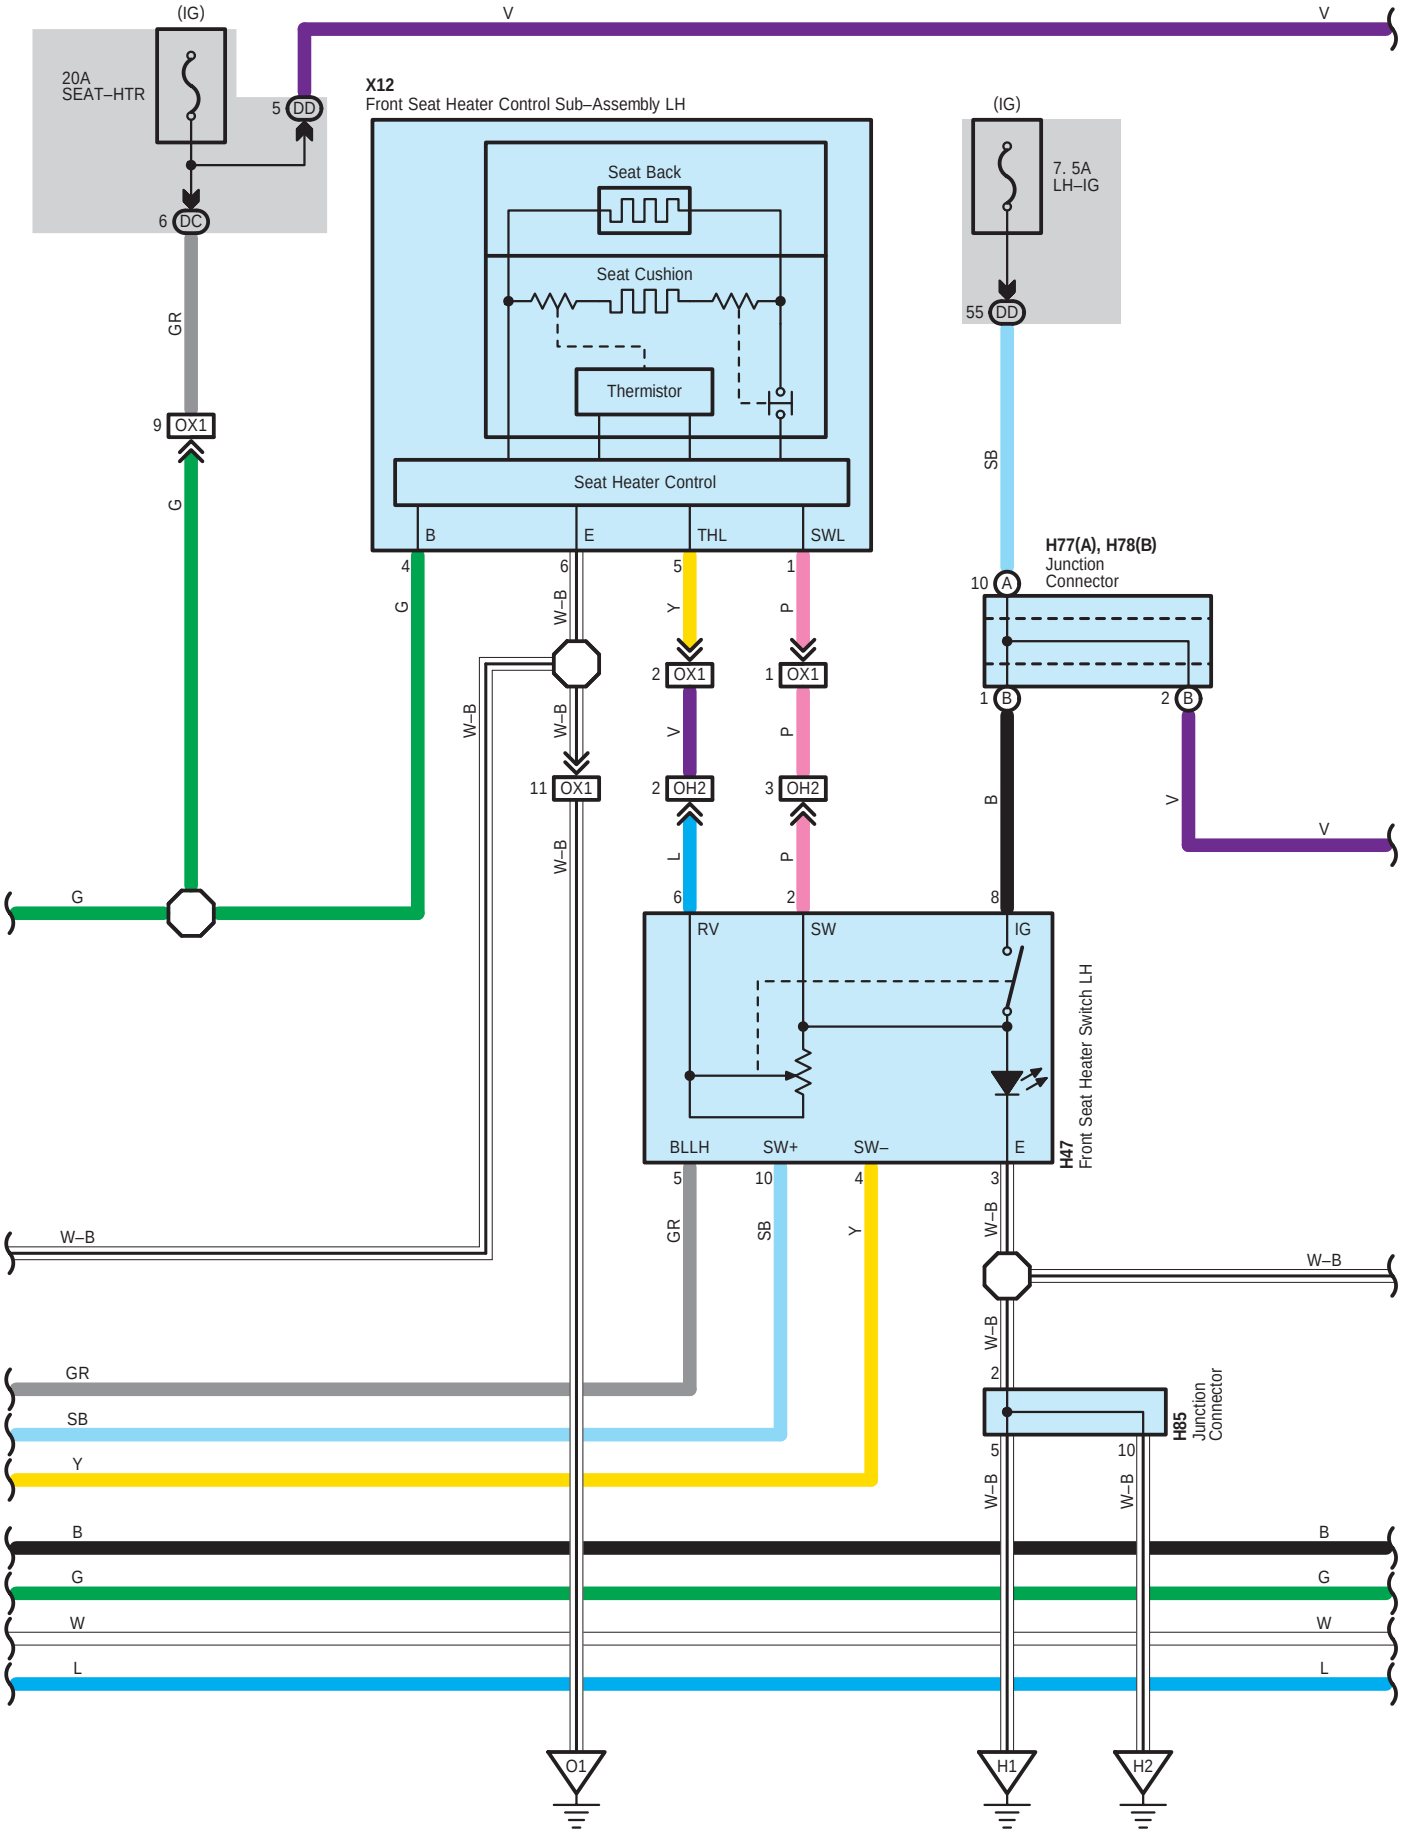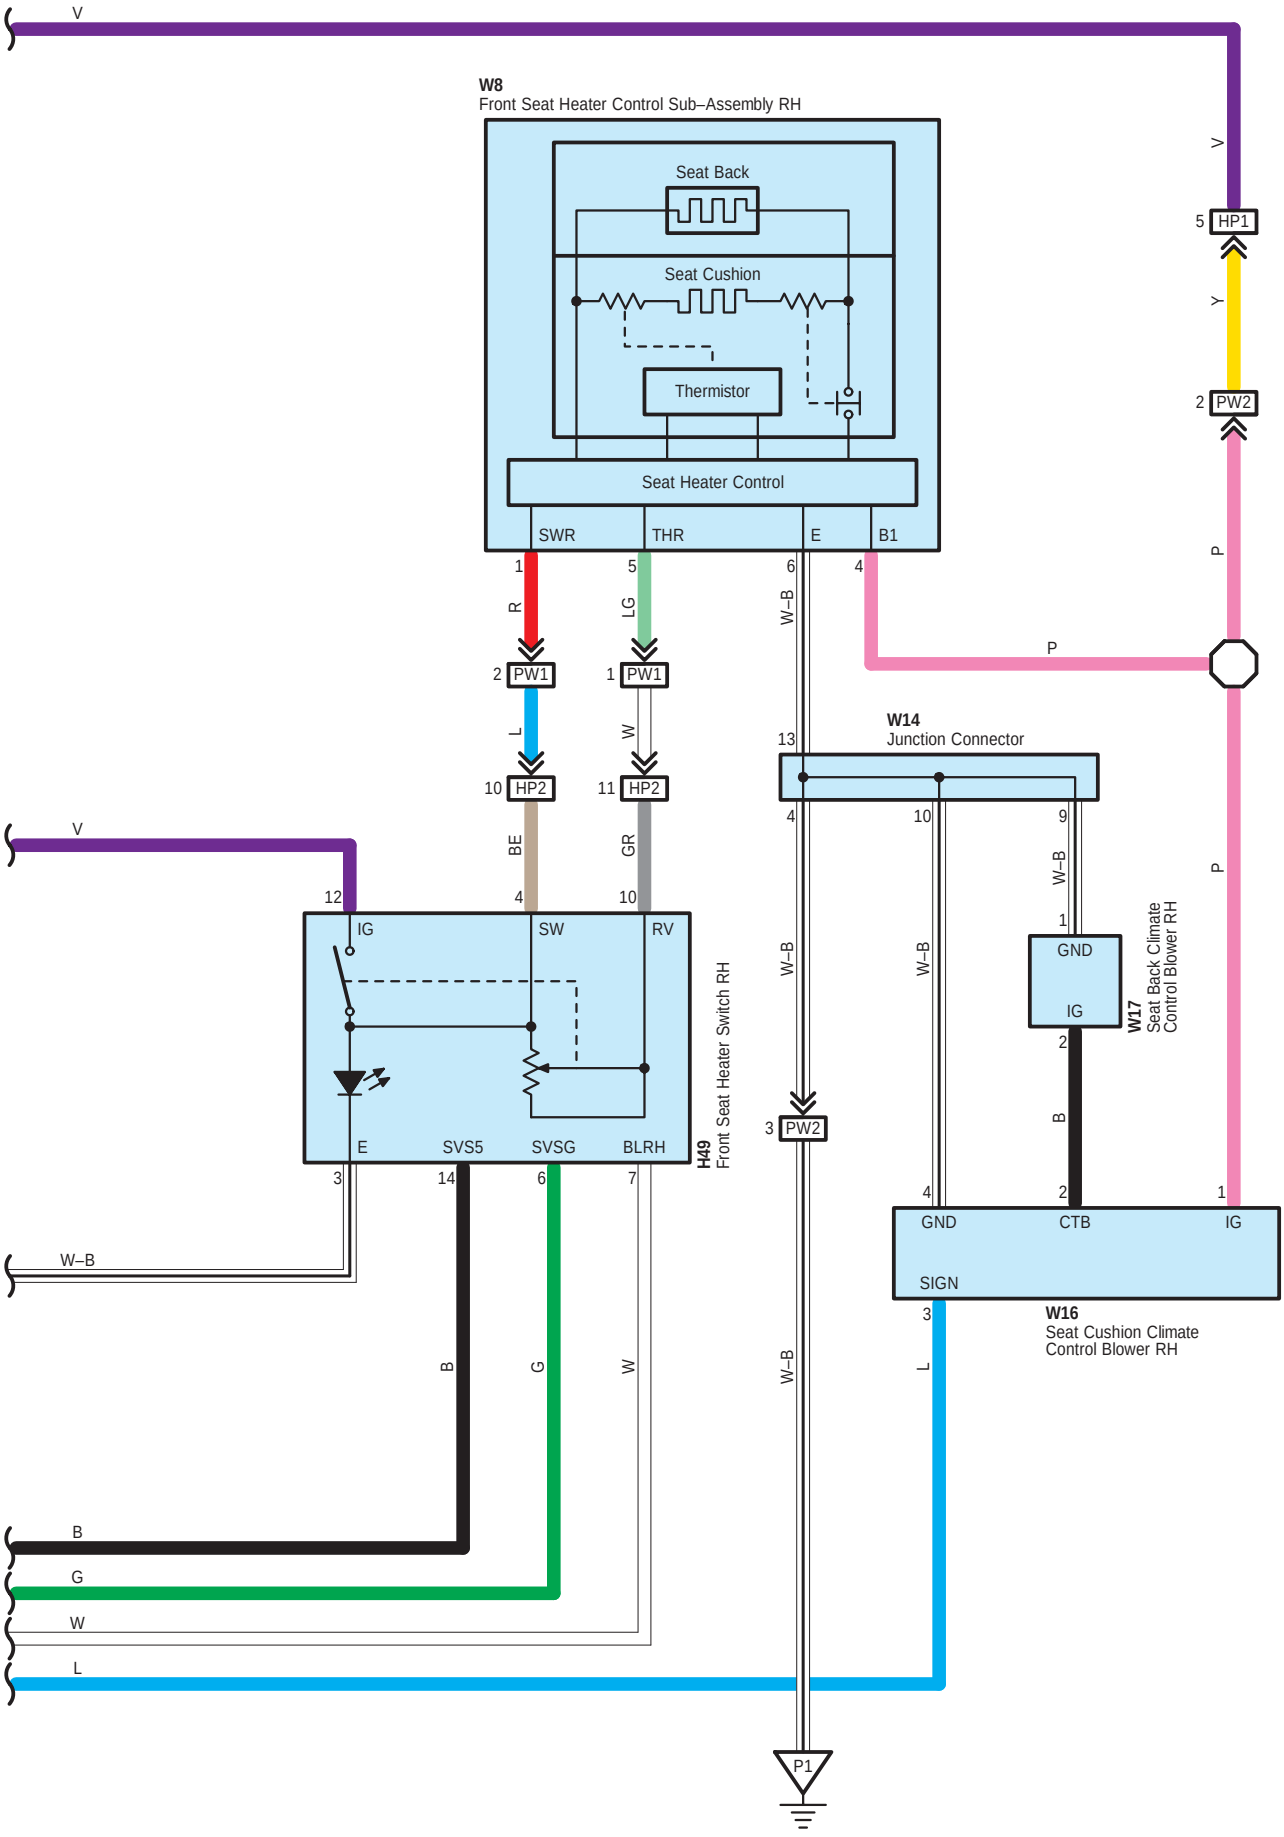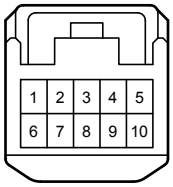


H 49
Black

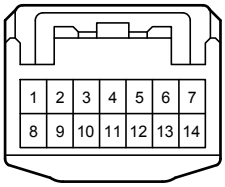


H 67
White

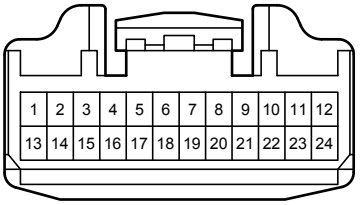


H 77
Black

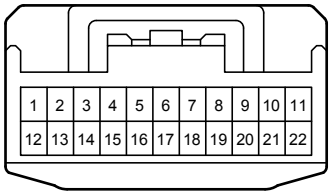


H 78
Black

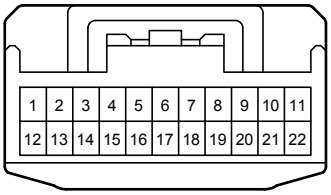

H 85
White

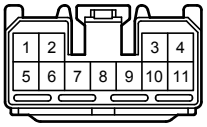


H126
Black

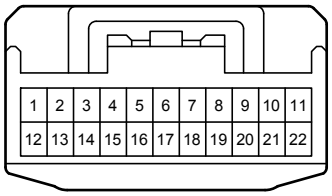


W 8
White




W 14
White

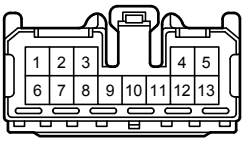

W 16
Black

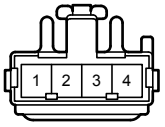


W 17
Black

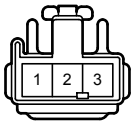


X 12
White




X 13
Black

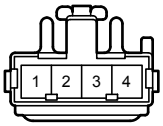


X 14
Black

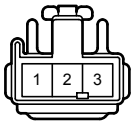


DC
White

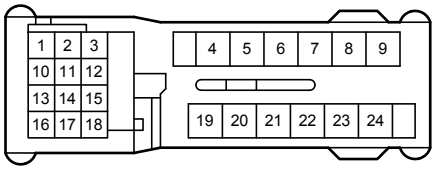


DD
White

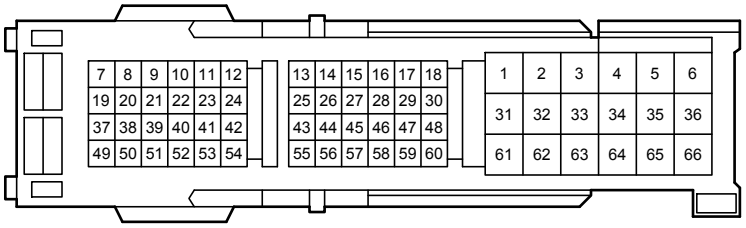


HP1
Gray

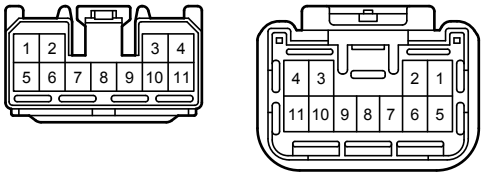


HP2
Gray

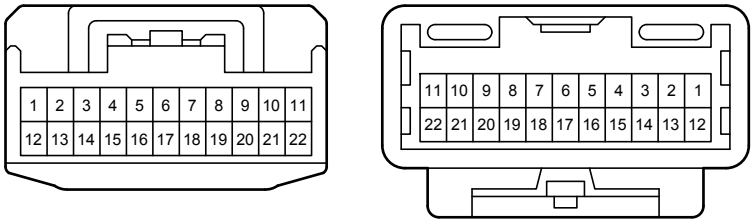


OH2
Black

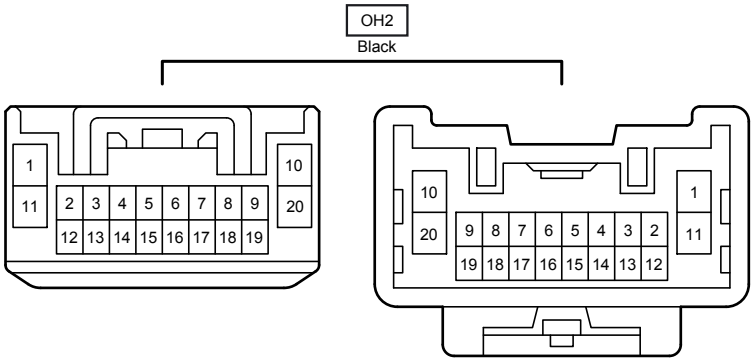

OX1
White

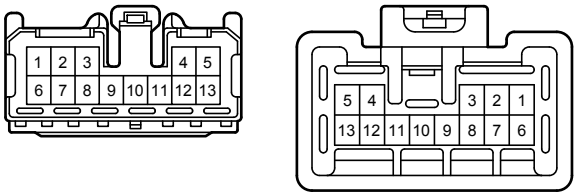

PW1
White

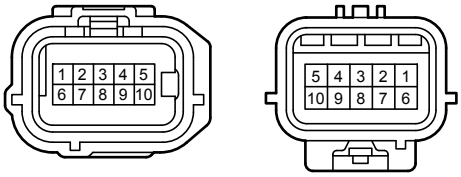

PW2
White

