




(BAT)
5A
MET–B
2
1
G
9 AH9
LG
18
H37
Combination Meter Assembly
B
Power Circuit
DOT MATRIX LCD
(Odometer &
Other Information)
Buzzer
Speedometer
Tachometer
A/T Oil
Temperature
Fuel
Temperature
Oil
Volt
(*1)
+B
IG
(*2)
LCD
(Odometer)
LCD
(Sequential
Shift)
L
E3
E1
A/B
E
RSET
12
V
8 OH2
Y
10 OQ2
Y
39
Y
18 OH2
BE
5 OQ2
G
3
2
Q1
Fuel Sender Gage Assembly
40
W–B
8
5
W–B
9
10
W–B
H85
Junction Connector
H1
H2
28
R
13 HJ1
W–B
5
29
BE
17 HJ1
LG
2
30
L
20 HJ1
L
4
19 HJ1
SB
3
E
MODE
SET
REST
INFO
SET UP
SELECT
RESET
J2
Drive Monitor Switch


* 1 : Optitron Meter
* 2 : Except Optitron Meter
* 9 : w/ Tail Cancel Switch

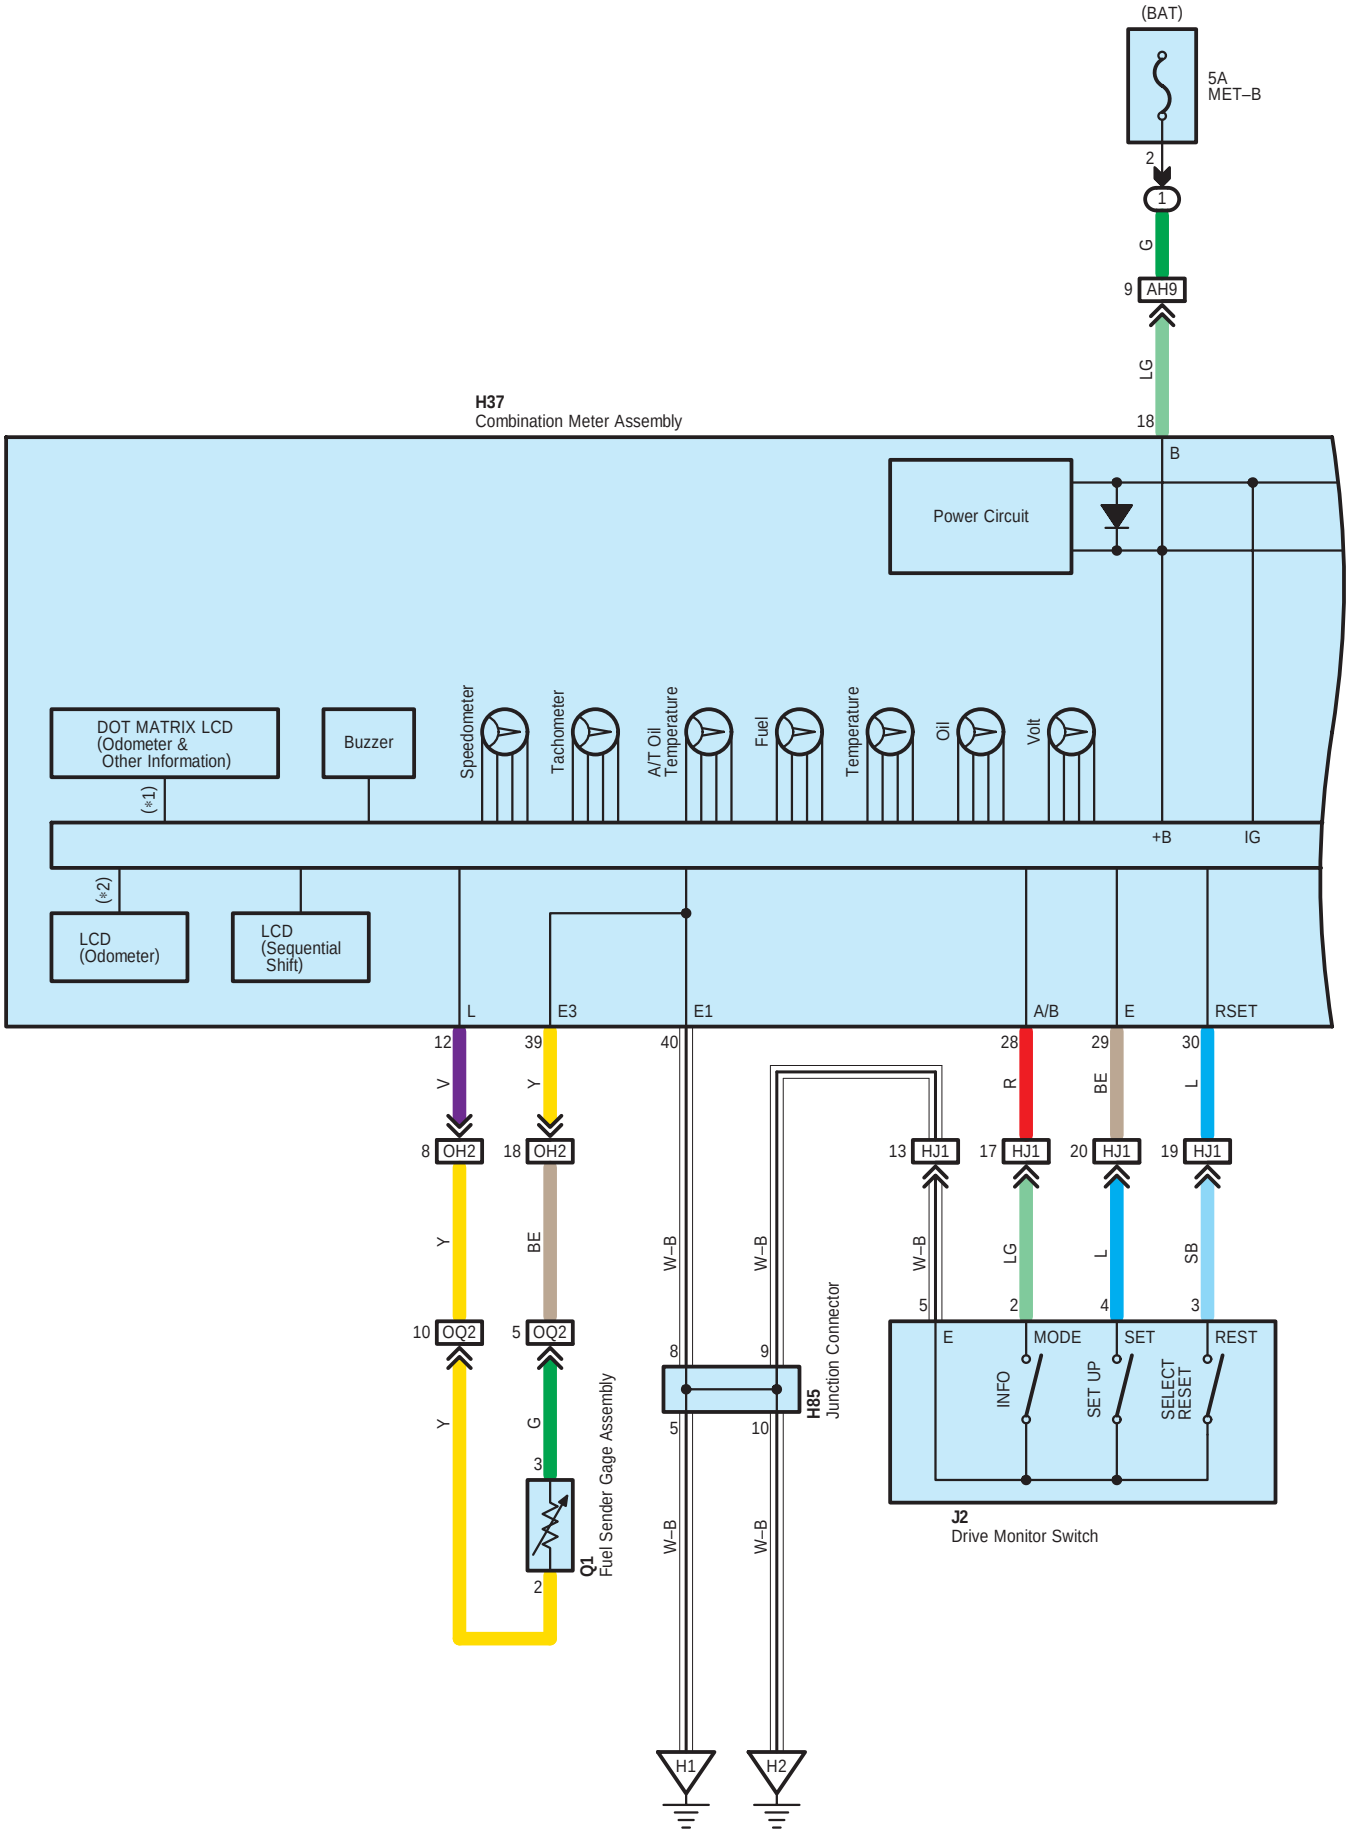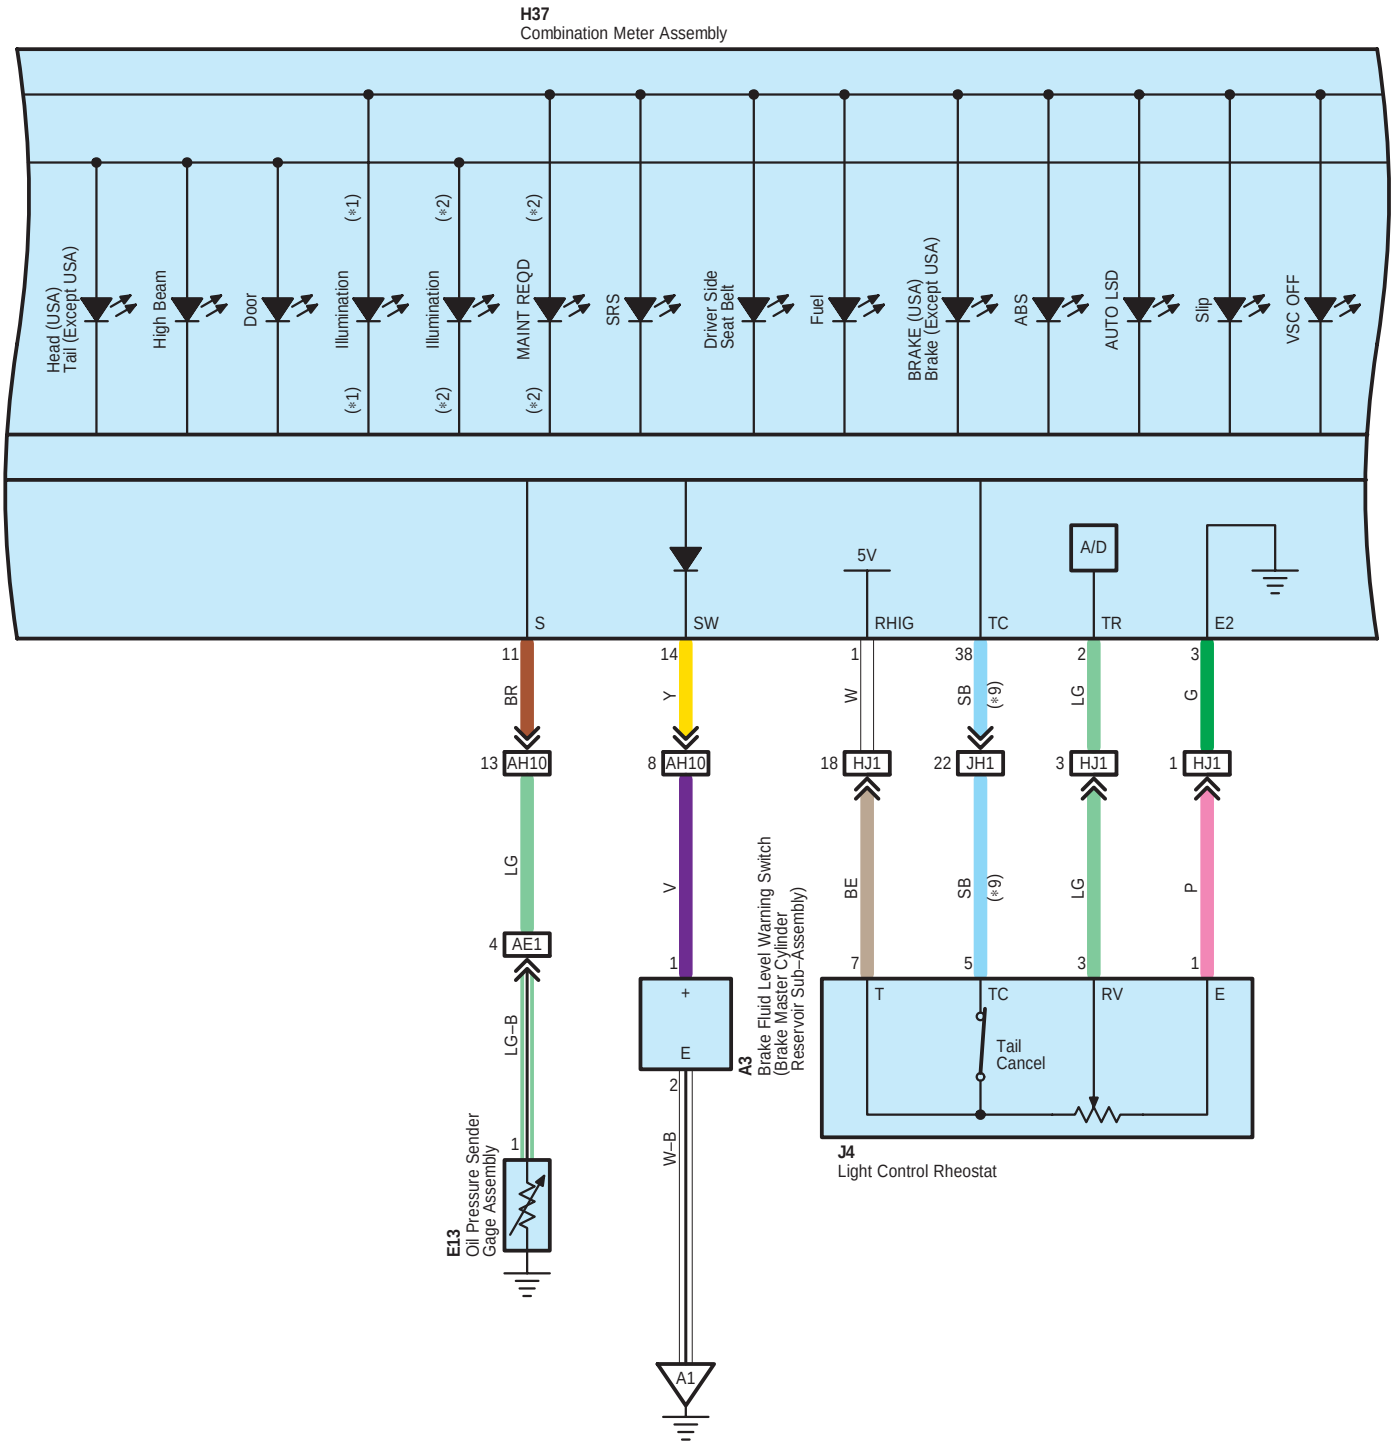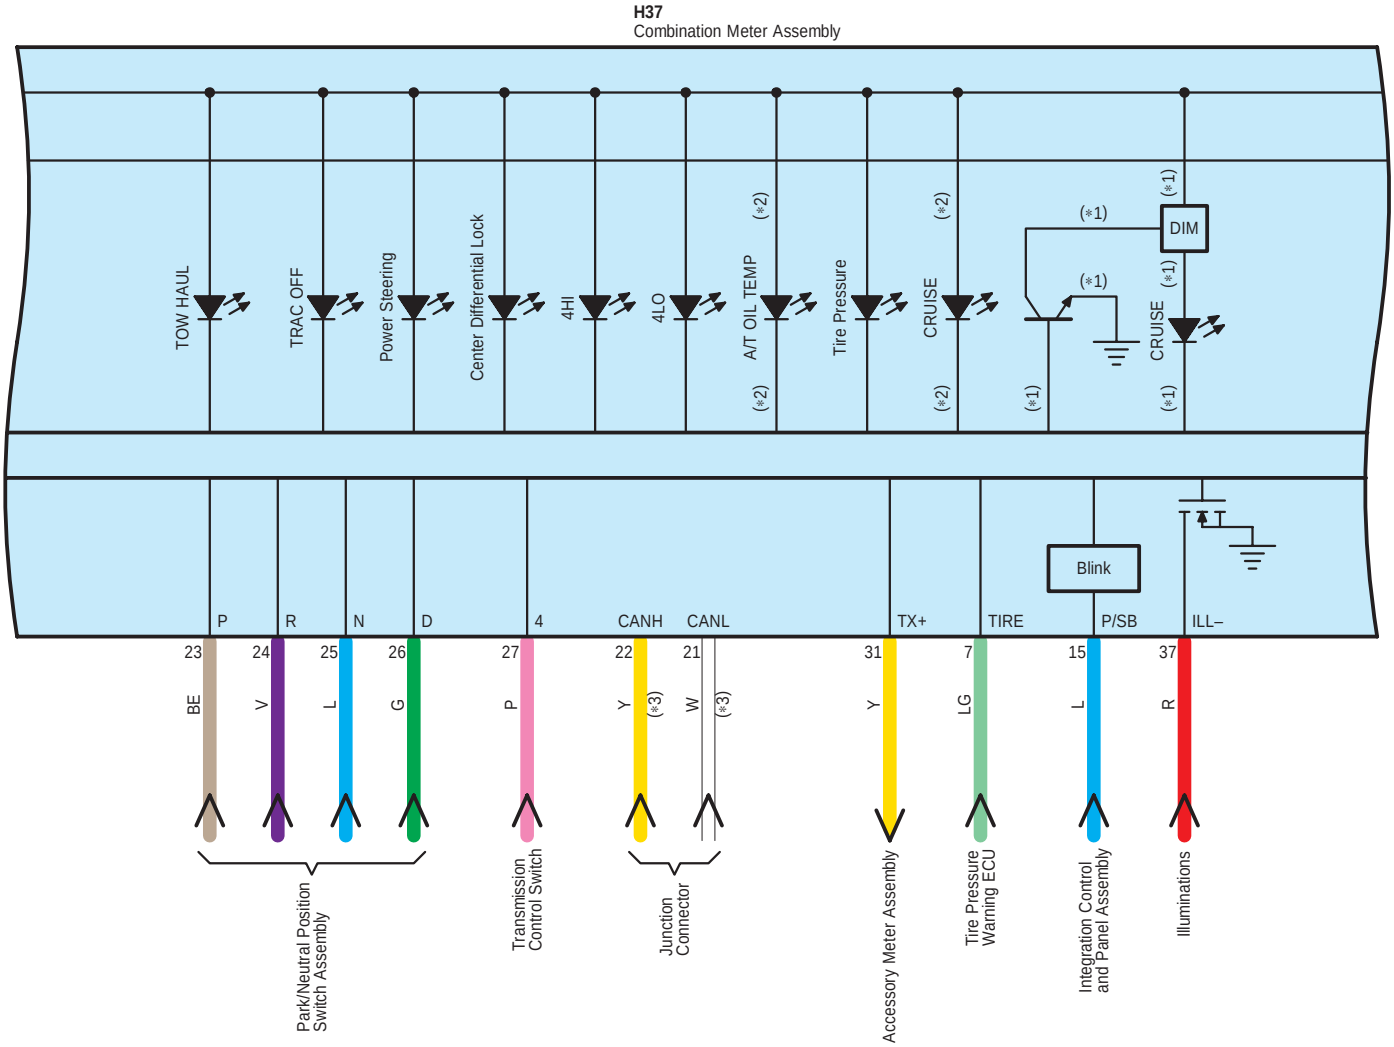



H37
Combination Meter Assembly
TOW HAUL
TRAC OFF
Power Steering
Center Differential Lock
4HI
4LO
A/T OIL TEMP
(*2)
Tire Pressure
CRUISE
(*2)
(*1)
DIM
(*1)
CRUISE
(*1)
P
R
N
D
4
CANH
CANL
TX+
TIRE
P/SB
ILL–
Blink
23
BE
24
V
25
L
26
G
27
P
22
Y
(*3)
21
W
(*3)
31
Y
7
LG
15
L
37
R
Park/Neutral Position Switch Assembly
Transmission Control Switch
Junction Connector
Accessory Meter Assembly
Tire Pressure Warning ECU
Integration Control and Panel Assembly
Illuminations


* 1 : Optitron Meter
* 2 : Except Optitron Meter
* 3 : w/ Power Back Door

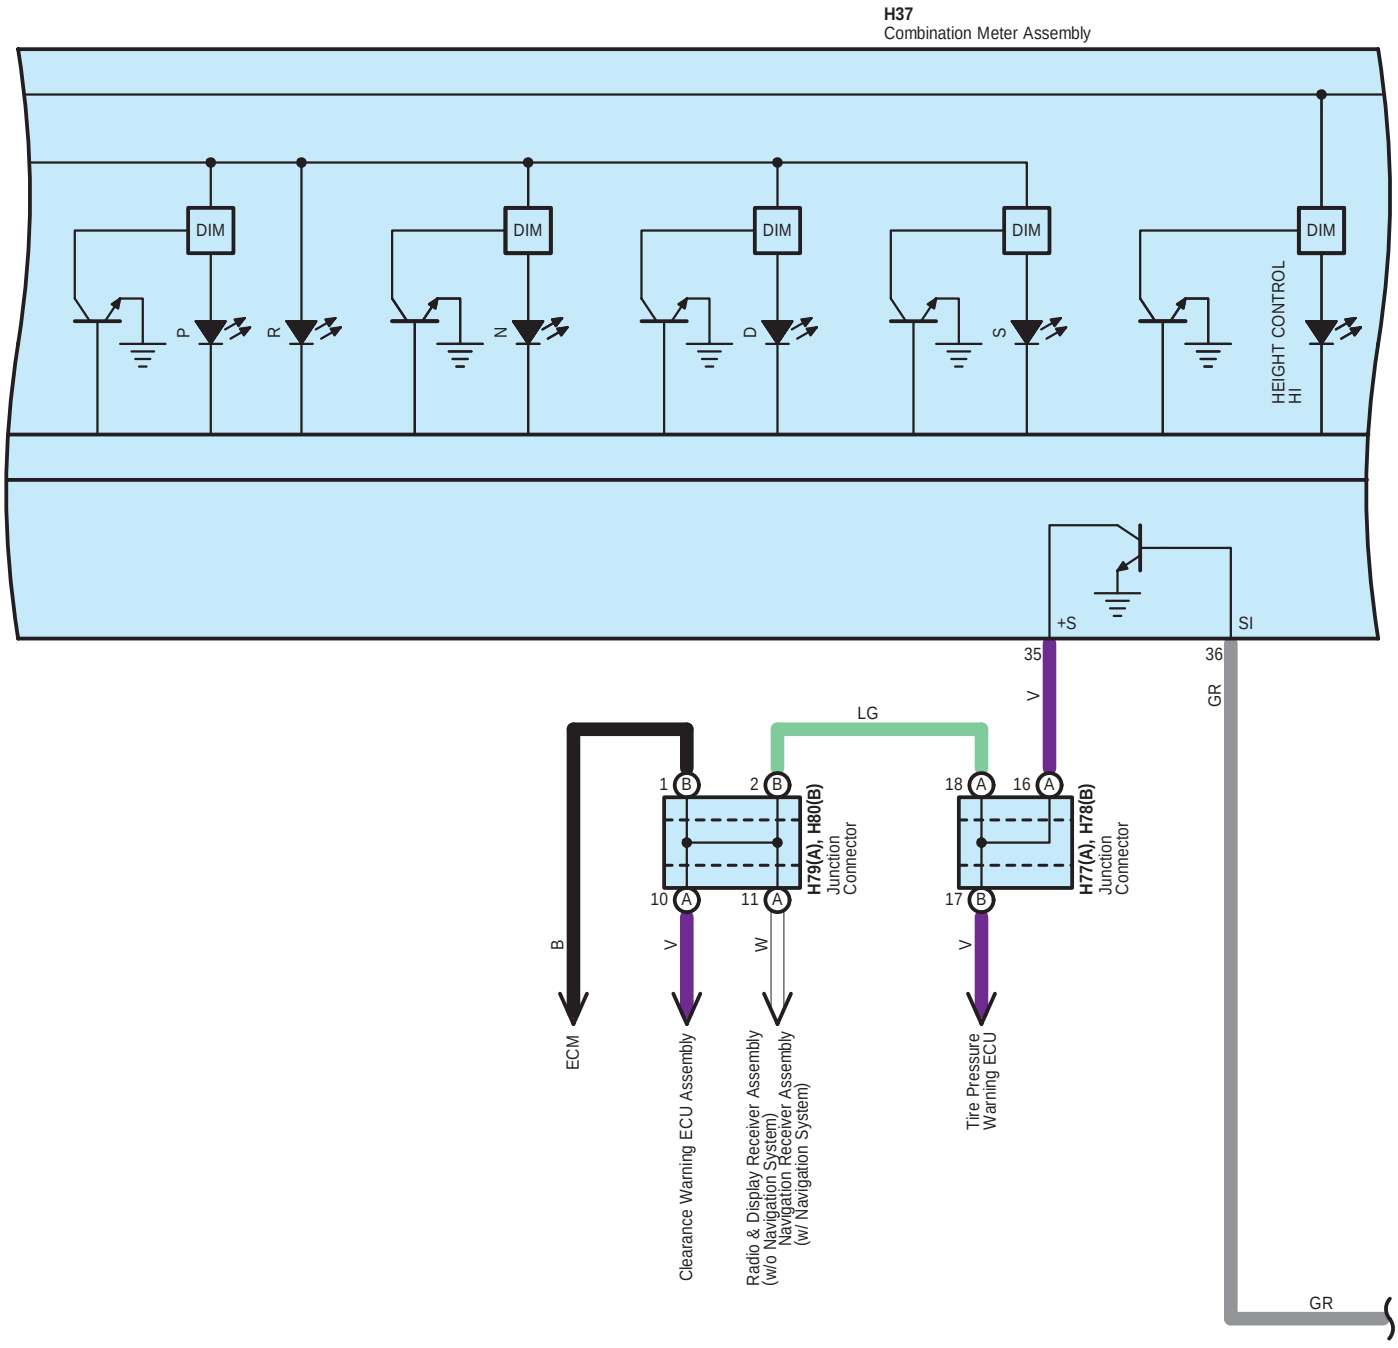


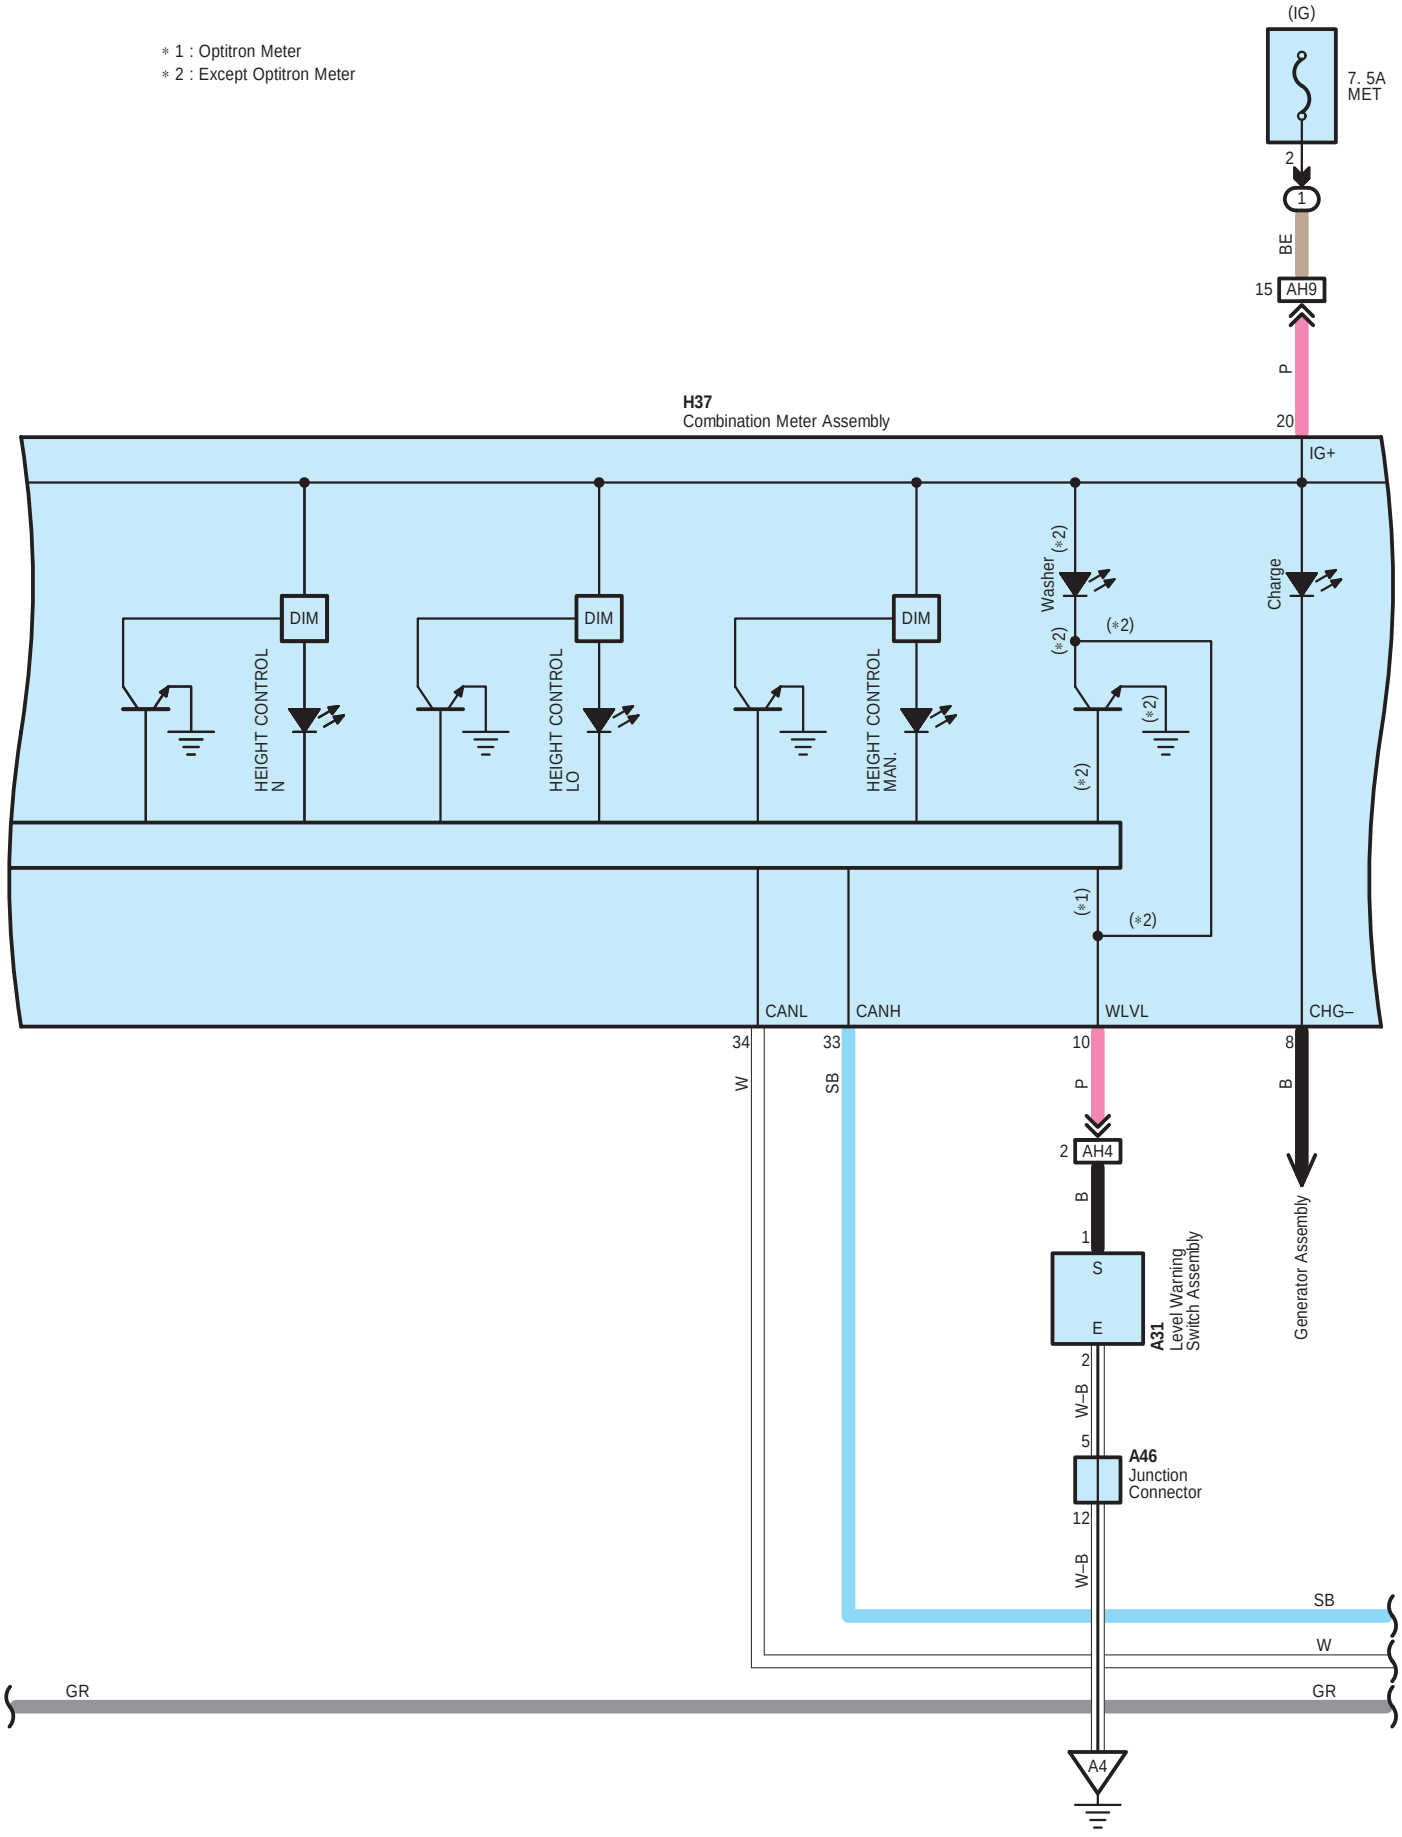
∗ 1 : Optitron Meter
∗ 2 : Except Optitron Meter
(IG)
7. 5A
MET
2
1
BE
15 AH9
P
20
H37
Combination Meter Assembly
IG+
DIM
HEIGHT CONTROL
N
DIM
HEIGHT CONTROL
LO
DIM
HEIGHT CONTROL
MAN.
Washer (∗2)
(∗2)
(∗2)
(∗2)
(∗2)
Charge
(∗1)
(∗2)
CANL
CANH
WLVL
CHG–
34
W
33
SB
10
P
8
B
2 AH4
B
1
S
E
A31
Level Warning
Switch Assembly
Generator Assembly
2
W–B
5
A46
Junction
Connector
12
W–B
SB
W
GR
GR
A4

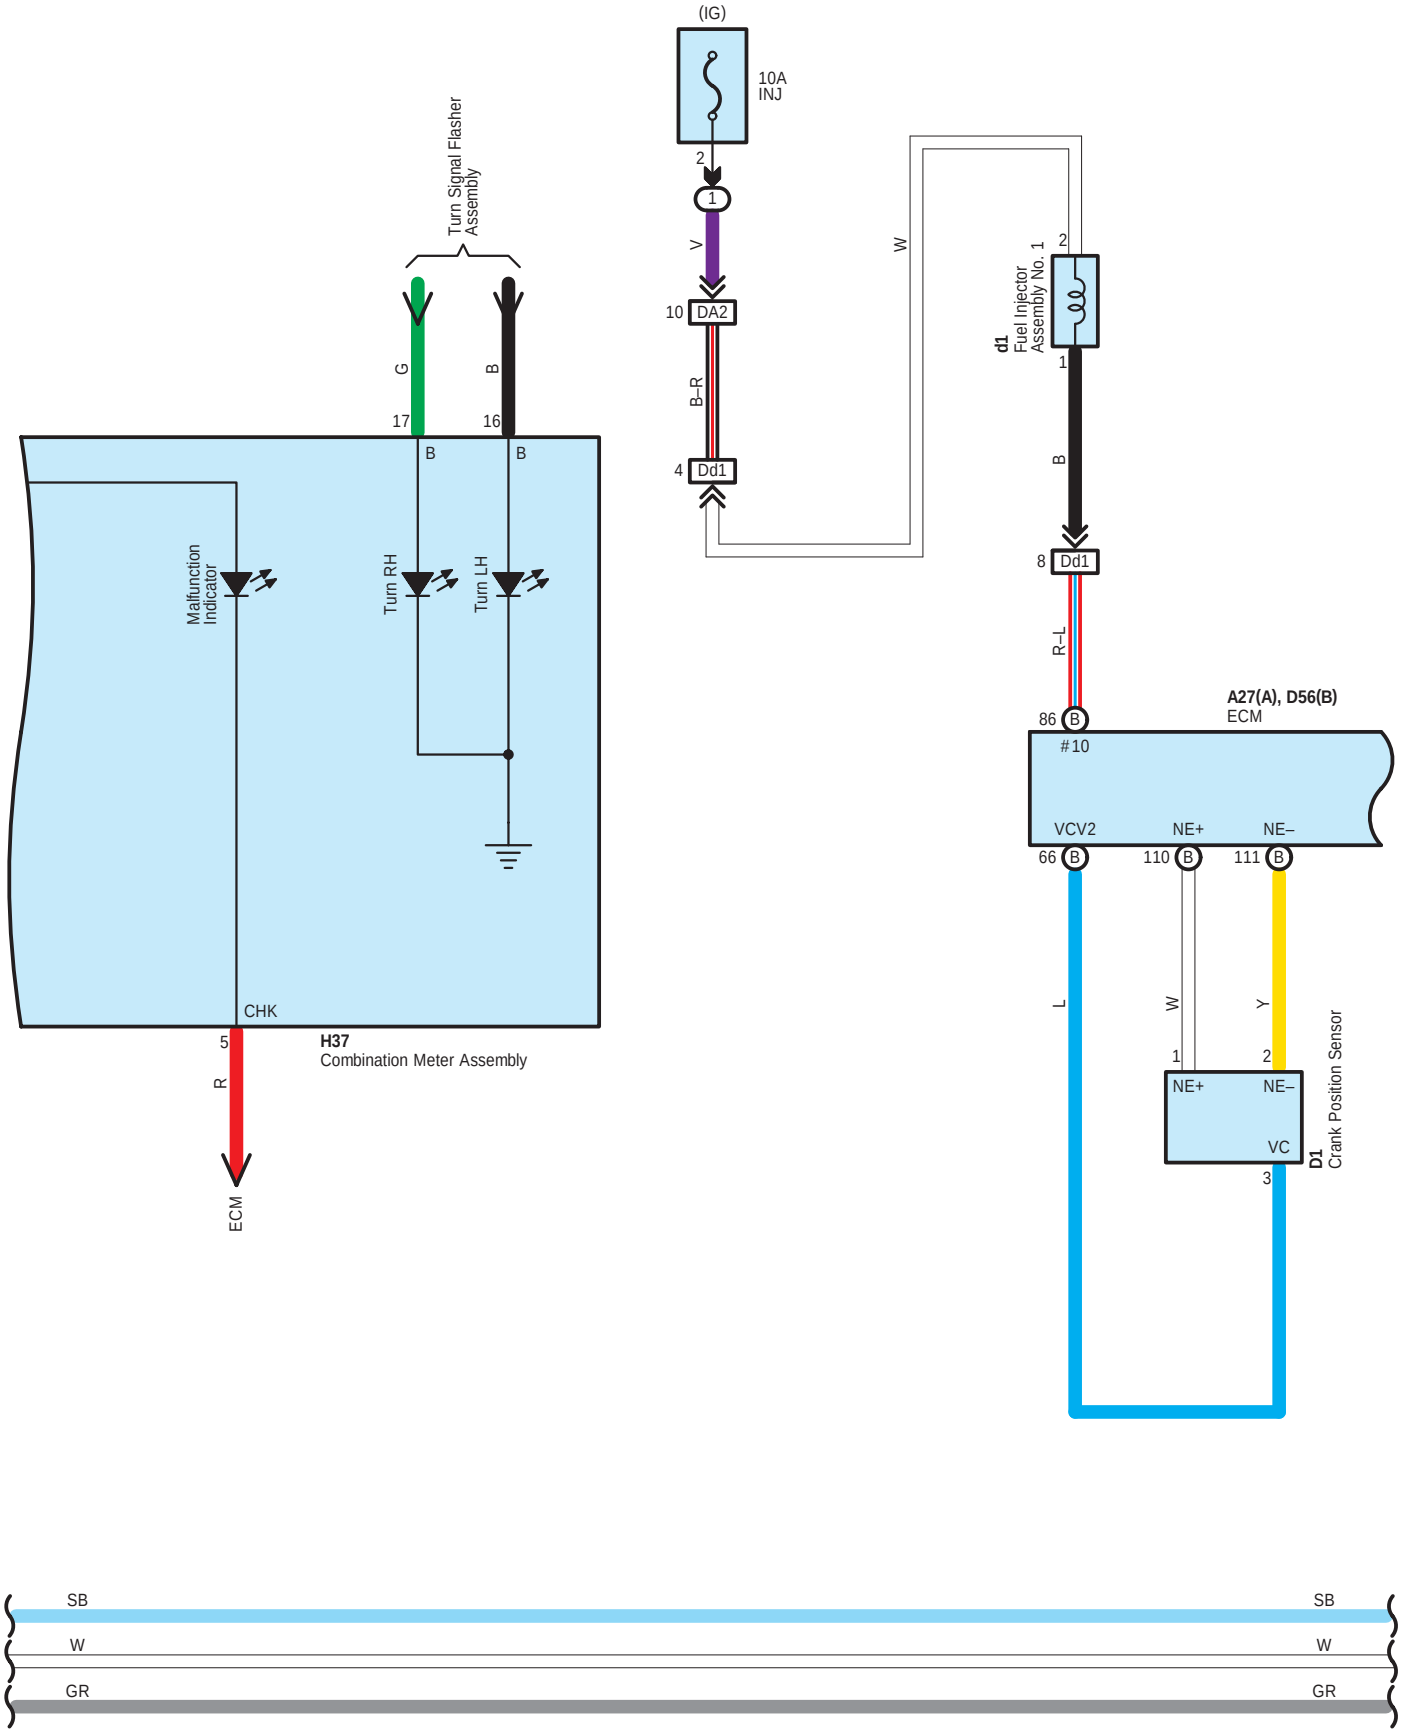

(IG)
10A
INJ
2
1
V
10
DA2
B–R
4
Dd1
W
d1
Fuel Injector
Assembly No. 1
2
1
B
8
Dd1
R–L
86
B
#10
A27(A), D56(B)
ECM
VCV2
NE+
NE–
66
B
110
B
111
B
L
W
Y
1
2
NE+
NE–
VC
3
D1
Crank Position Sensor
Turn Signal Flasher
Assembly
G
B
17
16
B
B
Malfunction
Indicator
Turn RH
Turn LH
CHK
5
R
ECM
H37
Combination Meter Assembly


SB
W
GR
SB
W
GR

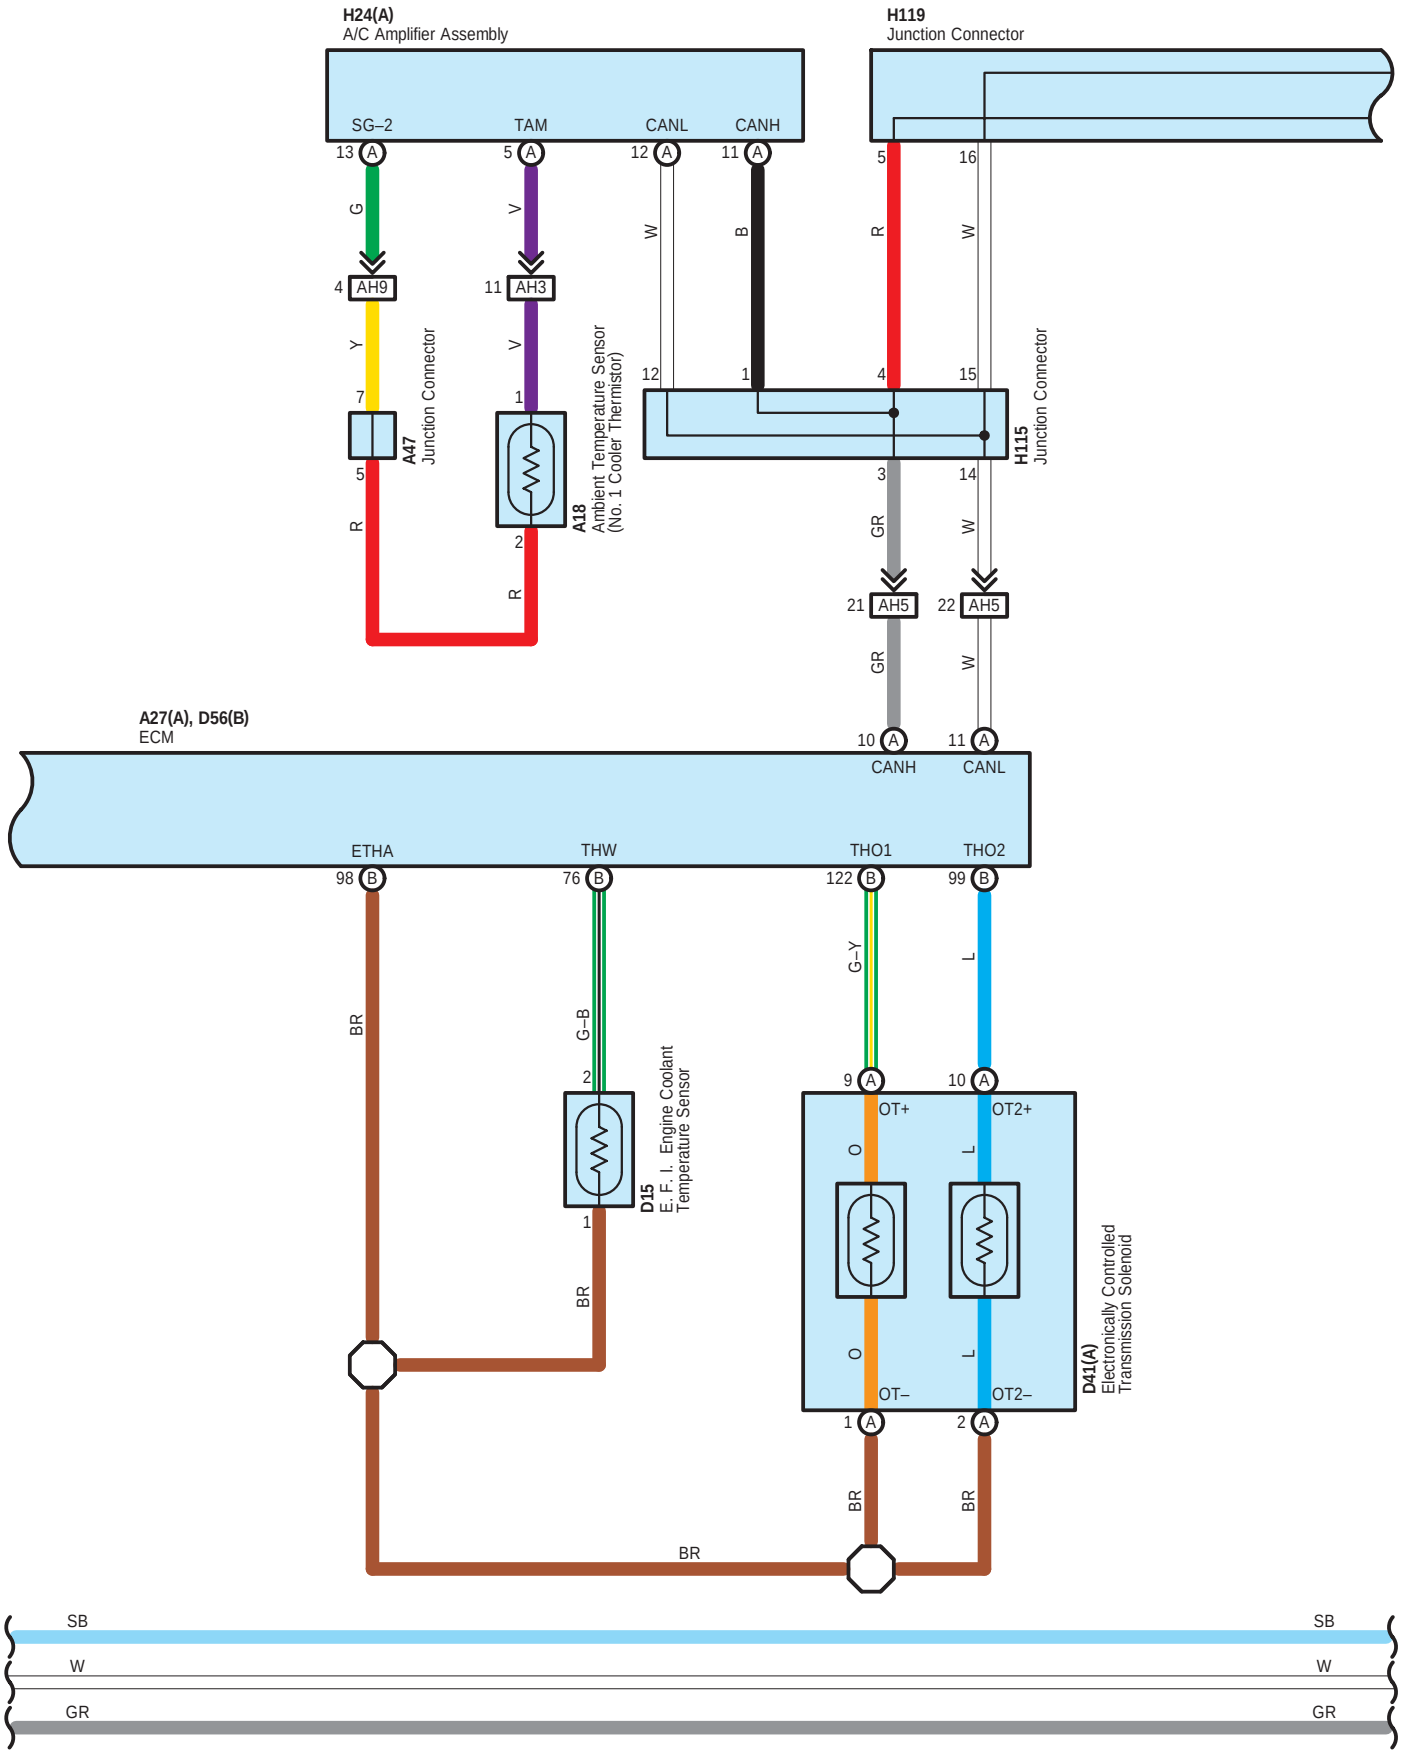
H24(A)
A/C Amplifier Assembly
SG–2
TAM
CANL
CANH
13 A
5 A
12 A
11 A
G
V
W
B
4 AH9
11 AH3
Y
V
7
1
A47
Junction Connector
A18
Ambient Temperature Sensor
(No. 1 Cooler Thermistor)
5
R
2
R
H119
Junction Connector
5
16
R
W
12
1
4
15
H115
Junction Connector
3
14
GR
W
21 AH5
22 AH5
GR
W
A27(A), D56(B)
ECM
10 A
11 A
CANH
CANL
ETHA
THW
THO1
THO2
98 B
76 B
122 B
99 B
BR
G–B
G–Y
L
2
9 A
10 A
D15
E.F.I. Engine Coolant
Temperature Sensor
1
BR
OT+
OT2+
O
L
O
L
OT–
OT2–
D41(A)
Electronically Controlled
Transmission Solenoid
1 A
2 A
BR
BR
BR
SB
W
GR
SB
W
GR

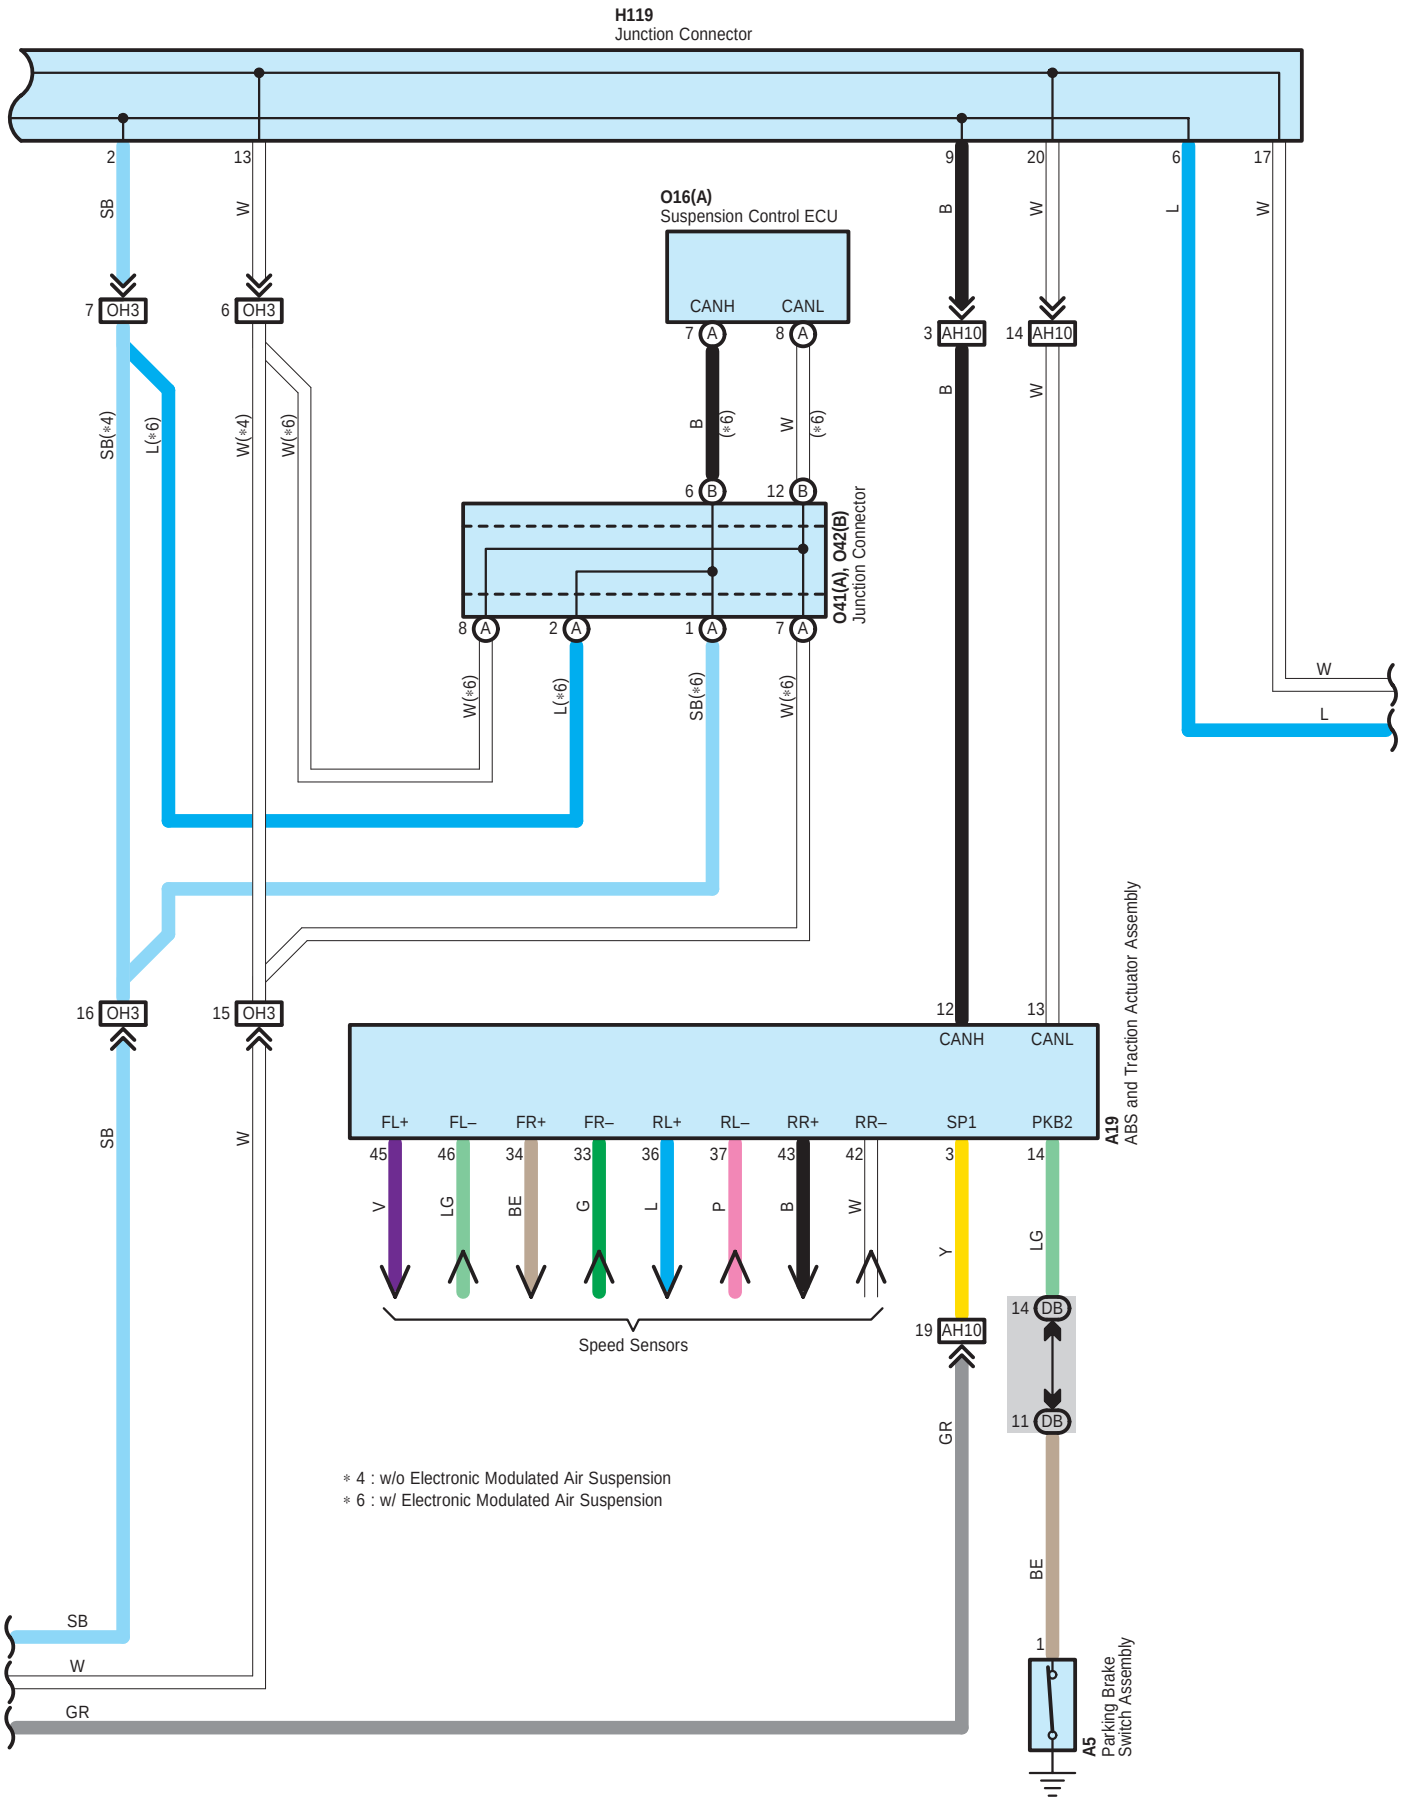

∗ 4 : w/o Electronic Modulated Air Suspension
∗ 6 : w/ Electronic Modulated Air Suspension

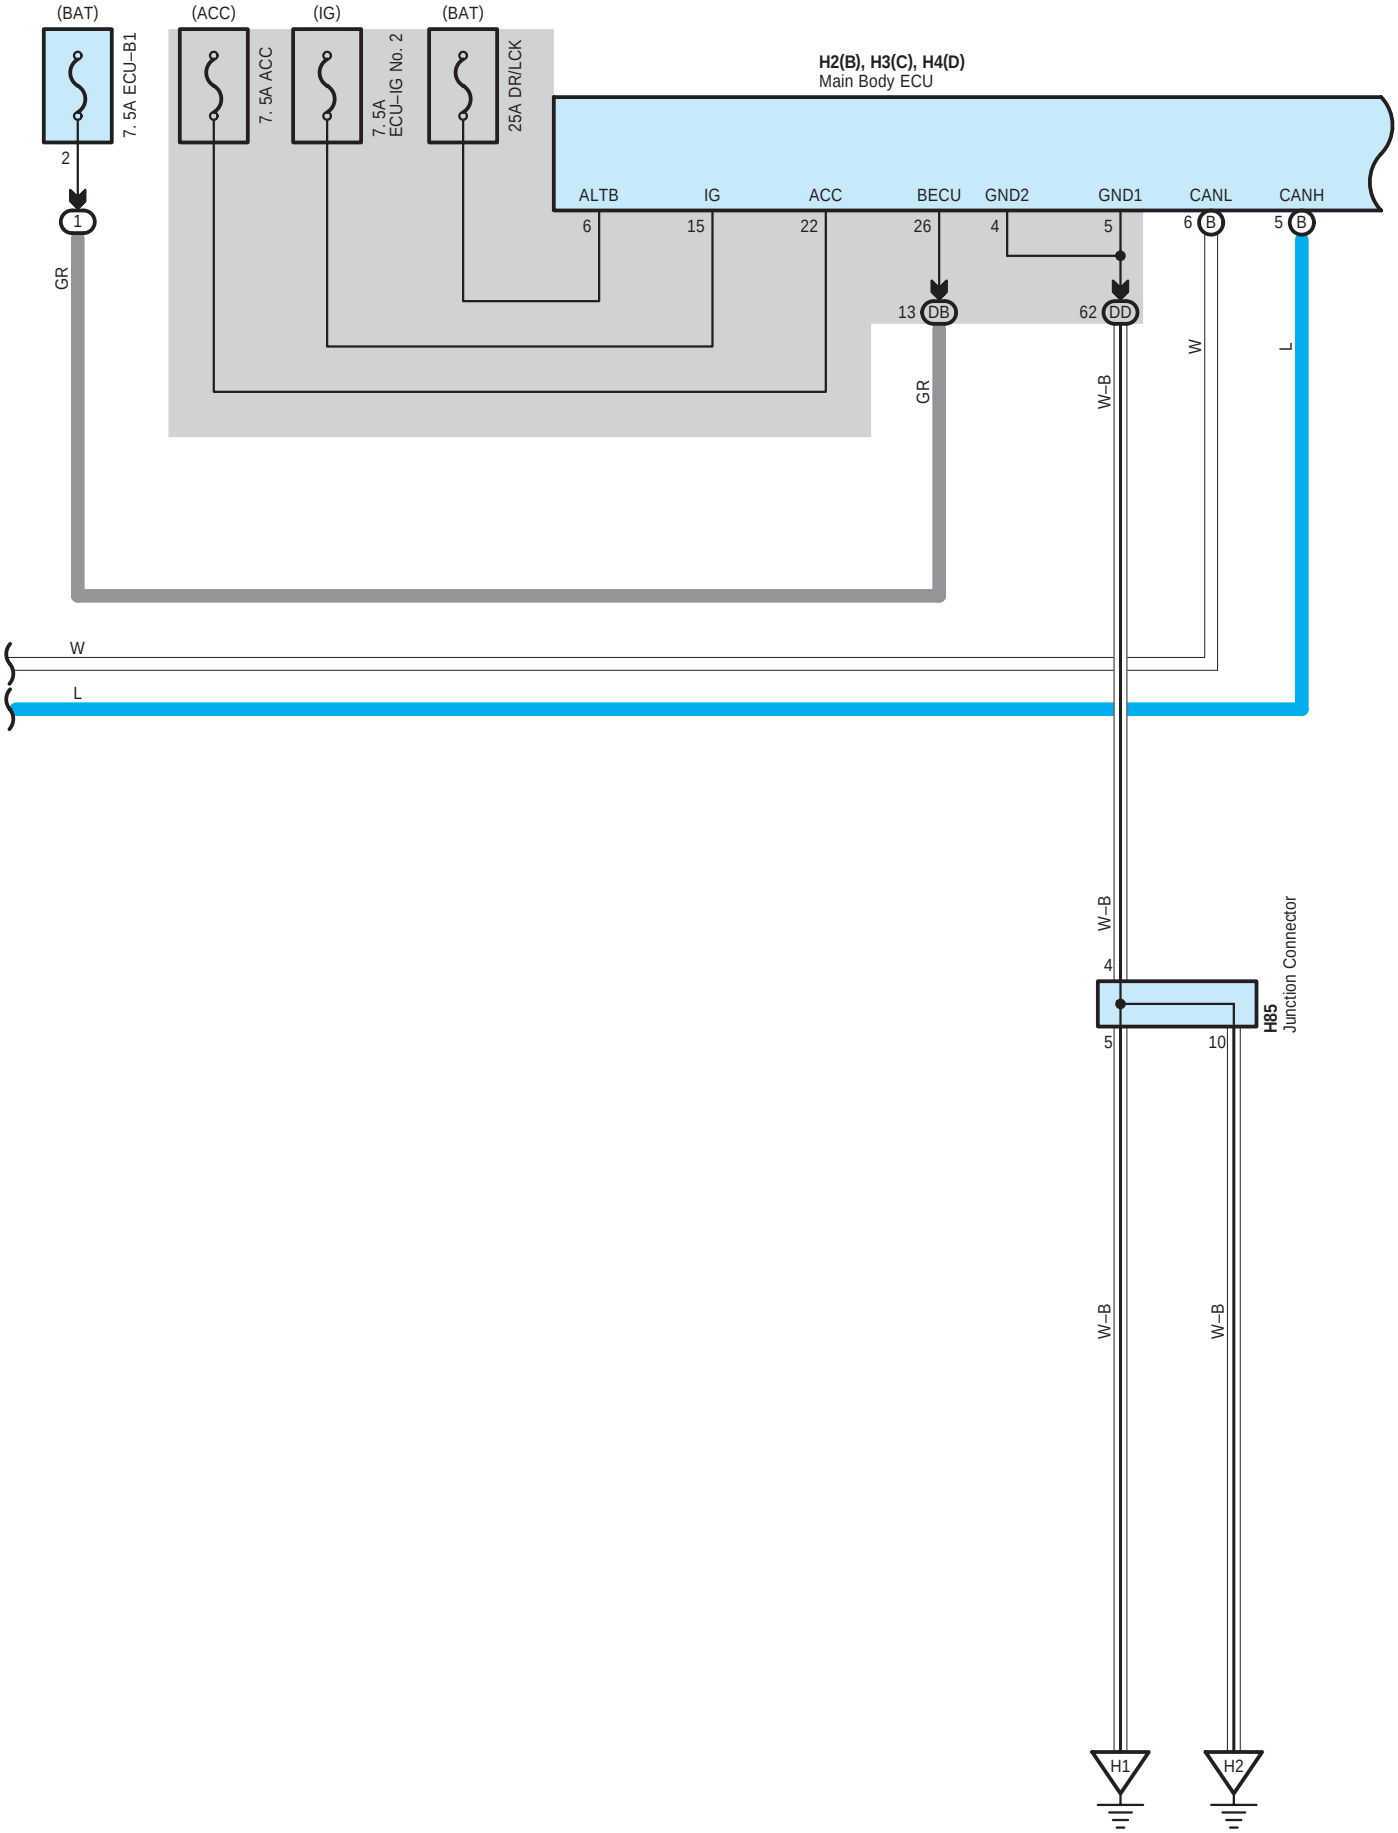
(BAT)
(ACC)
(IG)
(BAT)
7. 5A ECU–B1
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
2
1
GR
H2(B), H3(C), H4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND2
GND1
CANL
CANH
6
15
22
26
4
5
6 B
5 B
13 DB
62 DD
GR
W–B
W
L
W
L
W–B
4
H85
Junction Connector
5
10
W–B
W–B
H1
H2

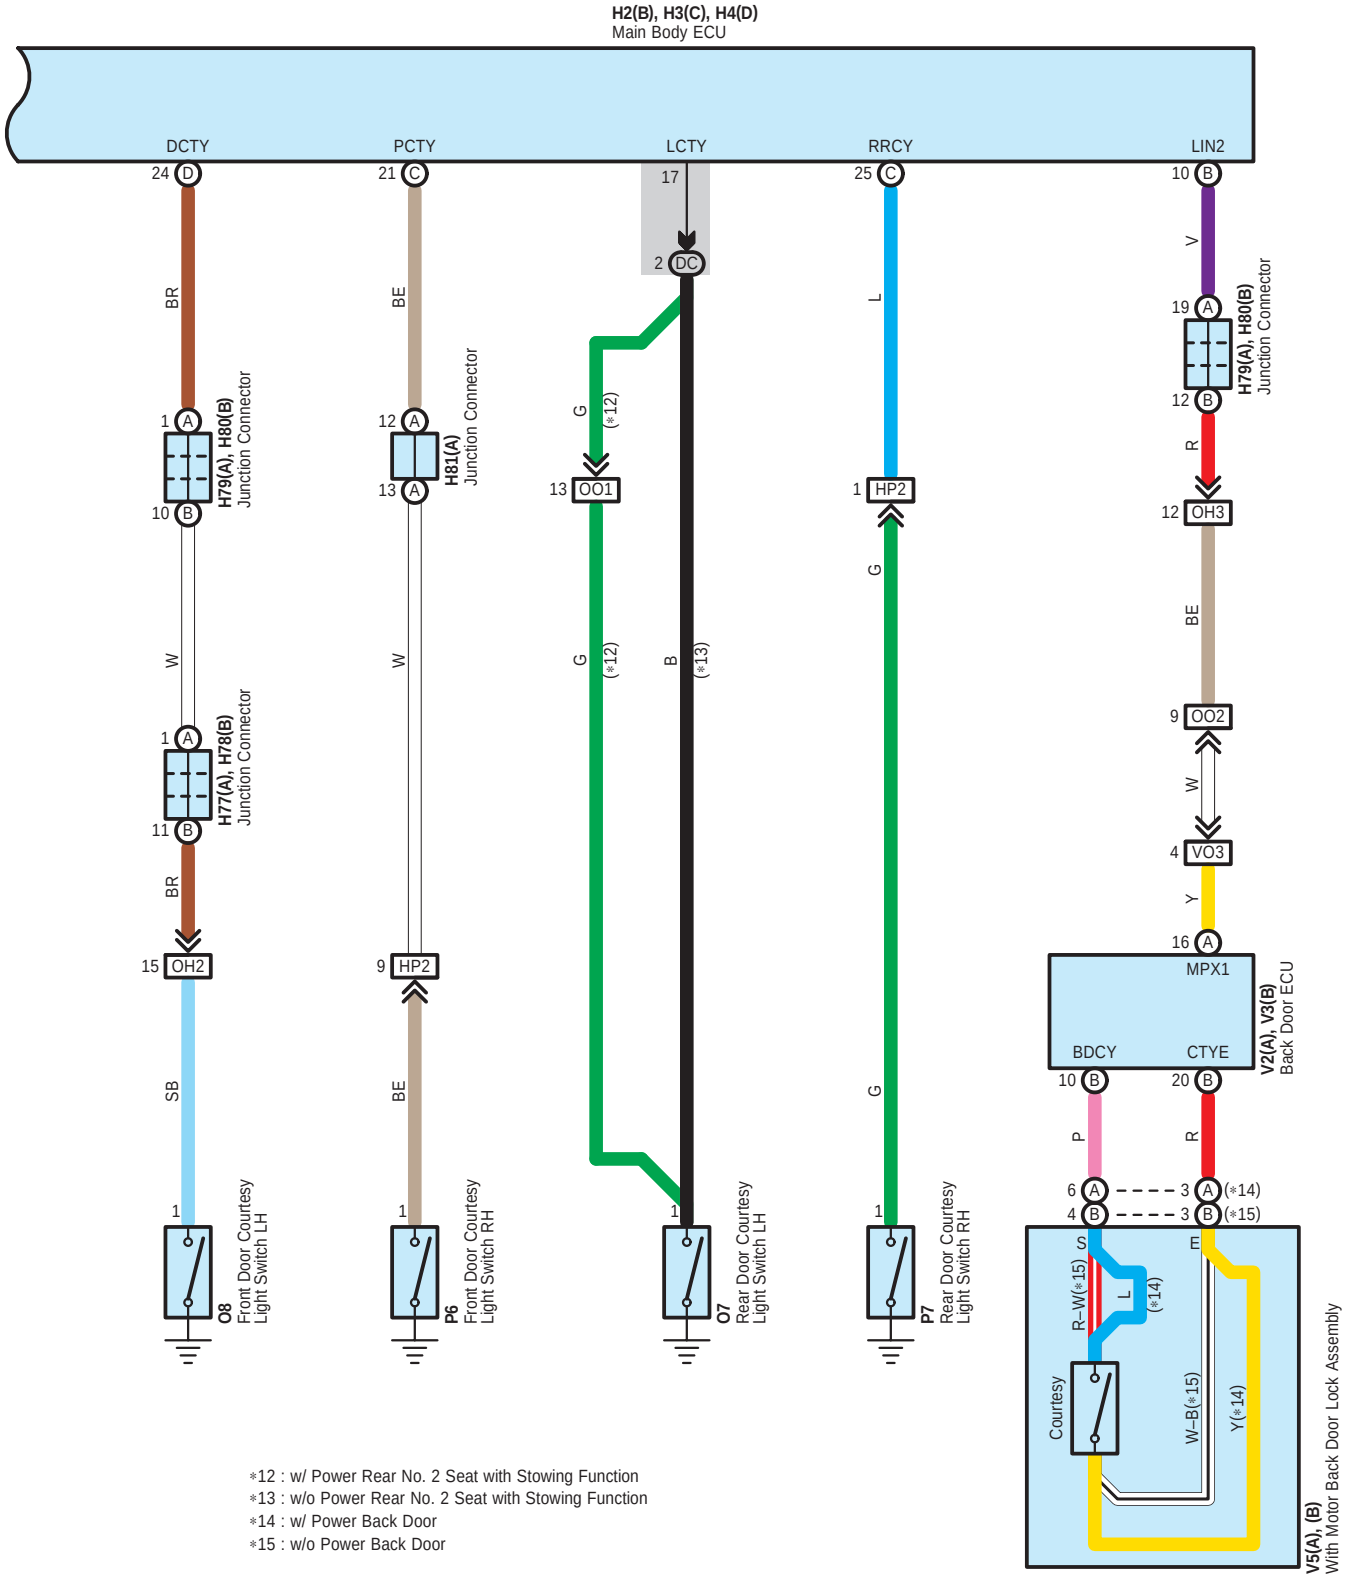

*12 : w/ Power Rear No. 2 Seat with Stowing Function
*13 : w/o Power Rear No. 2 Seat with Stowing Function
*14 : w/ Power Back Door
*15 : w/o Power Back Door

A 3
Gray




A 5
White




A 18
Black




A 19
Black

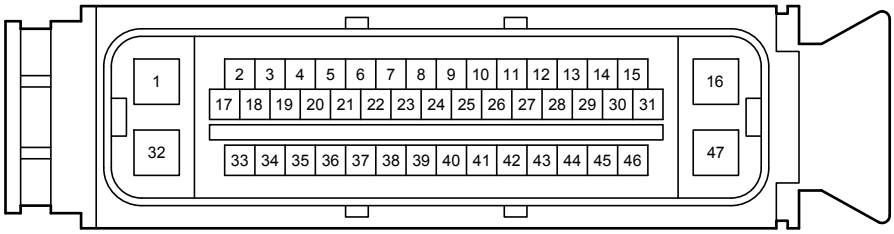


A 27
Black

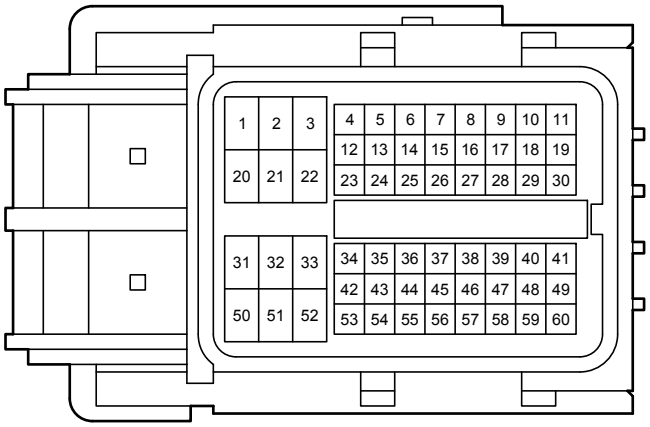


A 31
Black

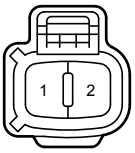


A 46
White

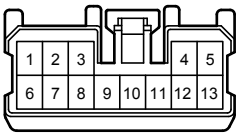

A 47
White

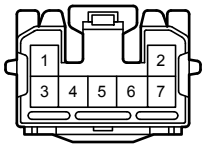


D 1
Black

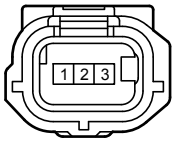


D 15
Dark Gray



D 41
Gray

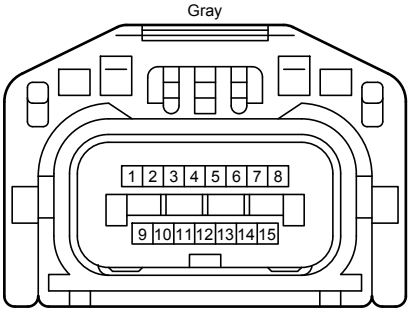


D 56
Black

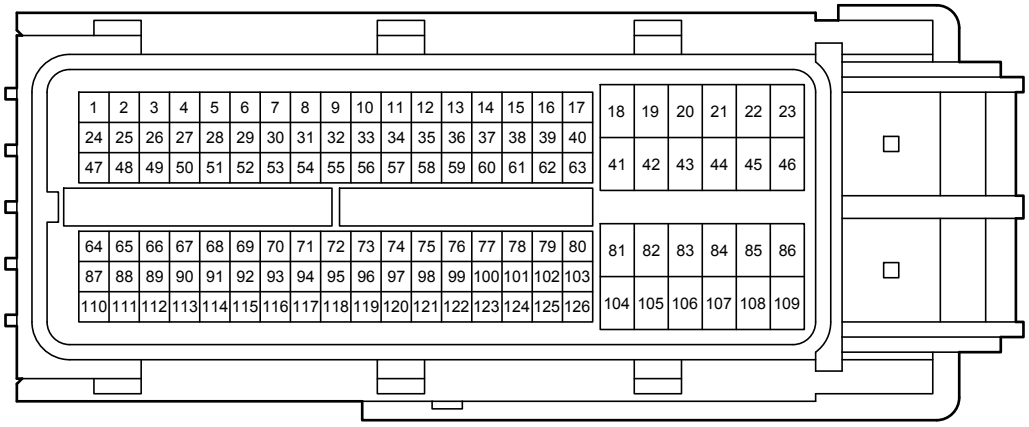


E 13
Black




H 2
White

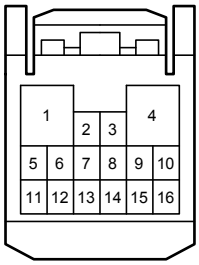


H 3
White

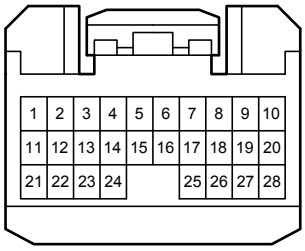


H 4
White

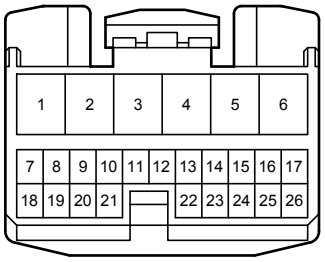


H 24
White

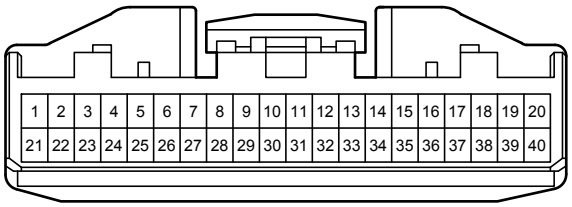


H 37
White

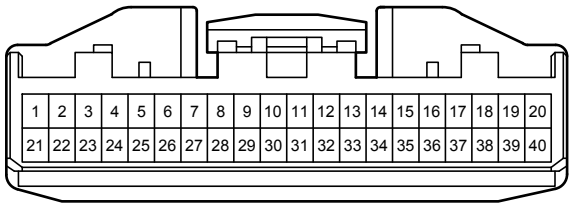


H 77
Black

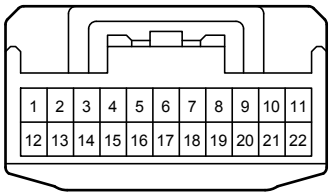


H 78
Black

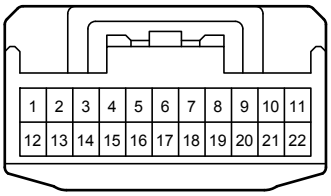


H 79
Black

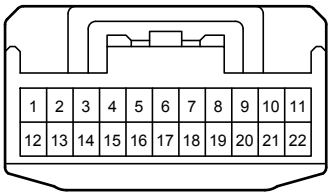


H 80
Black

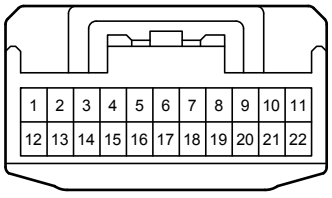


H 81
White

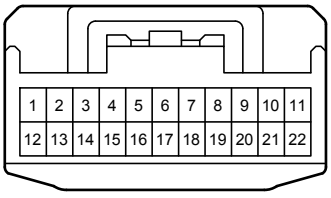


H 85
White

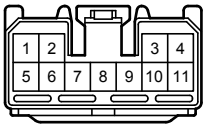


H115
Gray

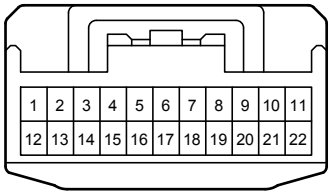


H119
Gray

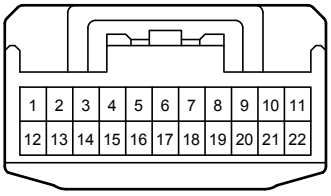

J 2
Black

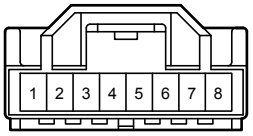

J 4
White

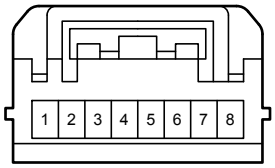


O 7
White




O 8
White




O 16
Black

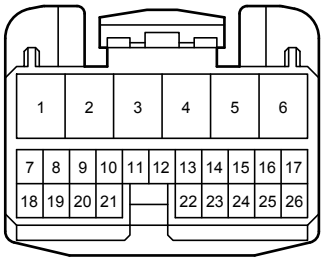

O 41
White

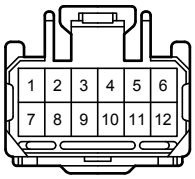

O 42
White

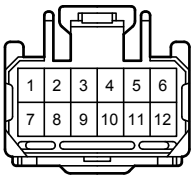

P 6
White




P 7
White




Q 1
White




V 2
White

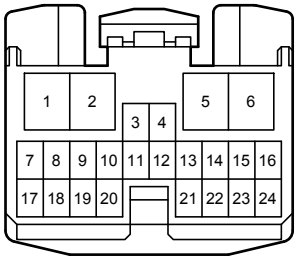


V 3
White

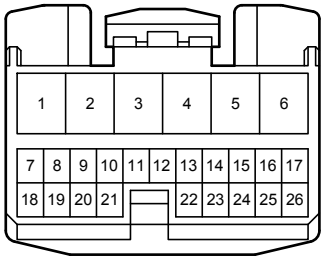


V 5
White

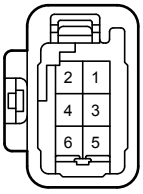


d 1
Black

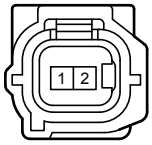


DB
White

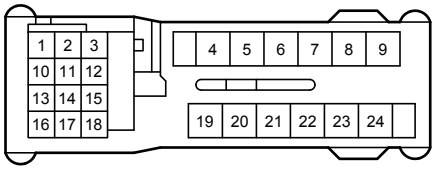


DC
White

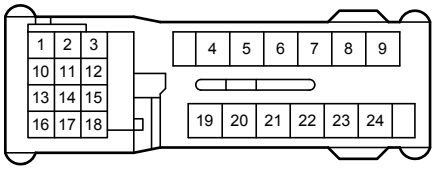


DD
White

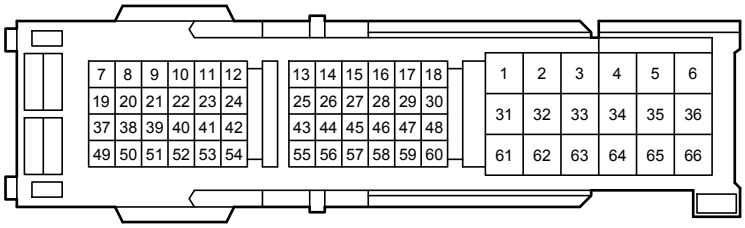


AE1
Gray

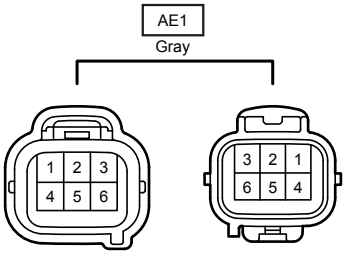


AH3
White

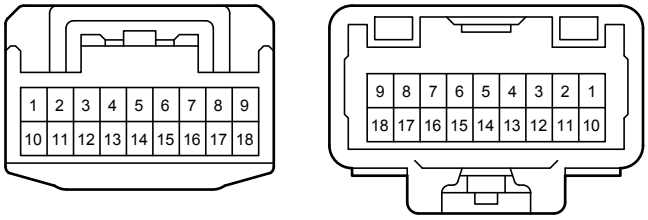


AH4
White

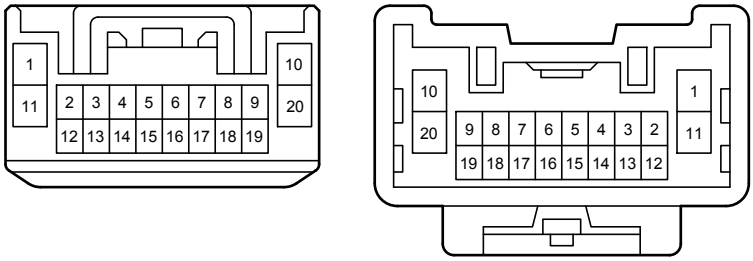


AH5
White

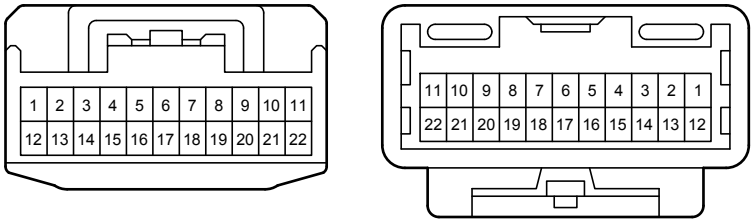


AH9
Gray

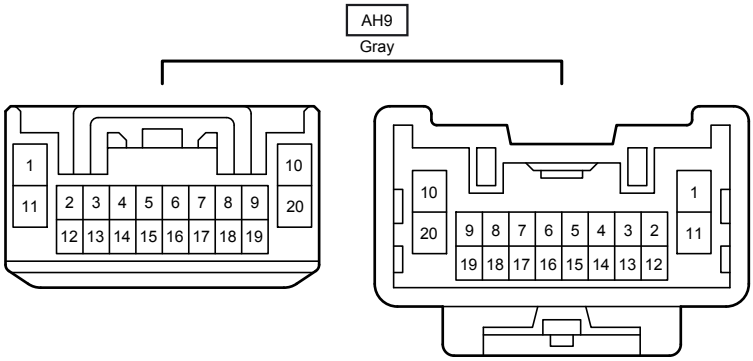


AH10
Gray

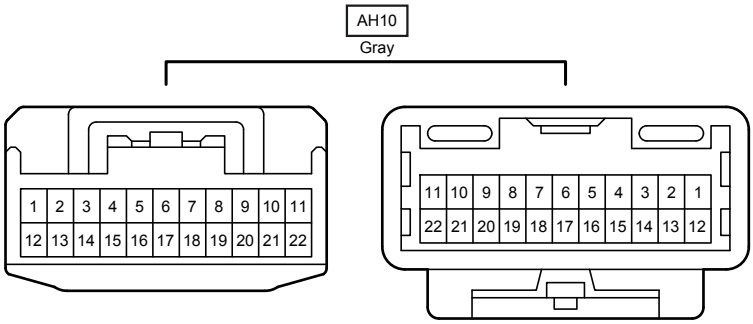


DA2
White

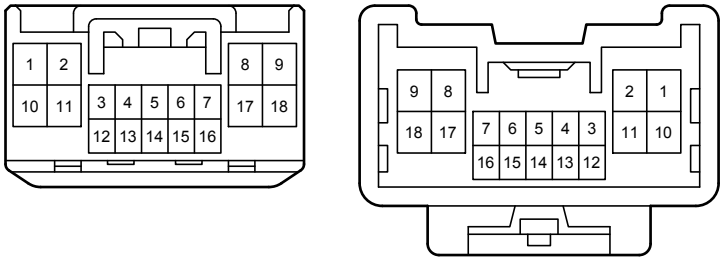


Dd1
Gray

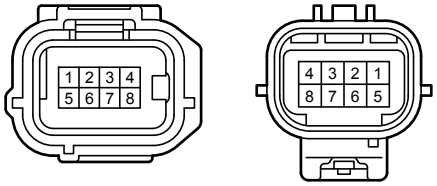


HJ1
White

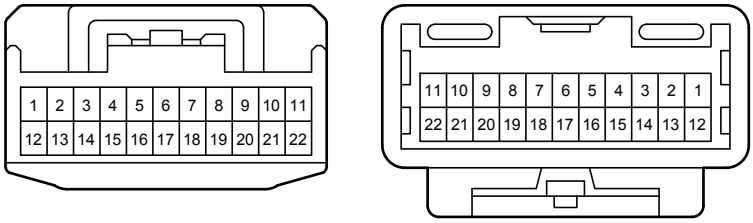


HP2
Gray

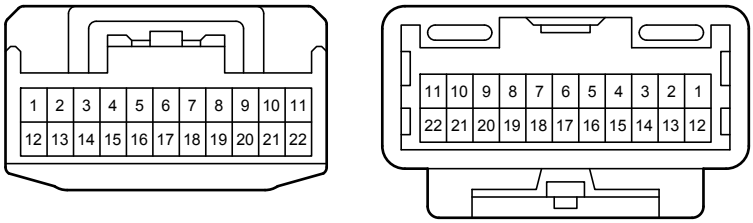


JH1
White

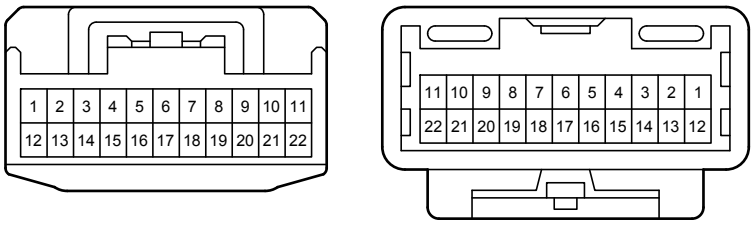


OH2
Black

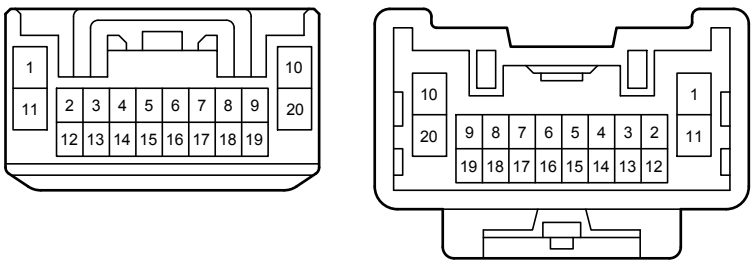


OH3
White

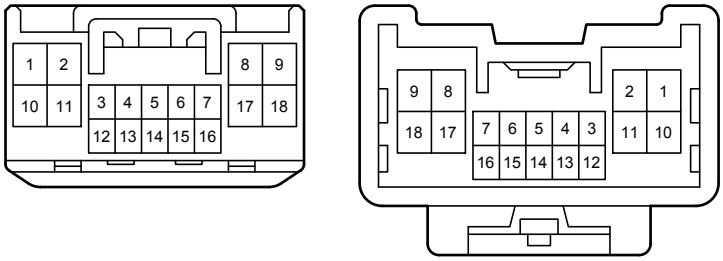


OO1
White

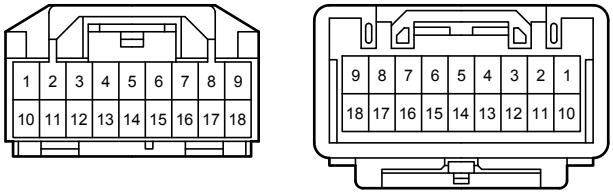

OO2
White

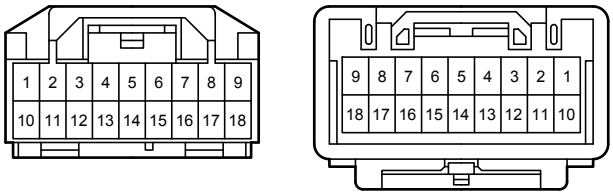

OQ2
Black

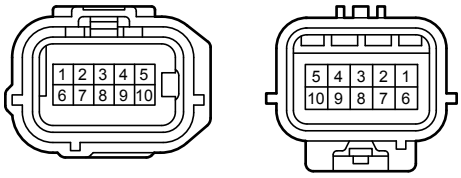

VO3
White

