



(BAT)
7. 5A
OBD
18 DD
P
16 BAT
Junction Connector
V
6 CANH
W
14 CANL
H19
DLC3
A27(A)
ECM
TACH
15 A
W
11 AH4
W
9 TAC
TC
16 A
R
5 AH4
B
21
H40
Tire Pressure Warning ECU
TC
3
W
22
SIL
10
L
H118
Junction Connector
20
SB
13 TC
∗ 3 : w/ Power Seat
∗ 4 : w/o Power Seat
SG
5
BR
11 A
H86(A), H87(B)
Junction Connector
7 B
BR
2 AH3
BR
22 A
A61(A), D55(B)
Junction Connector
13 B
BR
D1
CG
4
W-B
4
H85
Junction Connector
5
W-B
10
W-B
W-B
W-B
H1
H2
TS
12
G
G
2 AH10
W
7
TS
A19
ABS and Traction
Actuator Assembly
LG
22 AH10
P
10
D/G
SIL
7
BE
15
L
13
H118
Junction Connector
14
17
R
2 HP2
BR
(∗3)
3 PW1
BR
(∗3)
BR
(∗4)
2 A (∗3)
2 C (∗4)
DIA
P14(C), W6(A)
Occupant
Detection ECU
12
B
9
D
H32
Transponder Key
ECU Assembly


A 19
Black

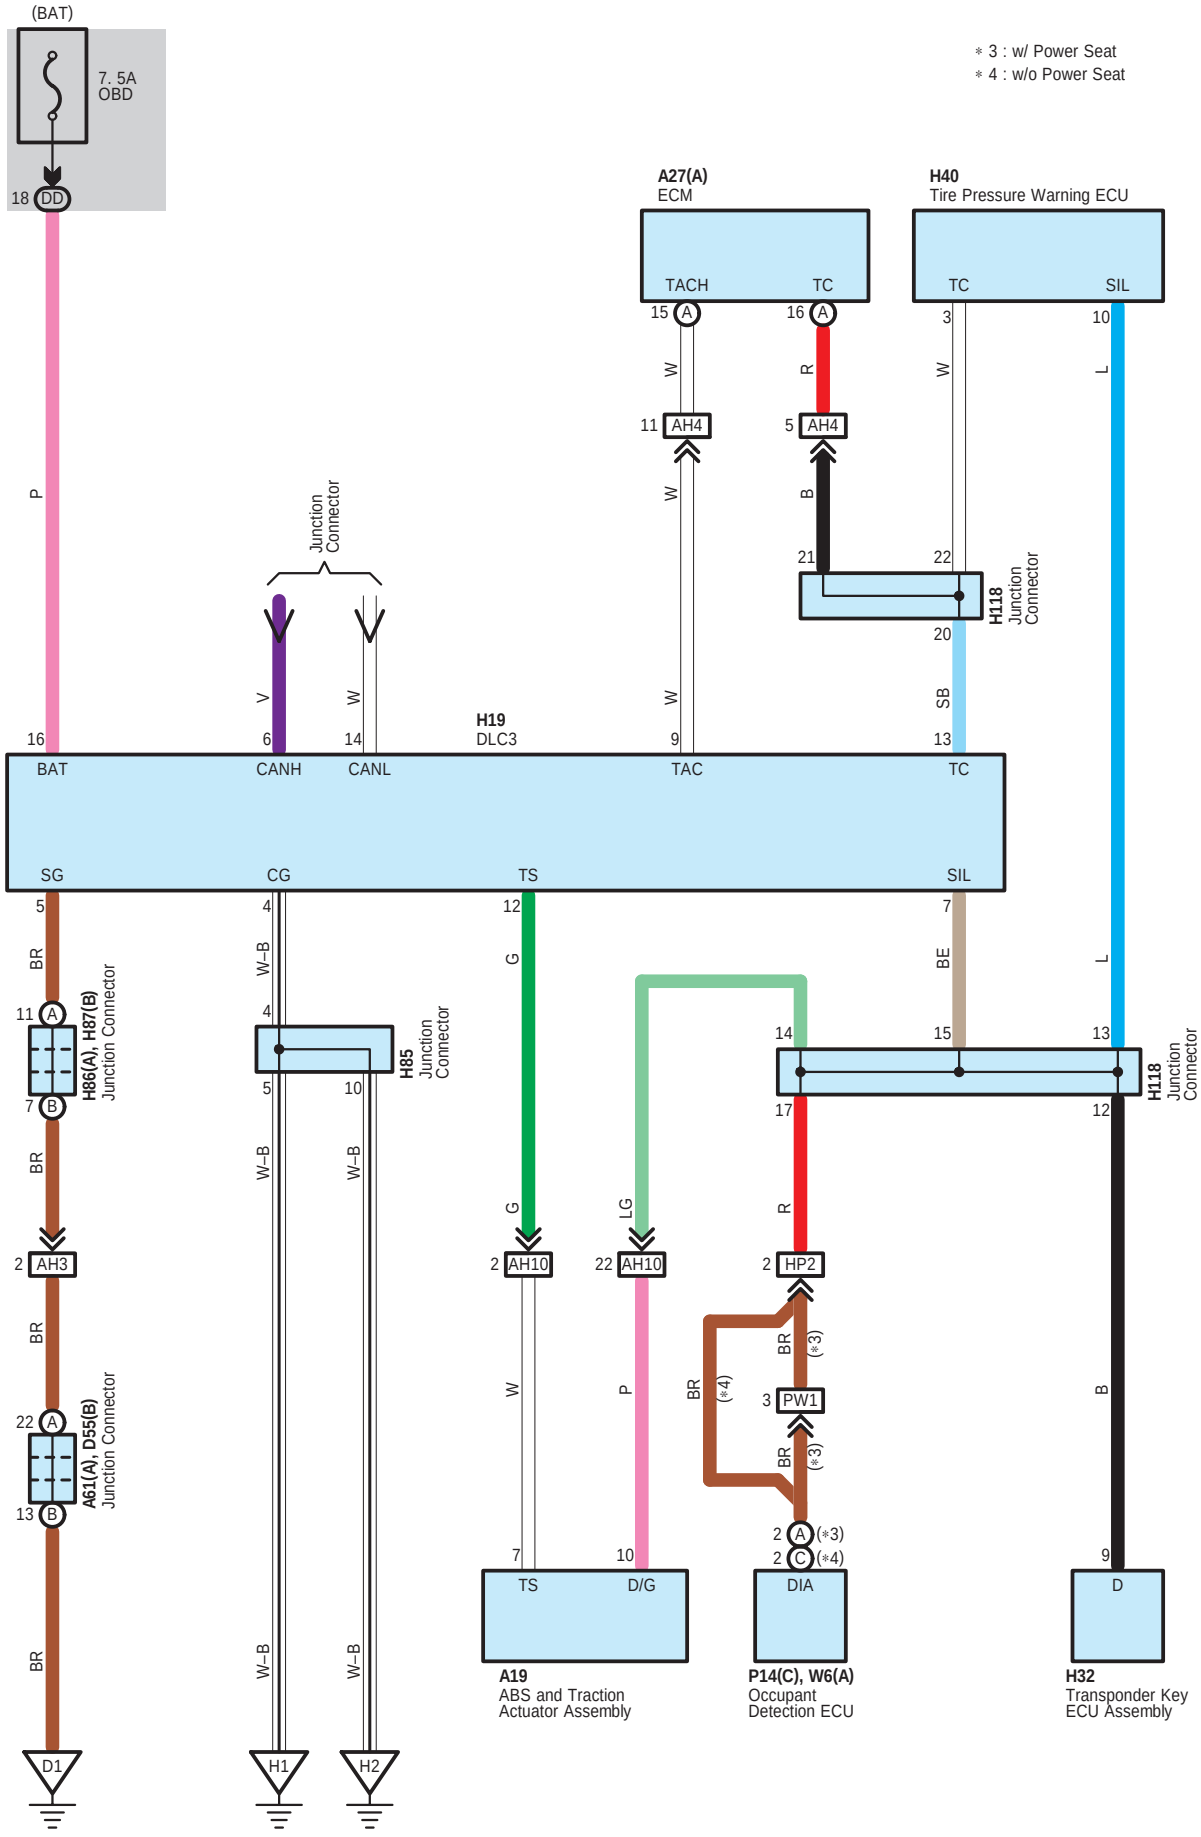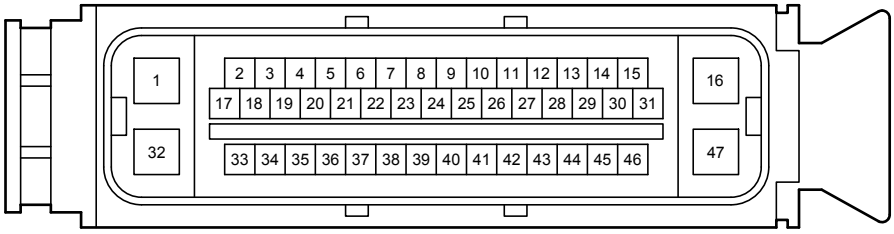


A 27
Black

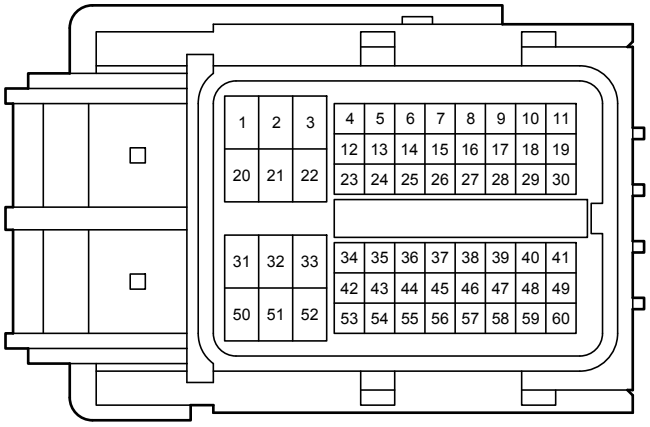


A 61
Blue

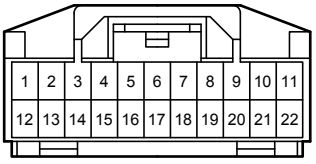


D 55
Blue

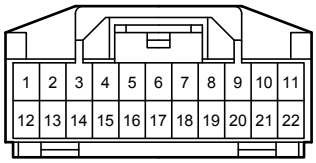


H 19
White

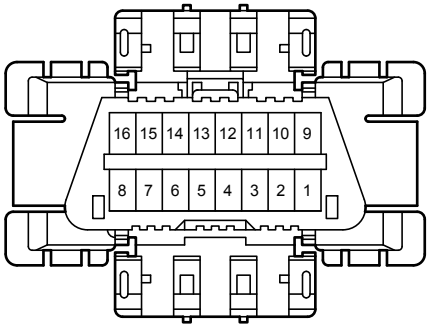


H 32
White

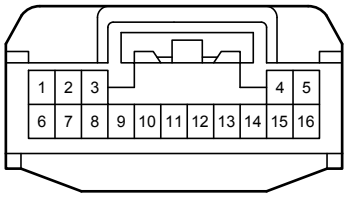


H 40
White

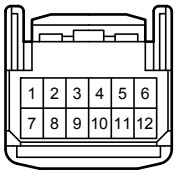


H 85
White

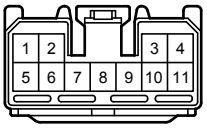


H 86
White

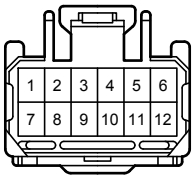


H 87
White

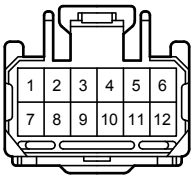


H118
Black

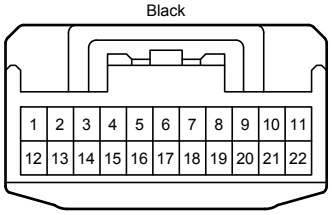


P 14
Black

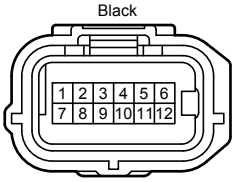


W 6
Black

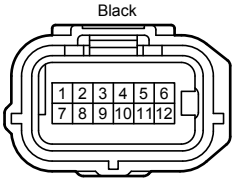


DD
White

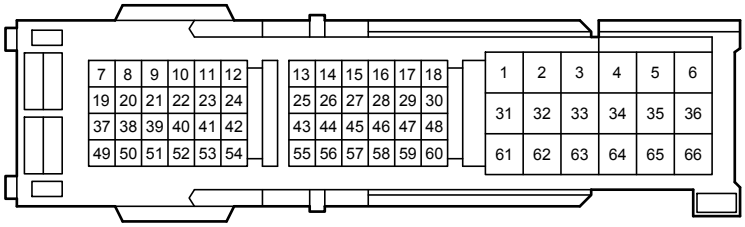


AH3
White

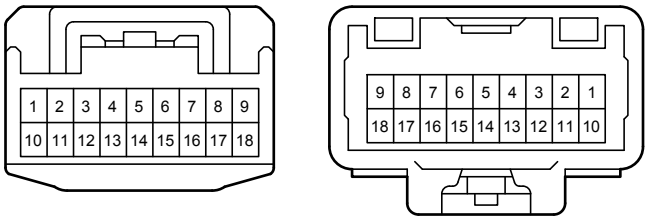


AH4
White

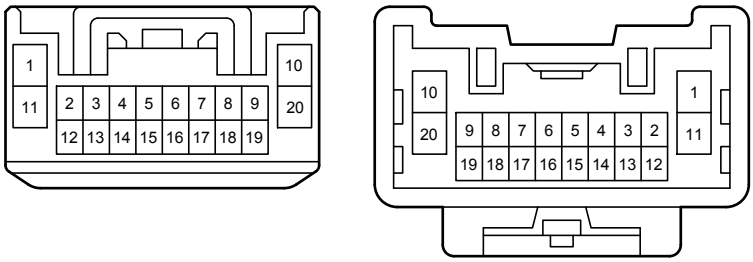


AH10
Gray

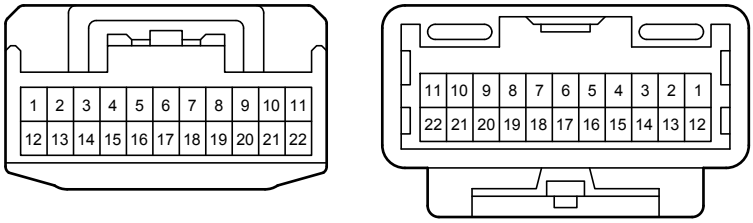

HP2
Gray

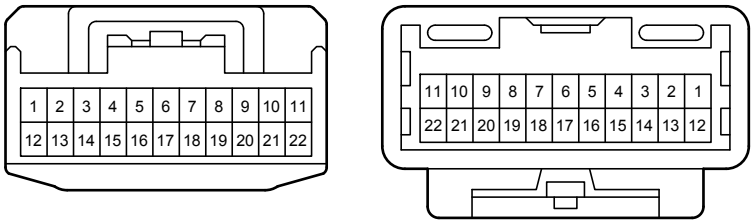

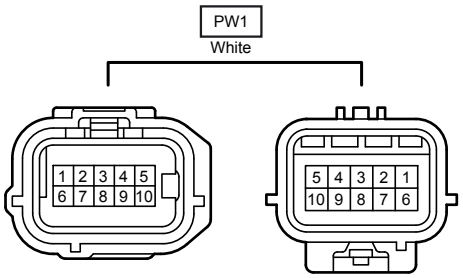
PW1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6