



(IG)
(BAT)
10A
IGN
7. 5A
IMB
H127
Transponder
Key Amplifier
ANT2
ANT1
H19
DLC3
SIL
A27(A)
ECM
IMO
IMI
A53(B)
Junction
Connector
H118
Junction
Connector
H82(B)
Junction
Connector
+B
ANT2
ANT1
D
EFII
EFIO
H32
Transponder Key ECU Assembly
IG
GND
KSW
IND
CTY
H77(A), H78(B)
Junction
Connector
LP
Security
Indicator
E
I22
Accessory Meter Assembly
H21
Un–Lock Warning
Switch Assembly
O8
Front Door Courtesy
Light Switch LH
H83
Junction
Connector
H85
Junction
Connector
H3
H1
H2


A 27
Black

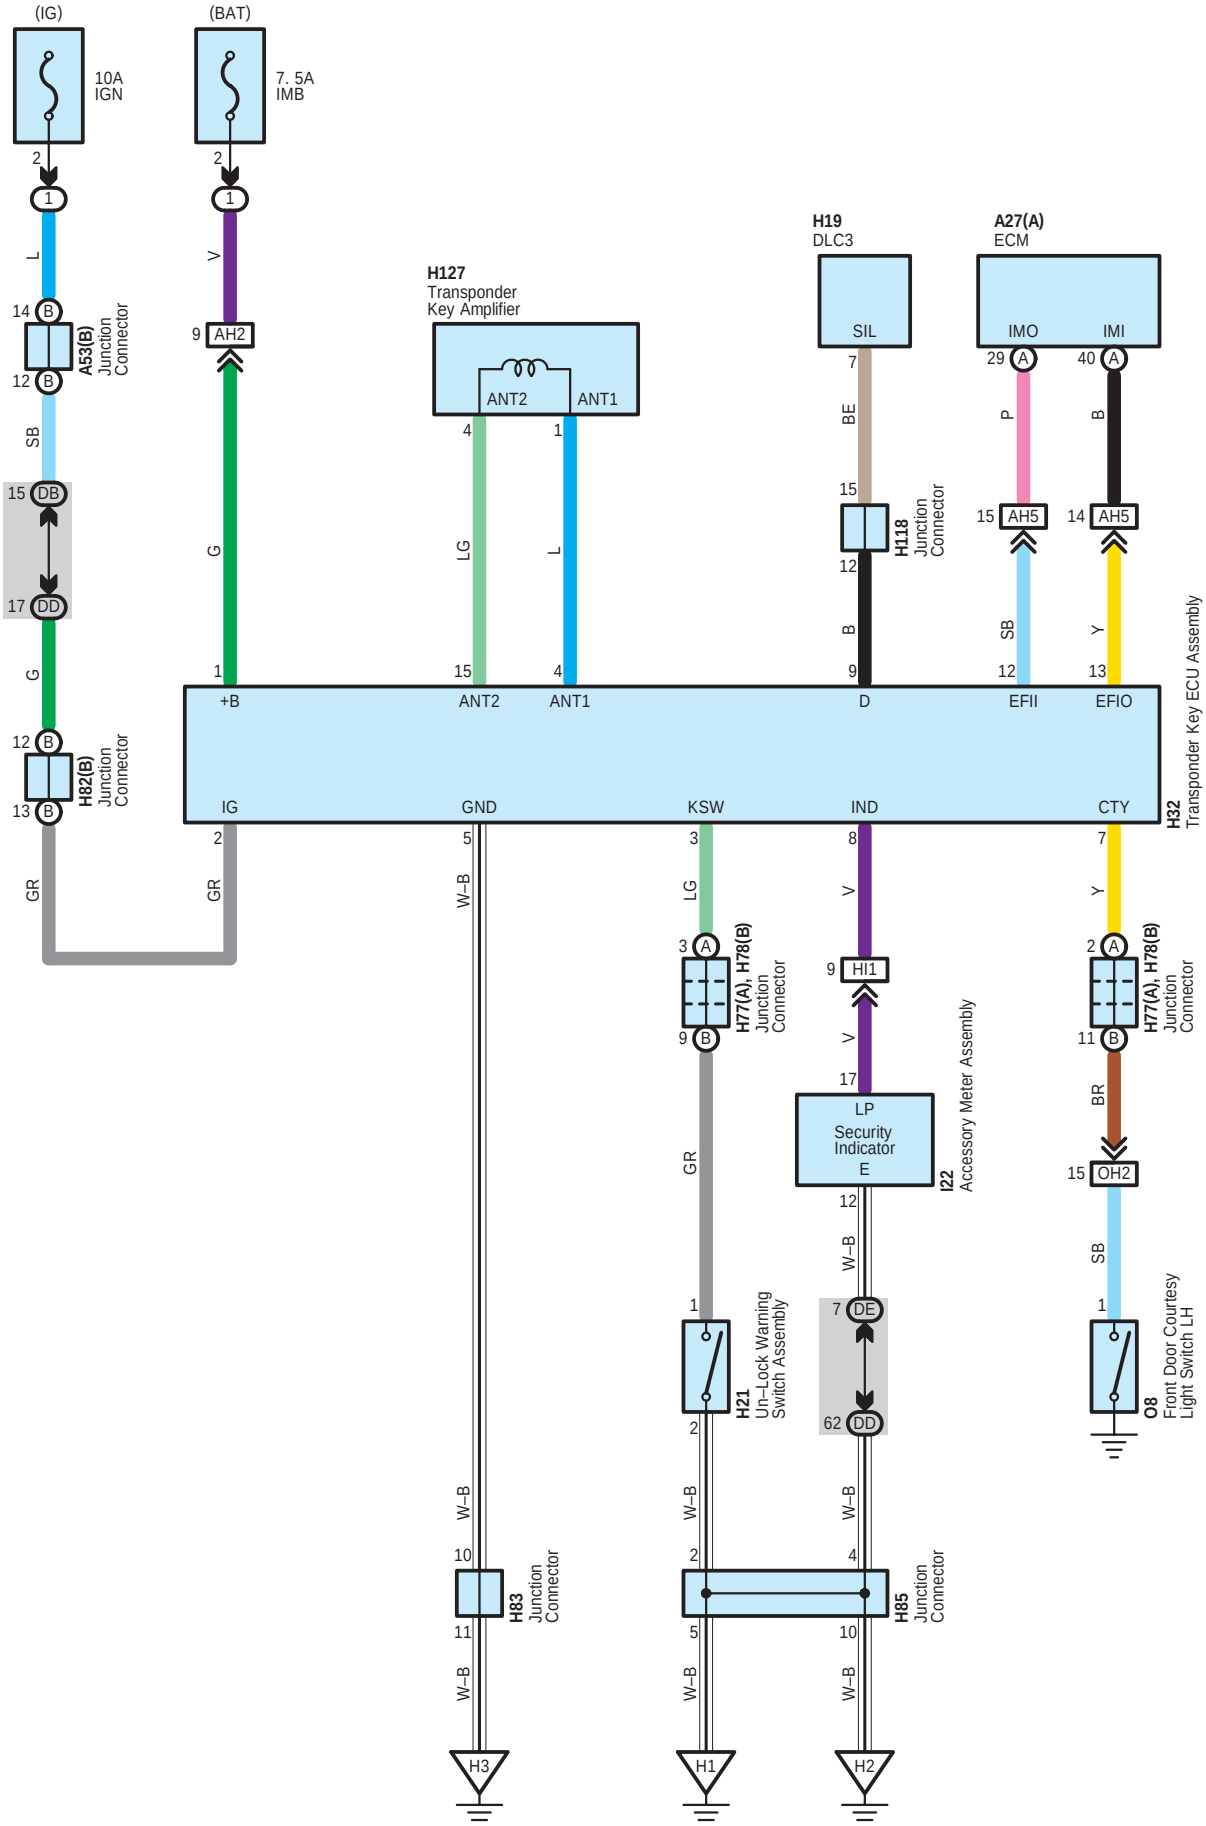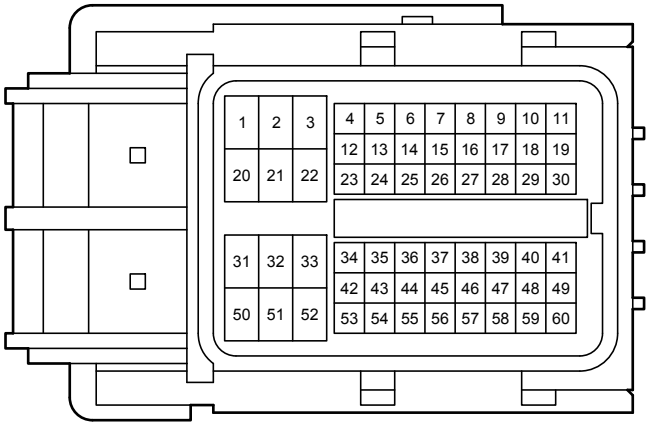


A 53
White

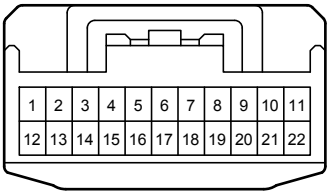


H 19
White

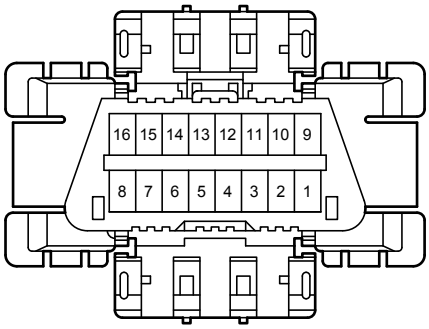


H 21
White




H 32
White

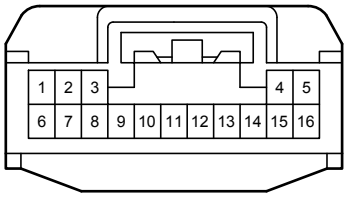


H 77
Black

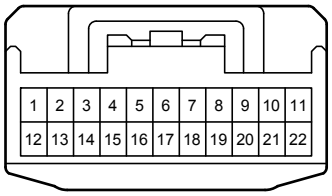


H 78
Black

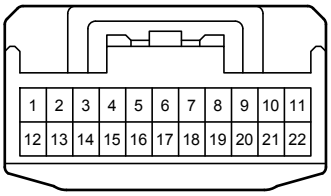


H 82
White

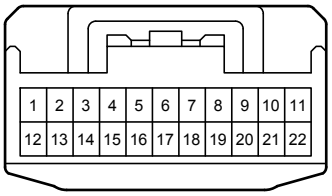


H 83
Gray

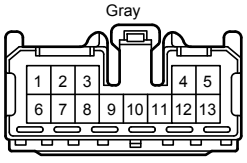


H 85
White

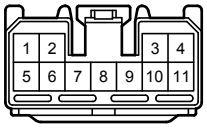


H118
Black

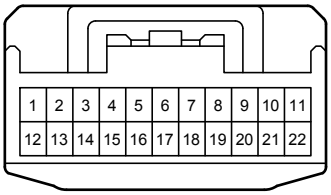

H127
Black

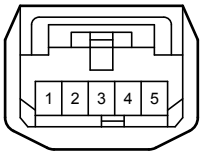


I 22
White

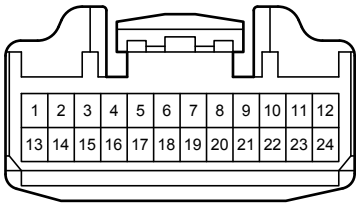


O 8
White




DB
White

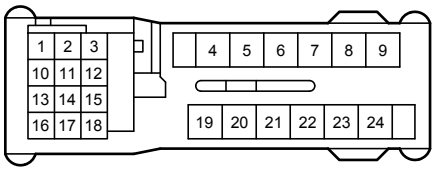


DD
White

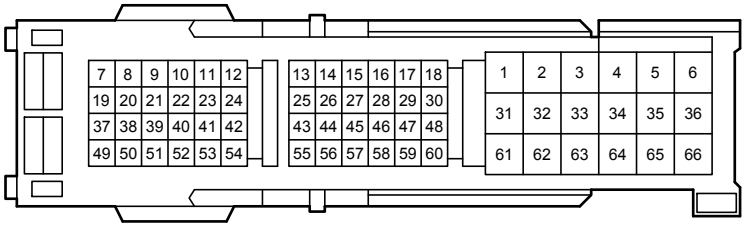


DE
White

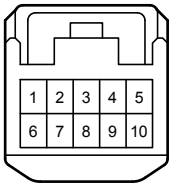


AH2
White

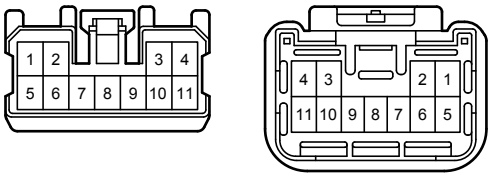

AH5
White

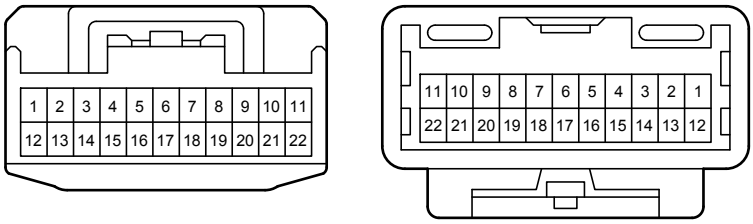

HI1
White

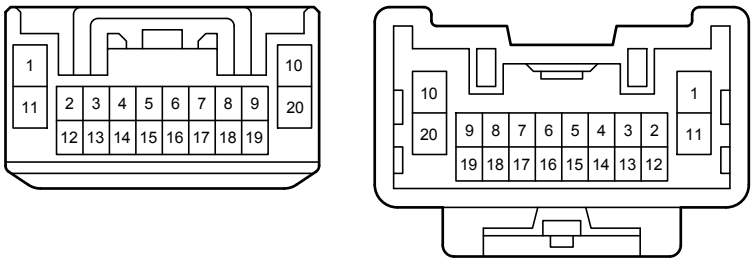

OH2
Black

