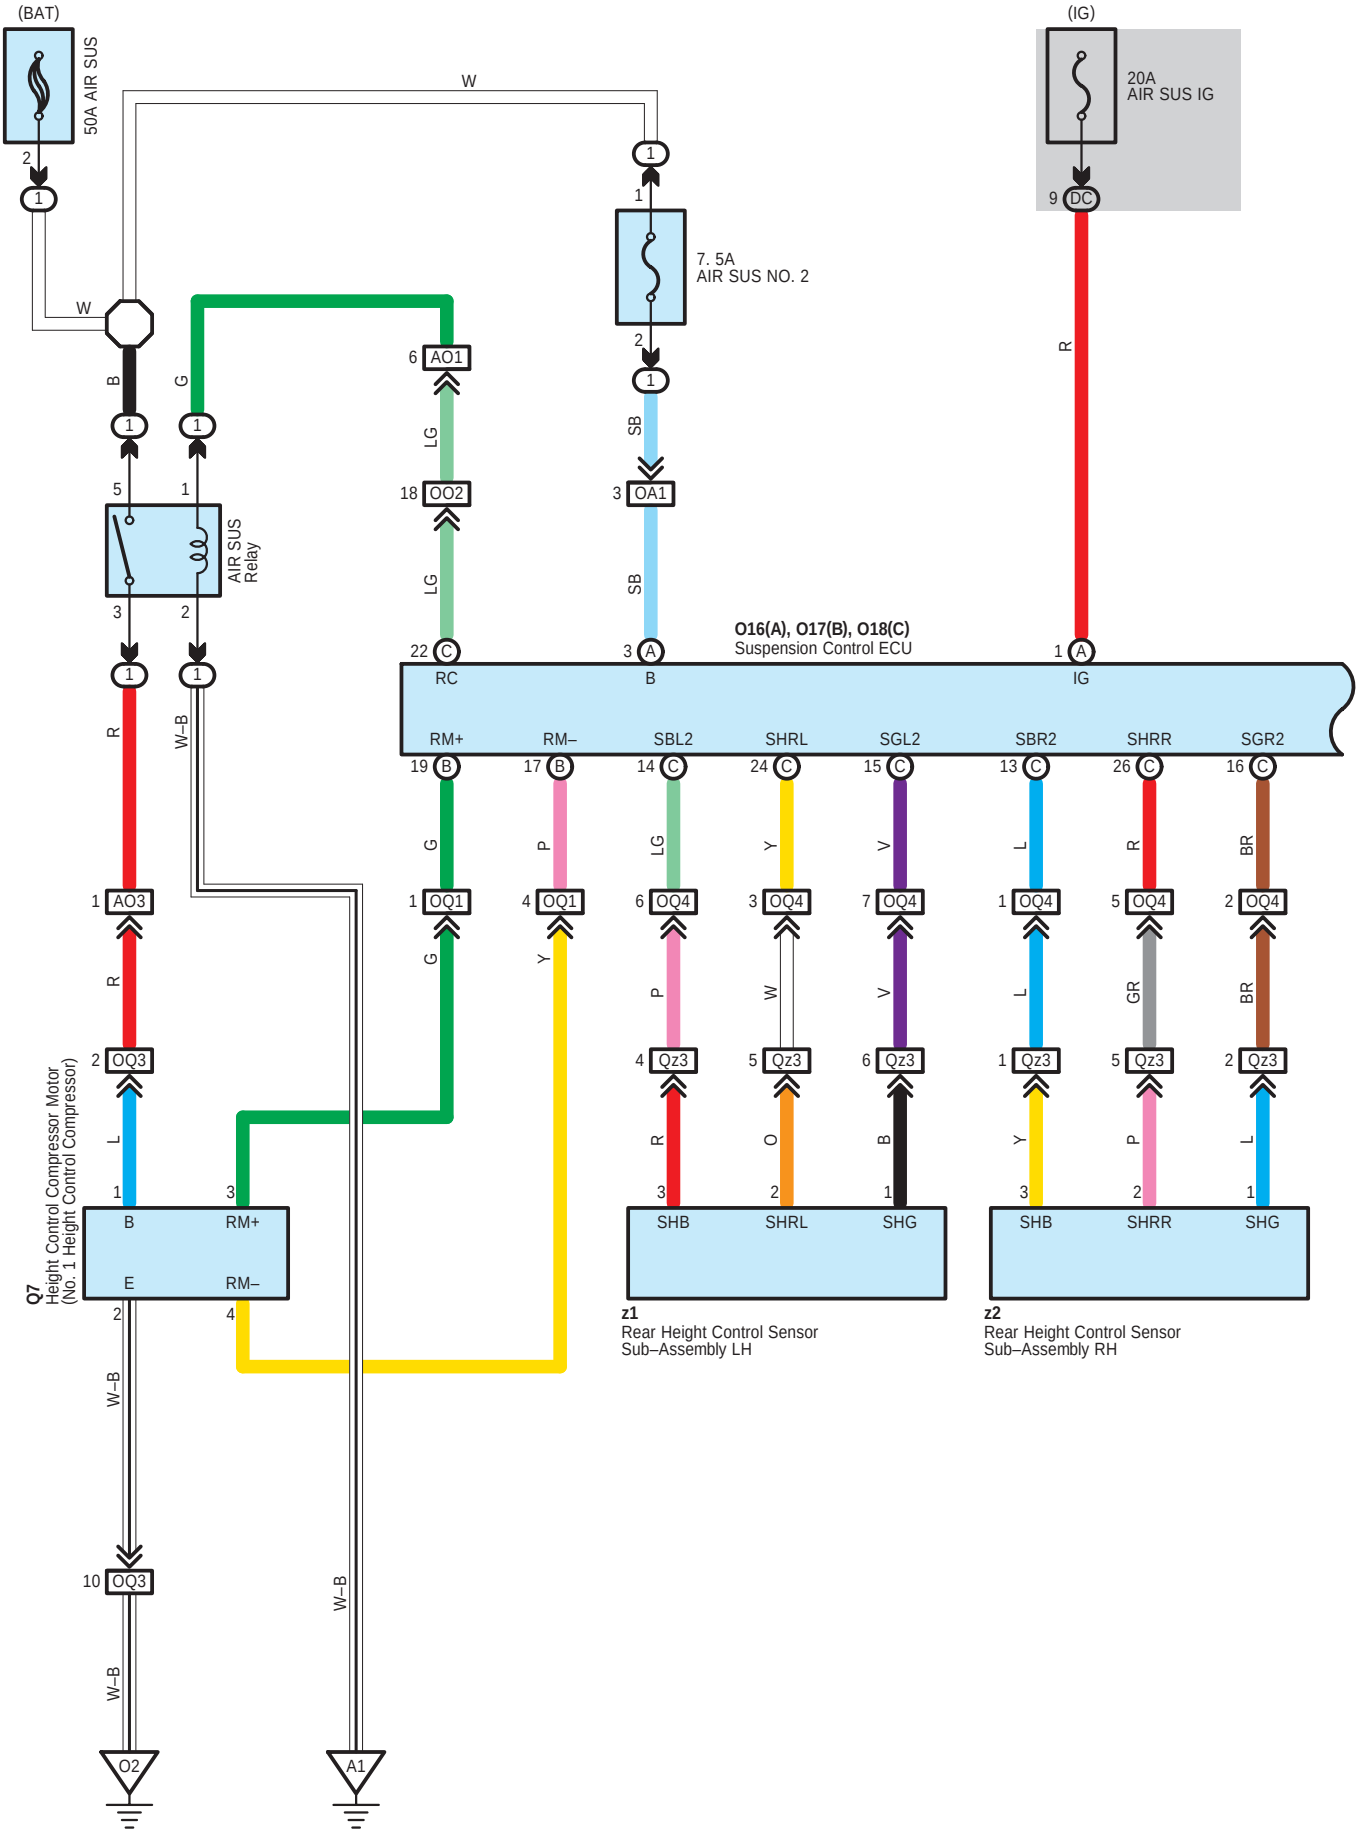
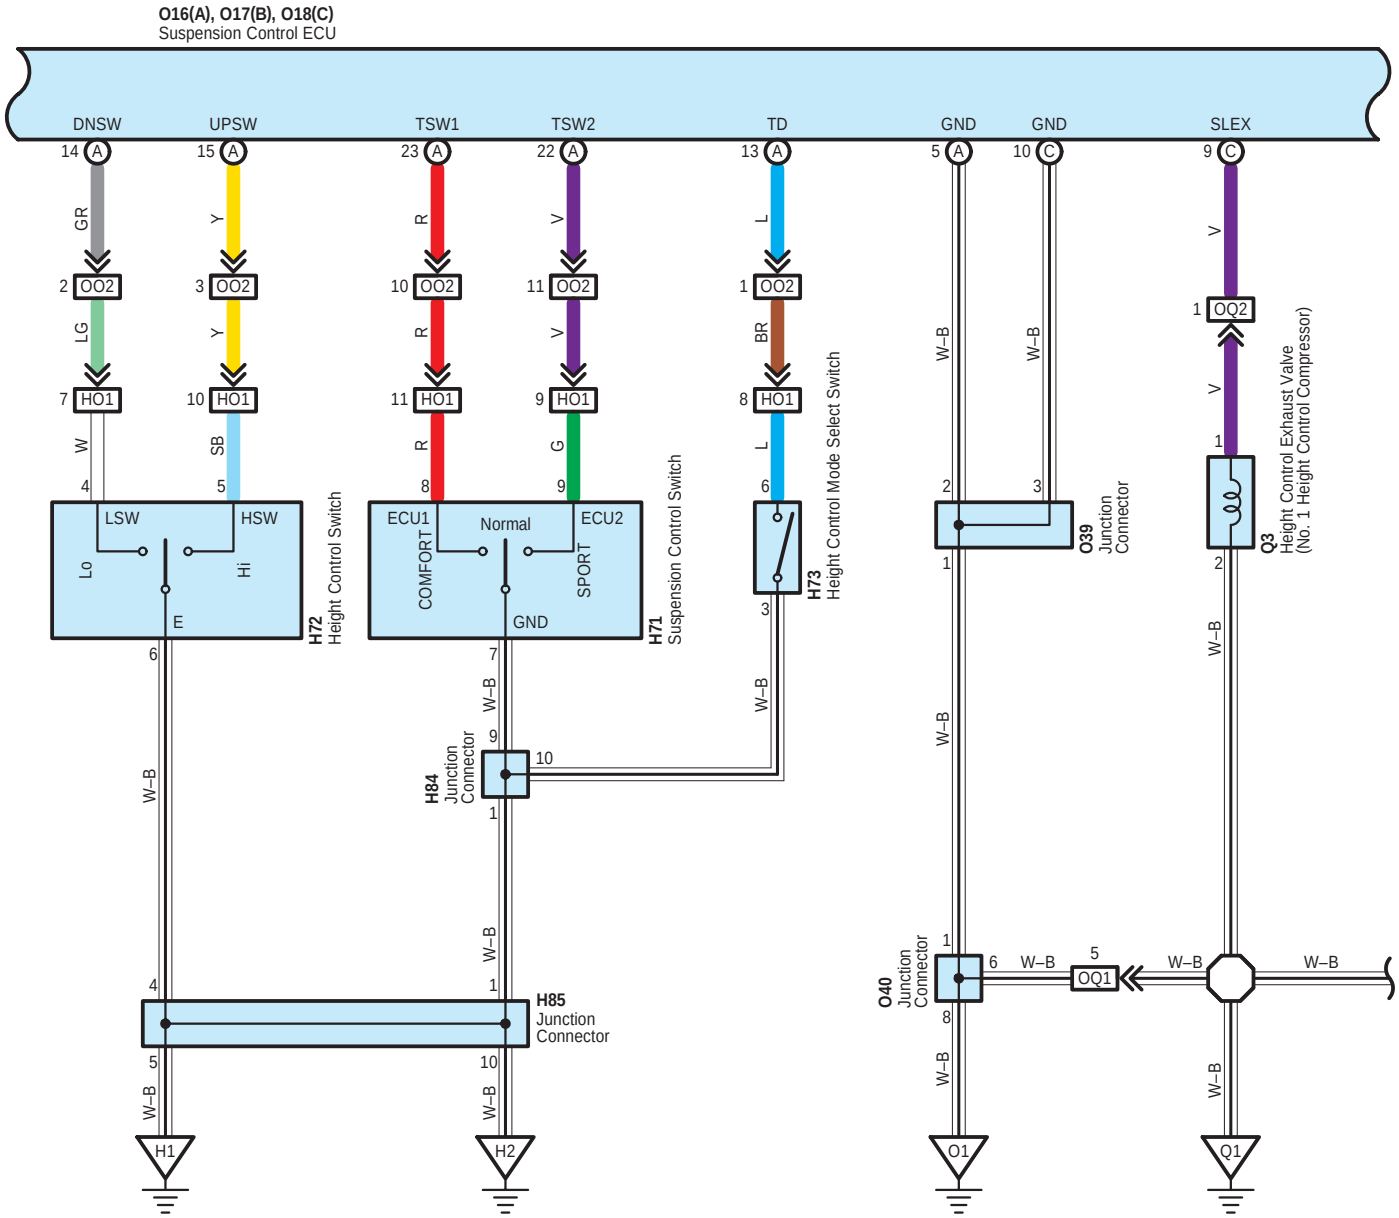
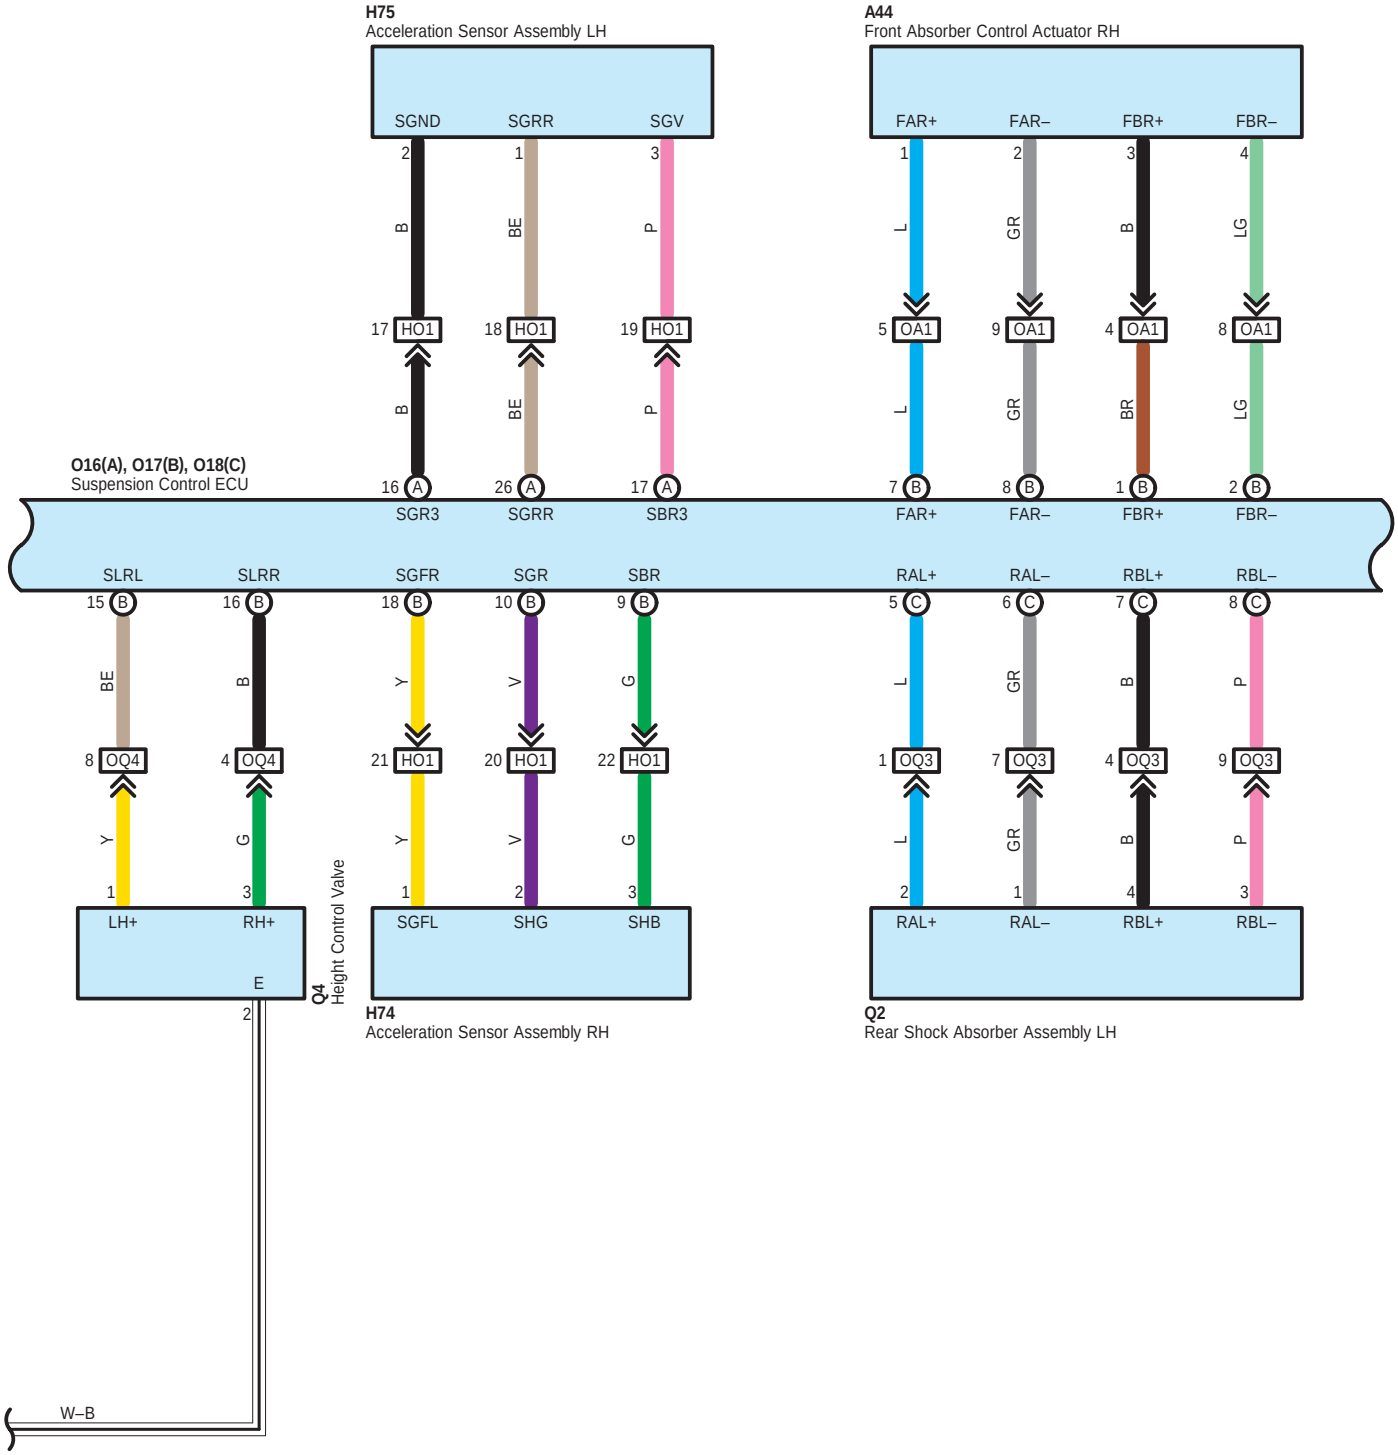
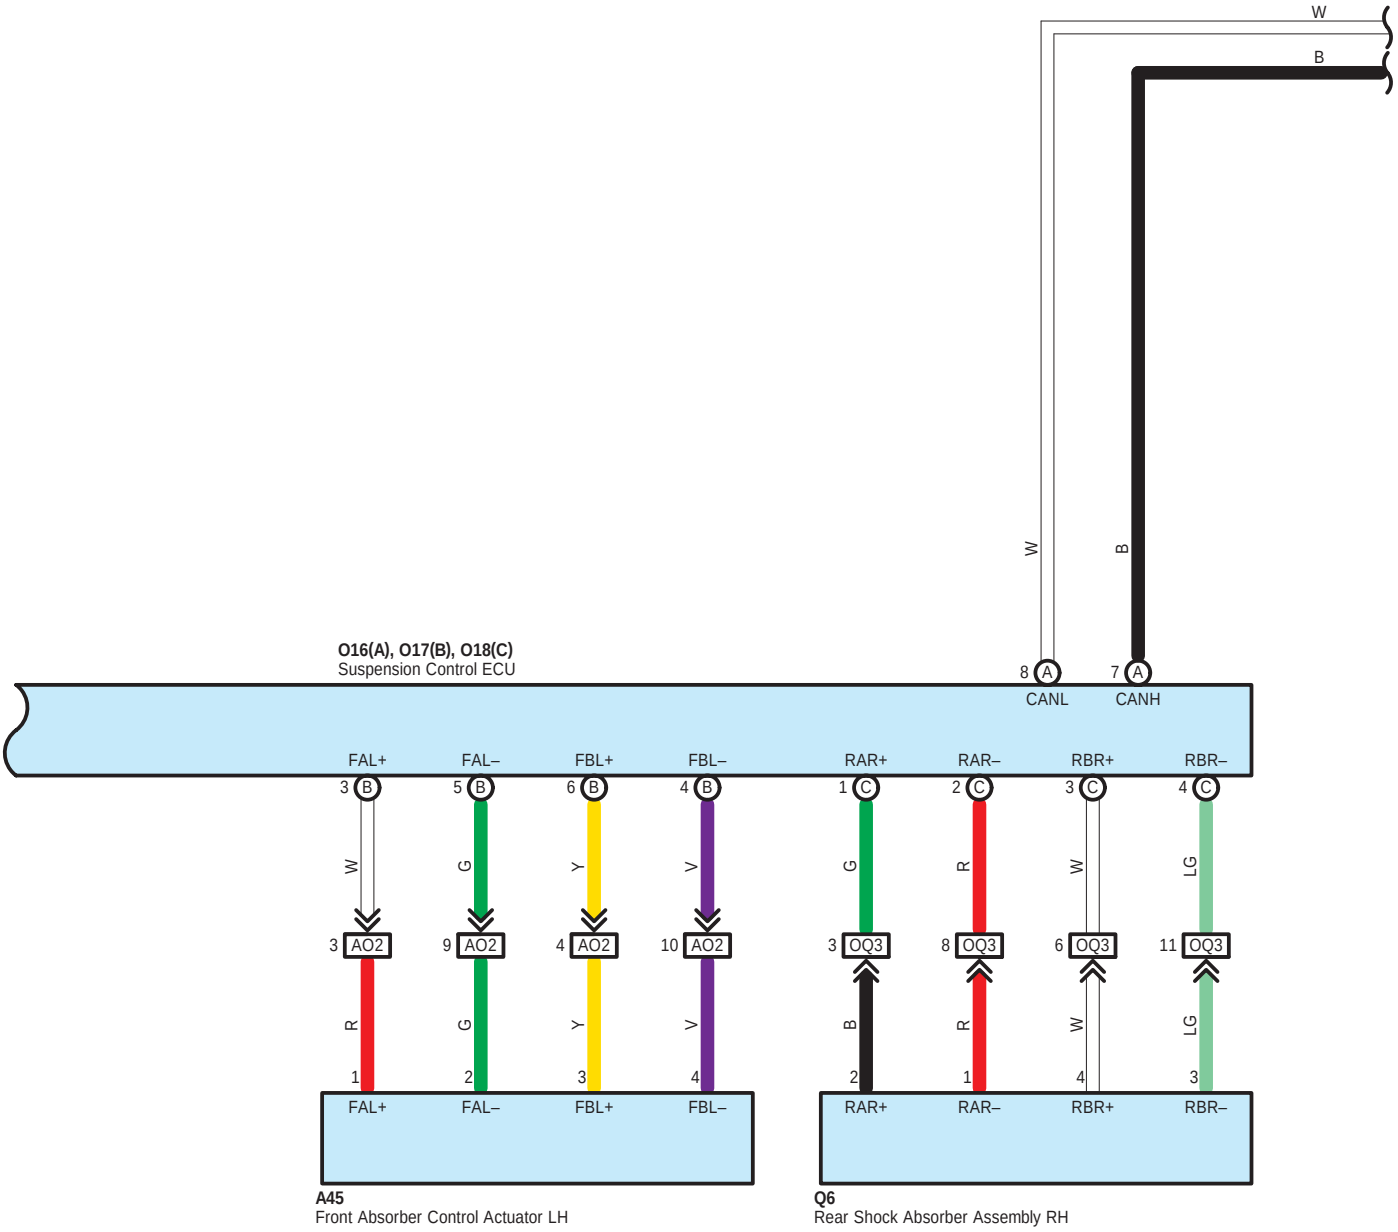
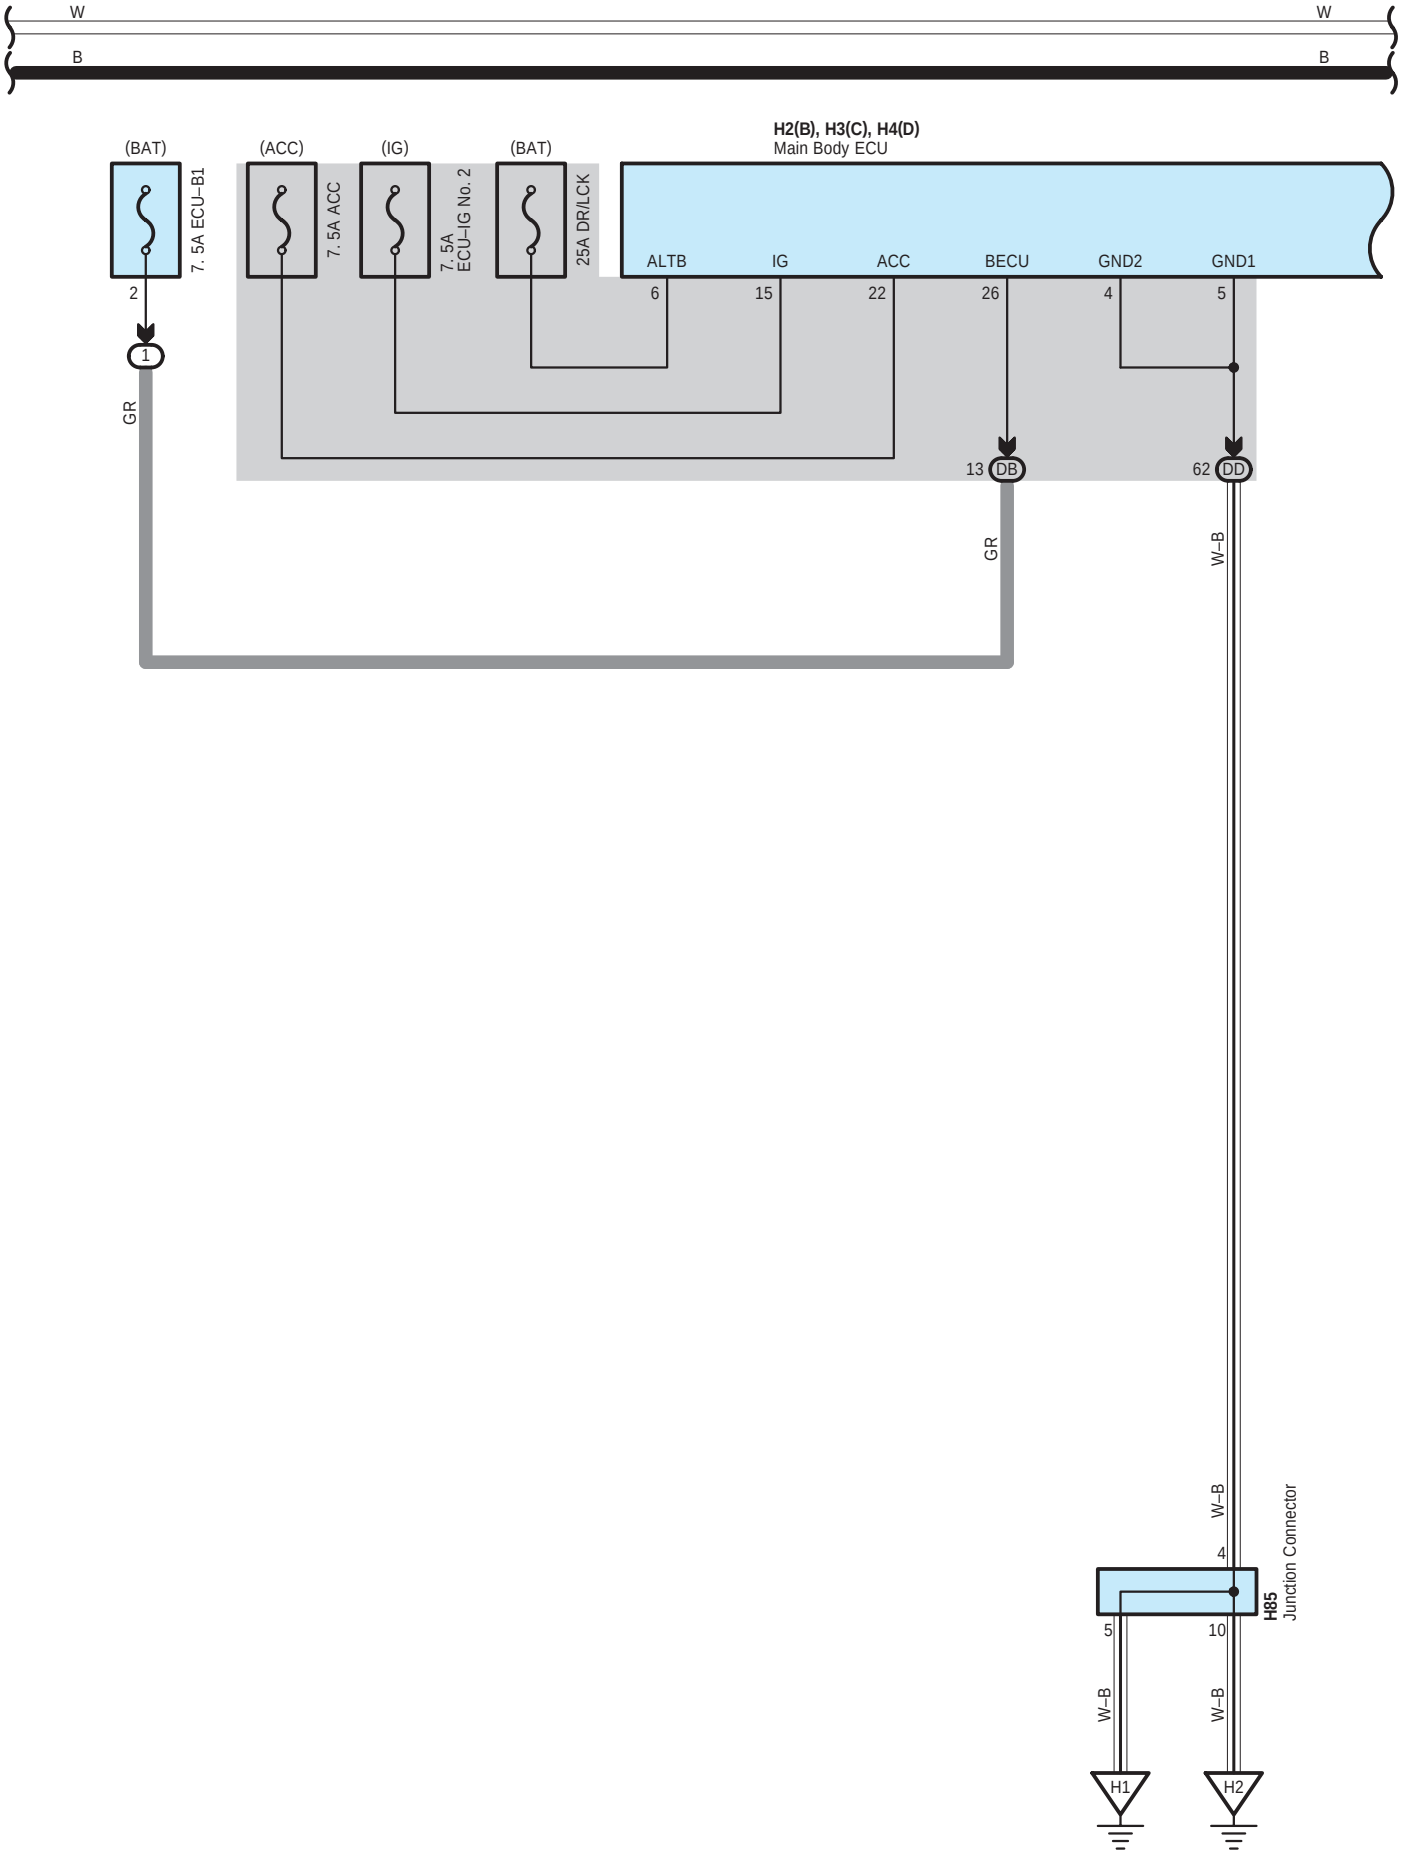
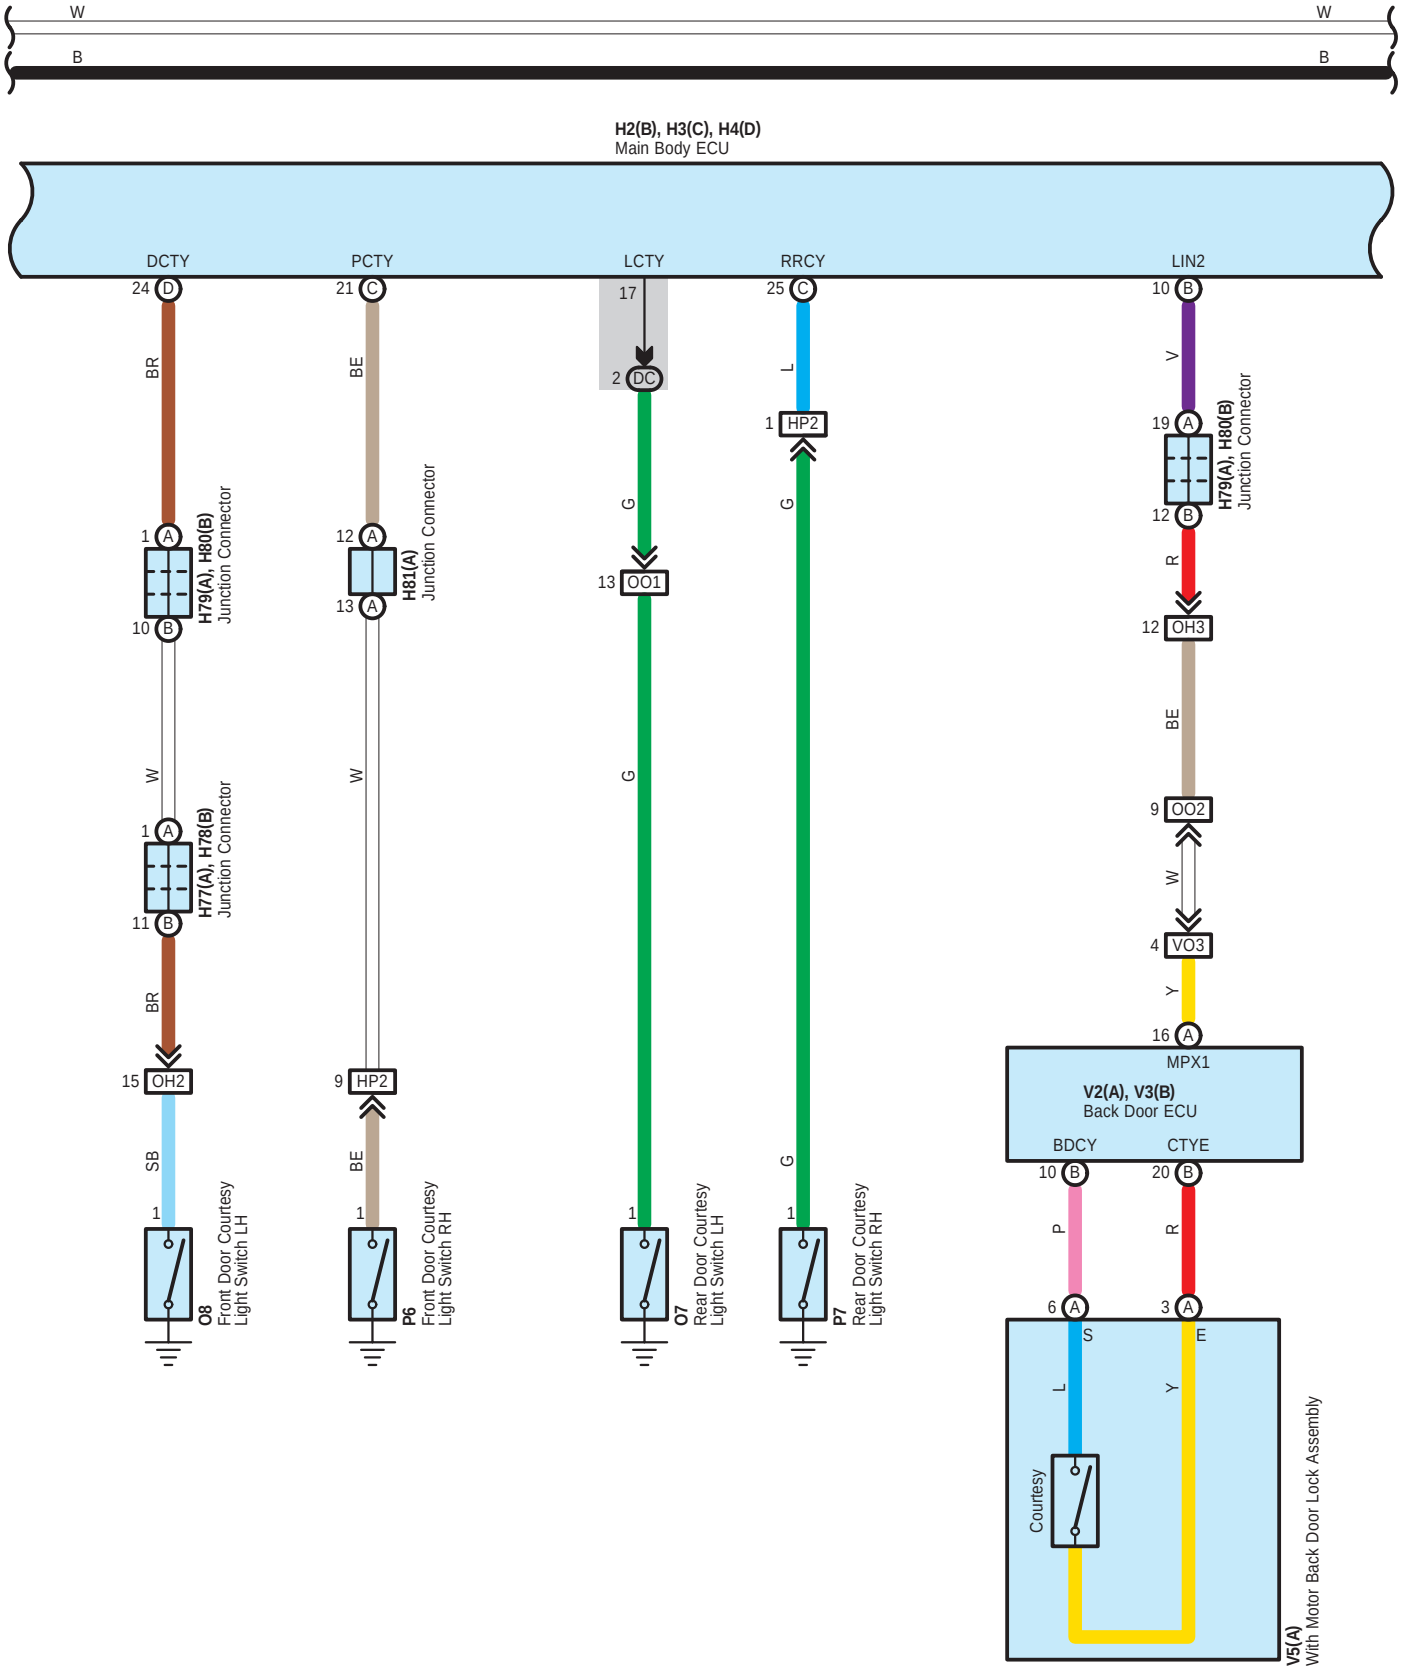

(BAT)
50A AIR SUS
W
(IG)
20A
AIR SUS IG
9 DC
R
7. 5A
AIR SUS NO. 2
W
B
G
6 AO1
LG
18 OO2
LG
22 C
RC
SB
3 OA1
SB
3 A
B
O16(A), O17(B), O18(C)
Suspension Control ECU
1 A
IG
AIR SUS
Relay
RM+
RM–
SBL2
SHRL
SGL2
SBR2
SHRR
SGR2
19 B
17 B
14 C
24 C
15 C
13 C
26 C
16 C
1 AO3
1 OQ1
4 OQ1
6 OQ4
3 OQ4
7 OQ4
1 OQ4
5 OQ4
2 OQ4
2 OQ3
4 Qz3
5 Qz3
6 Qz3
1 Qz3
5 Qz3
2 Qz3
Q7
Height Control Compressor Motor
(No. 1 Height Control Compressor)
B
RM+
E
RM–
SHB
SHRL
SHG
SHB
SHRR
SHG
z1
Rear Height Control Sensor
Sub–Assembly LH
z2
Rear Height Control Sensor
Sub–Assembly RH
W–B
10 OQ3
O2
A1



O16(A), O17(B), O18(C)
Suspension Control ECU
DNSW
UPSW
TSW1
TSW2
TD
GND
GND
SLEX
LSW
HSW
Lo
Hi
E
H72
Height Control Switch
ECU1
Normal
ECU2
COMFORT
SPORT
GND
H71
Suspension Control Switch
H73
Height Control Mode Select Switch
H84
Junction Connector
H85
Junction Connector
O39
Junction Connector
O40
Junction Connector
Q3
Height Control Exhaust Valve (No. 1 Height Control Compressor)
H1
H2
O1
Q1



H75
Acceleration Sensor Assembly LH
SGND
SGRR
SGV
2
1
3
B
BE
P
17 HO1
18 HO1
19 HO1
B
BE
P
16 A
26 A
17 A
SGR3
SGRR
SBR3
A44
Front Absorber Control Actuator RH
FAR+
FAR–
FBR+
FBR–
1
2
3
4
L
GR
B
LG
5 OA1
9 OA1
4 OA1
8 OA1
L
GR
BR
LG
7 B
8 B
1 B
2 B
FAR+
FAR–
FBR+
FBR–
O16(A), O17(B), O18(C)
Suspension Control ECU
SLRL
SLRR
SGFR
SGR
SBR
RAL+
RAL–
RBL+
RBL–
15 B
16 B
18 B
10 B
9 B
5 C
6 C
7 C
8 C
BE
B
Y
V
G
L
GR
B
P
8 OQ4
4 OQ4
21 HO1
20 HO1
22 HO1
1 OQ3
7 OQ3
4 OQ3
9 OQ3
Y
G
Y
V
G
L
GR
B
P
1
3
1
2
3
2
1
4
3
LH+
RH+
SGFL
SHG
SHB
RAL+
RAL–
RBL+
RBL–
E
2
Q4
Height Control Valve
H74
Acceleration Sensor Assembly RH
Q2
Rear Shock Absorber Assembly LH
W–B



W
B
W
B
O16(A), O17(B), O18(C)
Suspension Control ECU
8 A
CANL
7 A
CANH
FAL+
FAL–
FBL+
FBL–
RAR+
RAR–
RBR+
RBR–
3 B
5 B
6 B
4 B
1 C
2 C
3 C
4 C
W
G
Y
V
G
R
W
LG
3 AO2
9 AO2
4 AO2
10 AO2
3 OQ3
8 OQ3
6 OQ3
11 OQ3
R
G
Y
V
B
R
W
LG
1
2
3
4
2
1
4
3
FAL+
FAL–
FBL+
FBL–
RAR+
RAR–
RBR+
RBR–
A45
Front Absorber Control Actuator LH
Q6
Rear Shock Absorber Assembly RH



W
B
W
B
(BAT)
(ACC)
(IG)
(BAT)
H2(B), H3(C), H4(D)
Main Body ECU
7. 5A ECU–B1
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
ALTB
IG
ACC
BECU
GND2
GND1
2
6
15
22
26
4
5
1
GR
13 DB
62 DD
GR
W–B
W–B
4
H85
Junction Connector
5
10
W–B
W–B
H1
H2



W
B
W
B
H2(B), H3(C), H4(D)
Main Body ECU
DCTY
PCTY
LCTY
RRCY
LIN2
24 D
BR
1 A
10 B
H79(A), H80(B)
Junction Connector
W
1 A
11 B
H77(A), H78(B)
Junction Connector
BR
15 OH2
SB
1
O8
Front Door Courtesy
Light Switch LH
21 C
BE
12 A
13 A
H81(A)
Junction Connector
W
9 HP2
BE
1
P6
Front Door Courtesy
Light Switch RH
17
2 DC
G
13 OO1
G
1
O7
Rear Door Courtesy
Light Switch LH
25 C
L
1 HP2
G
G
1
P7
Rear Door Courtesy
Light Switch RH
10 B
V
19 A
H79(A), H80(B)
Junction Connector
12 B
R
12 OH3
BE
9 OO2
W
4 VO3
Y
16 A
MPX1
V2(A), V3(B)
Back Door ECU
BDCY
CTYE
10 B
20 B
P
R
6 A
3 A
S
E
L
Y
Courtesy
V5(A)
With Motor Back Door Lock Assembly

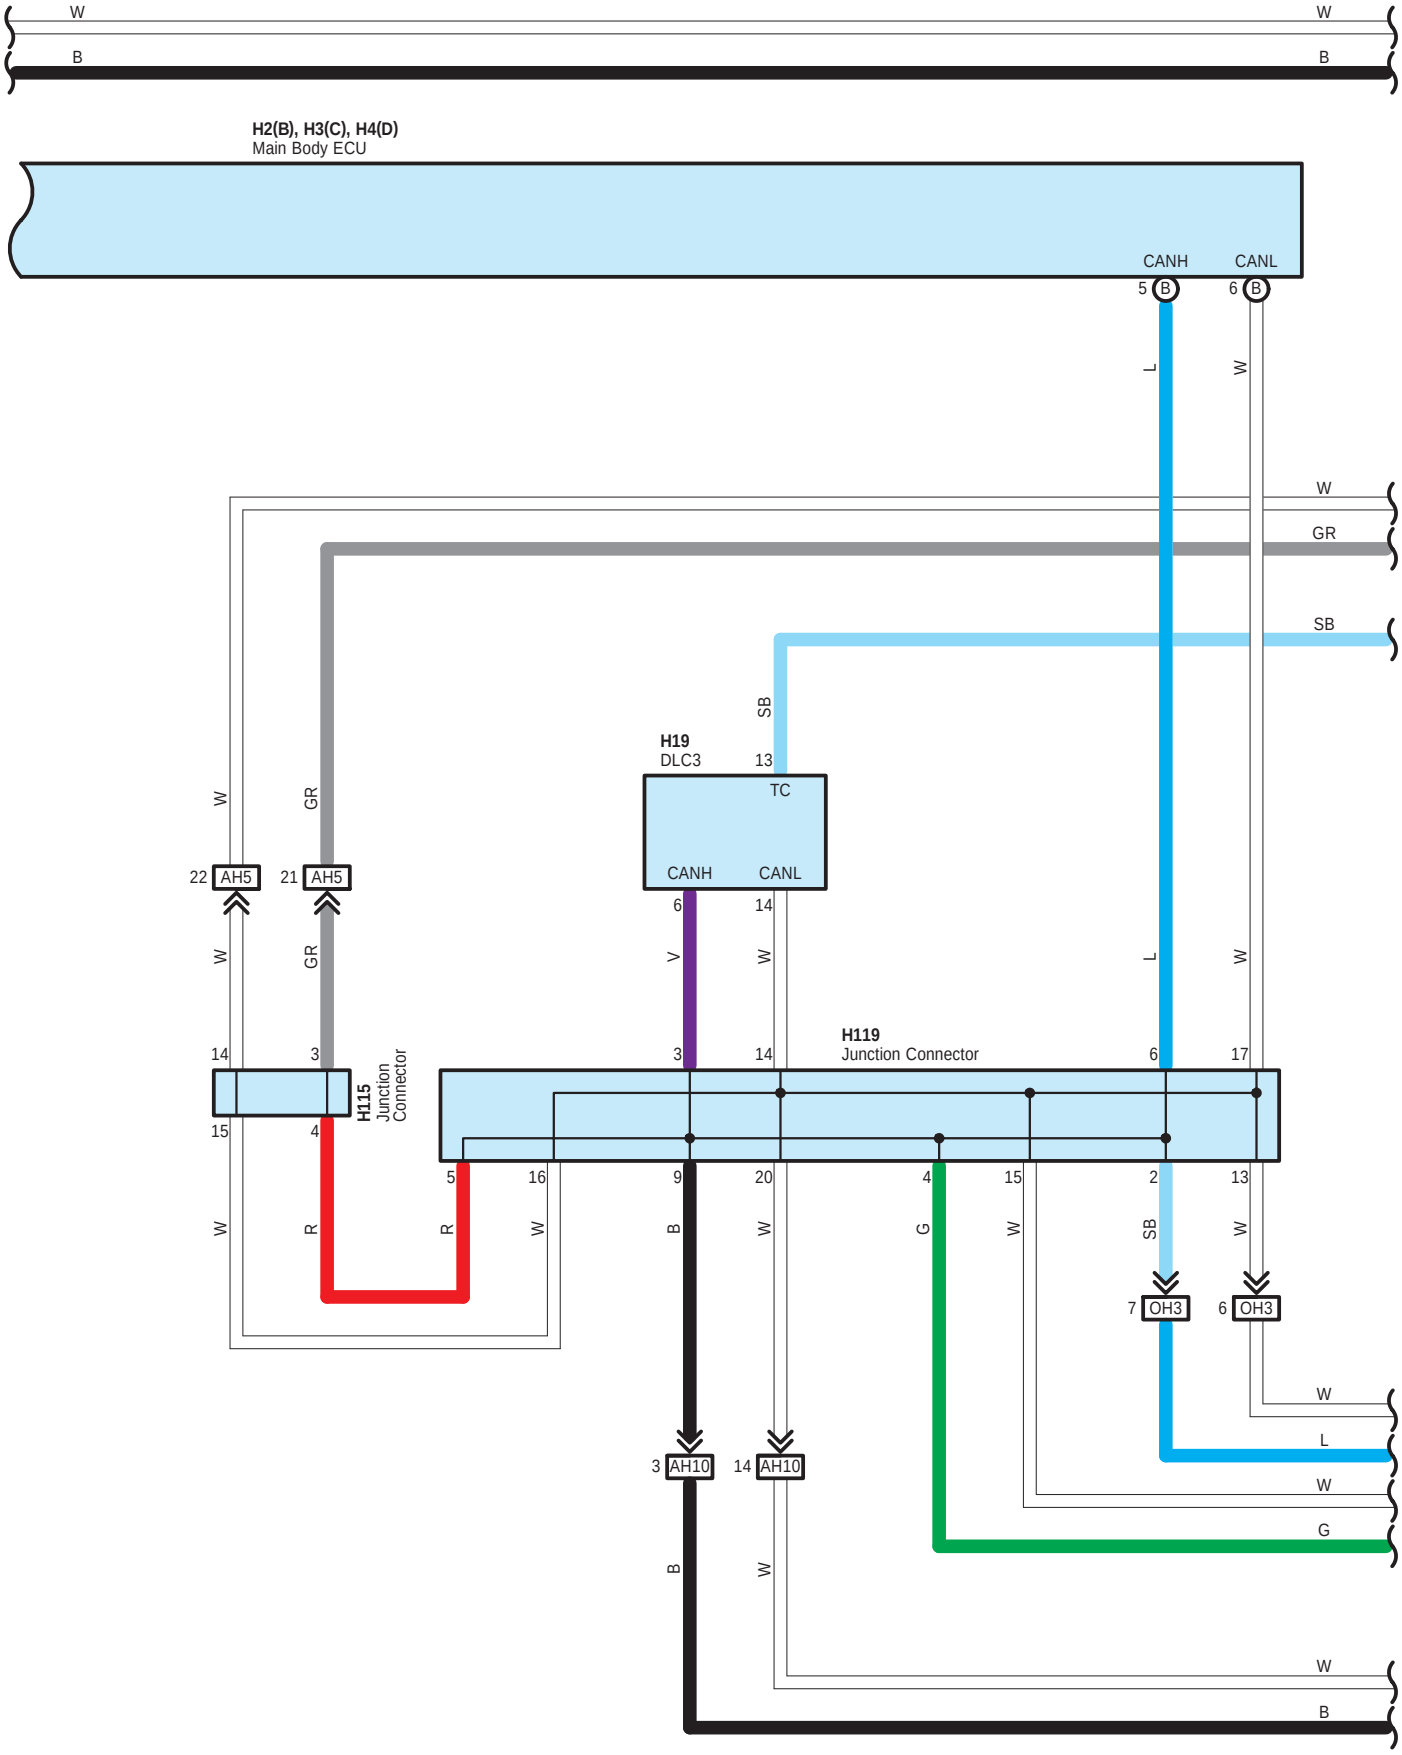
W
B
W
B
H2(B), H3(C), H4(D)
Main Body ECU
CANH
CANL
5 B
6 B
L
W
W
GR
SB
SB
H19
DLC3
13
TC
CANH
CANL
6
14
V
W
W
GR
22 AH5
21 AH5
14
3
15
4
H115
Junction
Connector
3
14
H119
Junction Connector
6
17
5
16
9
20
4
15
2
13
R
R
W
B
W
G
W
SB
W
7 OH3
6 OH3
3 AH10
14 AH10
W
L
W
G
B
W
W
B

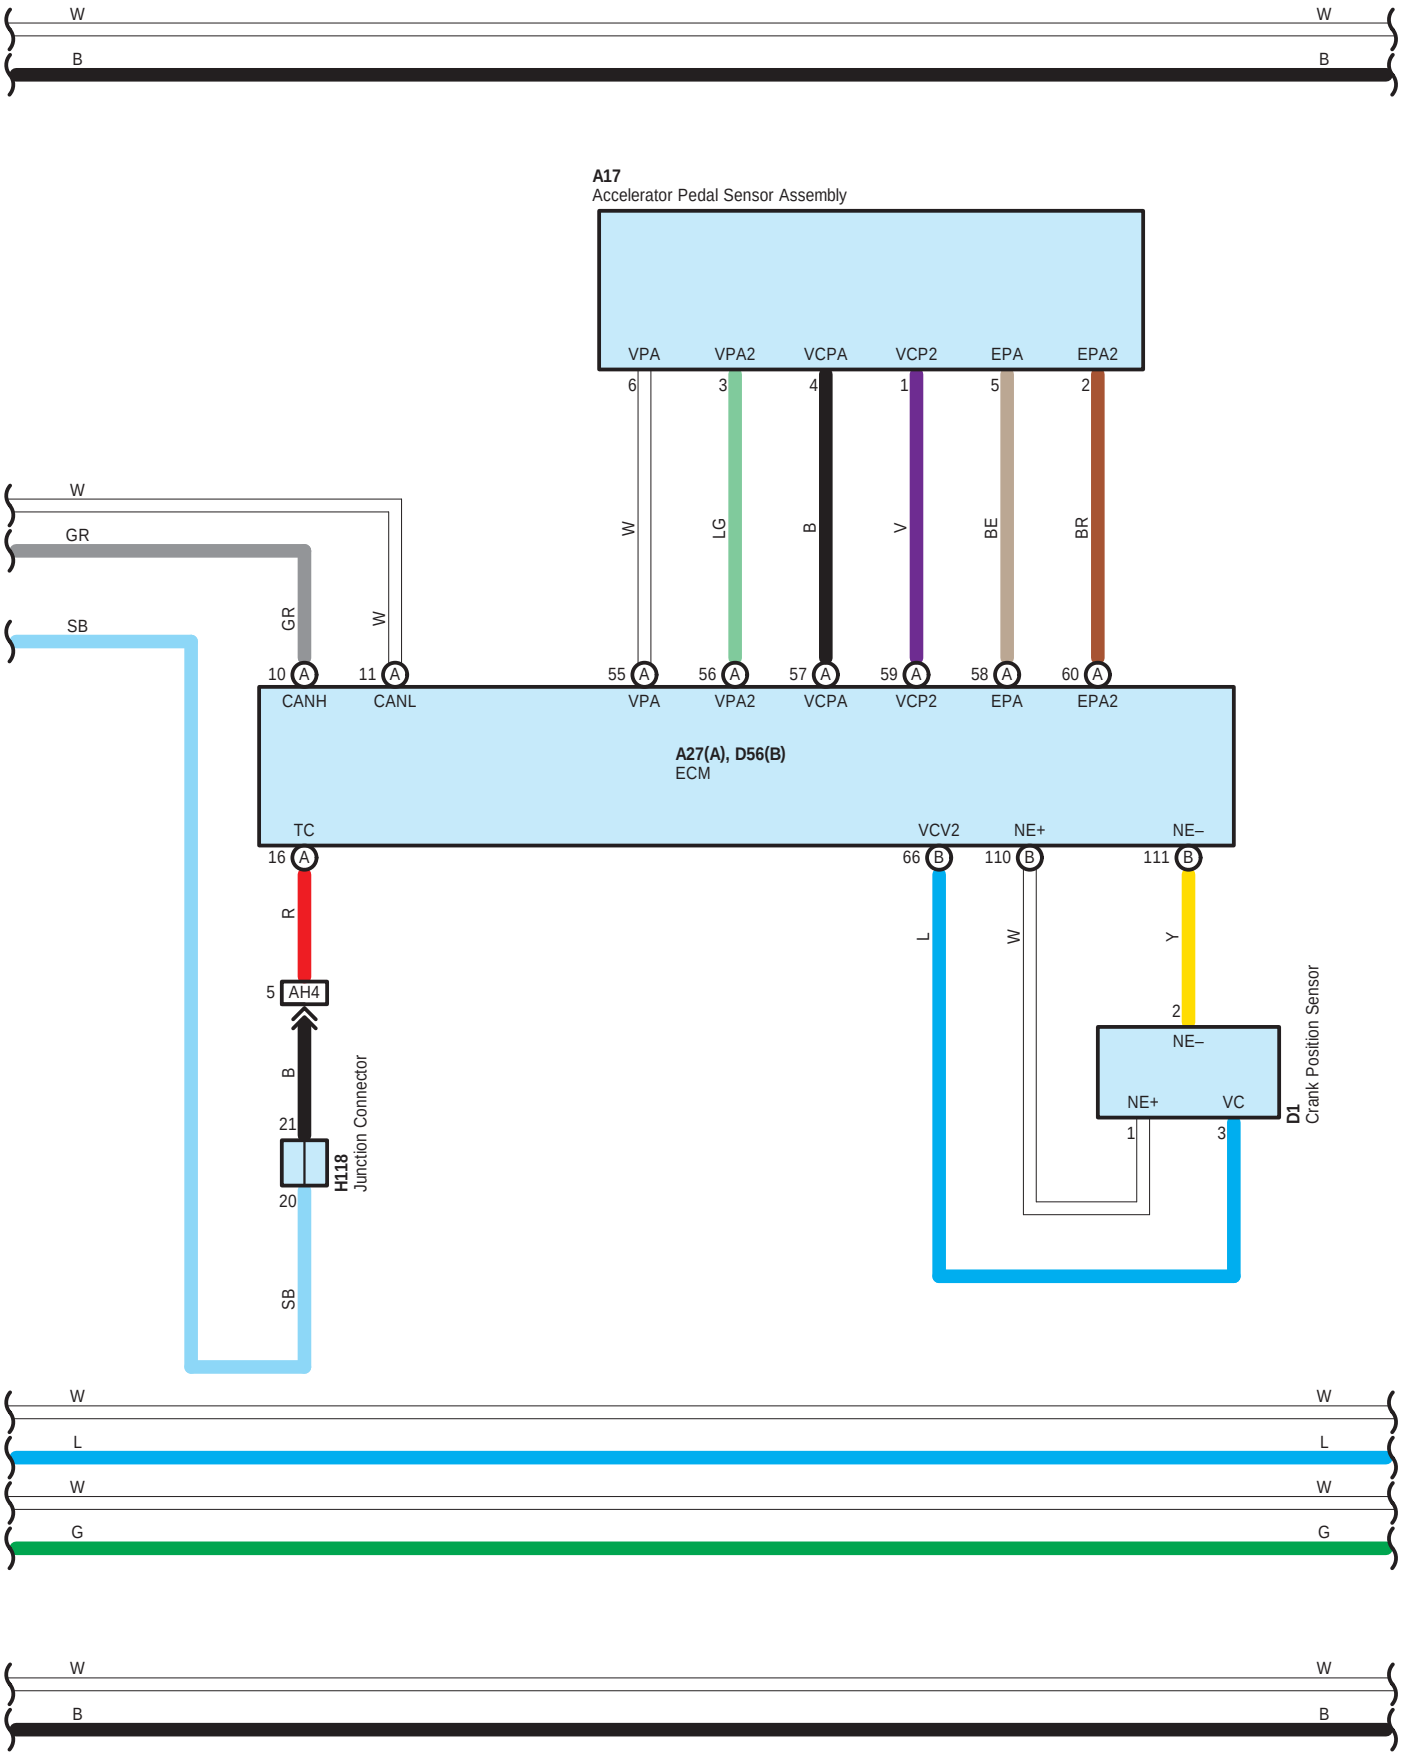

W
B
A17
Accelerator Pedal Sensor Assembly
VPA
VPA2
VCPA
VCP2
EPA
EPA2
6
3
4
1
5
2
W
LG
B
V
BE
BR
GR
SB
10 A
11 A
55 A
56 A
57 A
59 A
58 A
60 A
CANH
CANL
A27(A), D56(B)
ECM
TC
VCV2
NE+
NE–
16 A
66 B
110 B
111 B
R
L
W
Y
5 AH4
21
20
H118
Junction Connector
2
1
3
D1
Crank Position Sensor
G

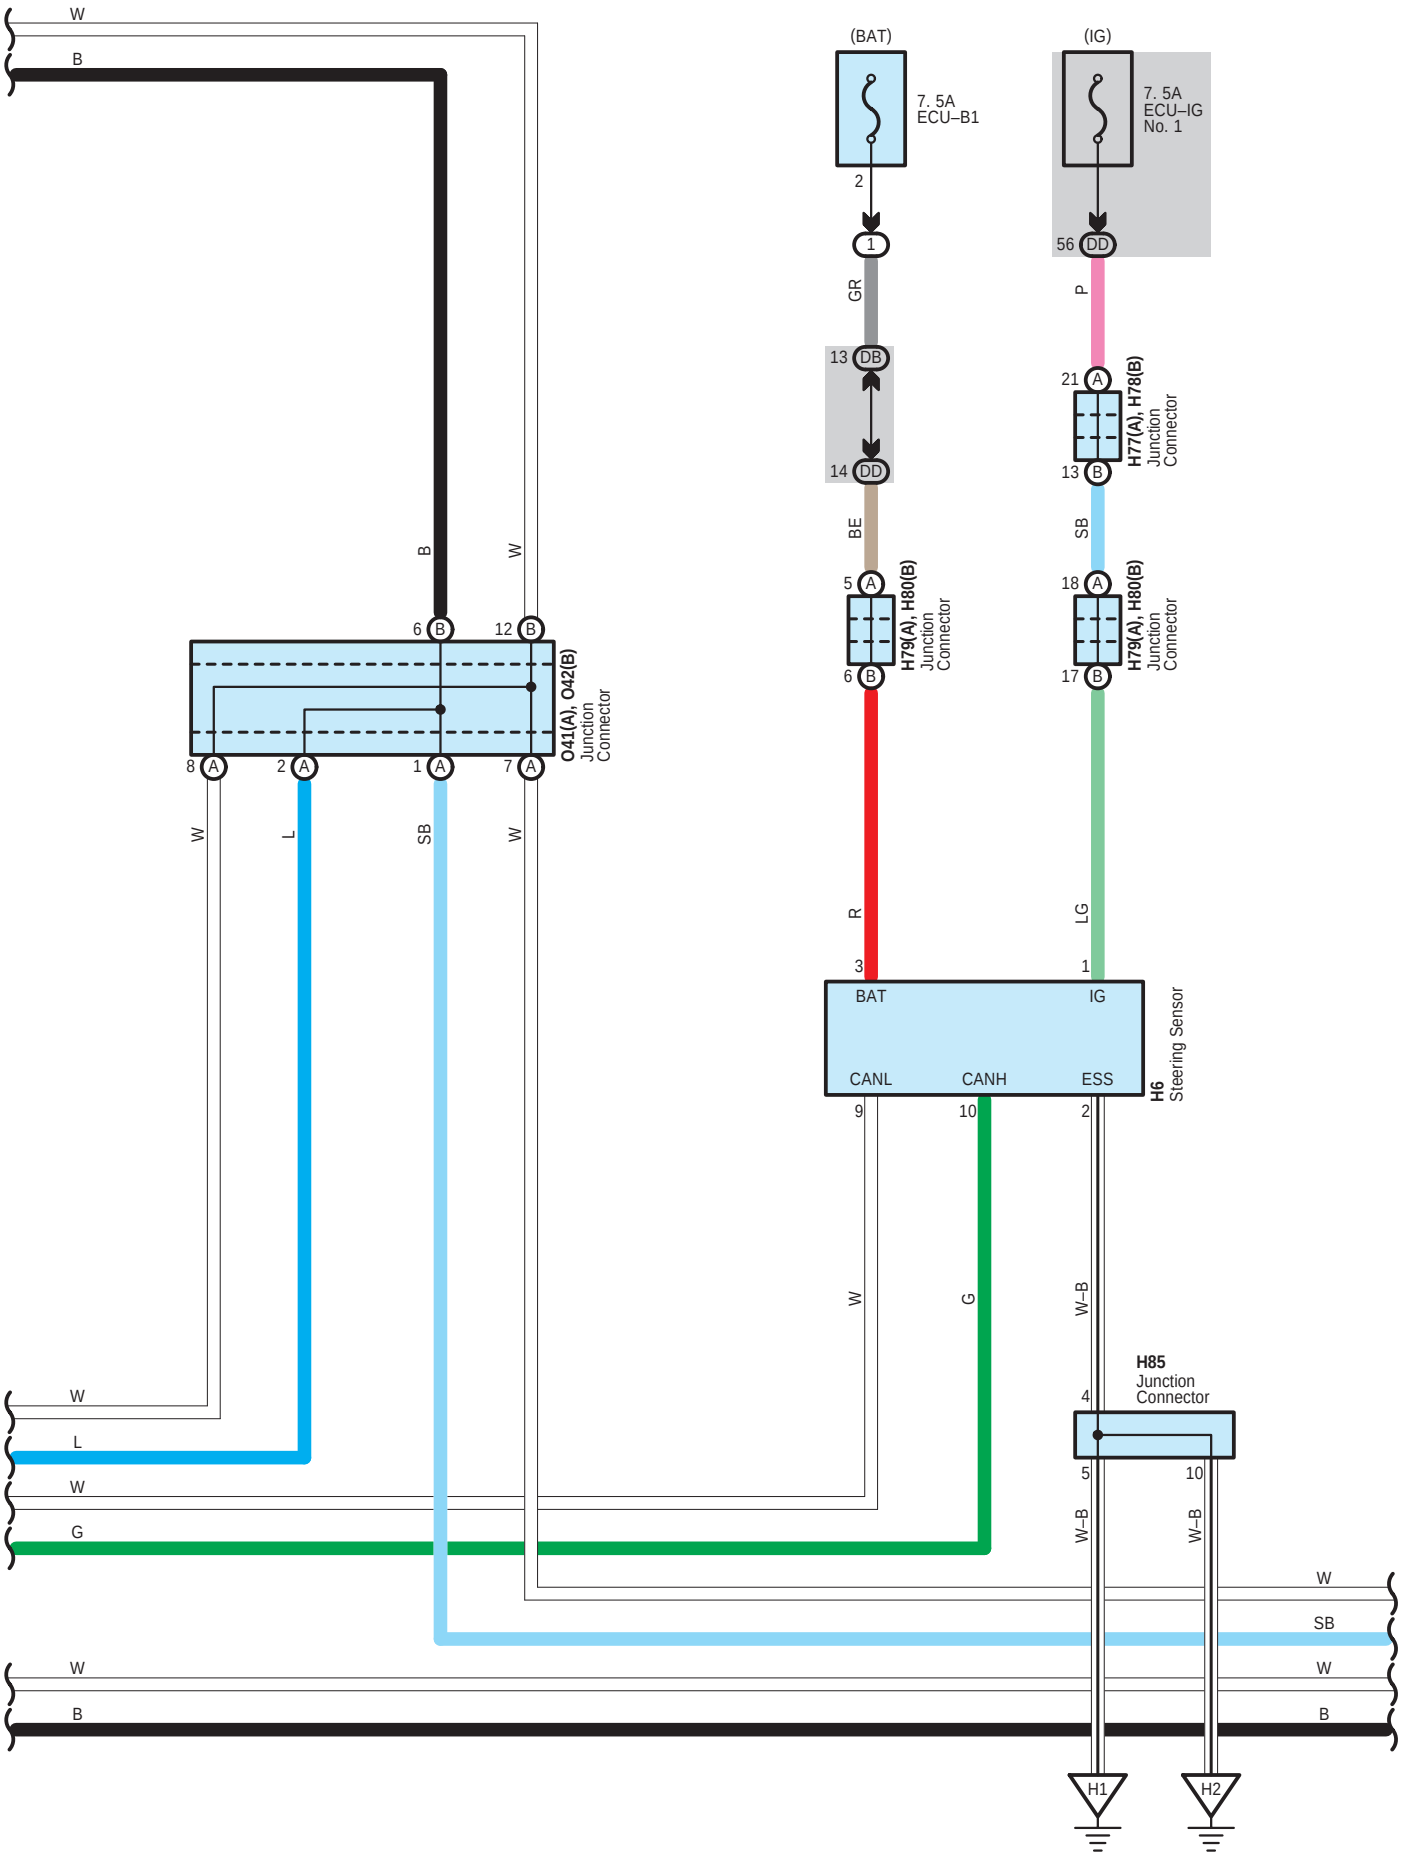
(BAT)
(IG)
7. 5A
ECU–B1
7. 5A
ECU–IG
No. 1
2
1
56 DD
GR
P
13 DB
14 DD
21 A
13 B
H77(A), H78(B)
Junction
Connector
BE
SB
5 A
6 B
18 A
17 B
H79(A), H80(B)
Junction
Connector
R
LG
3
1
BAT
IG
CANL
CANH
ESS
9
10
2
H6
Steering Sensor
W
G
W–B
H85
Junction
Connector
4
5
10
W
L
W
G
W
SB
W
B
W
B
6 B
12 B
8 A
2 A
1 A
7 A
O41(A), O42(B)
Junction
Connector
B
W
W
L
SB
W
H1
H2

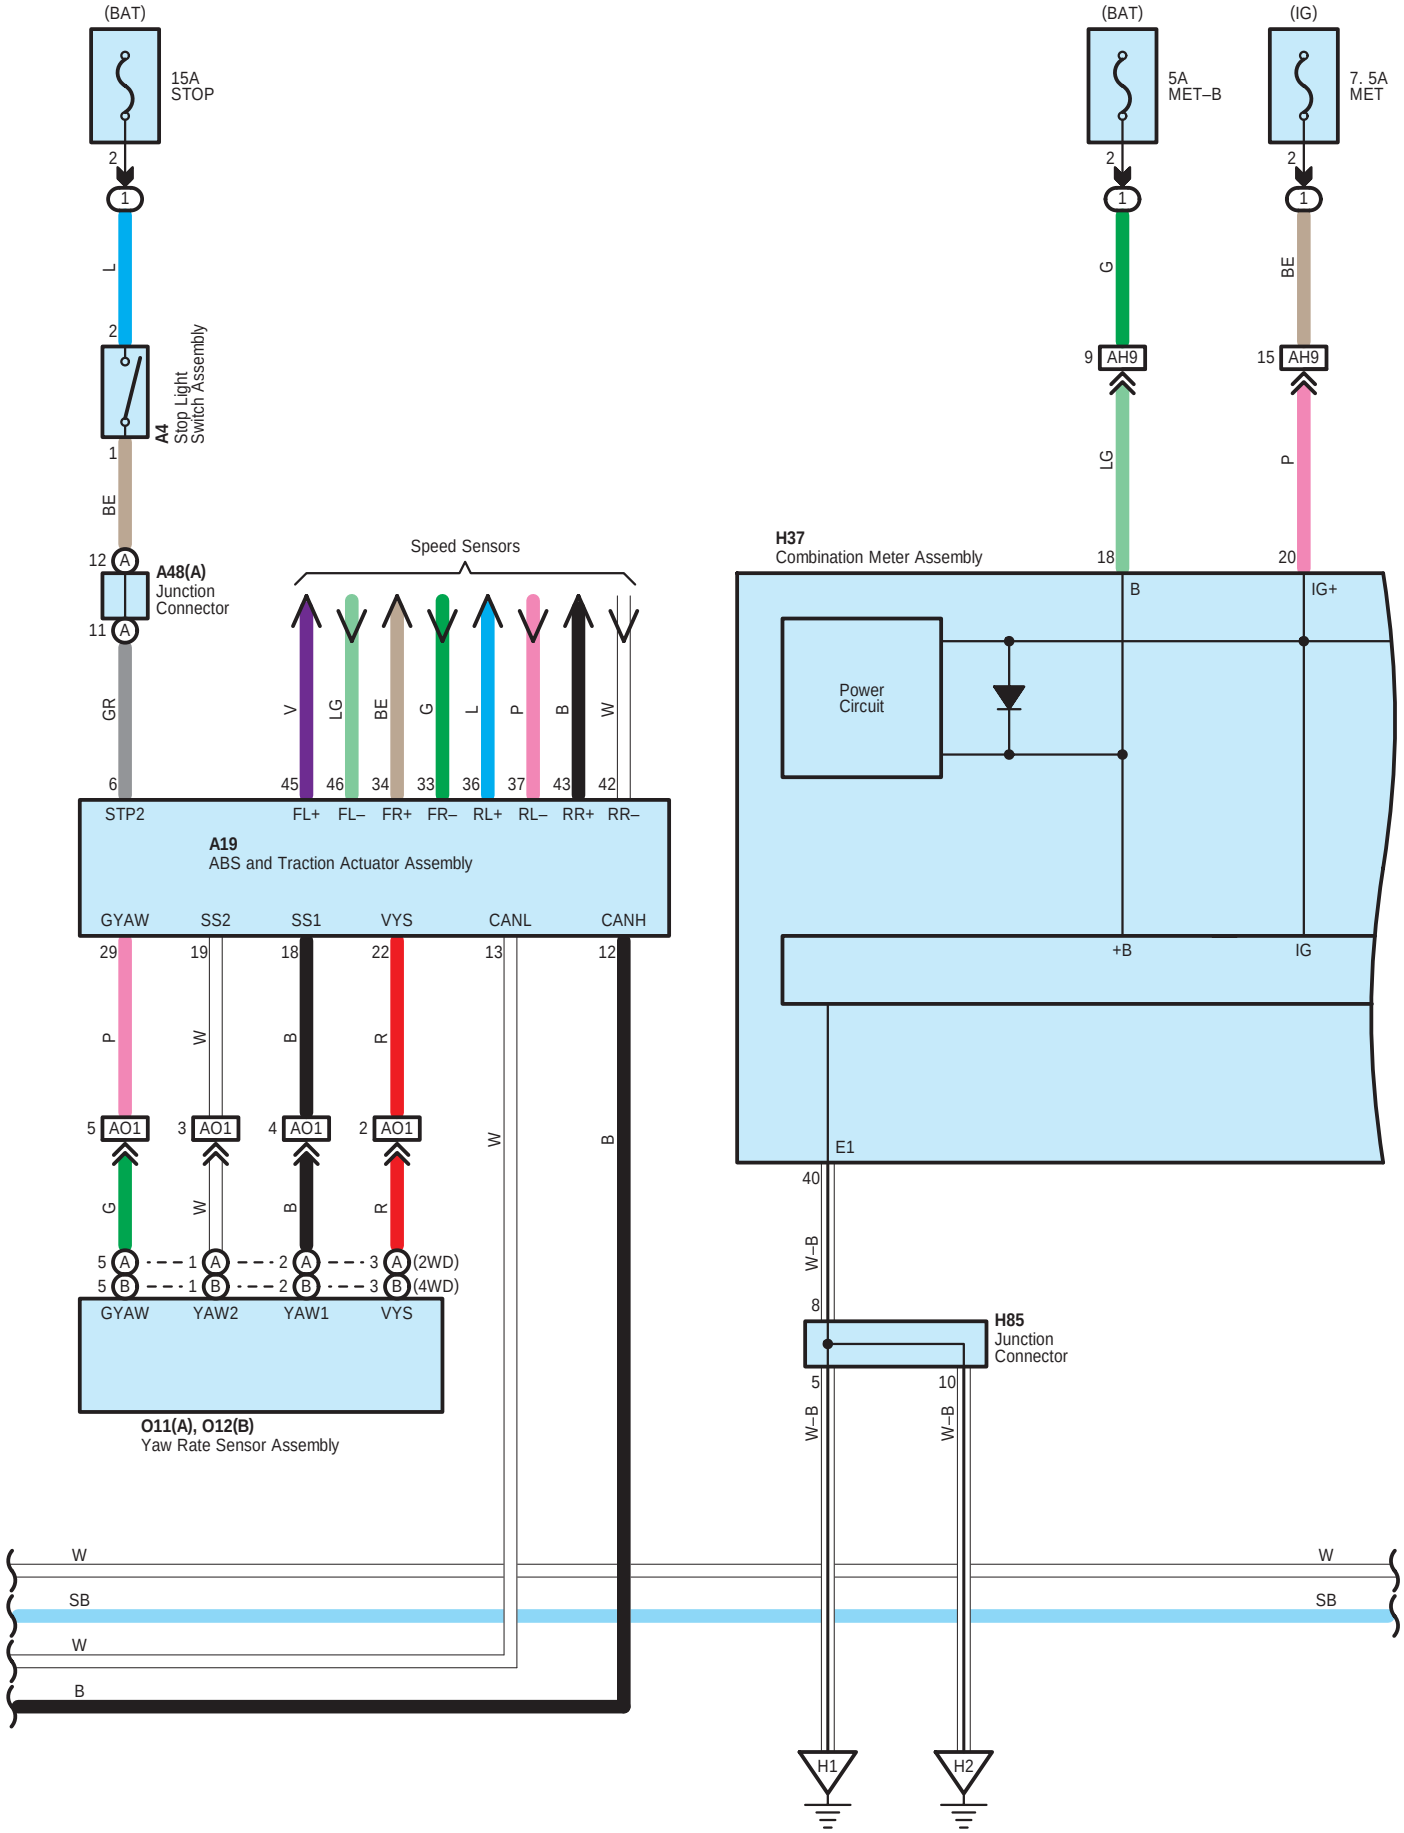

(BAT)
15A
STOP
2
1
L
2
A4
Stop Light
Switch Assembly
1
BE
12 A
A48(A)
Junction
Connector
11 A
GR
6
STP2
Speed Sensors
V
LG
BE
G
L
P
B
W
45
46
34
33
36
37
43
42
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
A19
ABS and Traction Actuator Assembly
GYAW
SS2
SS1
VYS
CANL
CANH
29
19
18
22
13
12
P
W
B
R
W
B
5 AO1
3 AO1
4 AO1
2 AO1
G
W
B
R
5 A
1 A
2 A
3 A (2WD)
5 B
1 B
2 B
3 B (4WD)
GYAW
YAW2
YAW1
VYS
O11(A), O12(B)
Yaw Rate Sensor Assembly
(BAT)
5A
MET–B
2
1
G
9 AH9
LG
18
(IG)
7. 5A
MET
2
1
BE
15 AH9
P
20
H37
Combination Meter Assembly
B
IG+
Power
Circuit
+B
IG
E1
40
W–B
8
H85
Junction
Connector
5
10
W–B
W–B
W
SB
W
B
W
SB
H1
H2

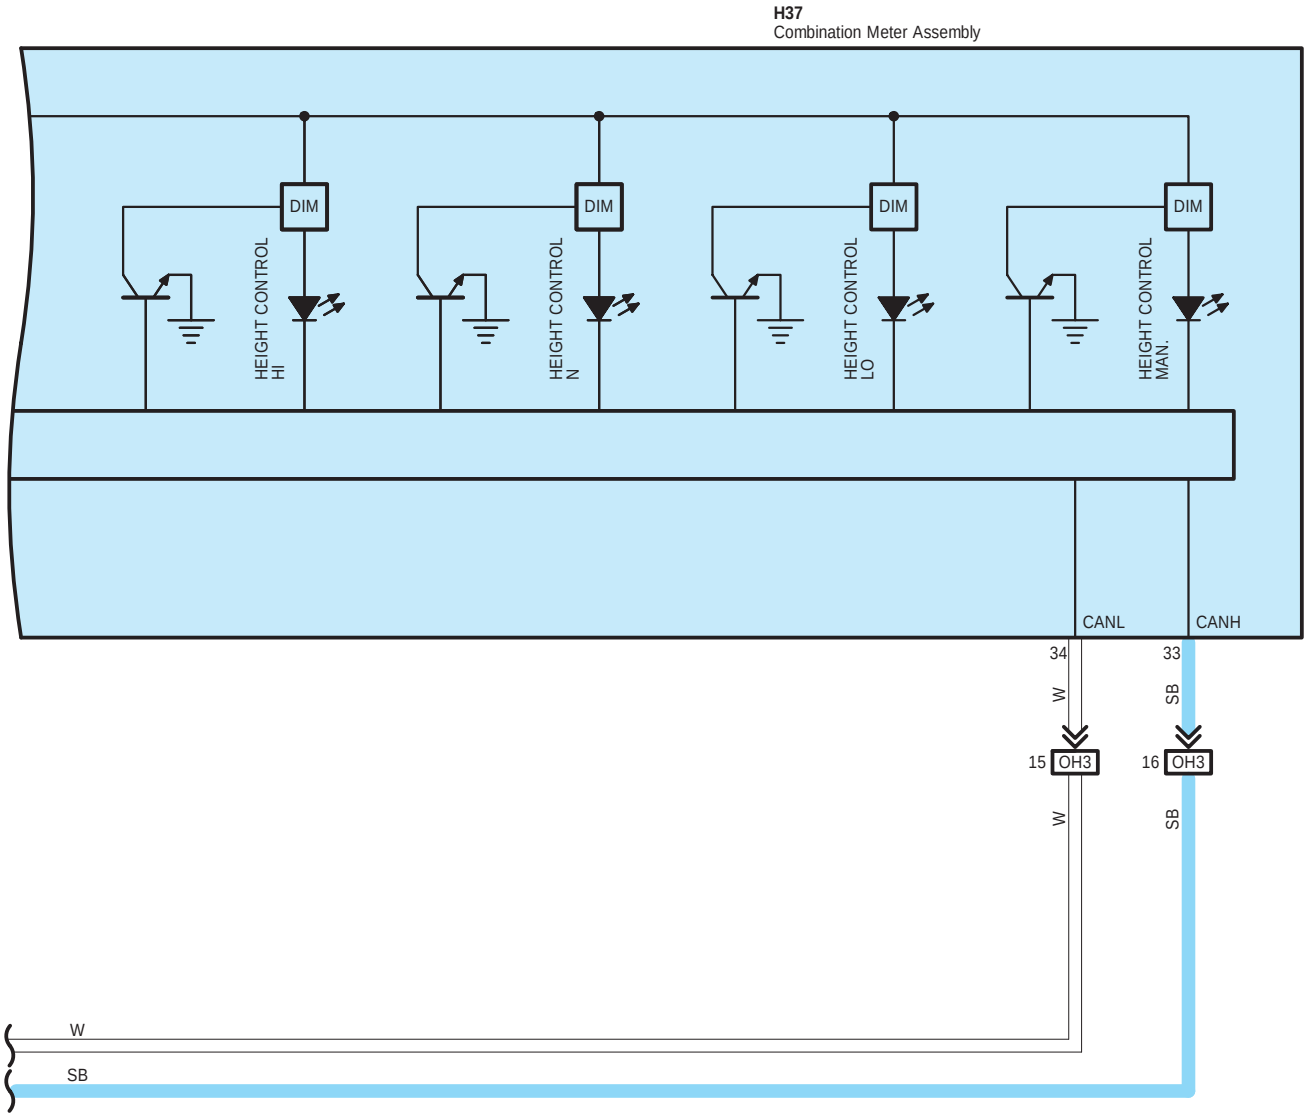
H37
Combination Meter Assembly
DIM
DIM
DIM
DIM
HEIGHT CONTROL HI
HEIGHT CONTROL N
HEIGHT CONTROL LO
HEIGHT CONTROL MAN.
CANL
CANH
34
33
W
SB
15 OH3
16 OH3
W
SB
W
SB


A 4
White

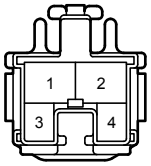


A 17
Black

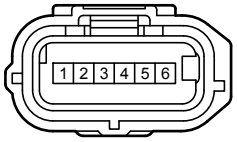

A 19
Black

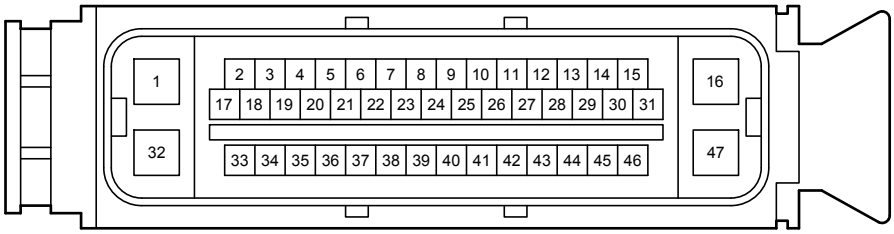

A 27
Black

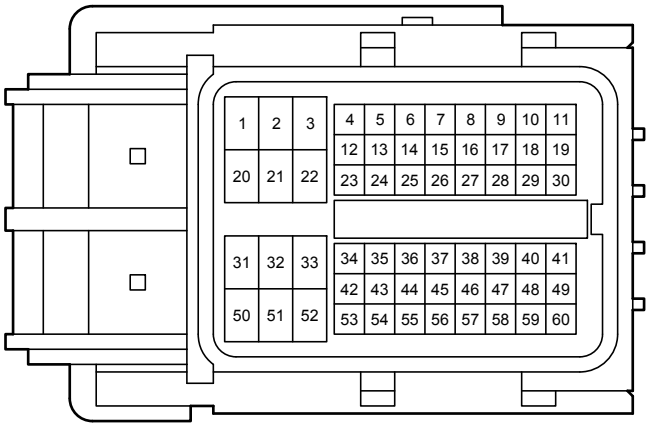


A 44
Gray




A 45
Gray




A 48
White

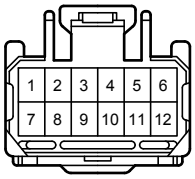


D 1
Black

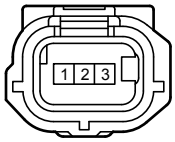


D 56
Black

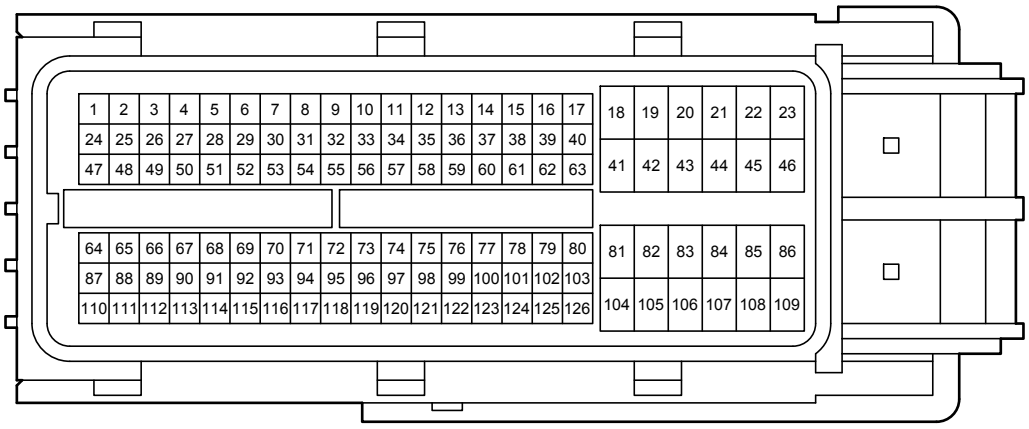


H 2
White

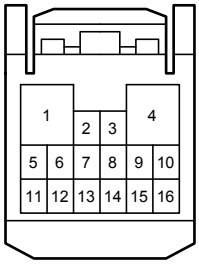


H 3
White

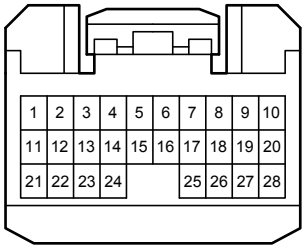


H 4
White

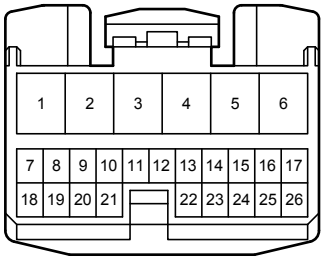


H 6
Gray

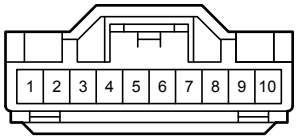


H 19
White

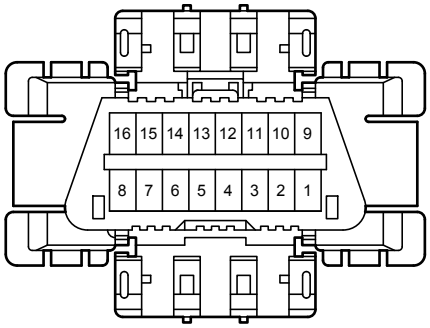


H 37
White

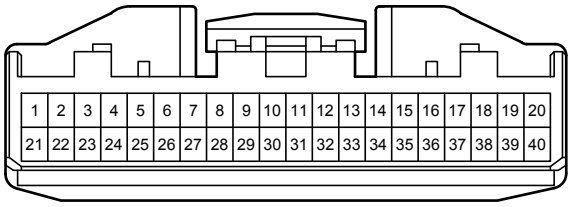


H 71
White

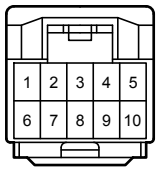


H 72
White

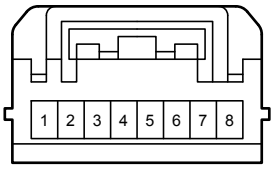


H 73
White

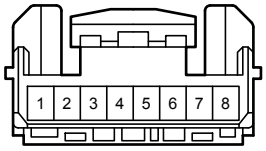


H 74
Gray

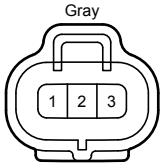


H 75
Gray

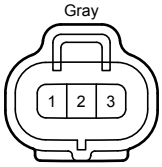


H 77
Black

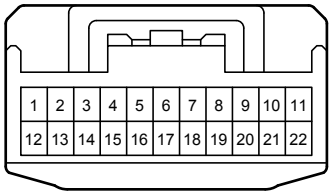


H 78
Black

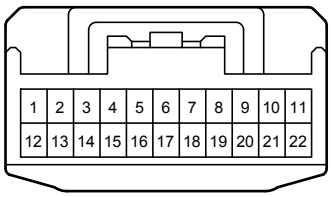


H 79
Black

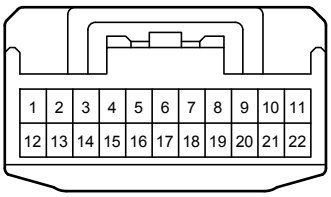


H 80
Black

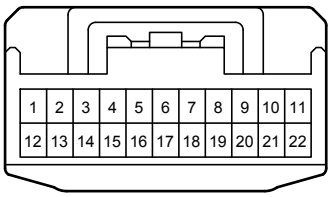


H 81
White

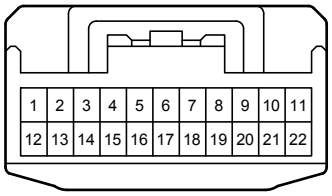


H 84
White

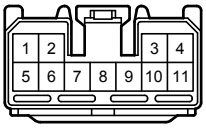


H 85
White

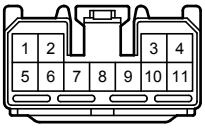


H115
Gray

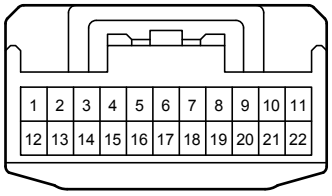

H118
Black

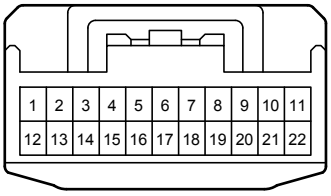

H119
Gray

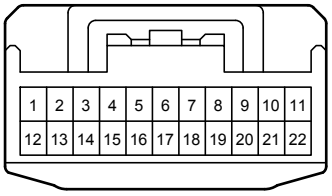


O 7
White




O 8
White




O 11
Black

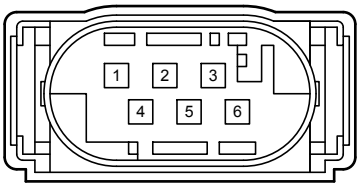


O 12
Black

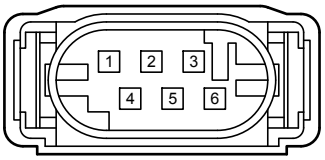


O 16
Black

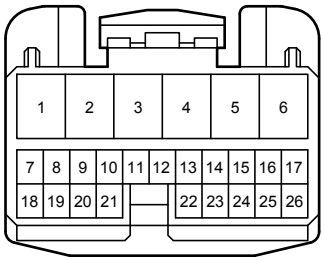


O 17
Black

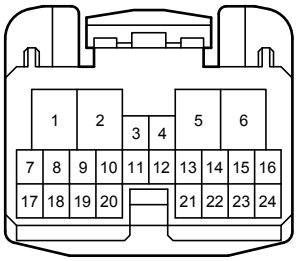


O 18
Black

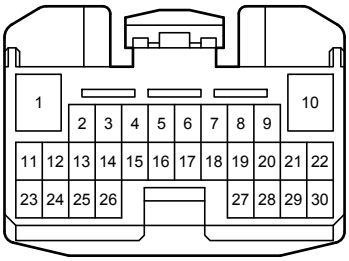


O 39
White

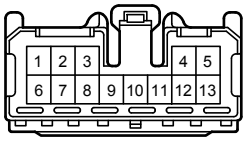


O 40
White

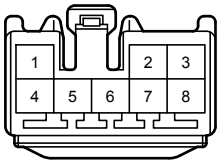

O 41
White

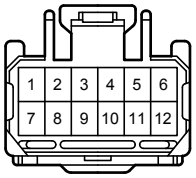

O 42
White

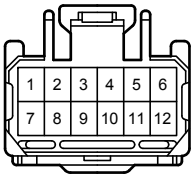

P 6
White



P 7
White




Q 2
Dark Gray



Q 3
Black



Q 4
Black

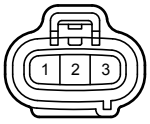


Q 6
Dark Gray




Q 7
Gray




V 2
White

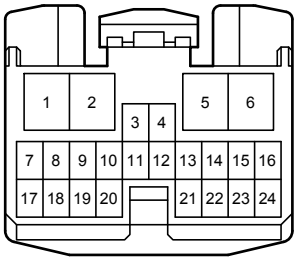


V 3
White

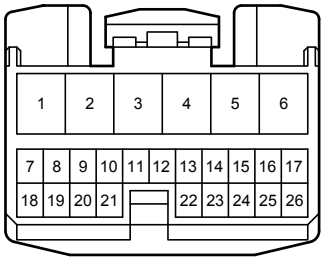


V 5
White

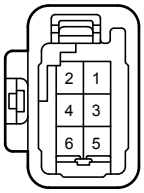


z 1
Black

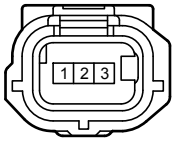


z 2
Black

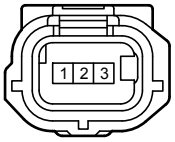


DB
White

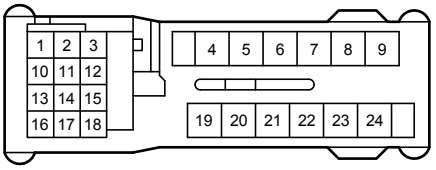


DC
White

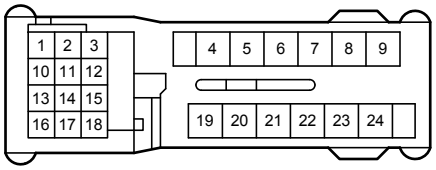


DD
White

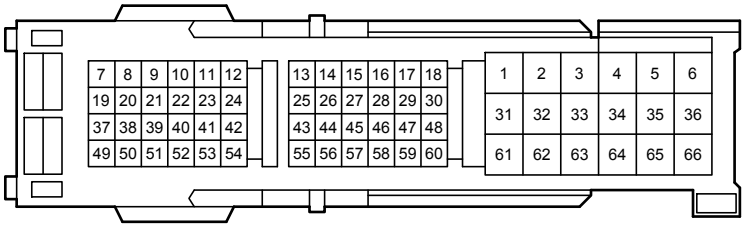


AH4
White

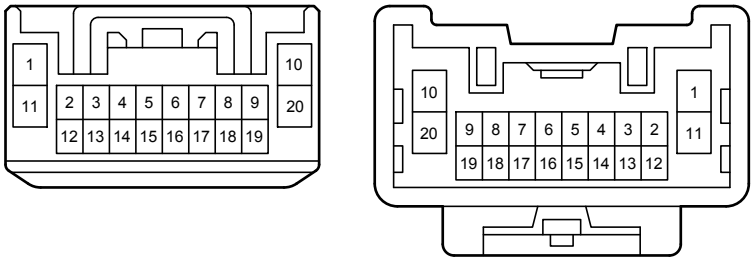


AH5
White

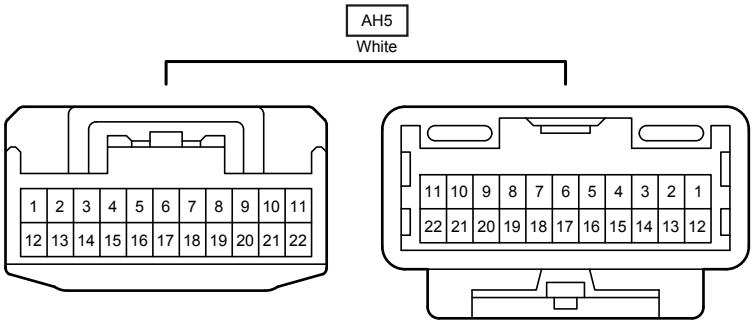


AH9
Gray

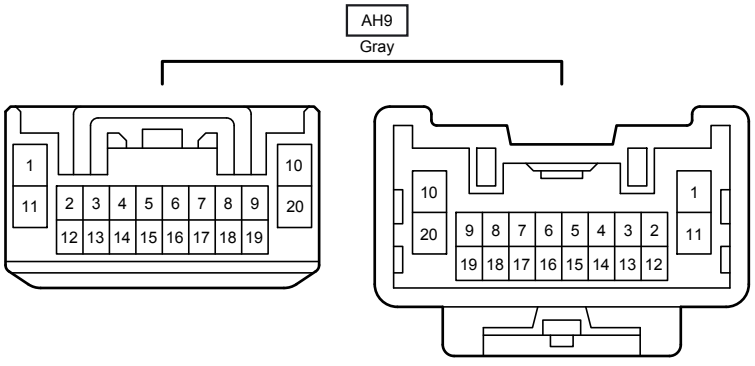


AH10
Gray

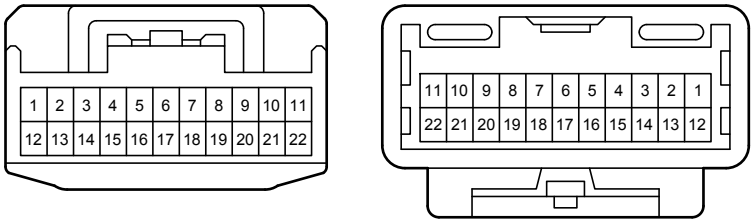


AO1
White

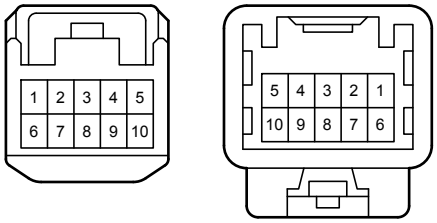


AO2
White

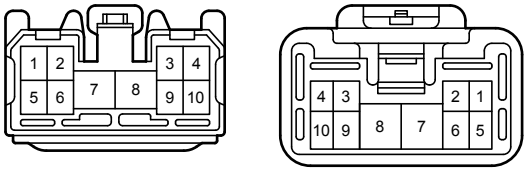


AO3
White

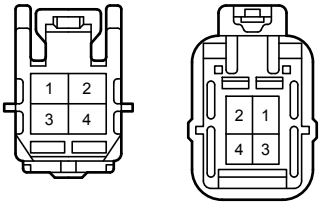


HO1
White

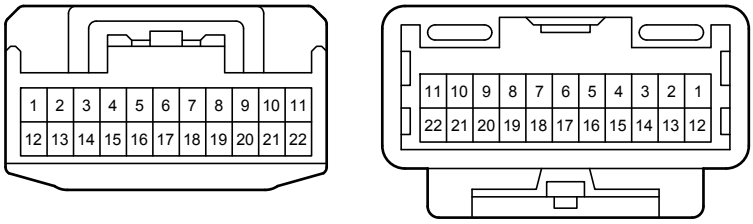


HP2
Gray

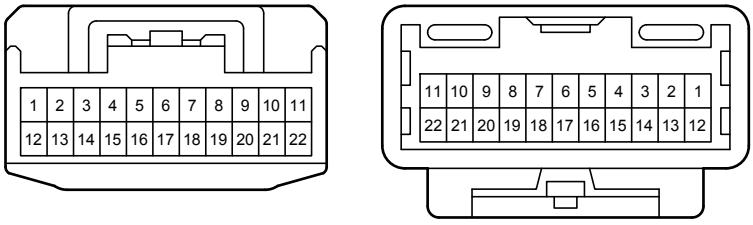


OA1
White

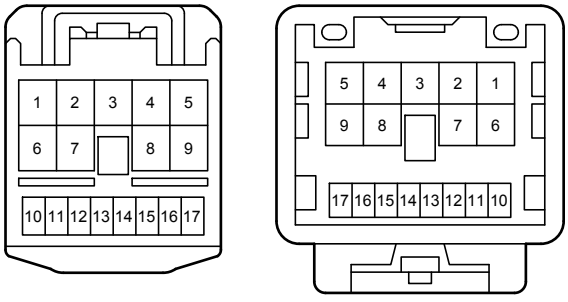


OH2
Black

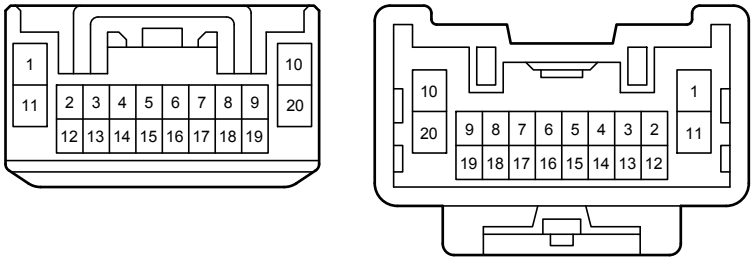


OH3
White

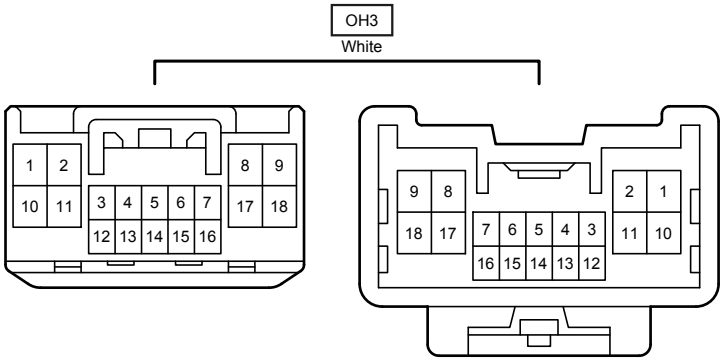


OO1
White

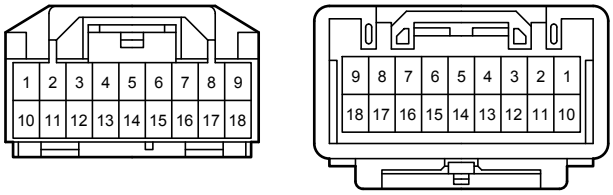


OO2
White

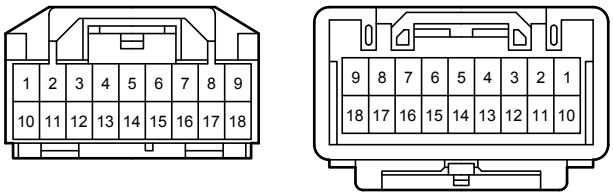


OQ1
Black

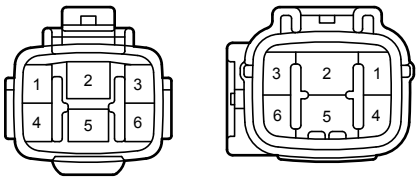


OQ2
Black

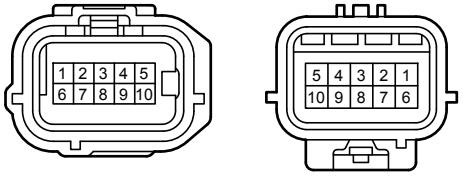

OQ3
Black

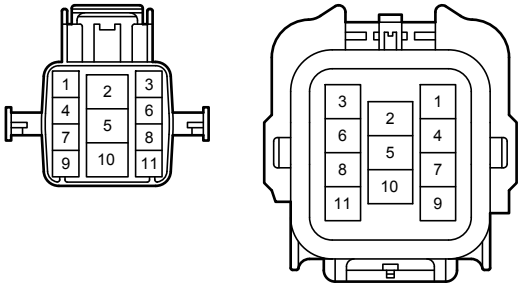

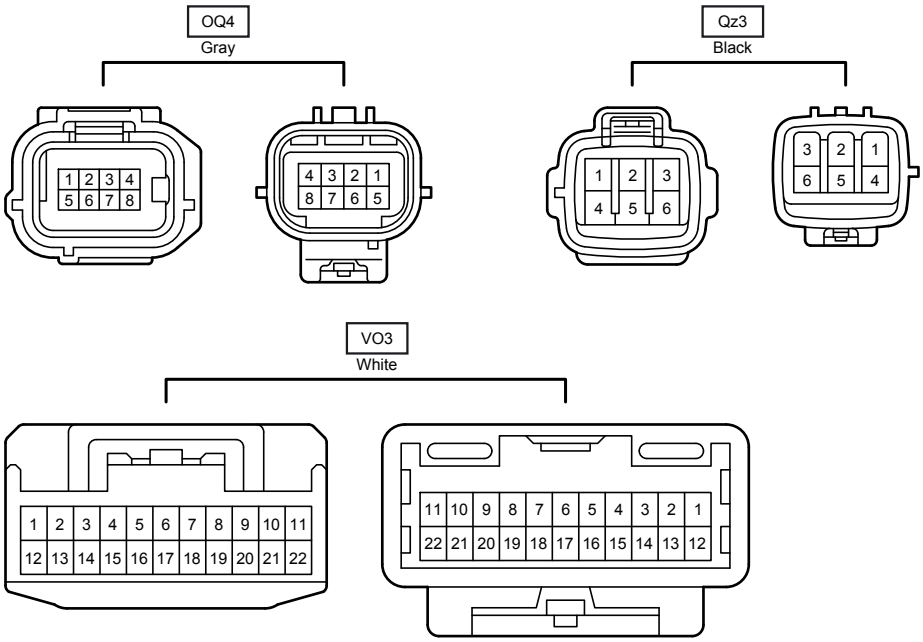
OQ4
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Qz3
Black
1 2 3
4 5 6
3 2 1
6 5 4
VO3
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12