



∗15 : Trailer Socket 4Pin Type and 7Pin Type

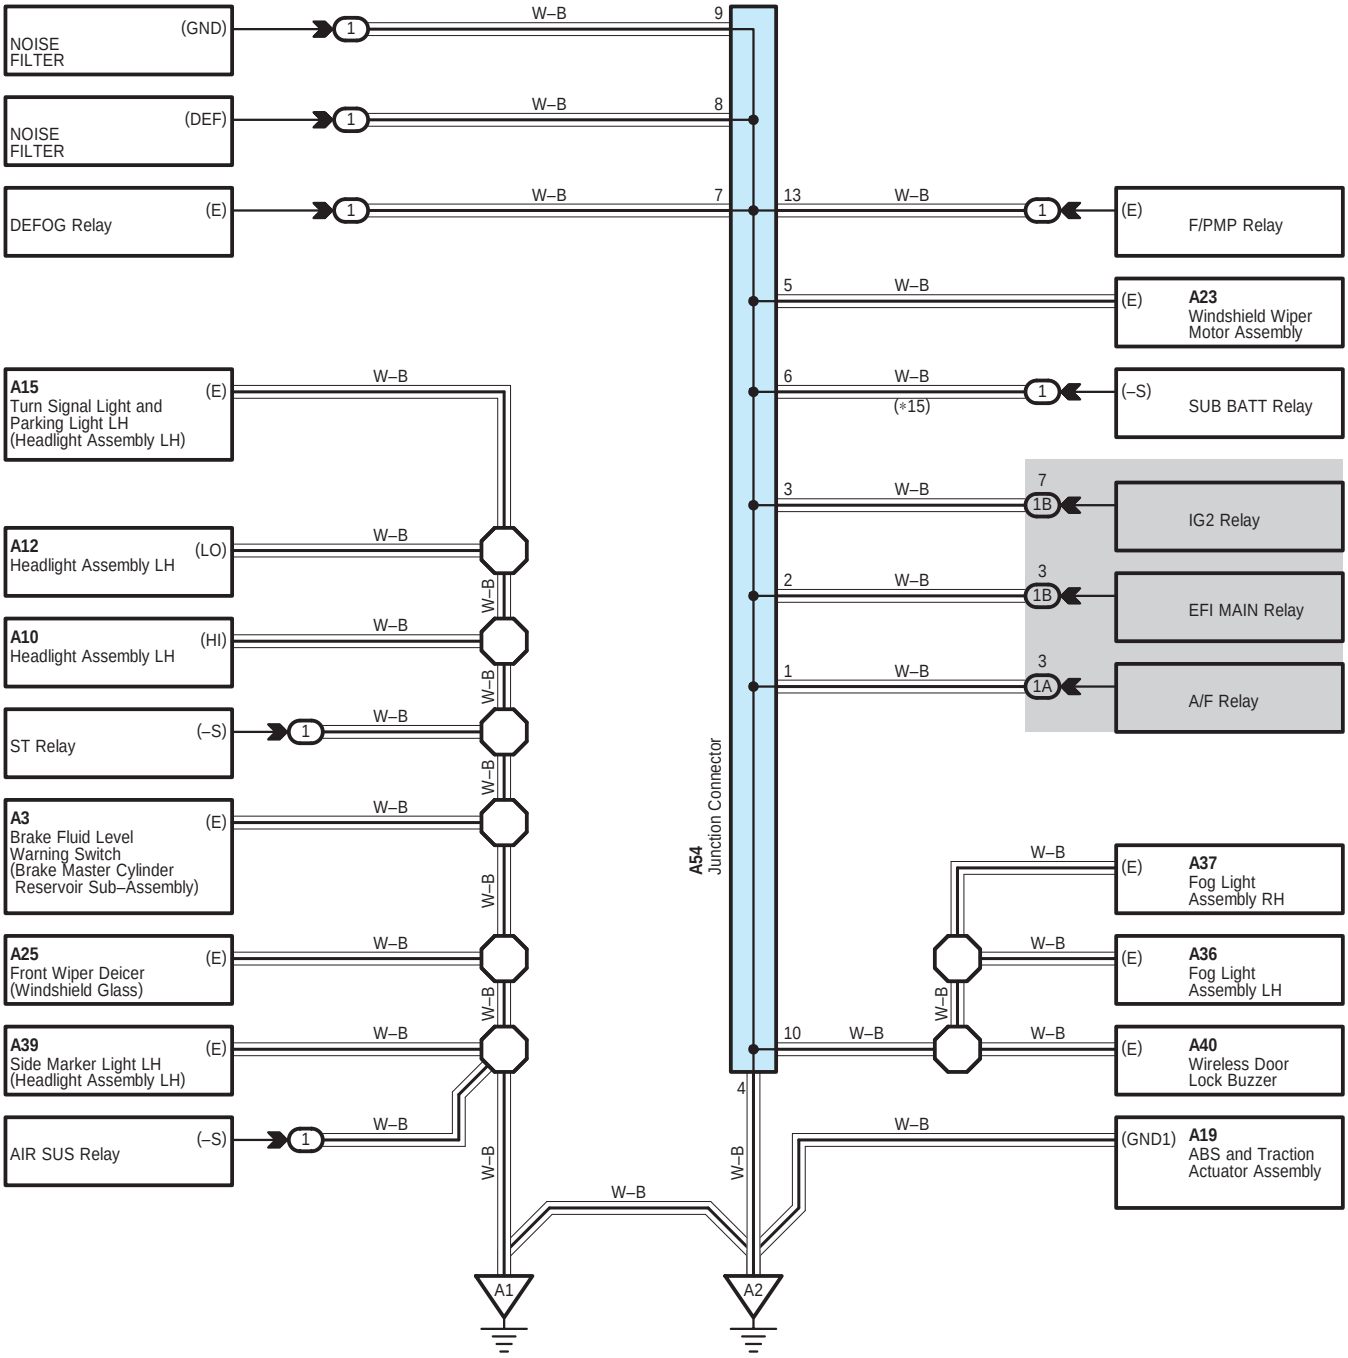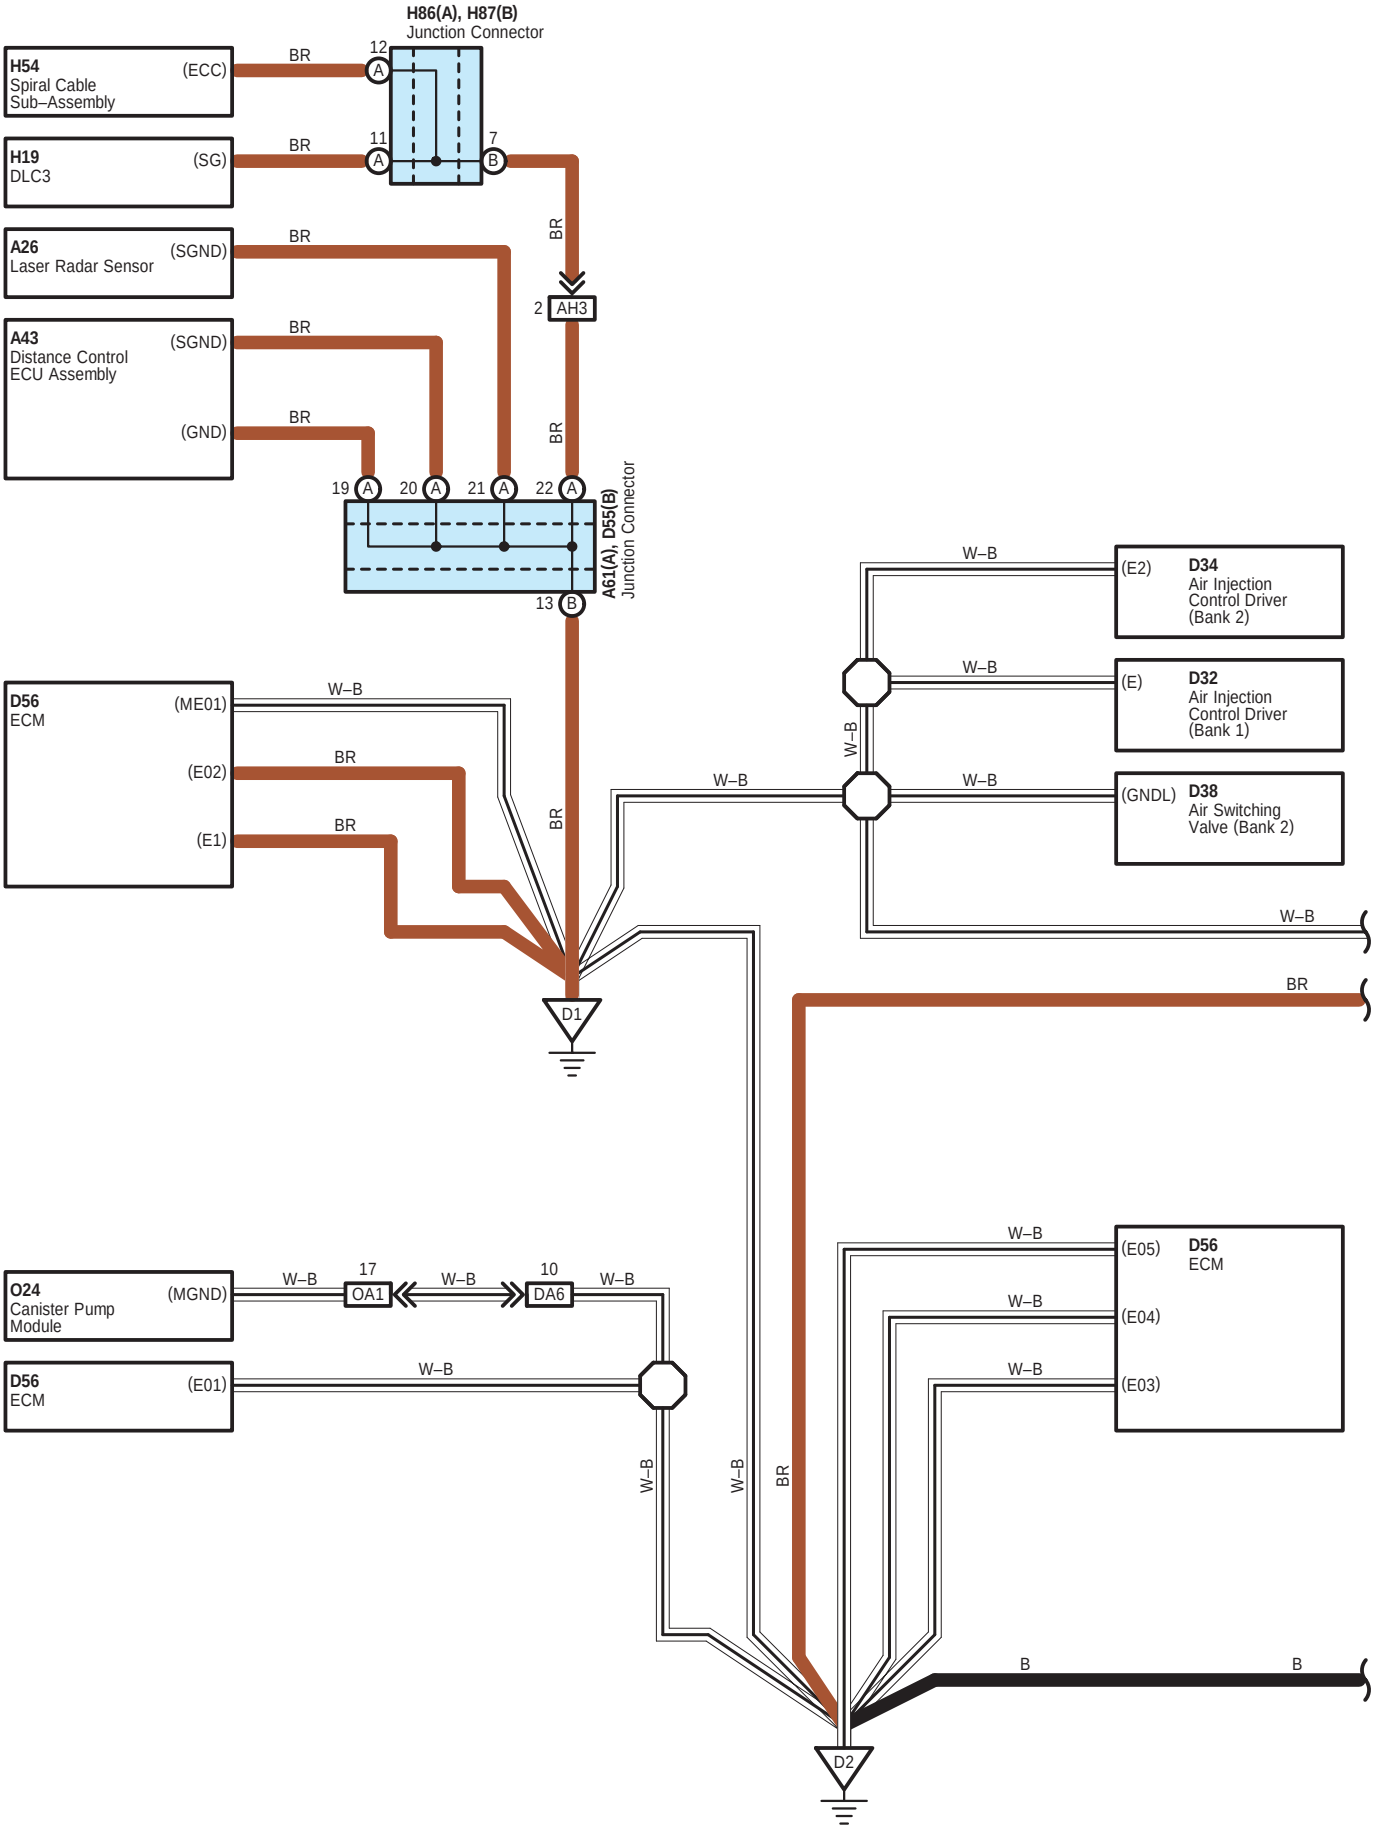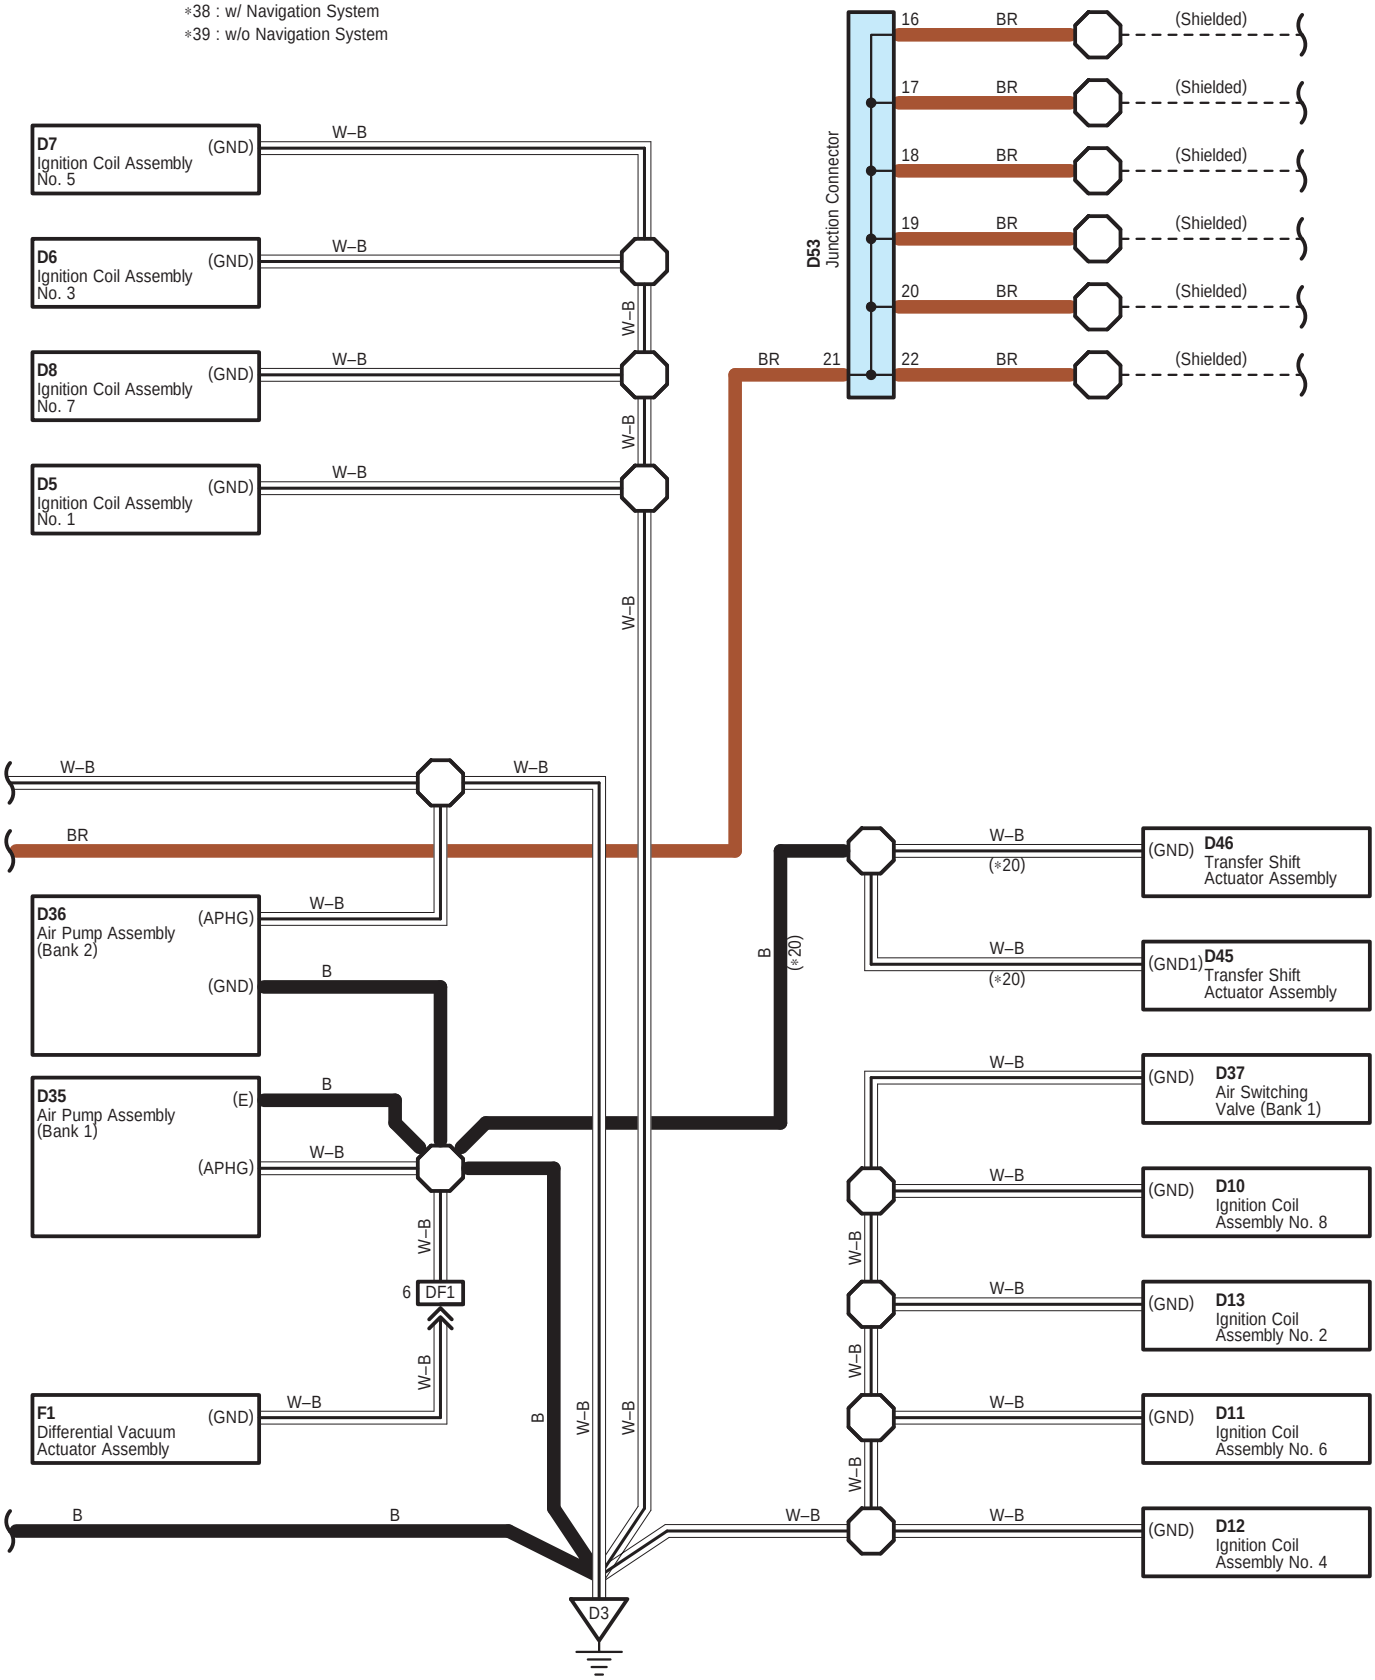




H86(A), H87(B)
Junction Connector
H54
Spiral Cable
Sub–Assembly
(ECC)
H19
DLC3
(SG)
A26
Laser Radar Sensor
(SGND)
A43
Distance Control
ECU Assembly
(SGND)
(GND)
BR
12
11
7
2
AH3
19
20
21
22
13
A61(A), D55(B)
Junction Connector
D56
ECM
(ME01)
(E02)
(E1)
W–B
D1
D34
Air Injection
Control Driver
(Bank 2)
(E2)
D32
Air Injection
Control Driver
(Bank 1)
(E)
D38
Air Switching
Valve (Bank 2)
(GNDL)
O24
Canister Pump
Module
(MGND)
17
OA1
10
DA6
D56
ECM
(E01)
D56
ECM
(E05)
(E04)
(E03)
B
D2

∗ 3 : w/o Rear Seat Entertainment System
∗ 8 : w/ Rear Seat Entertainment System
∗20 : 4WD
∗28 : Outer Rear View Mirror w/ Turn Signal Light
∗36 : 8 Speaker, 12 Speaker
∗37 : 14 Speaker
∗38 : w/ Navigation System
∗39 : w/o Navigation System

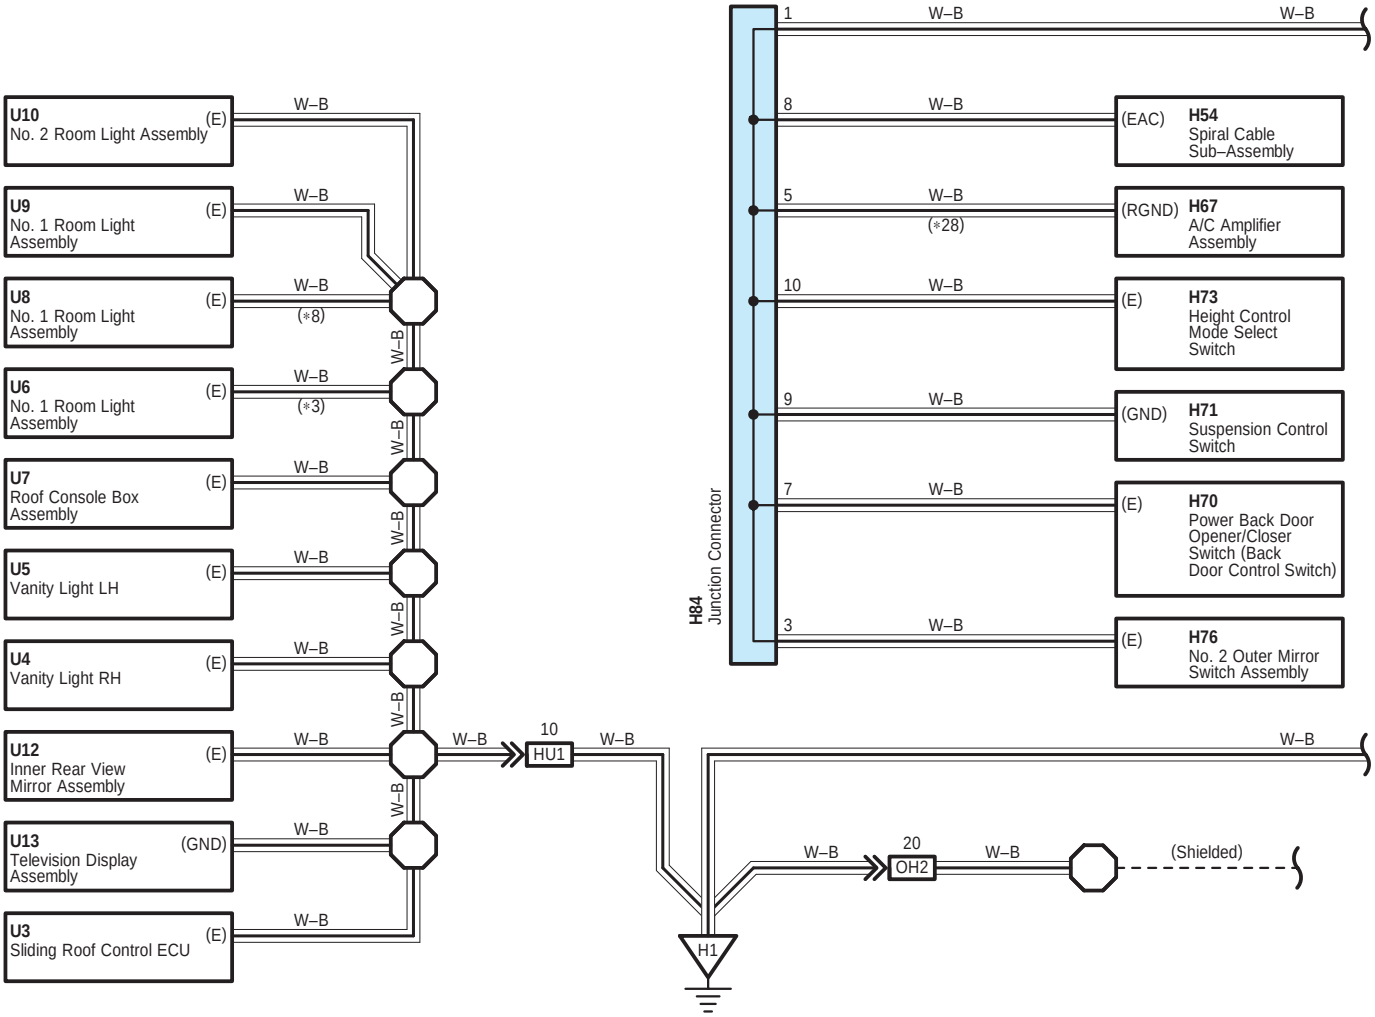



U10 (E) No. 2 Room Light Assembly
U9 (E) No. 1 Room Light Assembly
U8 (E) No. 1 Room Light Assembly
U6 (E) No. 1 Room Light Assembly
U7 (E) Roof Console Box Assembly
U5 (E) Vanity Light LH
U4 (E) Vanity Light RH
U12 (E) Inner Rear View Mirror Assembly
U13 (GND) Television Display Assembly
U3 (E) Sliding Roof Control ECU
W–B
(∗8)
(∗3)
10
HU1
H1
H84 Junction Connector
1
8
5
10
9
7
3
(EAC) H54 Spiral Cable Sub–Assembly
(RGND) H67 A/C Amplifier Assembly
(∗28)
(E) H73 Height Control Mode Select Switch
(GND) H71 Suspension Control Switch
(E) H70 Power Back Door Opener/Closer Switch (Back Door Control Switch)
(E) H76 No. 2 Outer Mirror Switch Assembly
20
OH2
(Shielded)

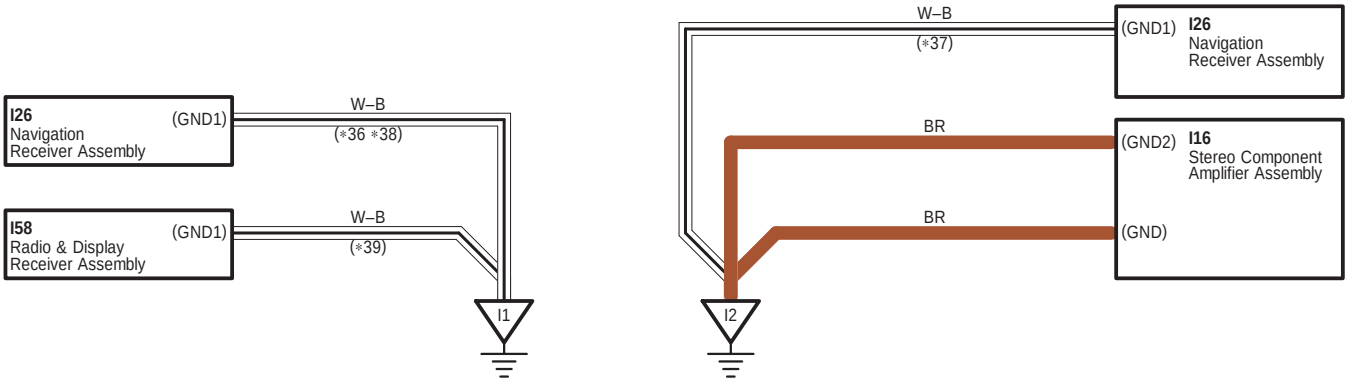

I26 (GND1) Navigation Receiver Assembly
I58 (GND1) Radio & Display Receiver Assembly
W–B
(∗36 ∗38)
(∗39)
I1
(∗37)
BR
(GND1) I26 Navigation Receiver Assembly
(GND2) I16 Stereo Component Amplifier Assembly
(GND)
I2

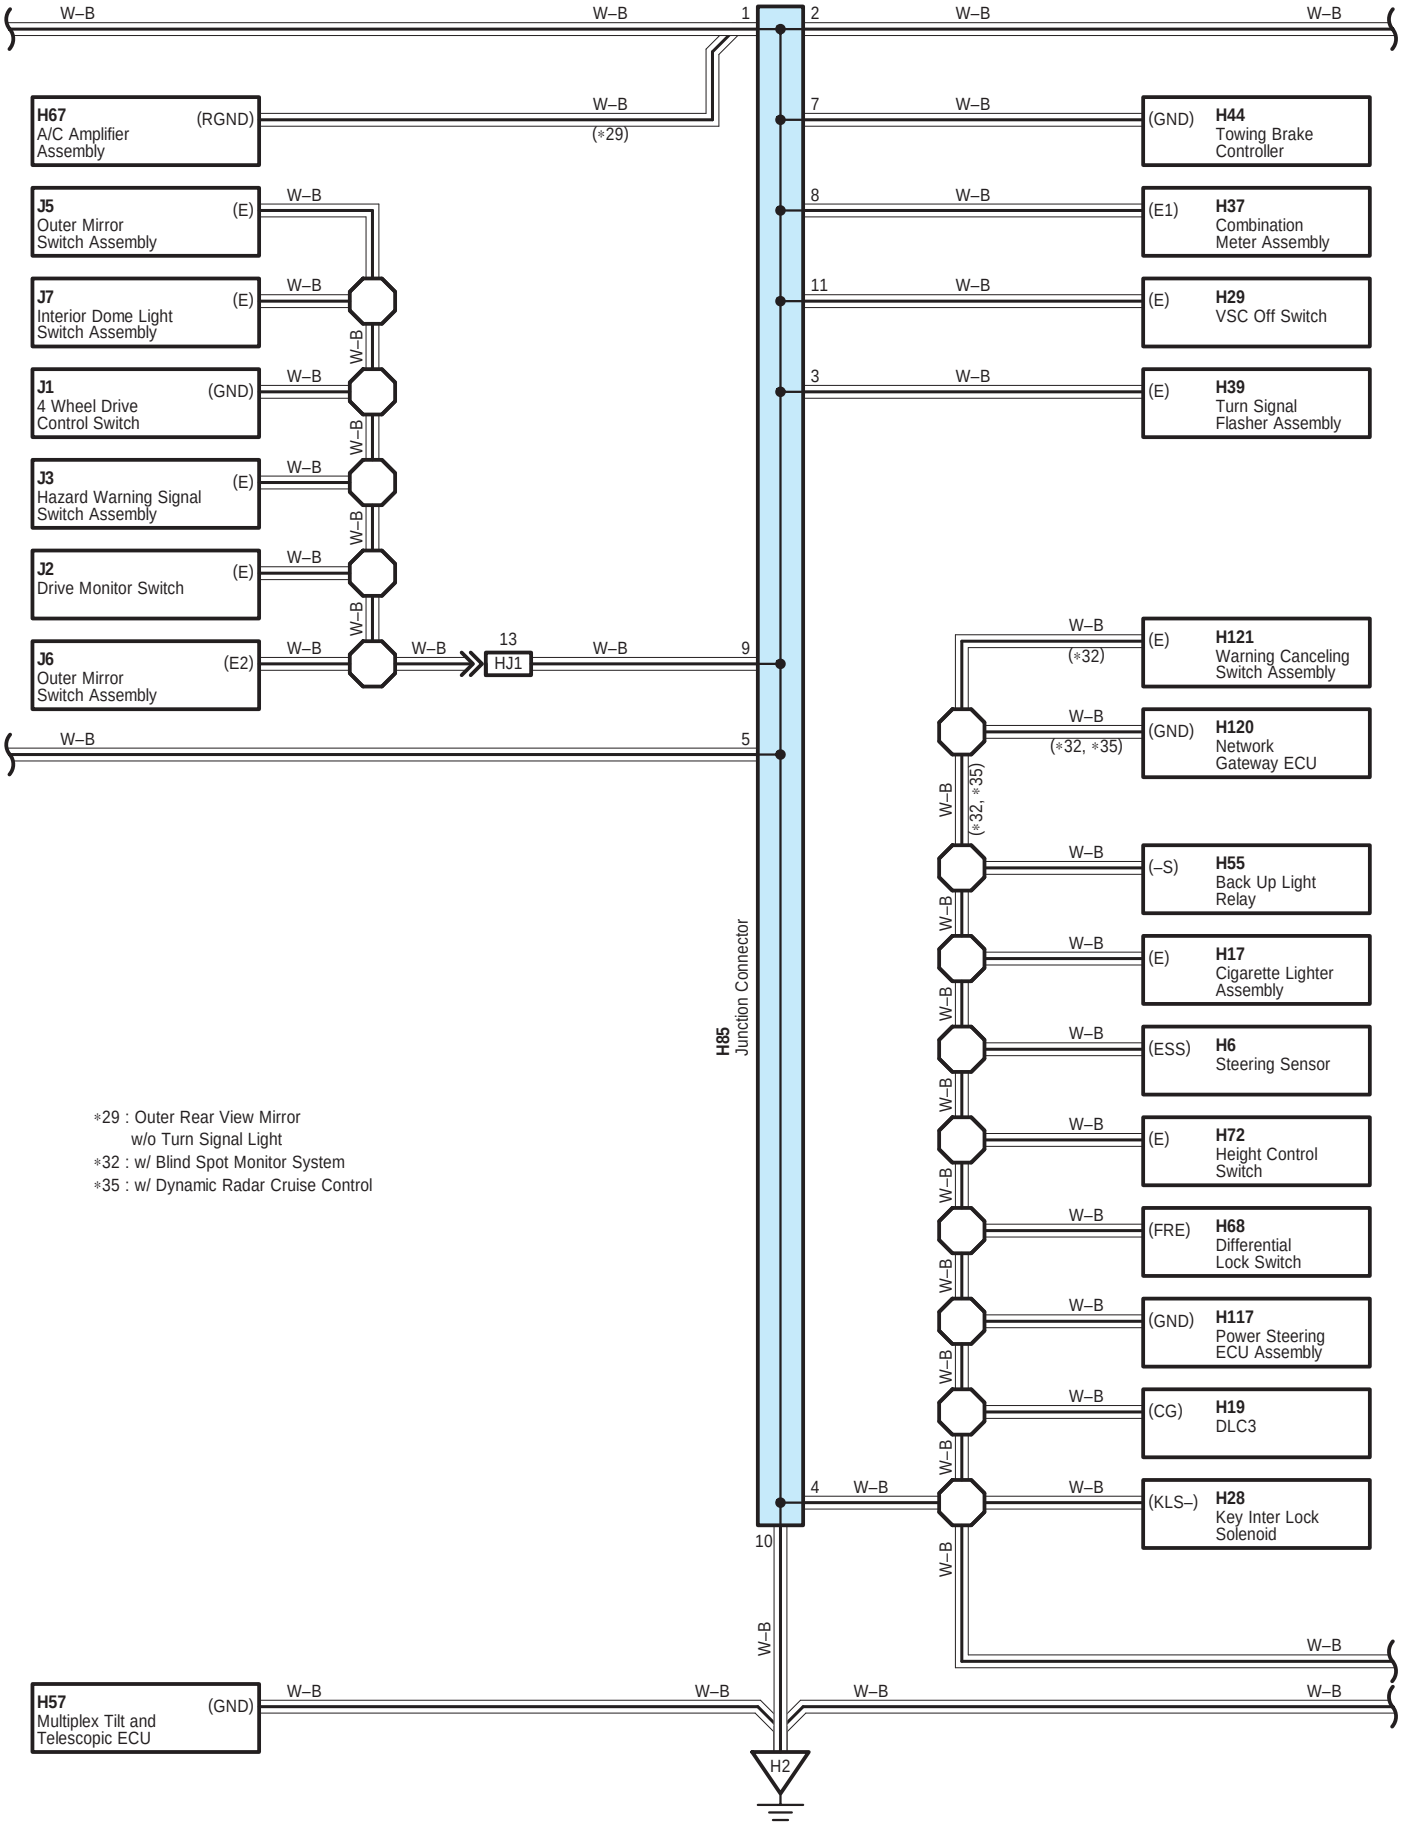



*29 : Outer Rear View Mirror
w/o Turn Signal Light
*32 : w/ Blind Spot Monitor System
*35 : w/ Dynamic Radar Cruise Control

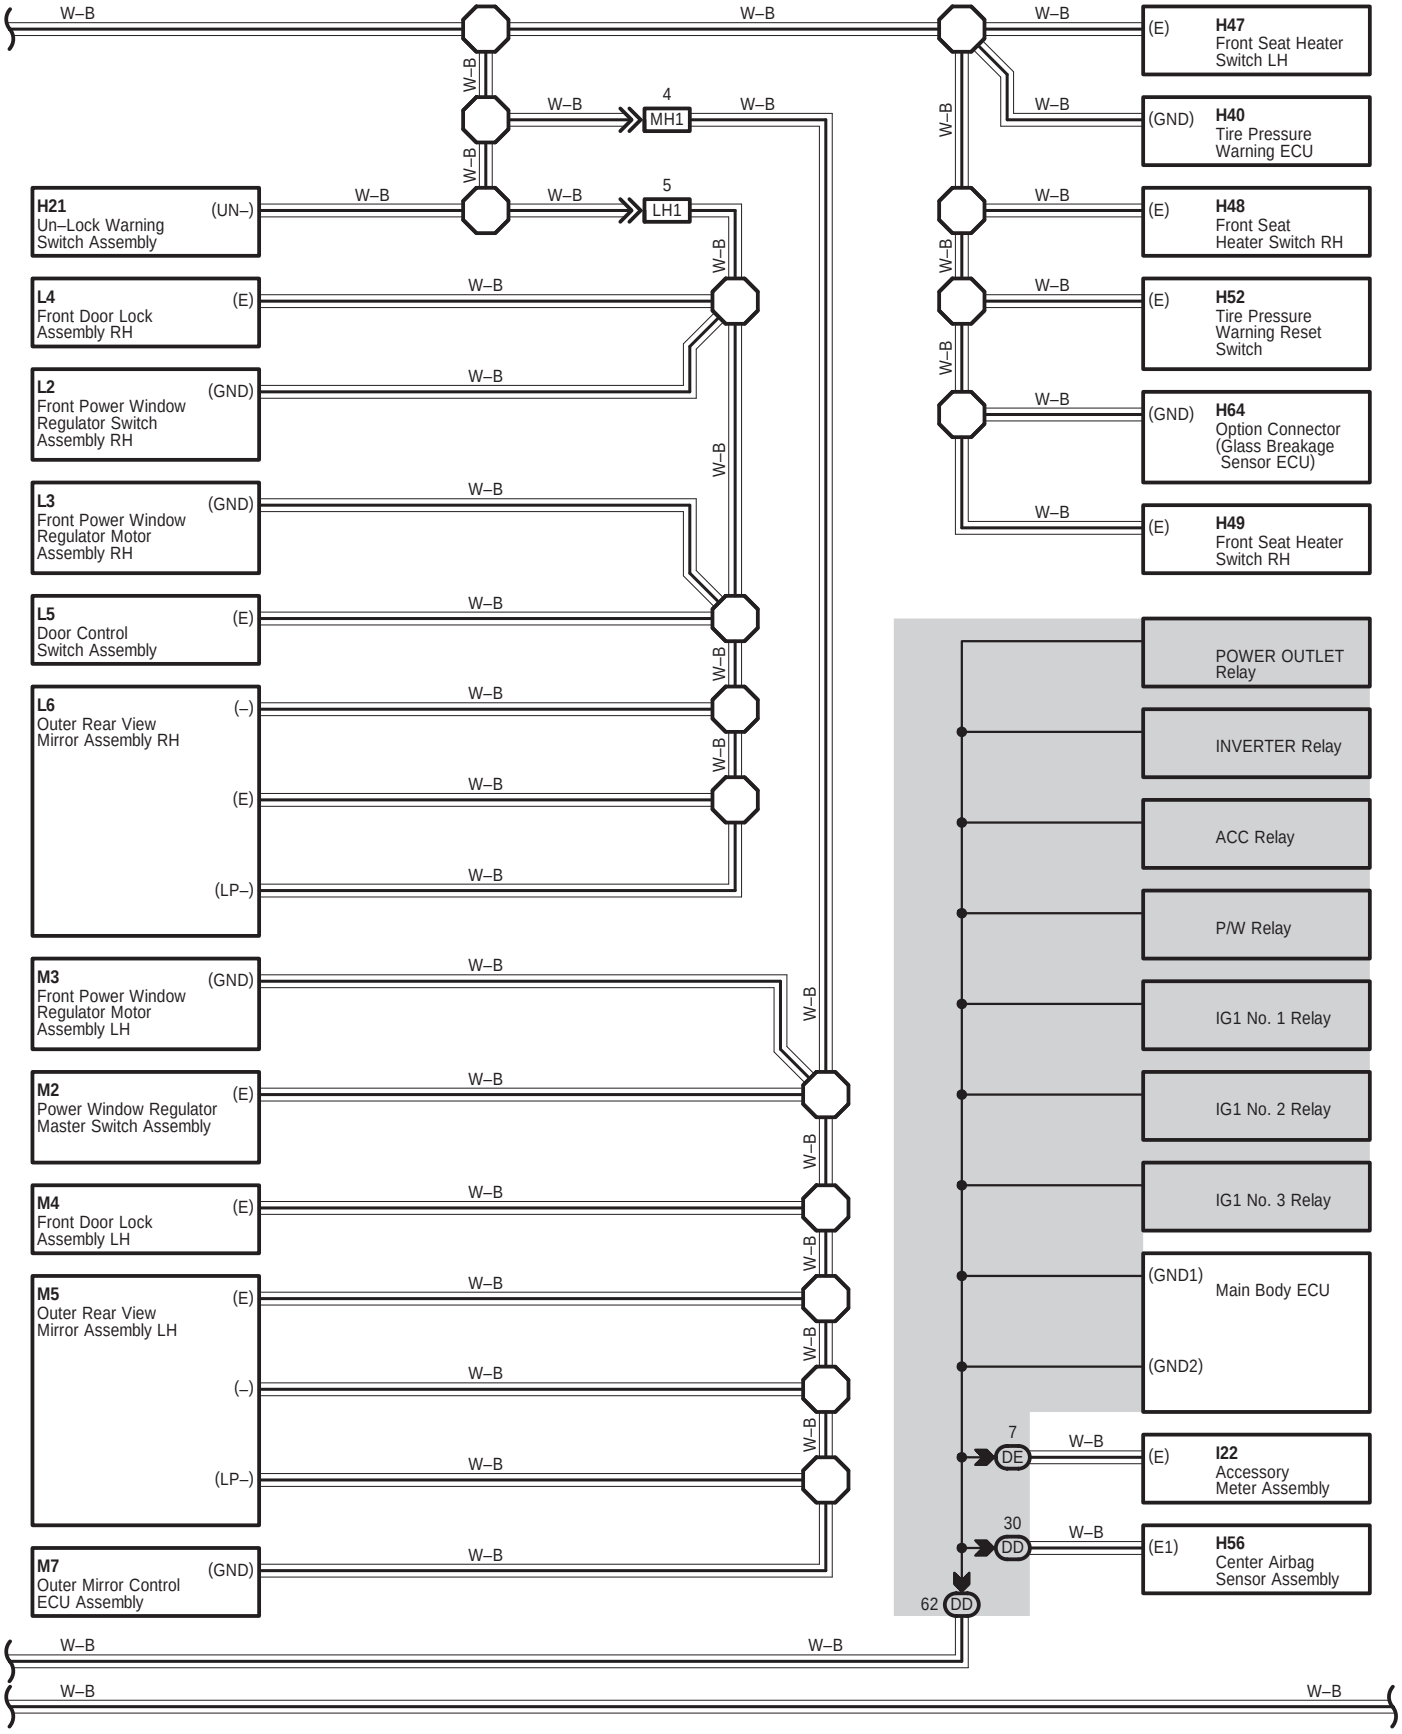
W–B
4
MH1
5
LH1
H21
Un–Lock Warning Switch Assembly
(UN–)
L4
Front Door Lock Assembly RH
(E)
L2
Front Power Window Regulator Switch Assembly RH
(GND)
L3
Front Power Window Regulator Motor Assembly RH
(GND)
L5
Door Control Switch Assembly
(E)
L6
Outer Rear View Mirror Assembly RH
(–)
(E)
(LP–)
M3
Front Power Window Regulator Motor Assembly LH
(GND)
M2
Power Window Regulator Master Switch Assembly
(E)
M4
Front Door Lock Assembly LH
(E)
M5
Outer Rear View Mirror Assembly LH
(E)
(–)
(LP–)
M7
Outer Mirror Control ECU Assembly
(GND)
H47
Front Seat Heater Switch LH
H40
Tire Pressure Warning ECU
H48
Front Seat Heater Switch RH
H52
Tire Pressure Warning Reset Switch
H64
Option Connector (Glass Breakage Sensor ECU)
H49
Front Seat Heater Switch RH
POWER OUTLET Relay
INVERTER Relay
ACC Relay
P/W Relay
IG1 No. 1 Relay
IG1 No. 2 Relay
IG1 No. 3 Relay
(GND1)
(GND2)
Main Body ECU
7
DE
I22
Accessory Meter Assembly
30
DD
H56
Center Airbag Sensor Assembly
62
DD


∗ 3 : w/o Rear Seat Entertainment System
∗ 4 : 3UR–FE
∗ 5 : 3UR–FBE
∗ 7 : w/ Seat Position Memory
∗ 9 : w/ Power Rear No. 2 Seat with Stowing Function
∗14 : Trailer Socket 4Pin Type
∗15 : Trailer Socket 4Pin Type and 7Pin Type
∗16 : w/o Seat Position Memory
∗17 : 10 Way Control
∗18 : w/ Climate Control Seat
∗24 : w/ Seat Position Memory
∗32 : w/ Blind Spot Monitor System
∗35 : w/ Dynamic Radar Cruise Control

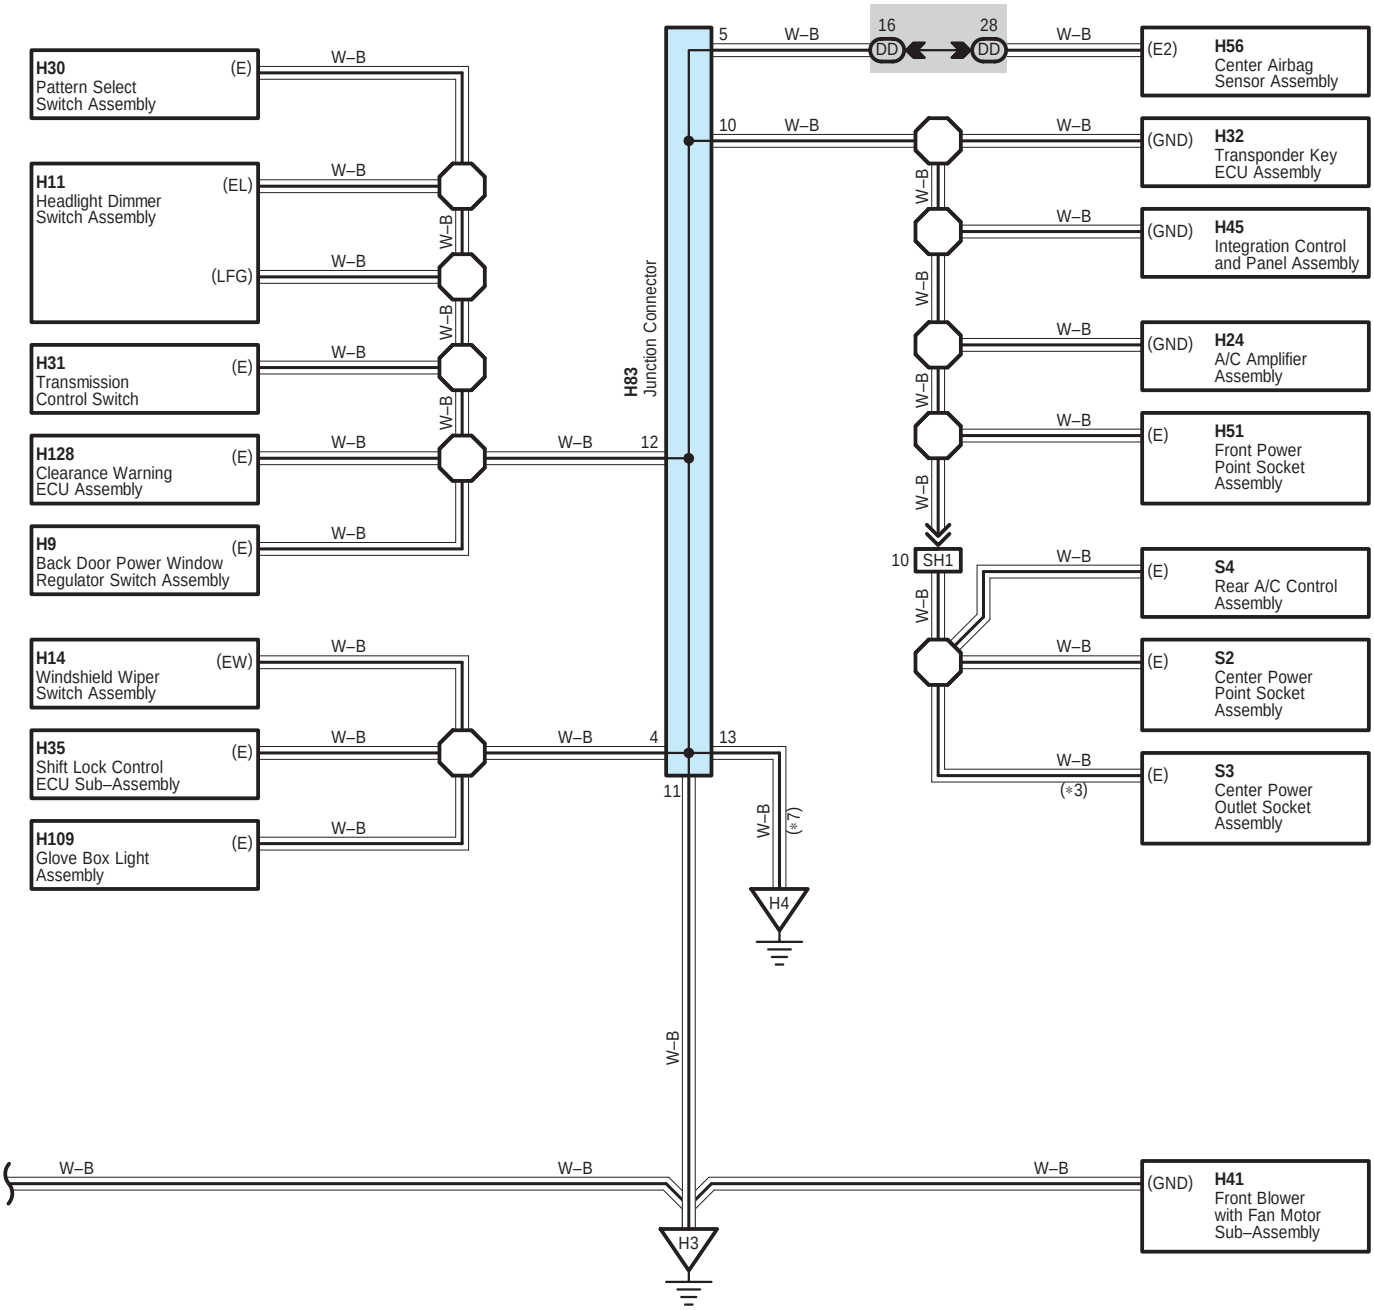

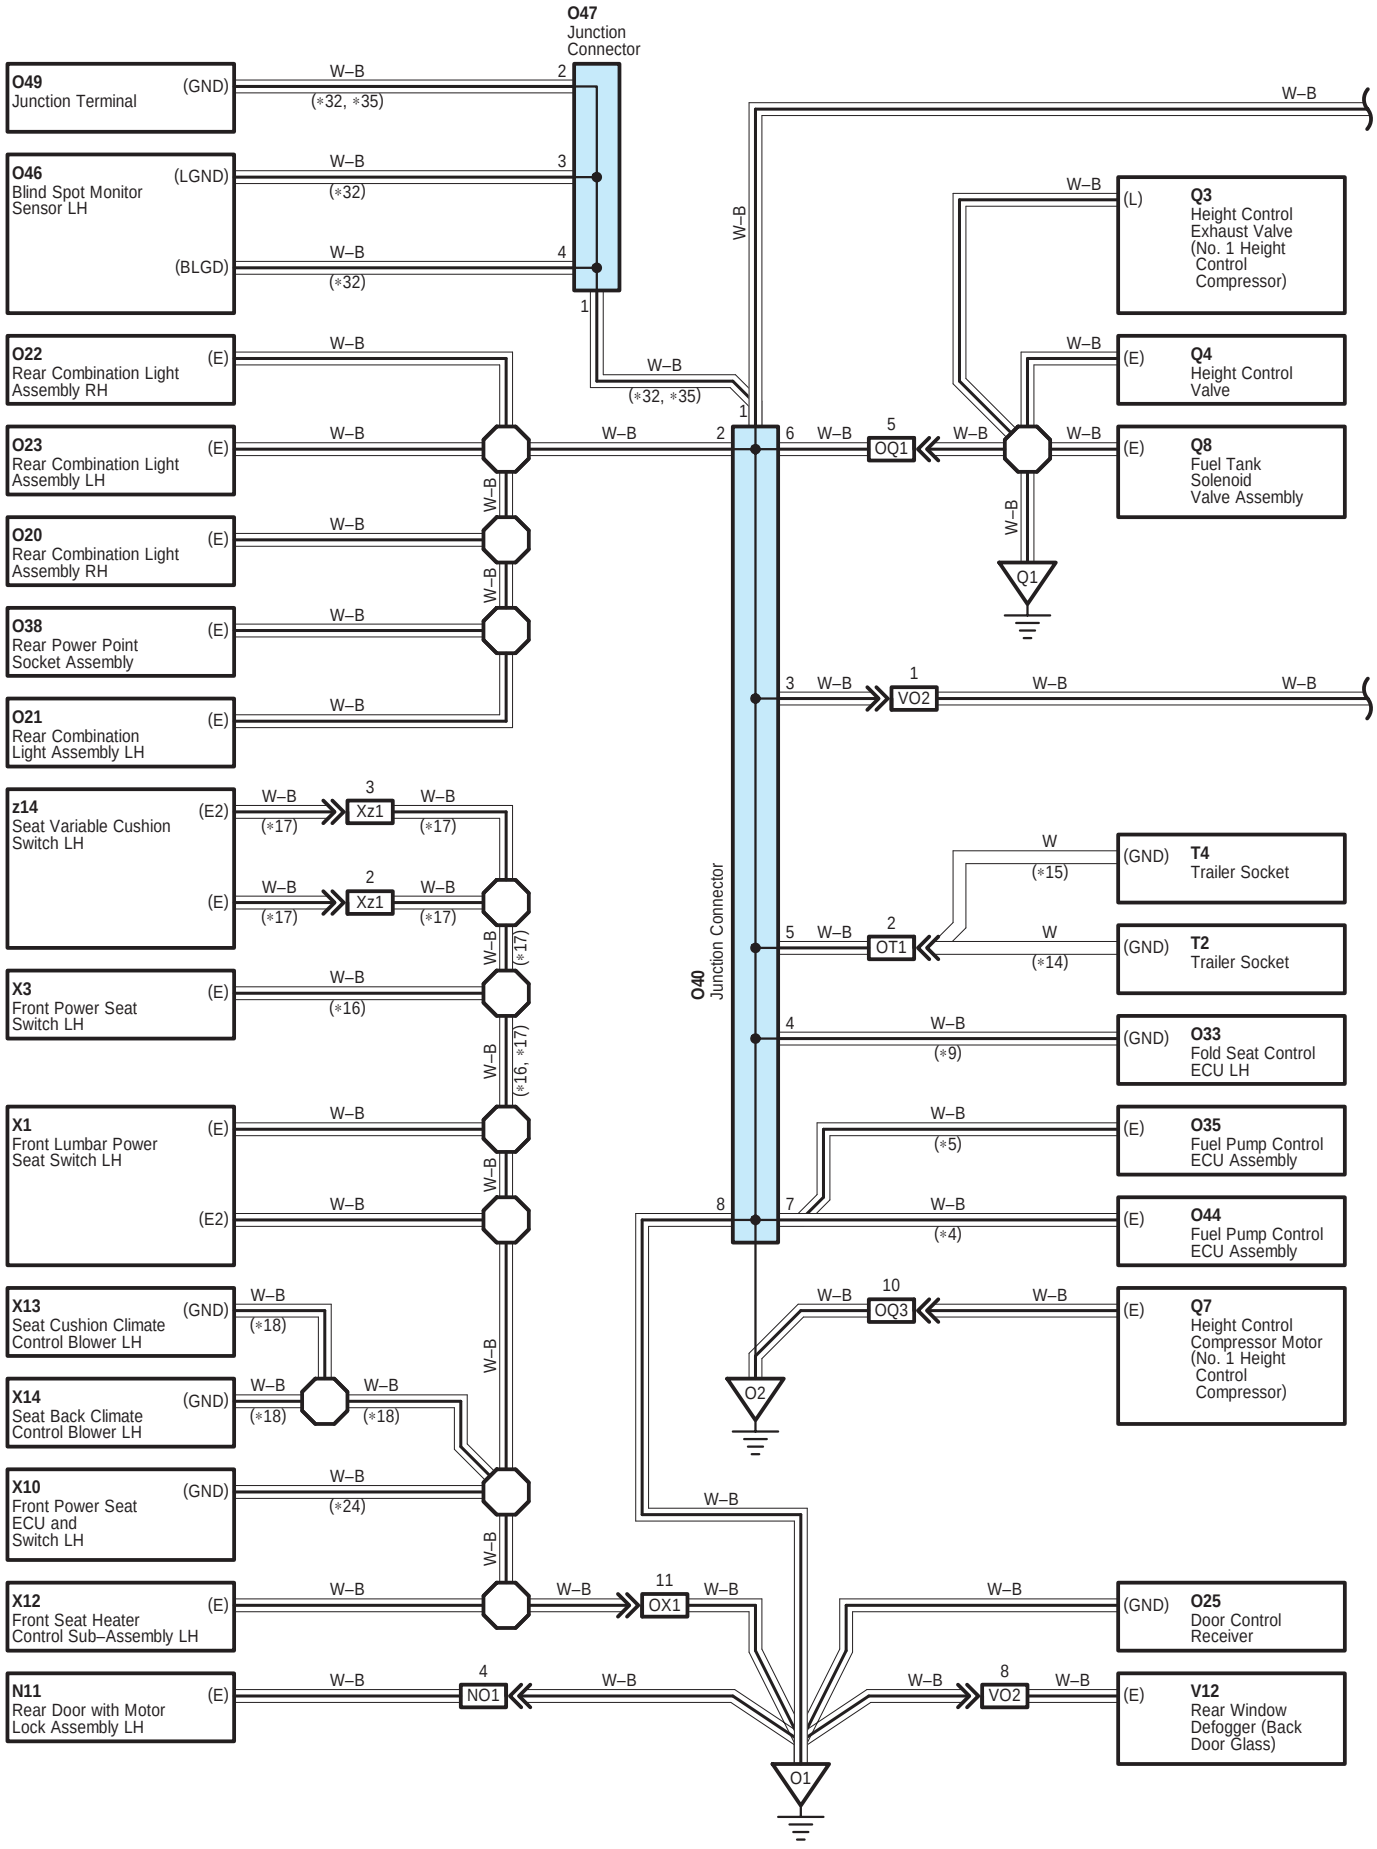

O47
Junction
Connector
O49
Junction Terminal
(GND)
W–B
(∗32, ∗35)
O46
Blind Spot Monitor
Sensor LH
(LGND)
(∗32)
(BLGD)
O22
Rear Combination Light
Assembly RH
(E)
O23
Rear Combination Light
Assembly LH
O20
Rear Combination Light
Assembly RH
O38
Rear Power Point
Socket Assembly
O21
Rear Combination
Light Assembly LH
z14
Seat Variable Cushion
Switch LH
(E2)
Xz1
(∗17)
X3
Front Power Seat
Switch LH
(∗16)
X1
Front Lumbar Power
Seat Switch LH
X13
Seat Cushion Climate
Control Blower LH
(∗18)
X14
Seat Back Climate
Control Blower LH
X10
Front Power Seat
ECU and
Switch LH
(∗24)
X12
Front Seat Heater
Control Sub–Assembly LH
N11
Rear Door with Motor
Lock Assembly LH
NO1
OX1
O40
Junction Connector
OQ1
VO2
OT1
OQ3
O2
O1
Q1
Q3
Height Control
Exhaust Valve
(No. 1 Height
Control
Compressor)
(L)
Q4
Height Control
Valve
Q8
Fuel Tank
Solenoid
Valve Assembly
T4
Trailer Socket
(∗15)
T2
Trailer Socket
(∗14)
O33
Fold Seat Control
ECU LH
(∗9)
O35
Fuel Pump Control
ECU Assembly
(∗5)
O44
Fuel Pump Control
ECU Assembly
(∗4)
Q7
Height Control
Compressor Motor
(No. 1 Height
Control
Compressor)
O25
Door Control
Receiver
V12
Rear Window
Defogger (Back
Door Glass)

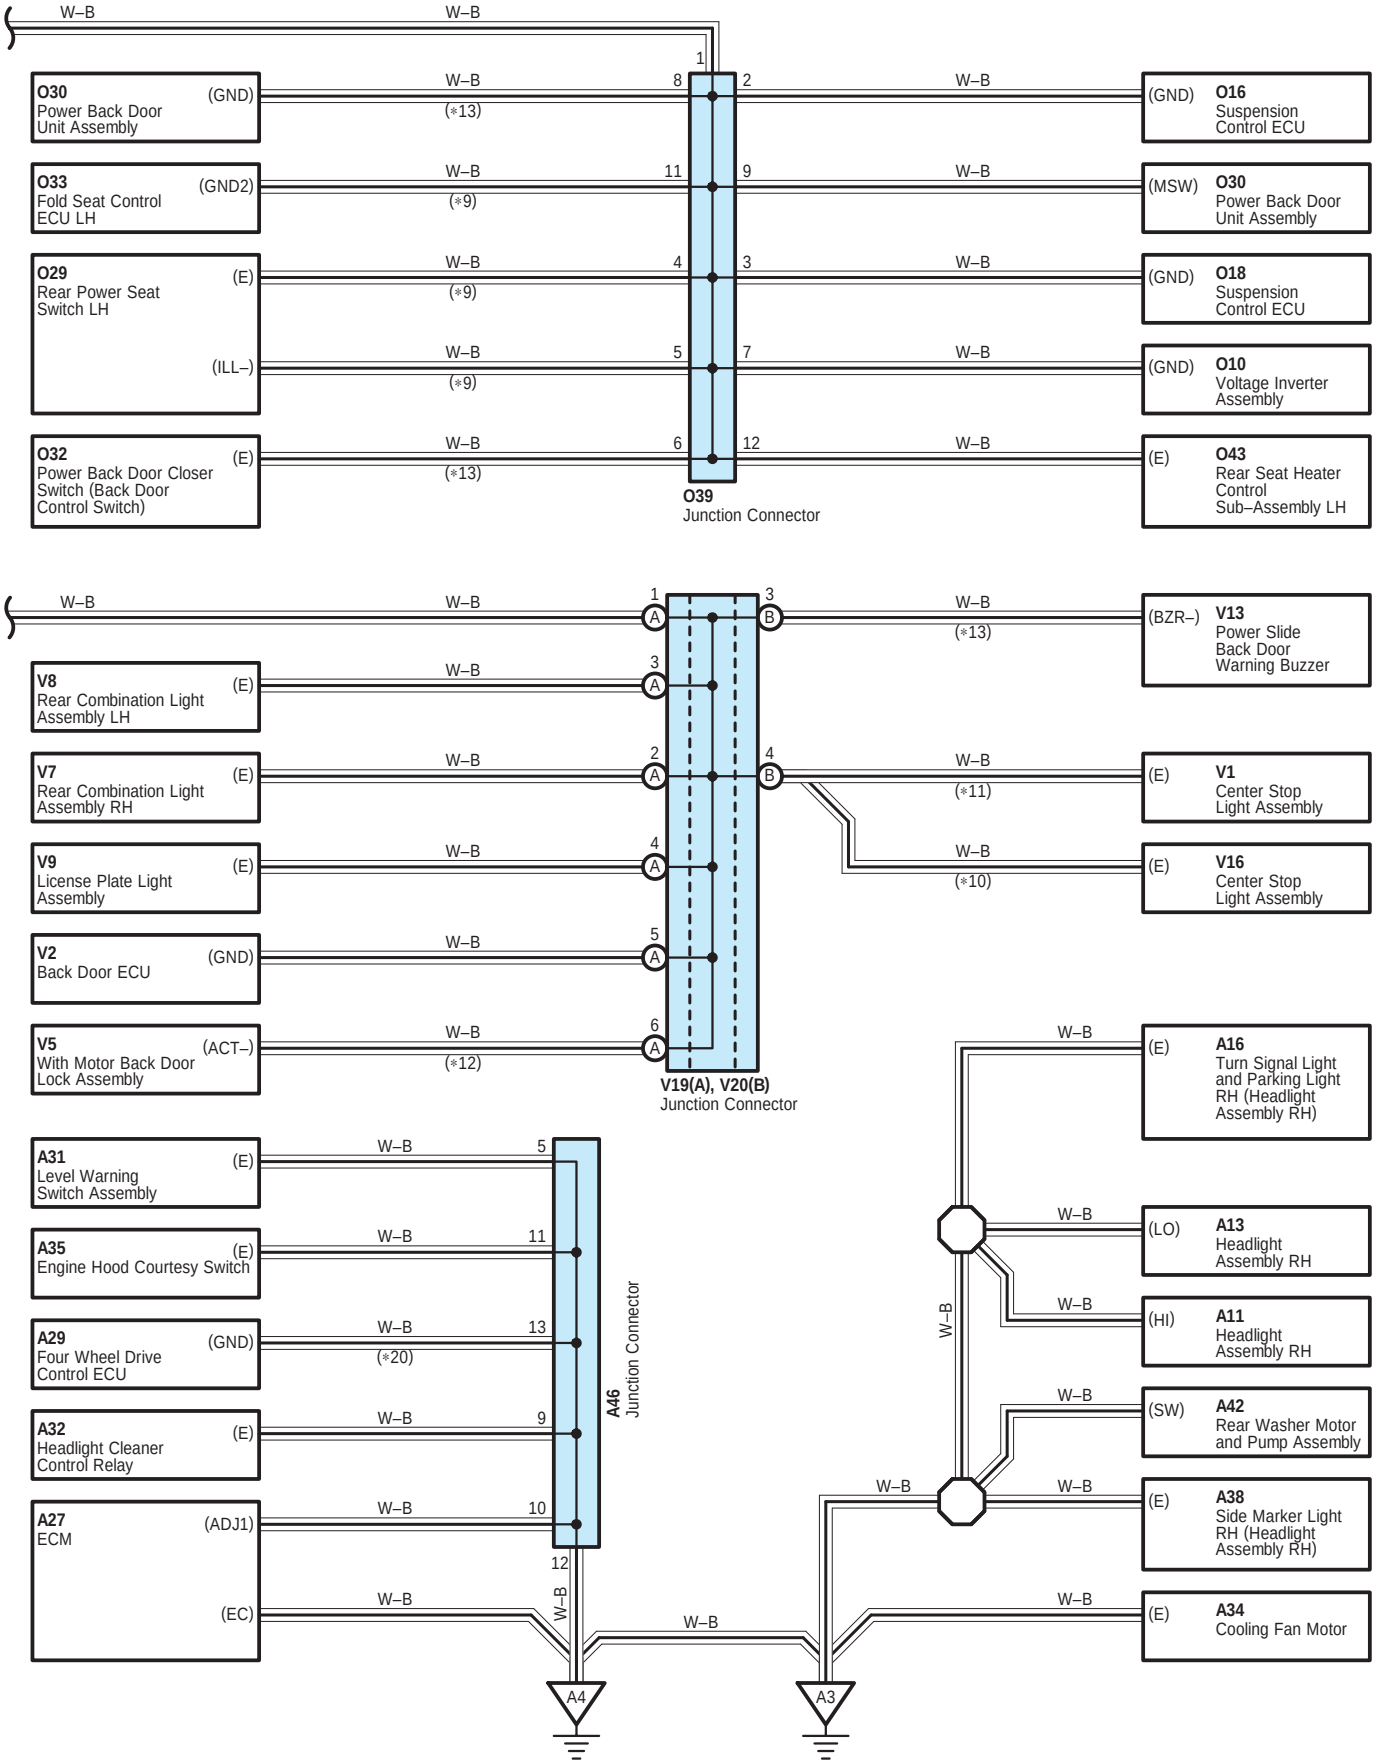
W–B
O30 Power Back Door Unit Assembly (GND)
O33 Fold Seat Control ECU LH (GND2)
O29 Rear Power Seat Switch LH (E)
(ILL–)
O32 Power Back Door Closer Switch (Back Door Control Switch) (E)
(∗13)
(∗9)
O39 Junction Connector
O16 Suspension Control ECU (GND)
O30 Power Back Door Unit Assembly (MSW)
O18 Suspension Control ECU (GND)
O10 Voltage Inverter Assembly (GND)
O43 Rear Seat Heater Control Sub–Assembly LH (E)
V8 Rear Combination Light Assembly LH (E)
V7 Rear Combination Light Assembly RH (E)
V9 License Plate Light Assembly (E)
V2 Back Door ECU (GND)
V5 With Motor Back Door Lock Assembly (ACT–)
(∗12)
V19(A), V20(B) Junction Connector
V13 Power Slide Back Door Warning Buzzer (BZR–)
V1 Center Stop Light Assembly (E)
(∗11)
V16 Center Stop Light Assembly (E)
(∗10)
A31 Level Warning Switch Assembly (E)
A35 Engine Hood Courtesy Switch (E)
A29 Four Wheel Drive Control ECU (GND)
(∗20)
A32 Headlight Cleaner Control Relay (E)
A27 ECM (ADJ1)
(EC)
A46 Junction Connector
A4
A3
A16 Turn Signal Light and Parking Light RH (Headlight Assembly RH) (E)
A13 Headlight Assembly RH (LO)
A11 Headlight Assembly RH (HI)
A42 Rear Washer Motor and Pump Assembly (SW)
A38 Side Marker Light RH (Headlight Assembly RH) (E)
A34 Cooling Fan Motor (E)


∗ 9 : w/ Power Rear No. 2 Seat with Stowing Function
∗10 : w/ Roof Spooler
∗11 : w/o Roof Spooler
∗12 : w/o Power Back Door
∗13 : w/ Power Back Door
∗18 : w/ Climate Control Seat
∗19 : w/ Seat Heater (Rear No. 1 Seat)
∗20 : 4WD
∗21 : w/o Climate Control Seat
∗22 : w/ Power Seat
∗23 : w/o Power Seat
∗25 : w/o Power Rear No. 2 Seat with Stowing Function
∗32 : w/ Blind Spot Monitor System

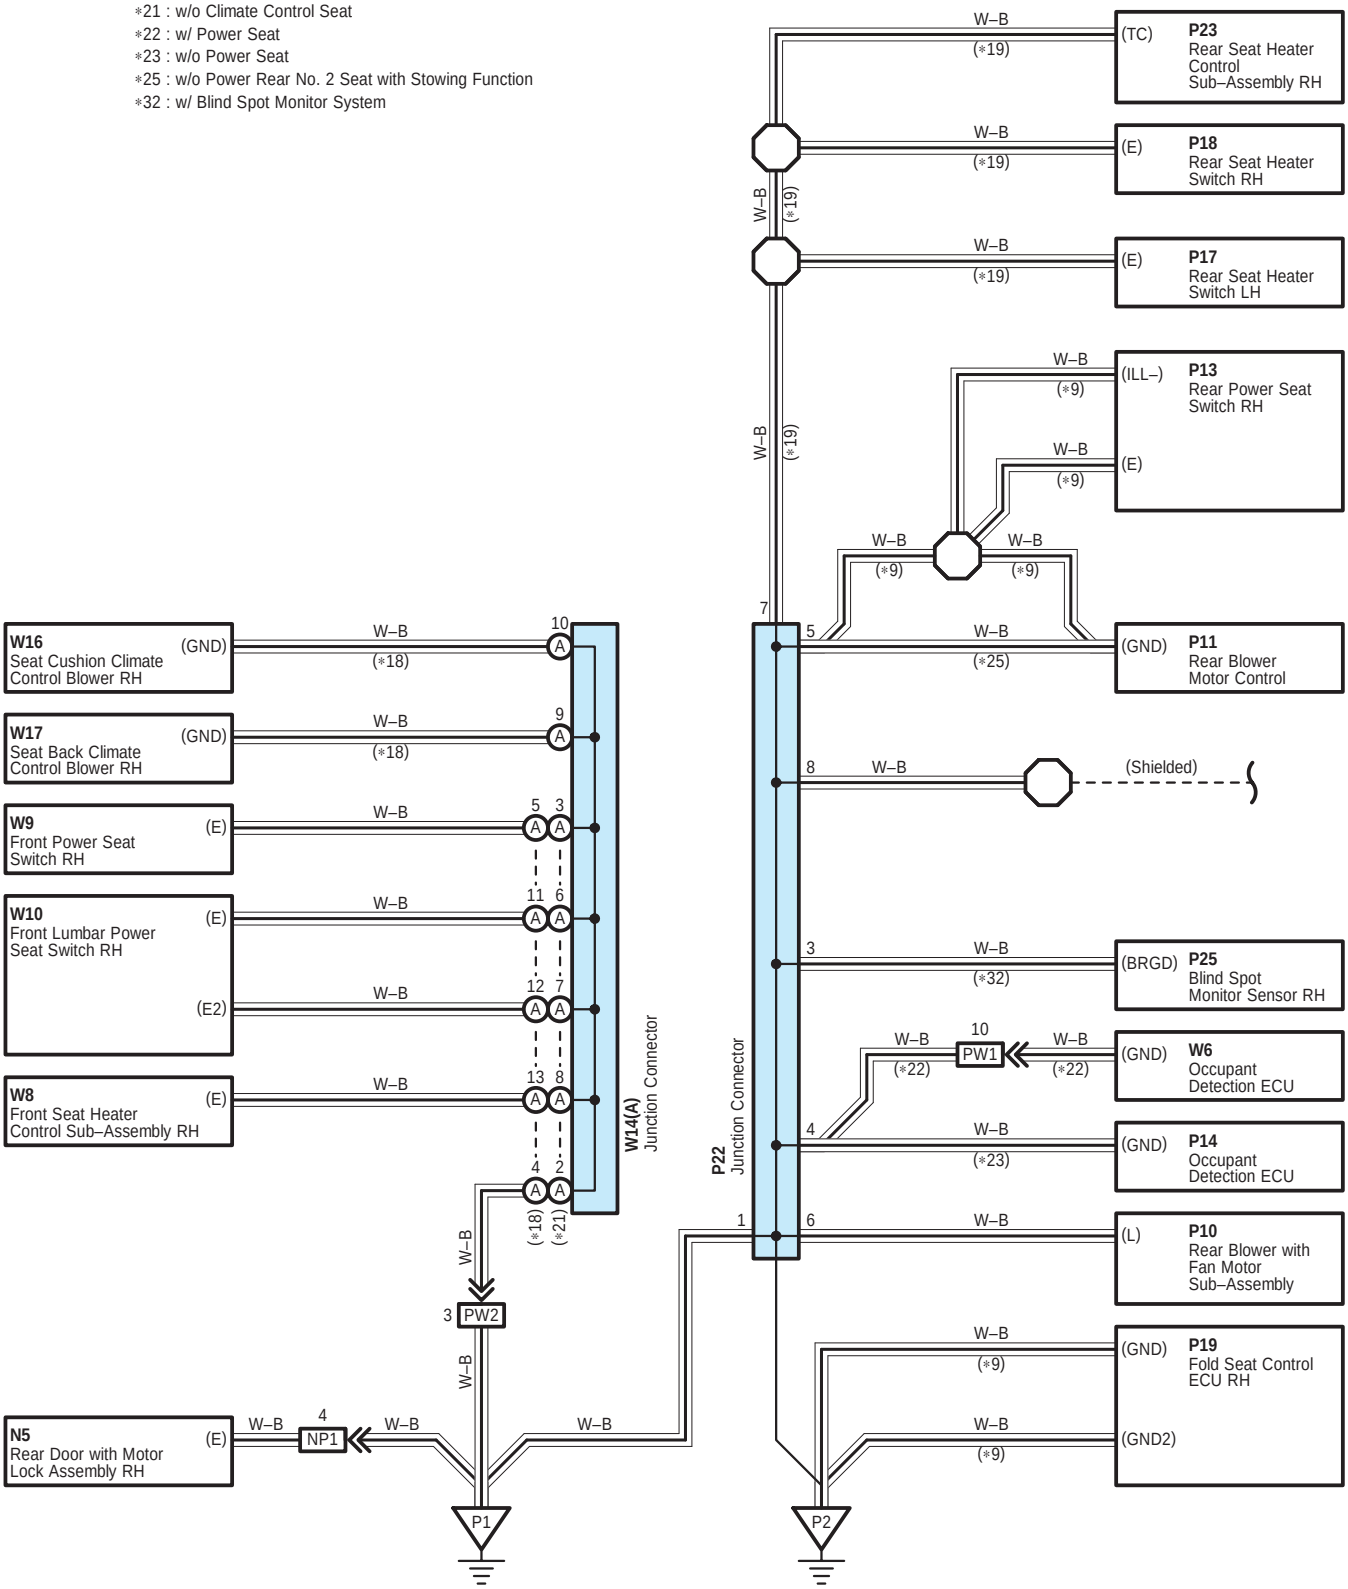


A 46
White

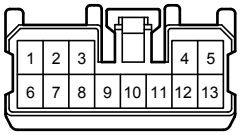


A 54
White

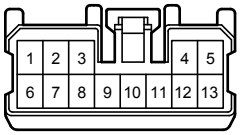


A 61
Blue

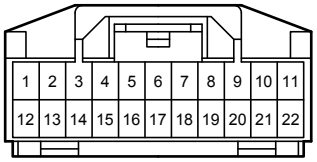


D 53
White

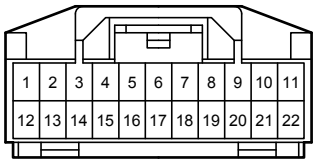


D 55
Blue

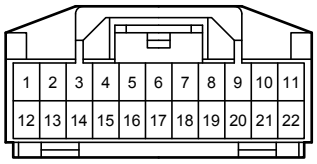


H 83
Gray

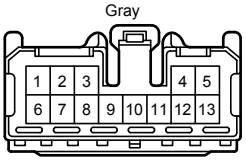


H 84
White

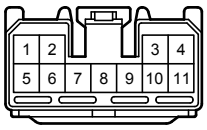


H 85
White

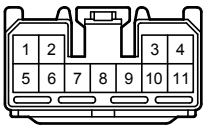


H 86
White

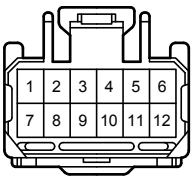


H 87
White

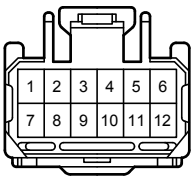


O 39
White

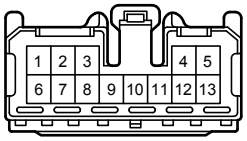


O 40
White

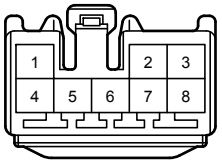


O 47
White

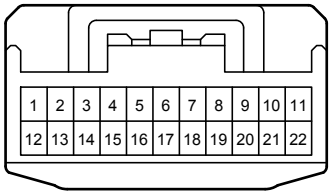


P 22
White

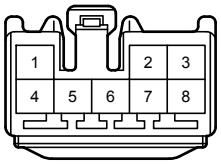


V 19
Gray

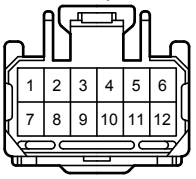


V 20
Gray

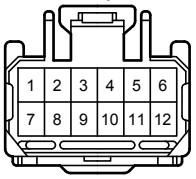


W 14
White

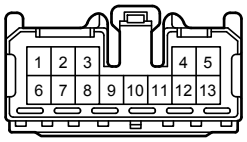


1A
White

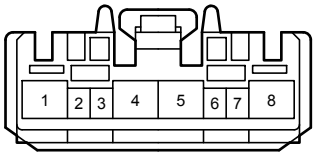


1B
White

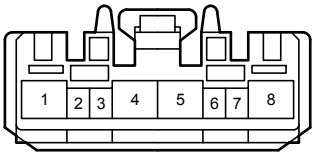


DD
White

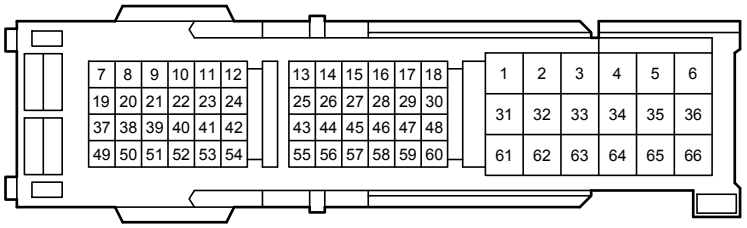


DE
White

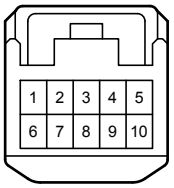


AH3
White

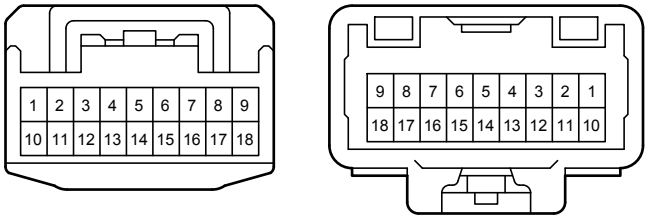


DA6
Black

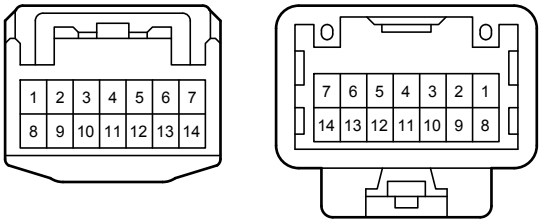


DF1
Black

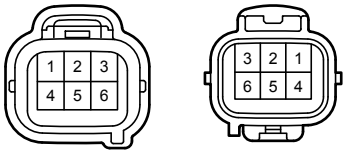


HJ1
White

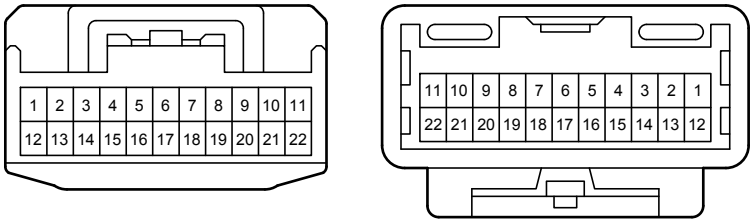


HU1
White

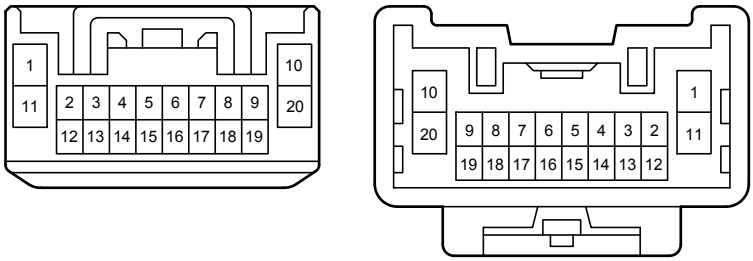


LH1
Blue

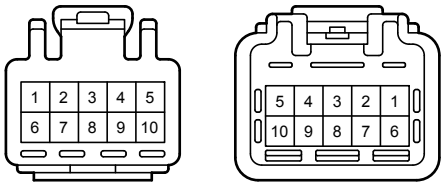


MH1
Blue

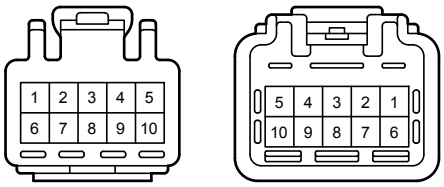


NO1
White

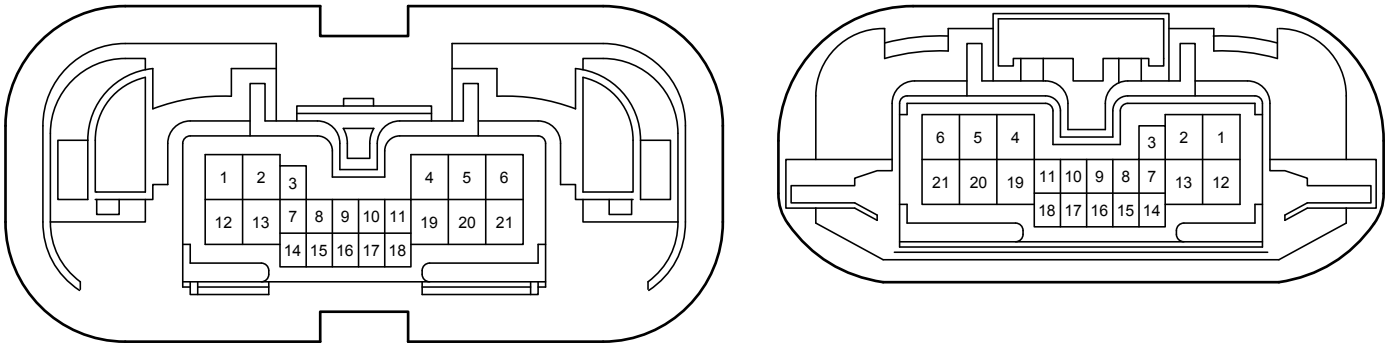


NP1
White

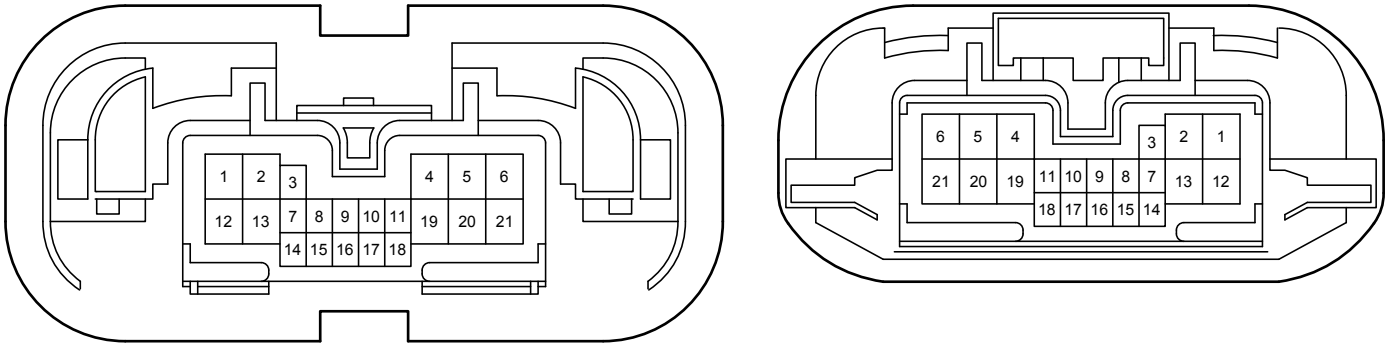


OA1
White

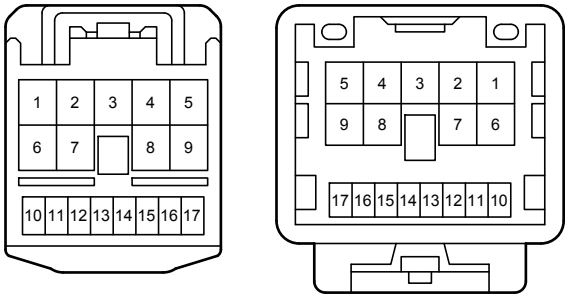


OH2
Black

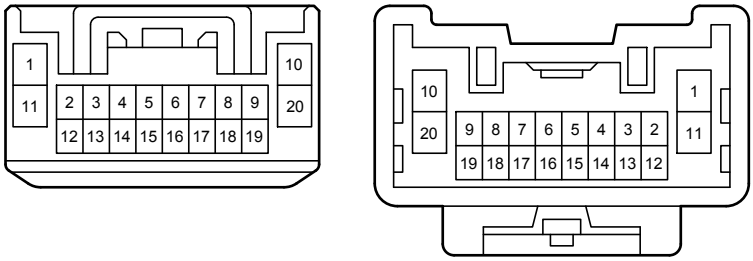


OQ1
Black

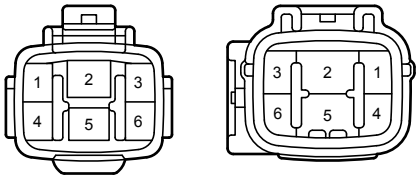


OQ3
Black

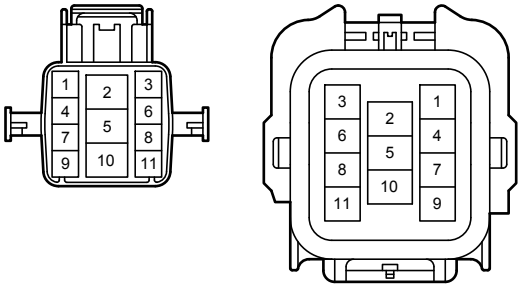

OT1
Gray

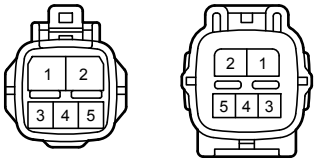

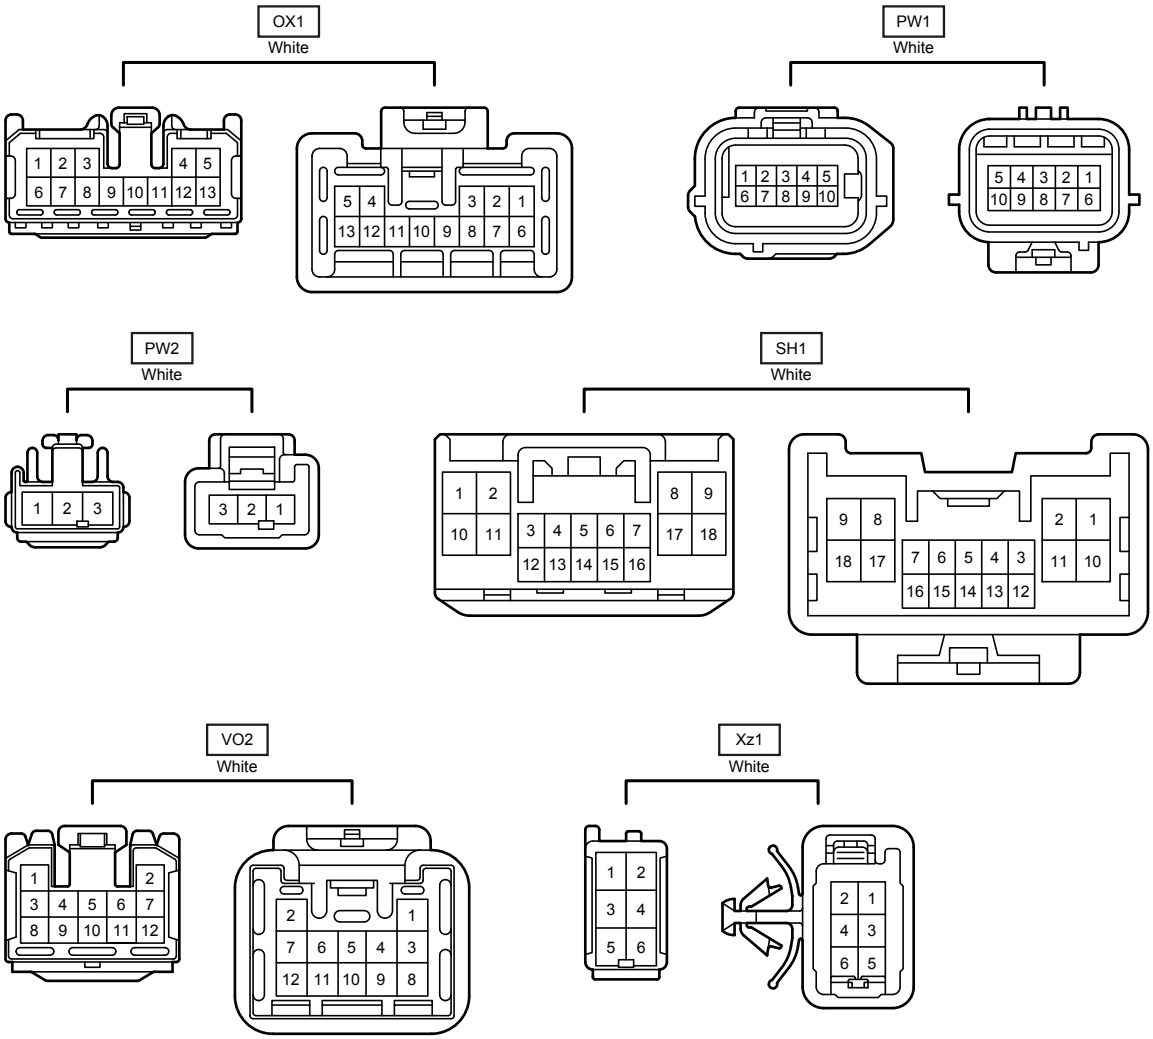
OX1
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
PW1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
PW2
White
1 2 3
3 2 1
SH1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10
VO2
White
1 2
3 4 5 6 7
8 9 10 11 12
2 1
7 6 5 4 3
12 11 10 9 8
Xz1
White
1 2
3 4
5 6
2 1
4 3
6 5