




(IG)
10A
INJ
2
1
V
11
DA2
B–R
W–B
D5
Ignition Coil Assembly
No. 1
D12
Ignition Coil Assembly
No. 4
D11
Ignition Coil Assembly
No. 6
D8
Ignition Coil Assembly
No. 7
+B
GND
IGT1
IGF1
IGT4
IGT6
IGT7
B–Y
G–B
L–B
G
G–W
D54
Junction
Connector
40
34
104
36
38
D56(B)
ECM


B–R
B–R
B–R
B–R
W–B
W–B
W–B
W–B
W–B
W–B
W–B
D13
Ignition Coil Assembly
No. 2
D6
Ignition Coil Assembly
No. 3
D7
Ignition Coil Assembly
No. 5
D10
Ignition Coil Assembly
No. 8
+B
GND
IGT2
IGF2
IGT3
IGT5
IGT8
L–Y
R
B
G–R
G–B
D54
Junction
Connector
33
37
105
35
39
D56(B)
ECM
D3


D 5
Black

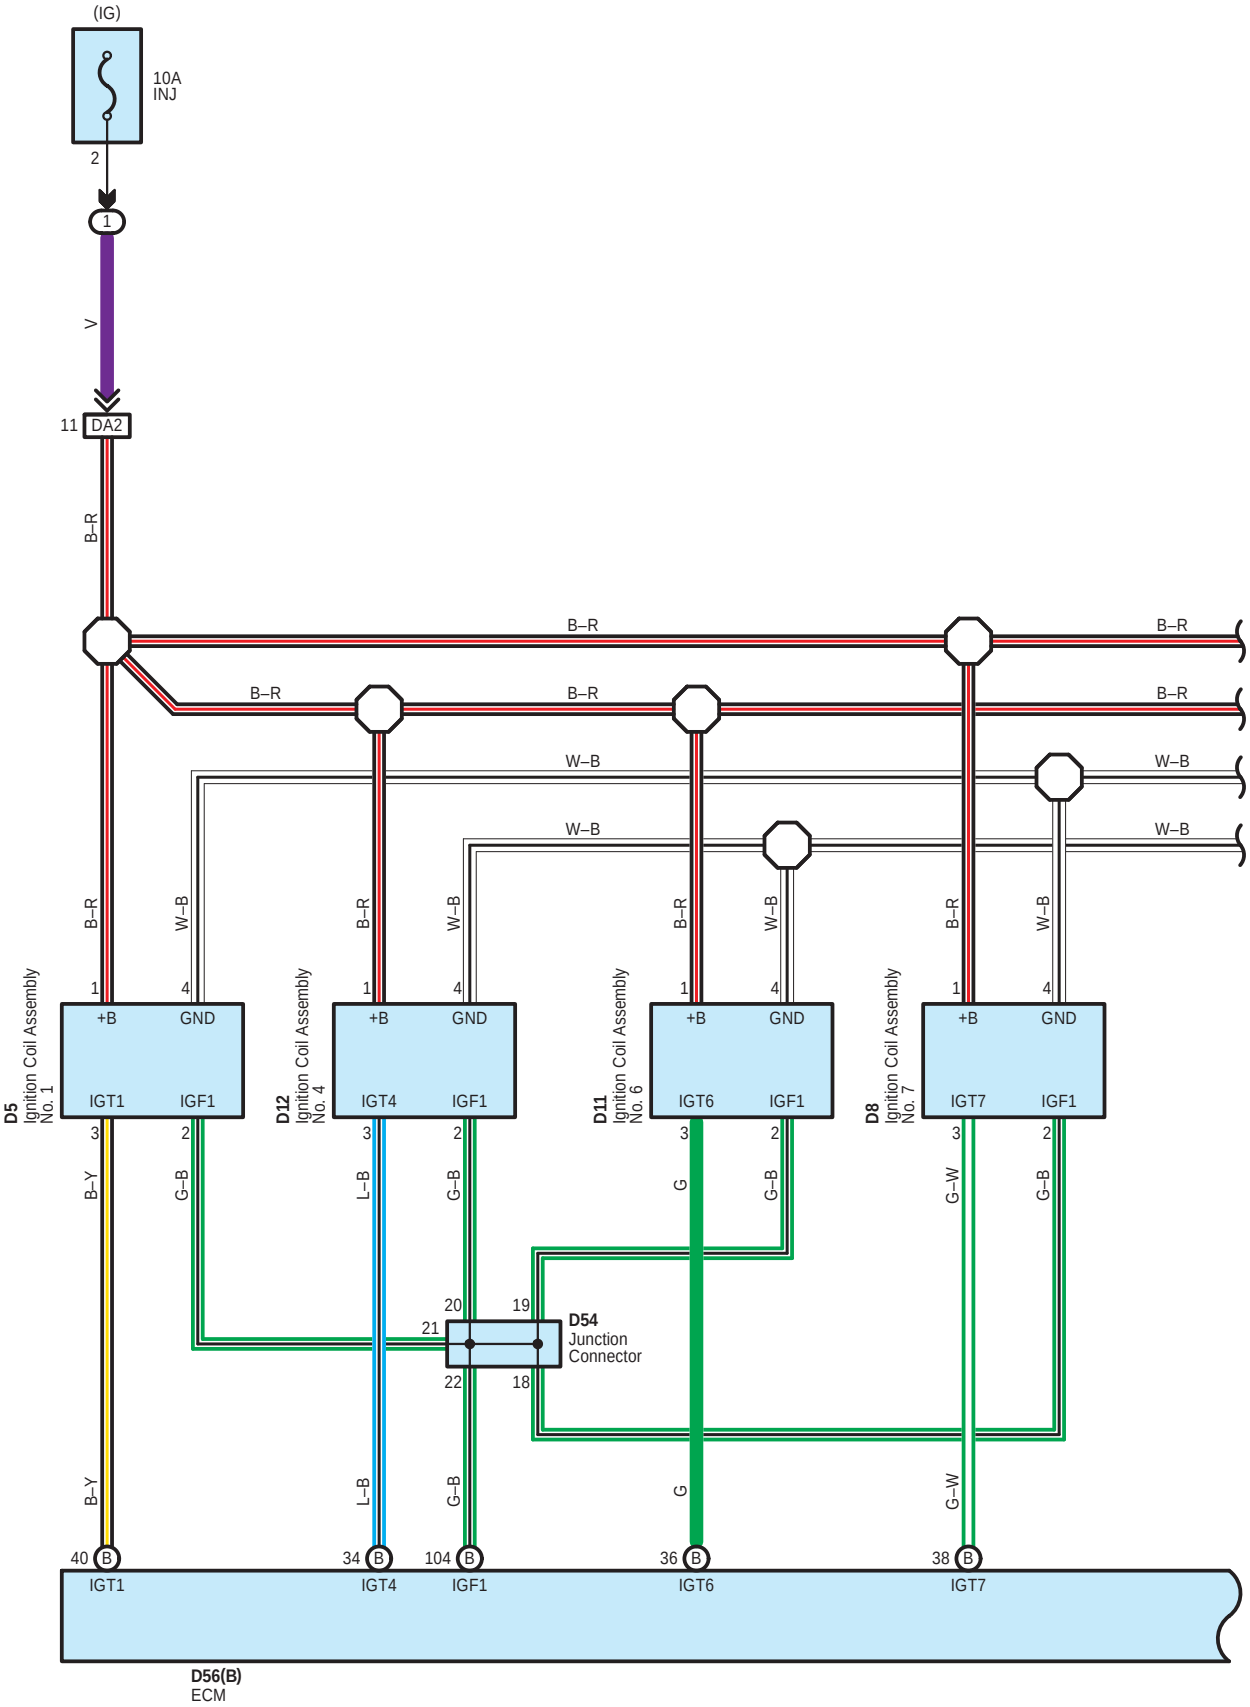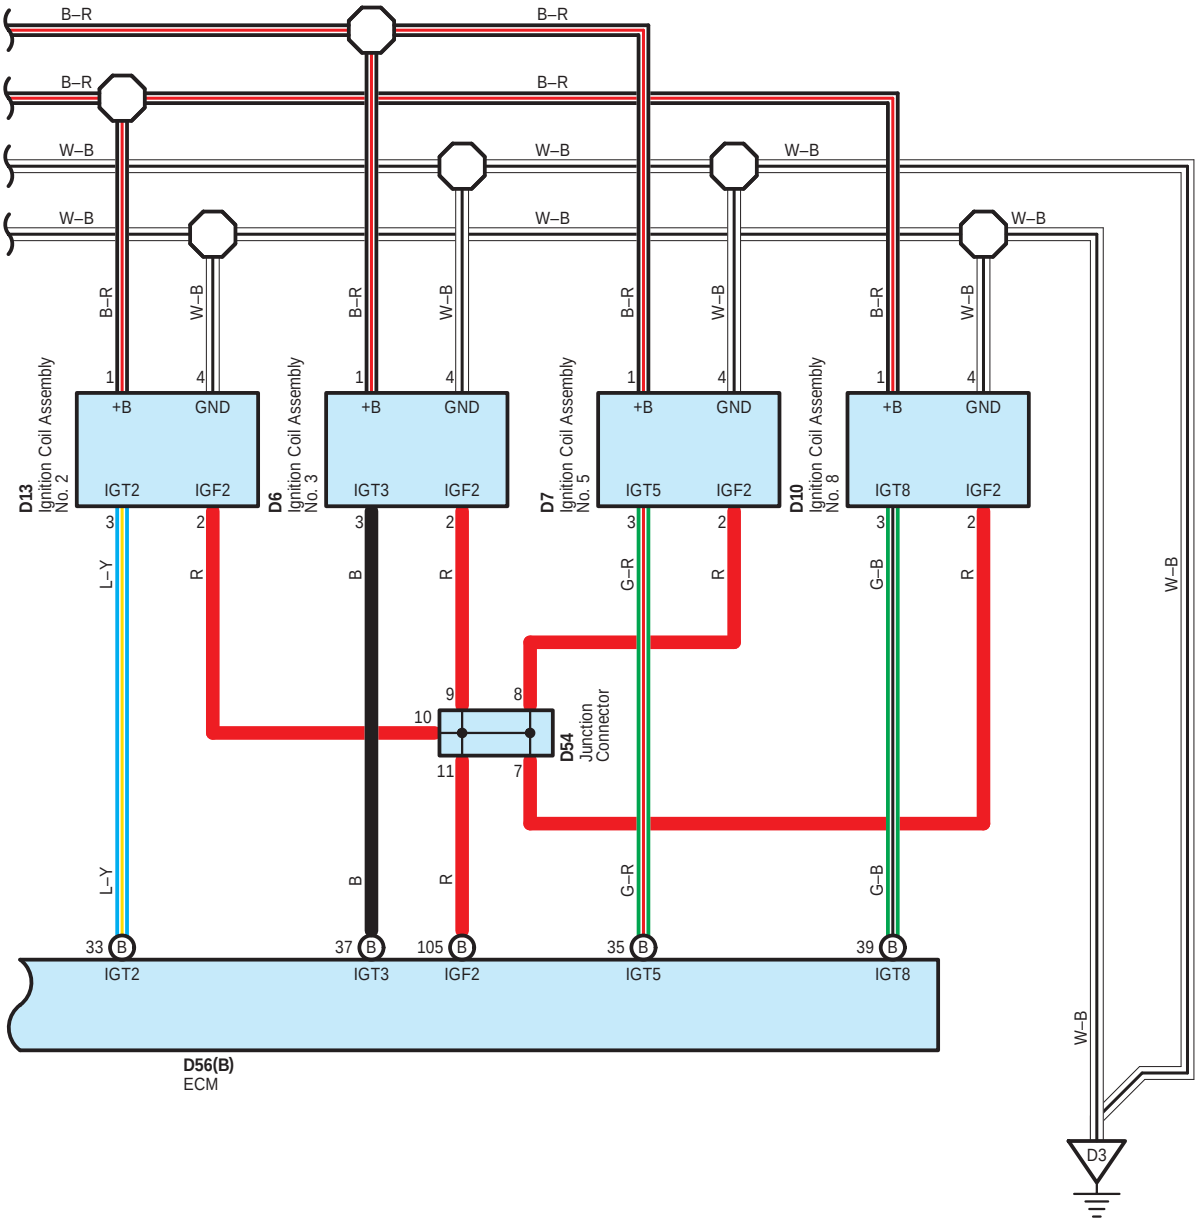


D 6
Black




D 7
Black




D 8
Black




D 10
Black




D 11
Black




D 12
Black




D 13
Black



D 54
White

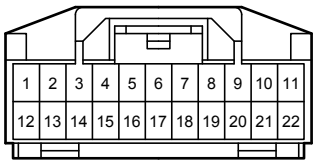

D 56
Black

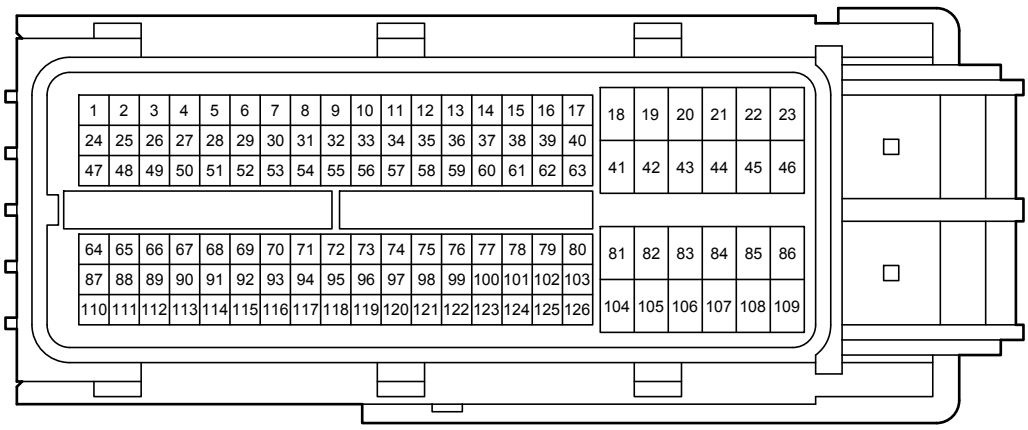

DA2
White

