




(IG)
20A
4WD
4 DB
V
W–B
6
FRE
B
H68
Differential
Lock Switch
9
Y
7 AH3
GR
V
13 A
LO
11 A
2–4
12 A
DL
3 B
IG
A28(A), A29(B)
Four Wheel Drive Control ECU
GND
CANL
CANH
L4
NP
HM1
HM2
B
P
8 AH3
9 AH3
16 HJ1
15 HJ1
5
2
2–4
LO
4H
2WD
4L
GND
J1
4 Wheel Drive Control Switch
4 B
20 A
19 A
21 A
16 A
2 B
6 B
W–B
W
BE
10 AH3
1 AH3
13
2
15
4
R
16
5
H115
Junction
Connector
H119
Junction
Connector
A46
Junction
Connector
12
21 A
Y
L4
A27(A)
ECM
10 DA7
9 DA7
L
1 C
2 C
HM1
HM2
M
N
D45(A), D46(C), D50(B)
Transfer Shift Actuator Assembly
3 C
B–R
4 B
8 A
A61(A), D55(B)
Junction
Connector
6 OH3
7 OH3
SB
L
(*4)
(*3)
8 A
2 A
7 A
1 A
O41(A)
Junction
Connector
16
OH3
15
OH3
SB
W
4
9
10
5
H85
Junction
Connector
13 HJ1
H2
H1
A4



* 3 : w/o Electronic Modulated Air Suspension
* 4 : w/ Electronic Modulated Air Suspension
F1
Differential Vacuum Actuator Assembly
M
ADD
DM1
DM2
DL2
DL1
A28(A), A29(B)
Four Wheel Drive Control ECU
TT
TGND
HL1
HL2
HL3
TM1
TM2
TL3
TL1
TL2
CDL
GND
GND1
D45(A), D46(C), D50(B)
Transfer Shift Actuator Assembly
W–B
SB
W
B
D3


F1
Differential Vacuum Actuator Assembly
GND
4
W–B
6
DF1
W–B
B
D3
(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
1
G
BE
9
AH9
15
AH9
LG
P
18
20
B
IG+
Power Circuit
4HI
4LO
Center Differential Lock
Buzzer
+B
IG
CANH
CANL
E1
H37
Combination
Meter Assembly
33
34
40
SB
W
W–B
A28(A), A29(B)
Four Wheel Drive
Control ECU
4WD
14
A
G
G
1
A
2
A
A50(A), A51(B)
Junction Connector
6
B
GR
11
EXI2
A19
ABS and Traction
Actuator Assembly
SB
W
8
H85
Junction
Connector
5
10
W–B
W–B
H1
H2


A 19
Black

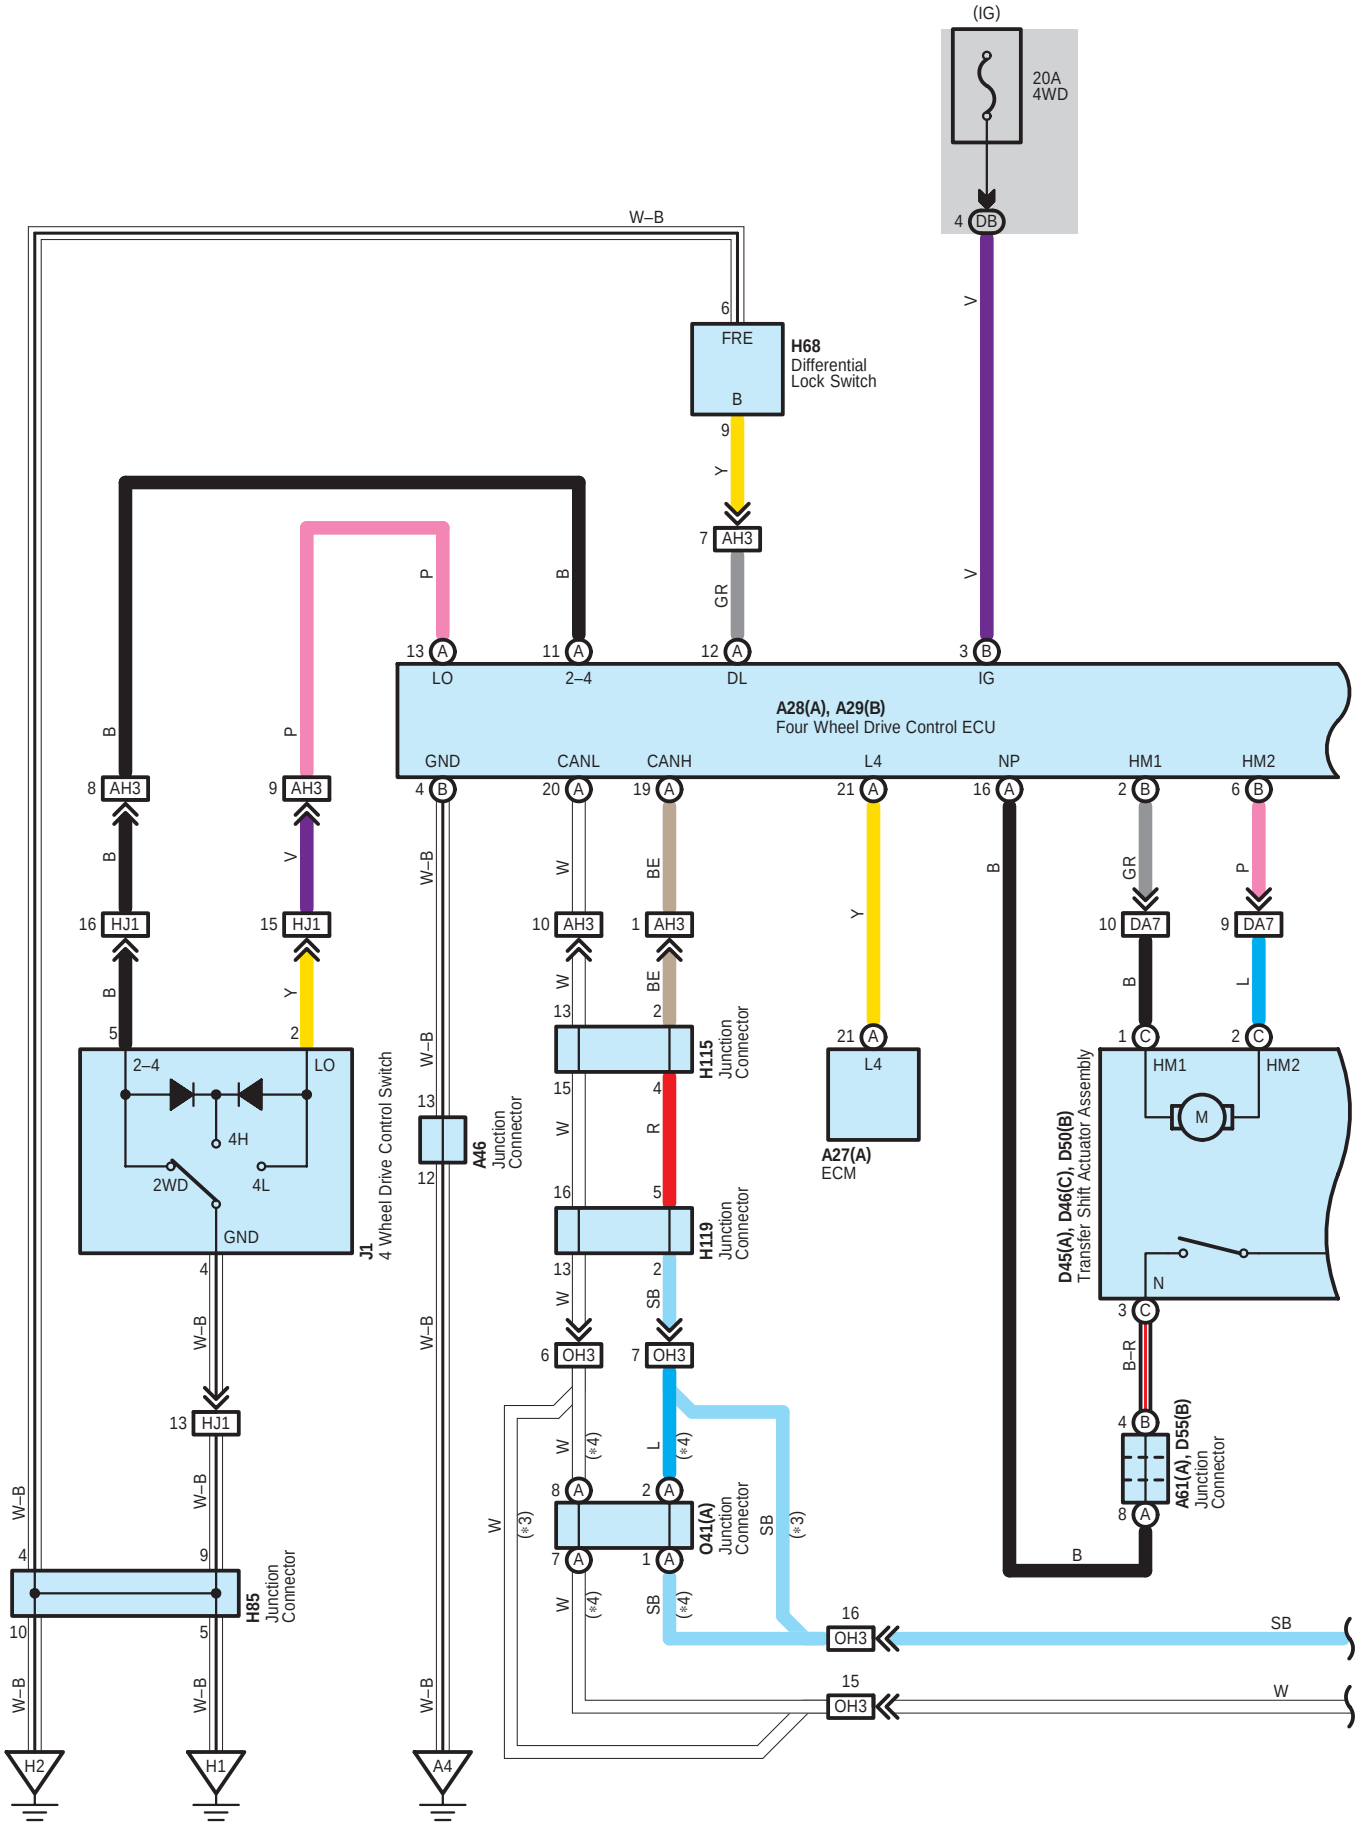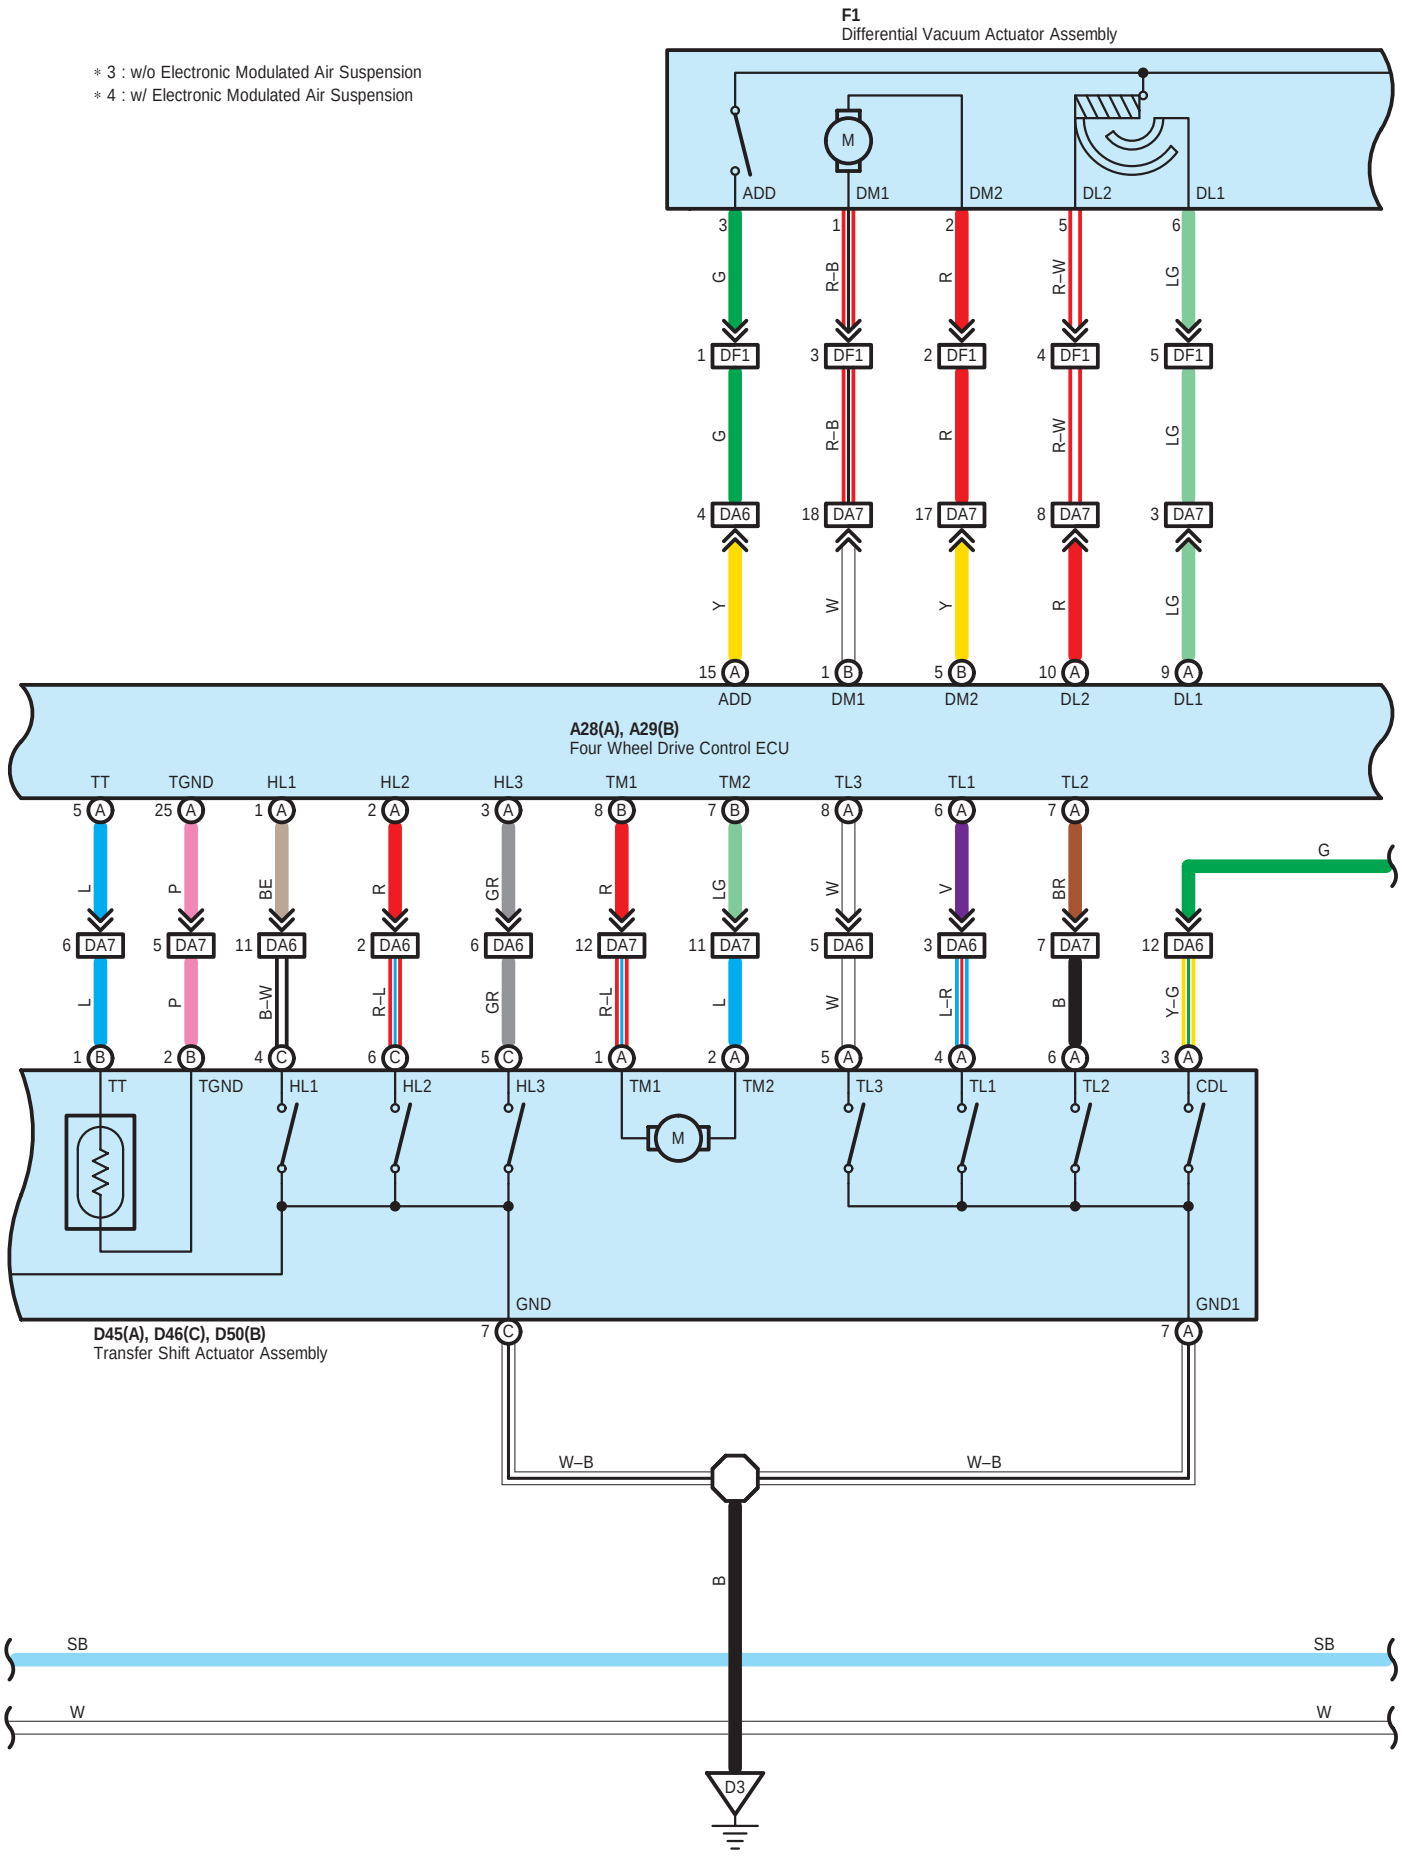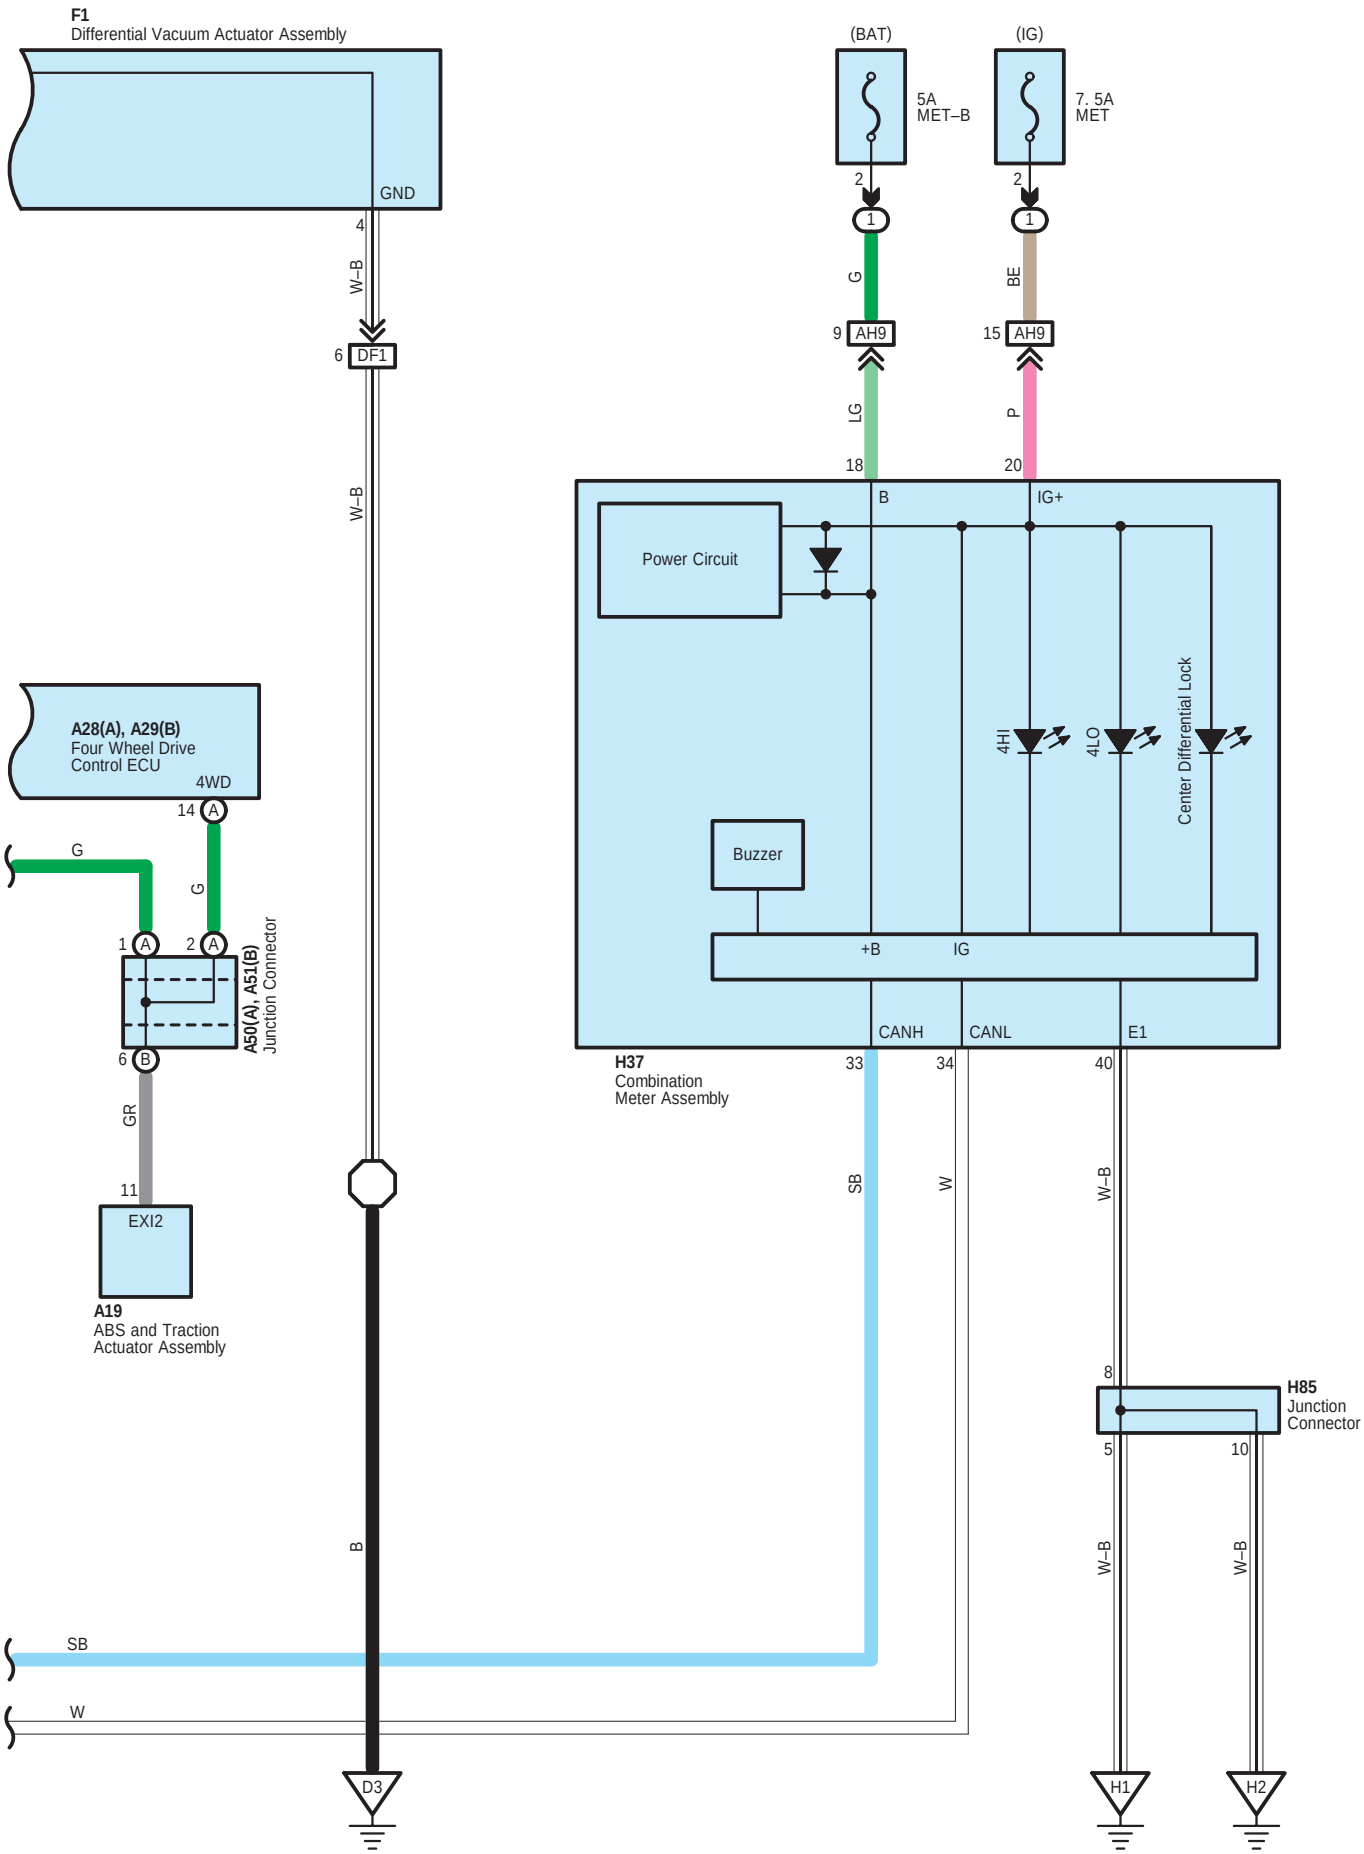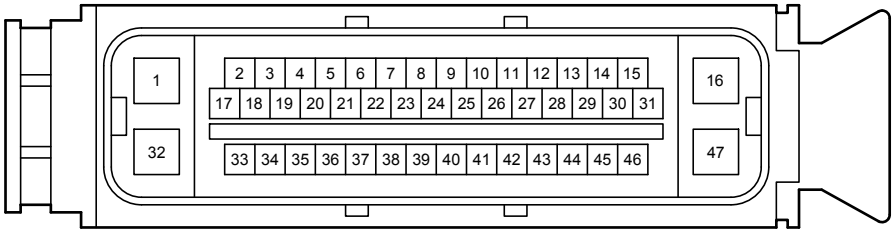


A 27
Black

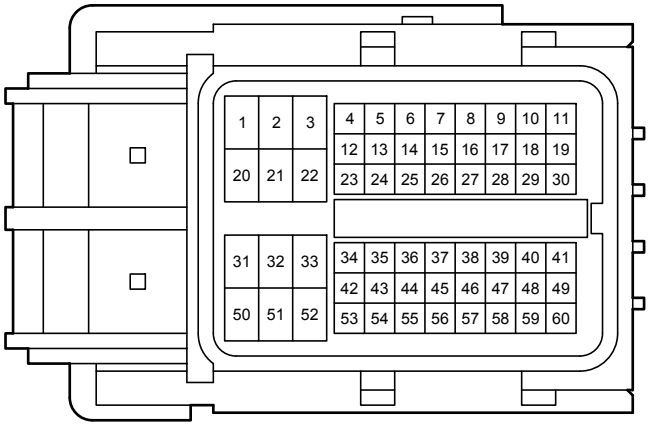


A 28
Black

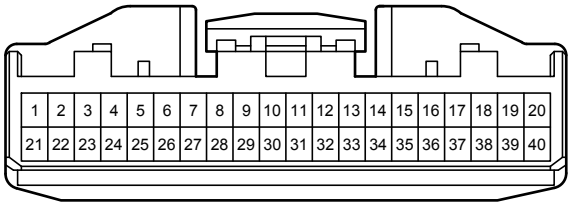


A 29
Black

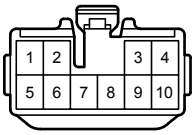


A 46
White

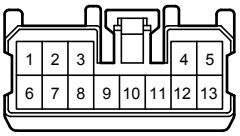


A 50
White

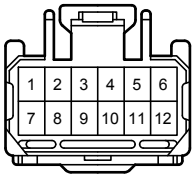


A 51
White

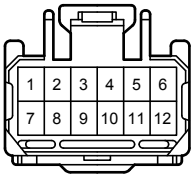


A 61
Blue

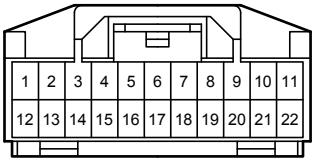


D 45
Black

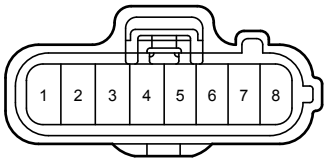


D 46
Dark Gray

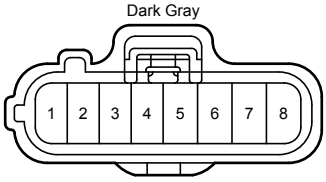


D 50
Black

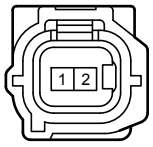


D 55
Blue

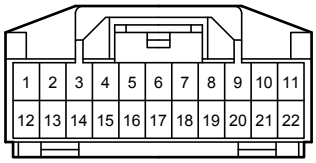


F 1
Black

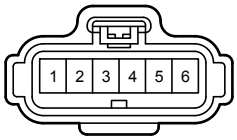


H 37
White

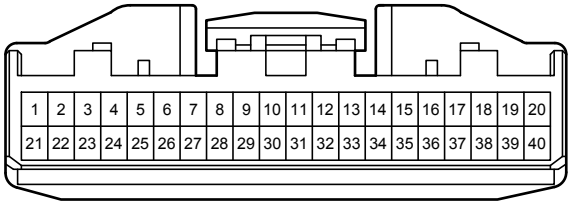


H 68
Black

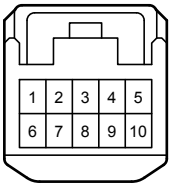


H 85
White

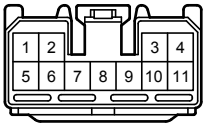


H115
Gray

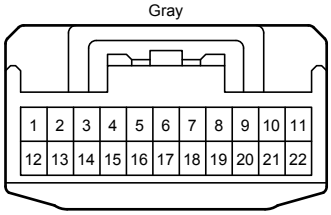


H119
Gray

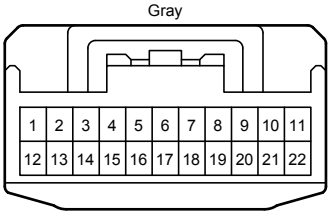


J 1
Black

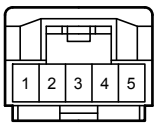


O 41
White

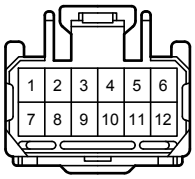


DB
White

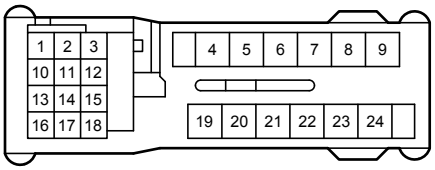


AH3
White

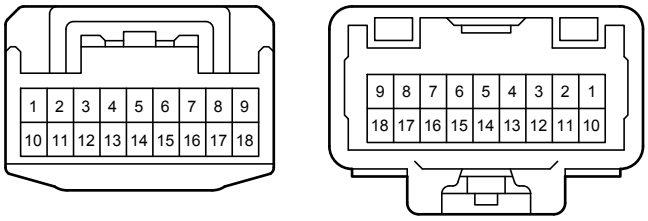


AH9
Gray

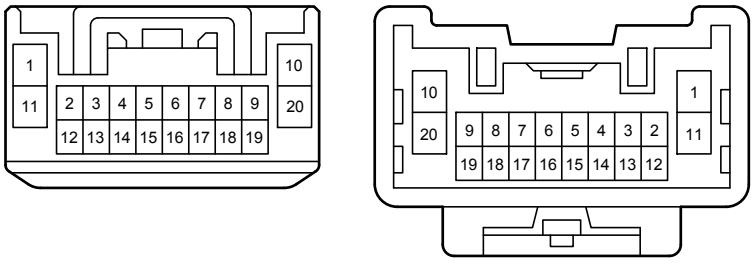


DA6
Black

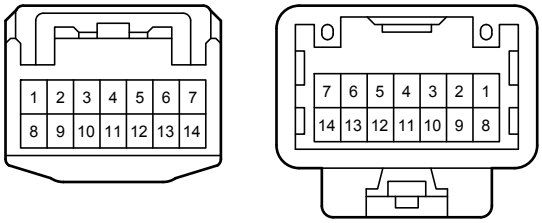


DA7
Gray

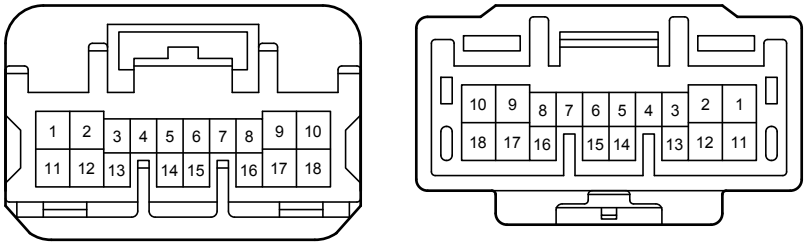

DF1
Black

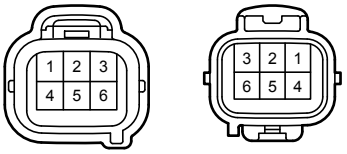

HJ1
White

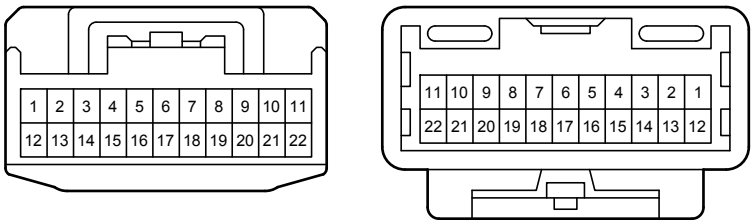

OH3
White

