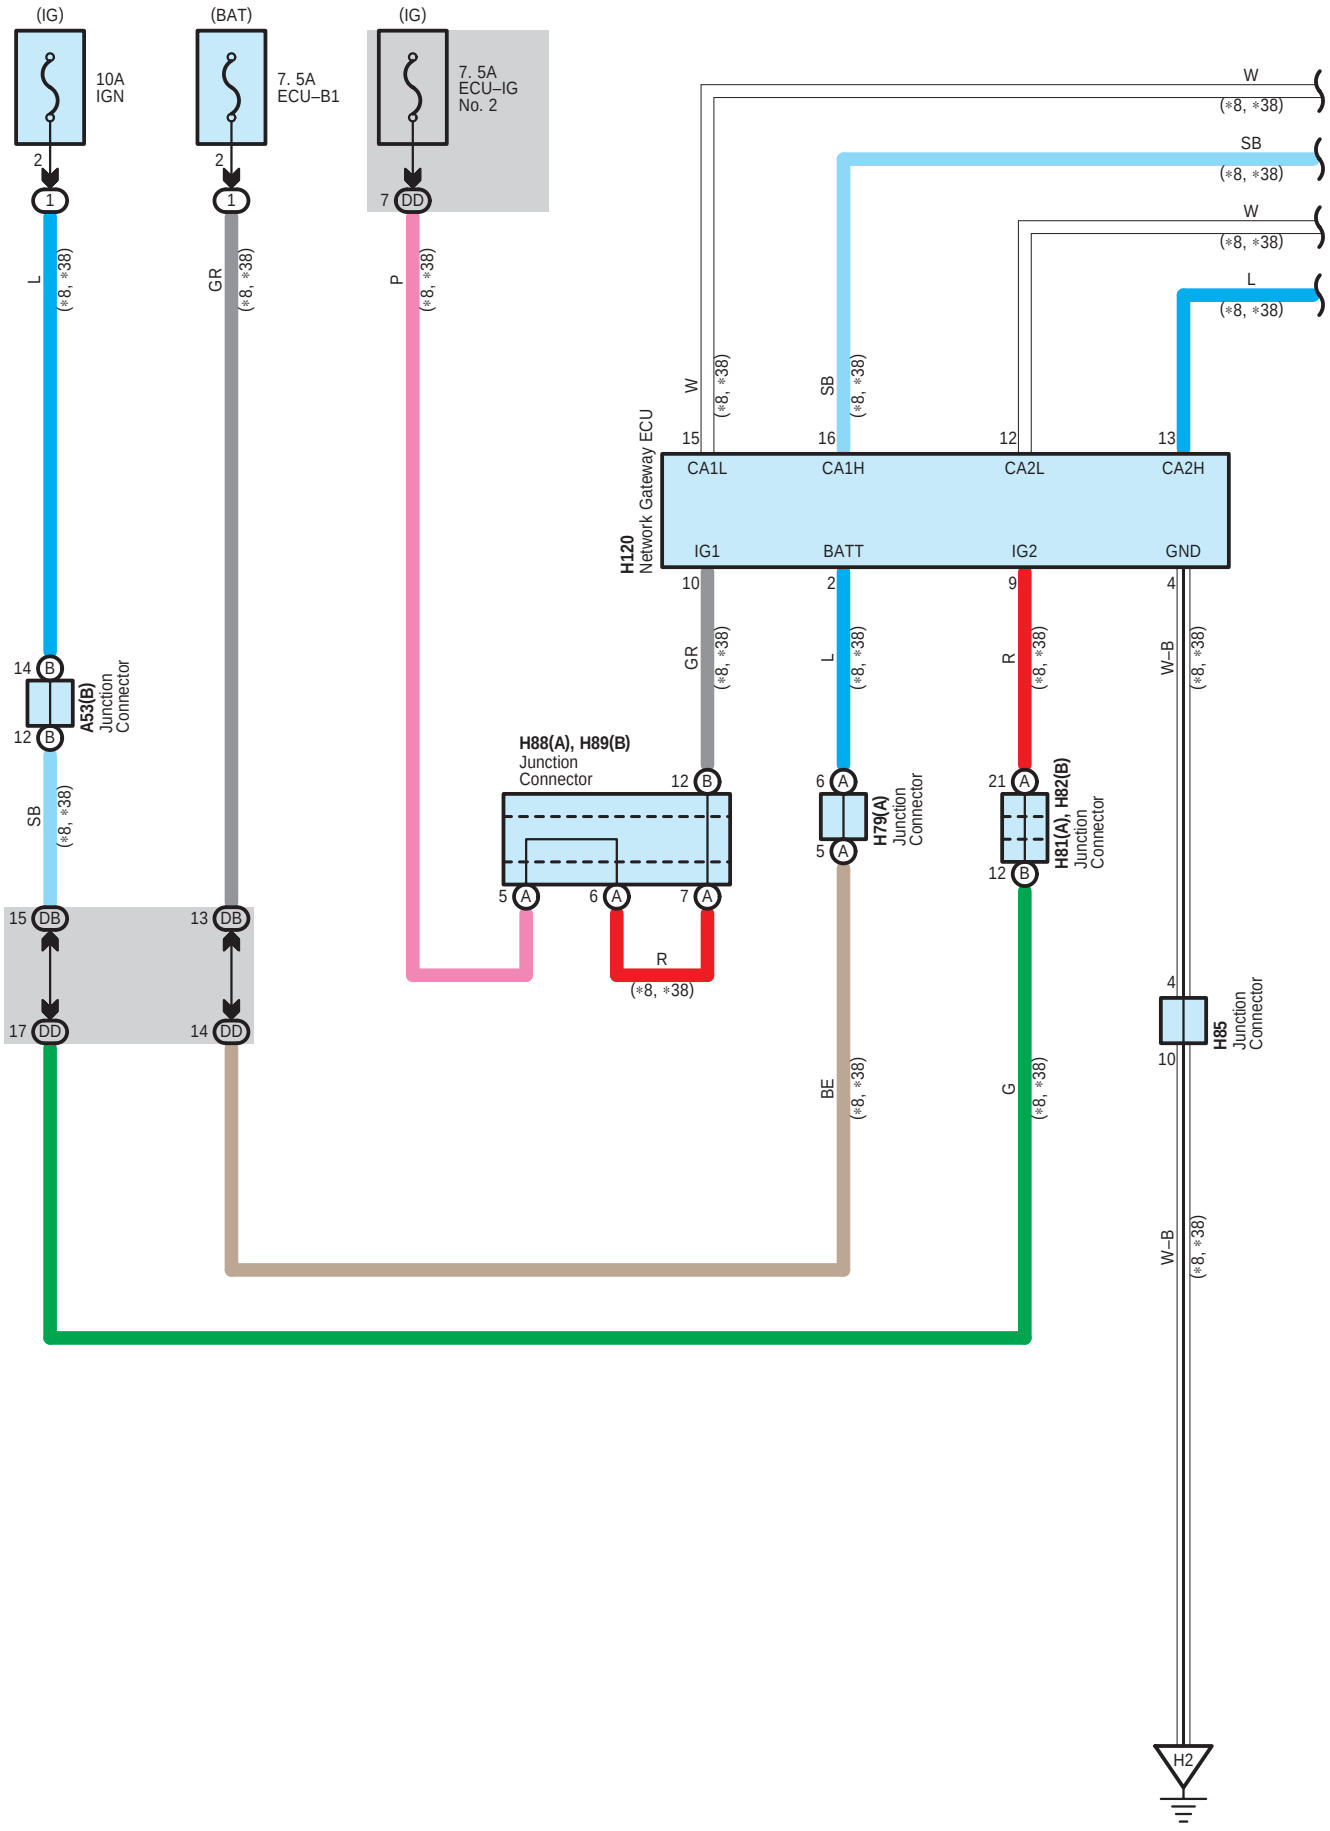
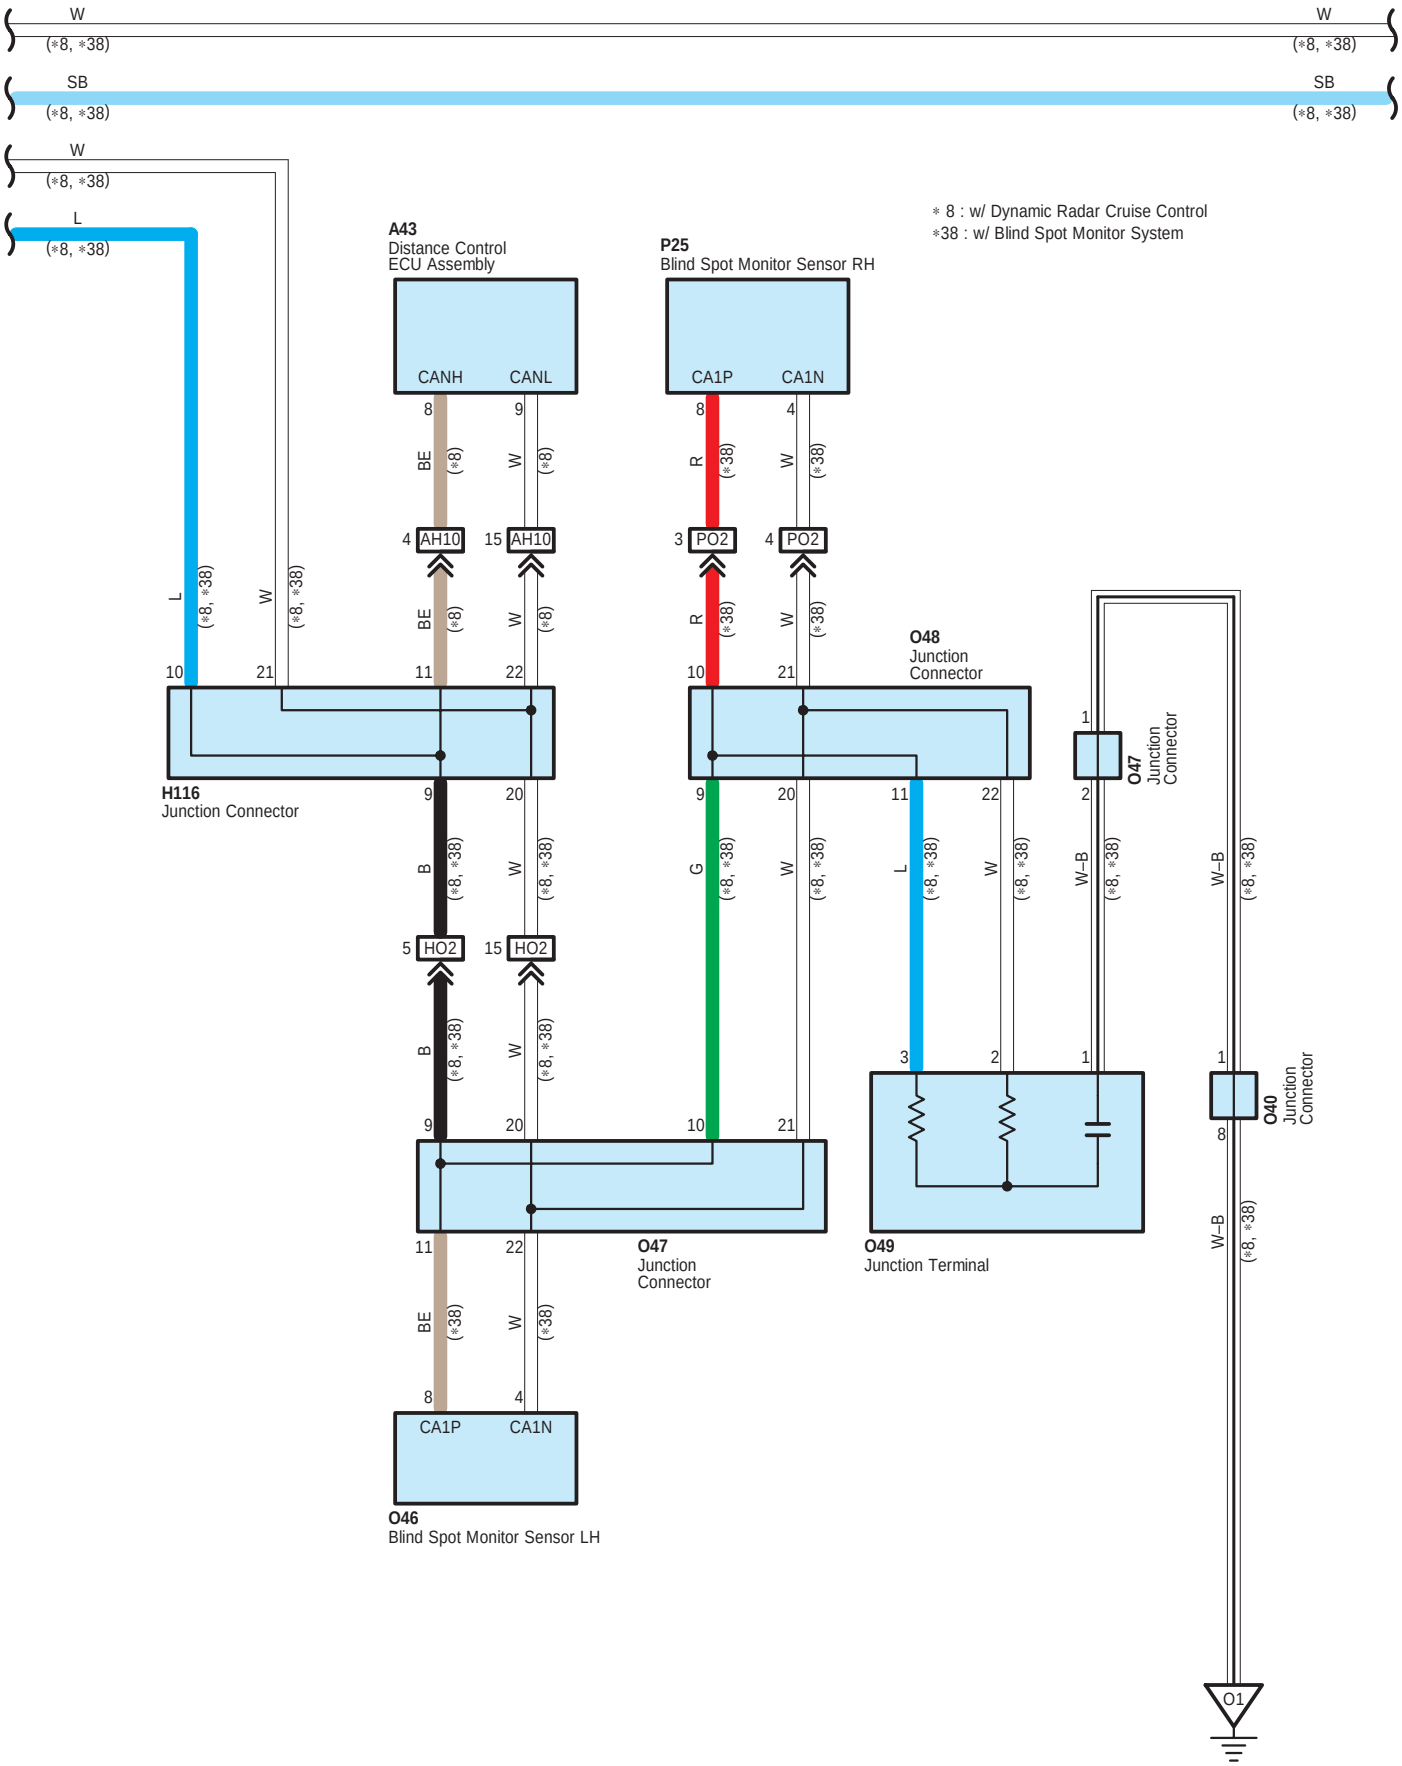
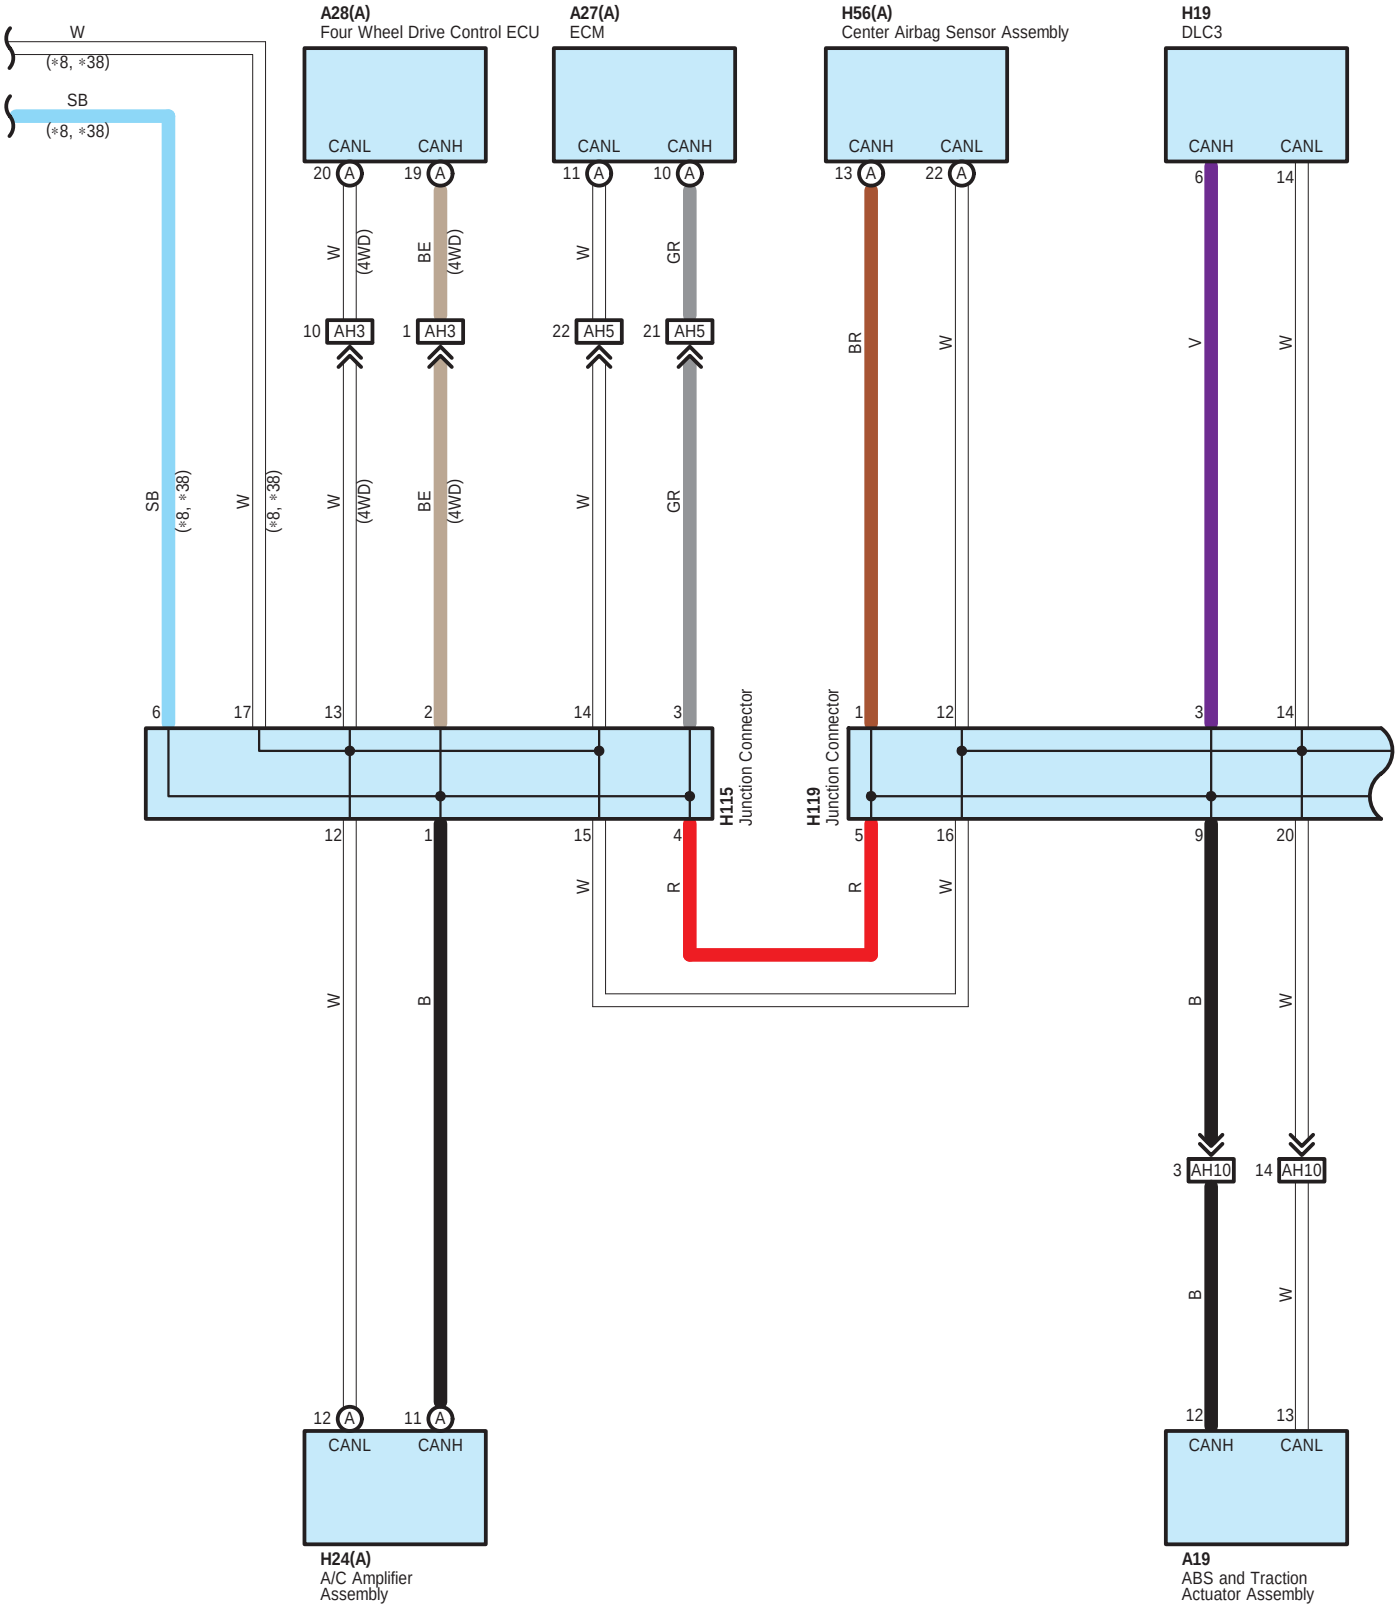
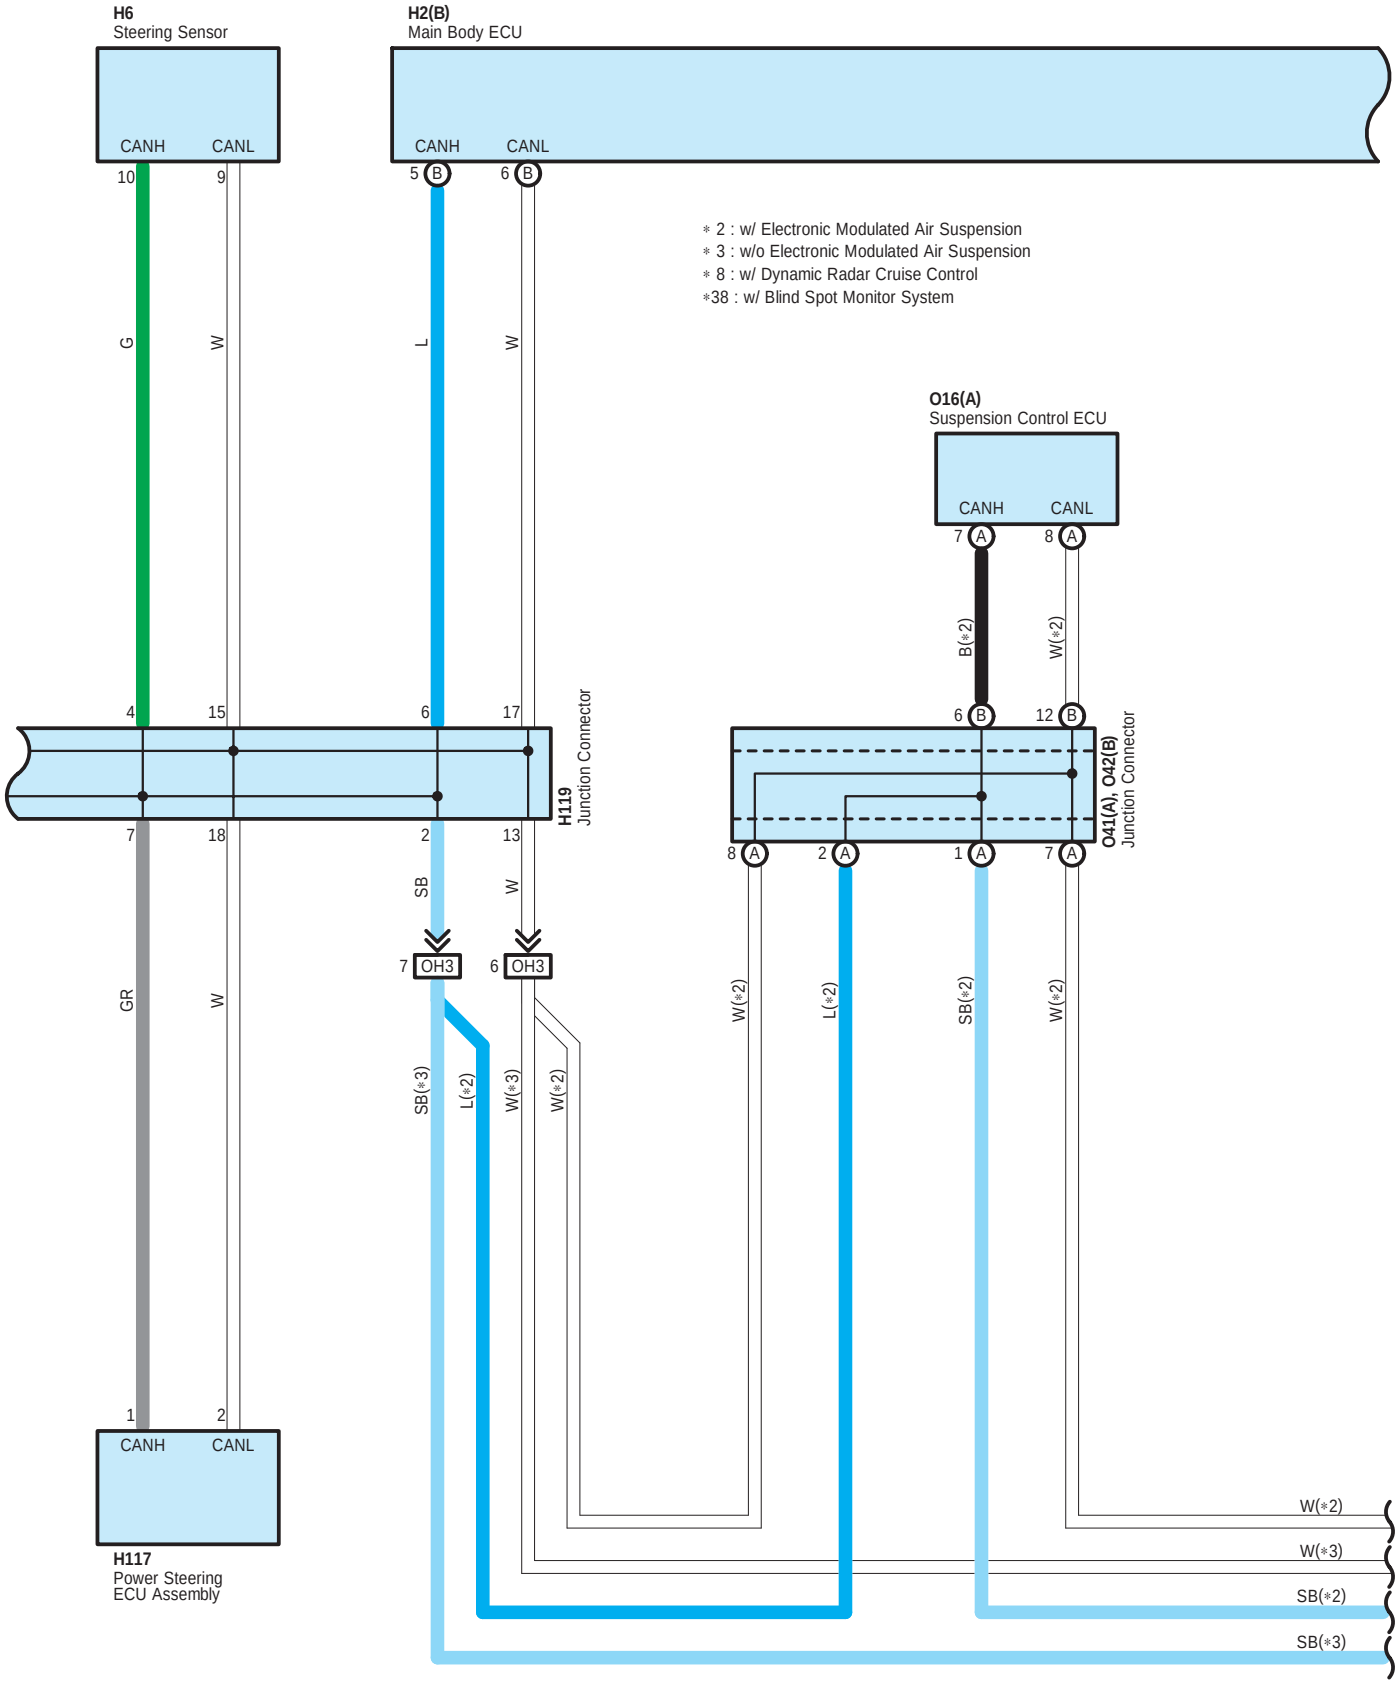
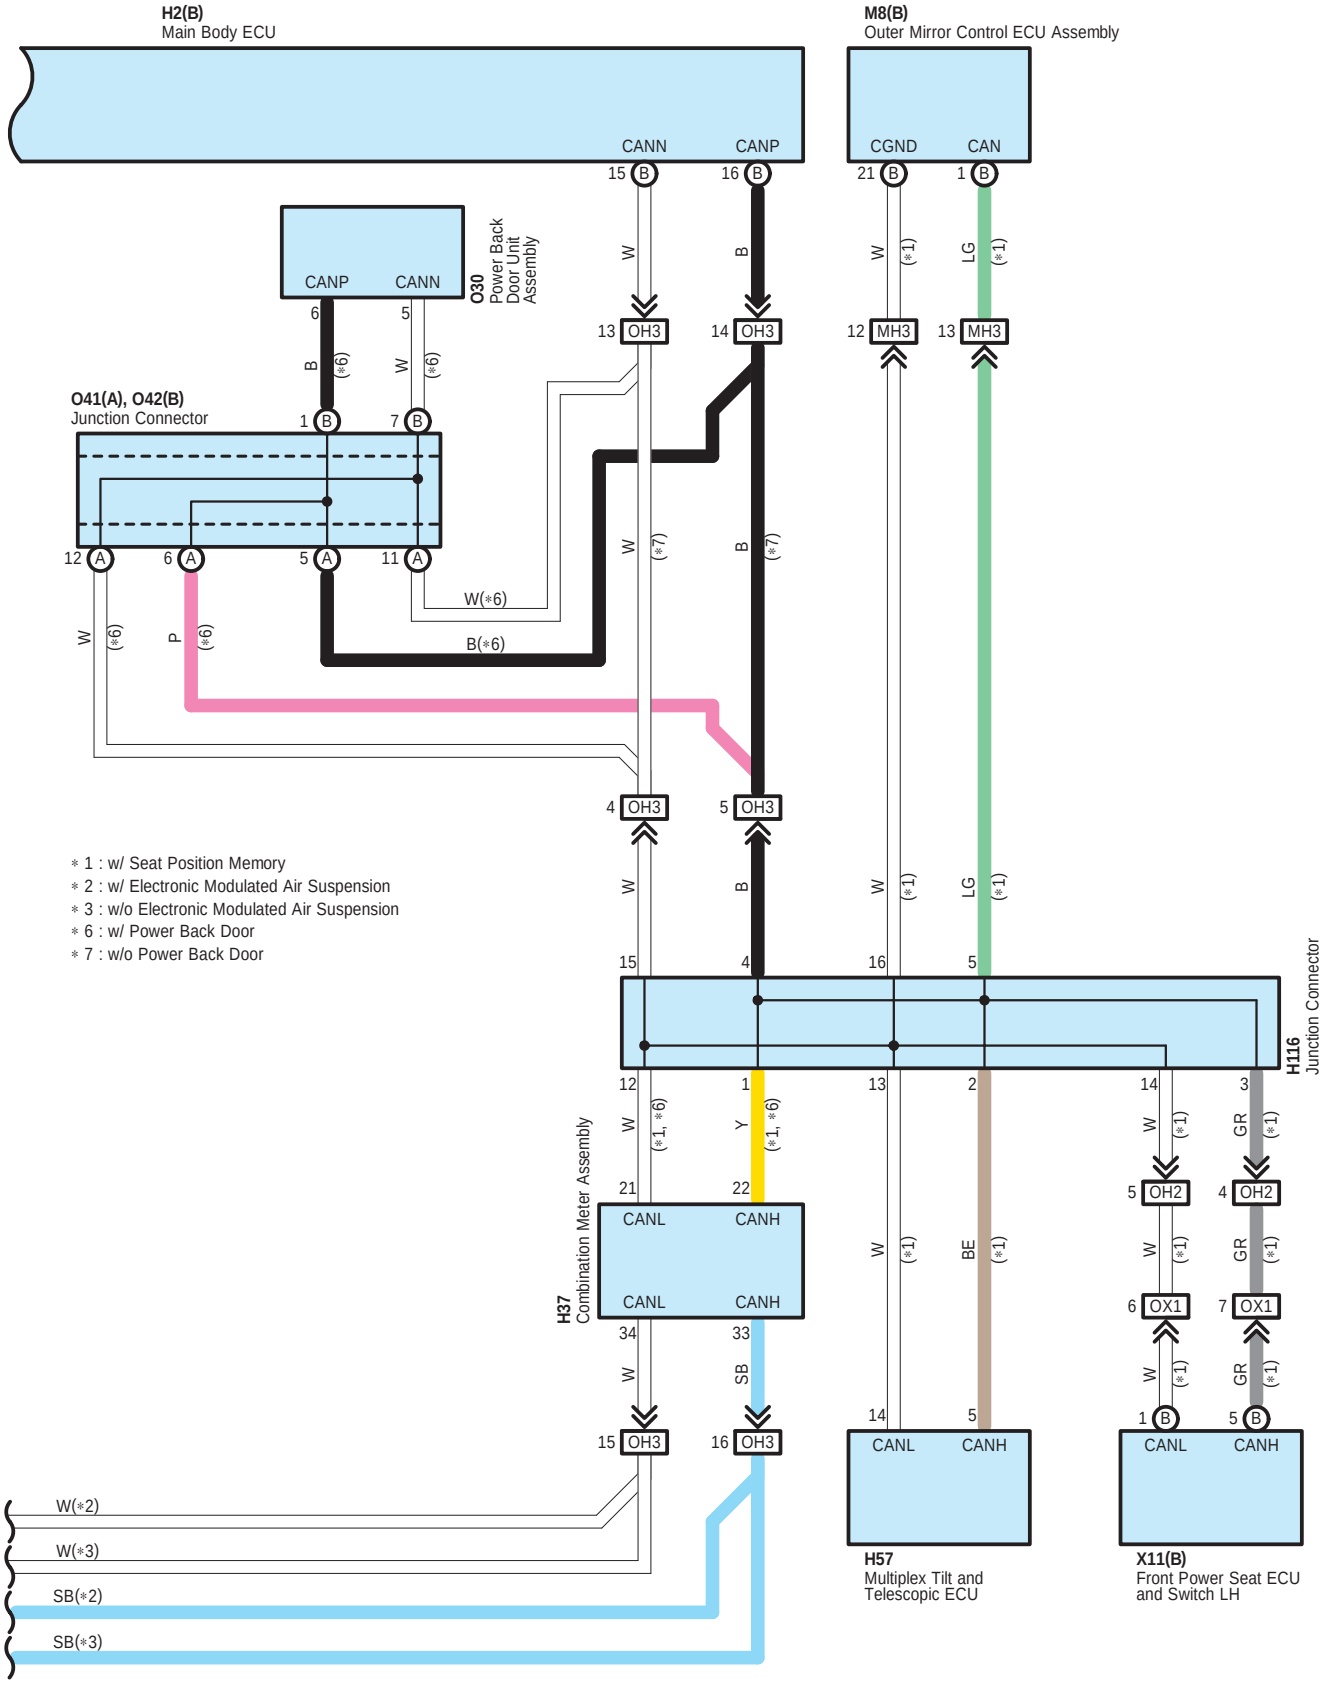

(IG)
10A
IGN
2
1
L
(*8, *38)
14 B
12 B
A53(B)
Junction
Connector
SB
(*8, *38)
15 DB
17 DD
(BAT)
7. 5A
ECU–B1
2
1
GR
(*8, *38)
13 DB
14 DD
(IG)
7. 5A
ECU–IG
No. 2
7 DD
P
(*8, *38)
H88(A), H89(B)
Junction
Connector
12 B
5 A
6 A
7 A
R
(*8, *38)
W
(*8, *38)
SB
(*8, *38)
W
(*8, *38)
L
(*8, *38)
H120
Network Gateway ECU
15
CA1L
16
CA1H
12
CA2L
13
CA2H
IG1
BATT
IG2
GND
10
2
9
4
GR
(*8, *38)
L
(*8, *38)
R
(*8, *38)
W–B
(*8, *38)
6 A
5 A
H79(A)
Junction
Connector
21 A
12 B
H81(A), H82(B)
Junction
Connector
4
10
H85
Junction
Connector
BE
(*8, *38)
G
(*8, *38)
W–B
(*8, *38)
H2



W
(*8, *38)
W
(*8, *38)
SB
(*8, *38)
SB
(*8, *38)
W
(*8, *38)
L
(*8, *38)
* 8 : w/ Dynamic Radar Cruise Control
*38 : w/ Blind Spot Monitor System
A43
Distance Control
ECU Assembly
CANH
CANL
P25
Blind Spot Monitor Sensor RH
CA1P
CA1N
H116
Junction Connector
O48
Junction
Connector
O47
Junction
Connector
O47
Junction
Connector
O49
Junction Terminal
O40
Junction
Connector
O46
Blind Spot Monitor Sensor LH
AH10
PO2
HO2
O1


W
(*8, *38)
SB
(*8, *38)
A28(A)
Four Wheel Drive Control ECU
A27(A)
ECM
H56(A)
Center Airbag Sensor Assembly
H19
DLC3
CANL
CANH
20
19
11
10
13
22
6
14
W
BE
GR
BR
V
(4WD)
10 AH3
1 AH3
22 AH5
21 AH5
SB
(*8, *38)
W
(*8, *38)
6
17
13
2
14
3
1
12
3
14
H115
Junction Connector
H119
Junction Connector
12
1
15
4
5
16
9
20
B
3 AH10
14 AH10
12
11
13
H24(A)
A/C Amplifier
Assembly
A19
ABS and Traction
Actuator Assembly



H6
Steering Sensor
CANH
CANL
10
9
G
W
4
15
7
18
GR
W
1
2
CANH
CANL
H117
Power Steering
ECU Assembly
H2(B)
Main Body ECU
CANH
CANL
5 B
6 B
L
W
6
17
2
13
SB
W
7 OH3
6 OH3
SB(∗3)
L(∗2)
W(∗3)
W(∗2)
H119
Junction Connector
∗ 2 : w/ Electronic Modulated Air Suspension
∗ 3 : w/o Electronic Modulated Air Suspension
∗ 8 : w/ Dynamic Radar Cruise Control
∗38 : w/ Blind Spot Monitor System
O16(A)
Suspension Control ECU
CANH
CANL
7 A
8 A
B(∗2)
W(∗2)
6 B
12 B
8 A
2 A
1 A
7 A
W(∗2)
L(∗2)
SB(∗2)
W(∗2)
O41(A), O42(B)
Junction Connector
W(∗2)
W(∗3)
SB(∗2)
SB(∗3)


H2(B)
Main Body ECU
CANN
CANP
15 B
16 B
M8(B)
Outer Mirror Control ECU Assembly
CGND
CAN
21 B
1 B
O30
Power Back Door Unit Assembly
CANP
CANN
6
5
B (*6)
W (*6)
13 OH3
14 OH3
W
B
W (*1)
LG (*1)
12 MH3
13 MH3
O41(A), O42(B)
Junction Connector
1 B
7 B
12 A
6 A
5 A
11 A
W(*6)
B(*6)
W (*7)
B (*7)
W (*6)
P (*6)
4 OH3
5 OH3
W
B
W (*1)
LG (*1)
15
4
16
5
H116
Junction Connector
*1 : w/ Seat Position Memory
*2 : w/ Electronic Modulated Air Suspension
*3 : w/o Electronic Modulated Air Suspension
*6 : w/ Power Back Door
*7 : w/o Power Back Door
12
1
13
2
14
3
W (*1, *6)
Y (*1, *6)
W (*1)
BE (*1)
W (*1)
GR (*1)
21
22
5 OH2
4 OH2
H37
Combination Meter Assembly
CANL
CANH
W (*1)
GR (*1)
6 OX1
7 OX1
CANL
CANH
34
33
W (*1)
GR (*1)
SB
1 B
5 B
15 OH3
16 OH3
14
5
CANL
CANH
CANL
CANH
H57
Multiplex Tilt and Telescopic ECU
X11(B)
Front Power Seat ECU and Switch LH
W(*2)
W(*3)
SB(*2)
SB(*3)


A 19
Black

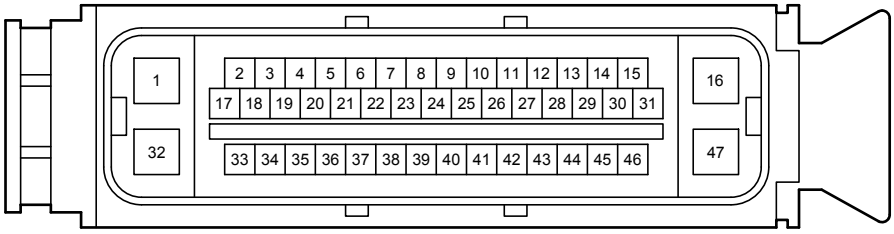


A 27
Black

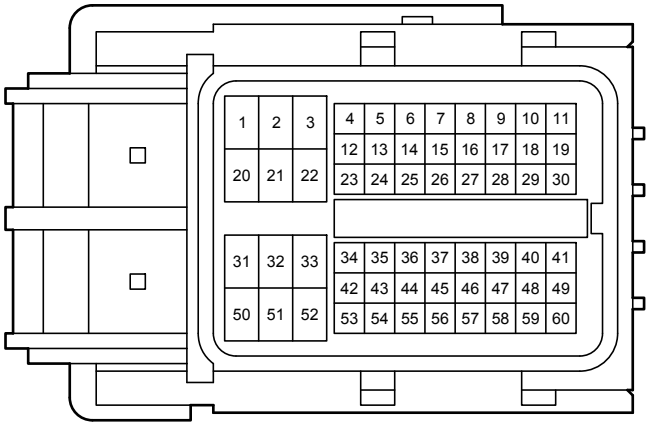


A 28
Black

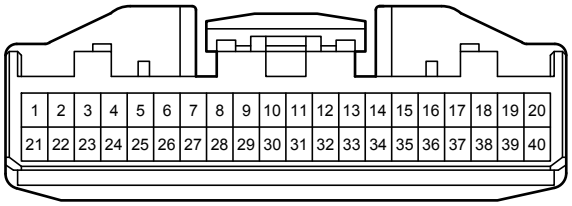


A 43
White

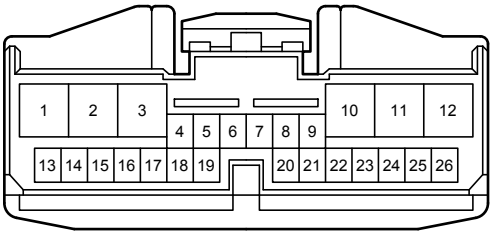


A 53
White

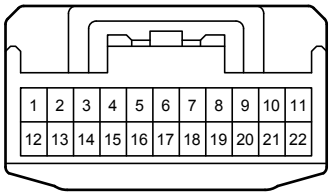


H 2
White

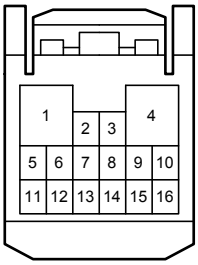


H 6
Gray

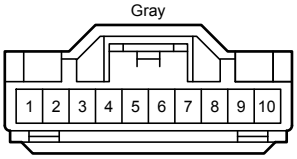


H 19
White

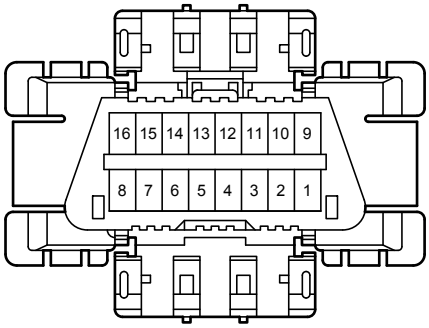


H 24
White

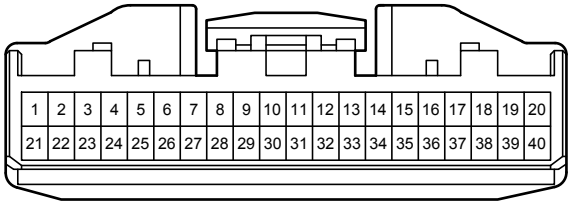


H 37
White

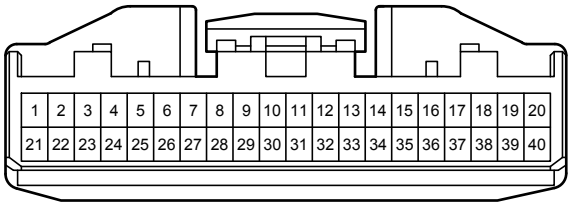


H 56
Yellow

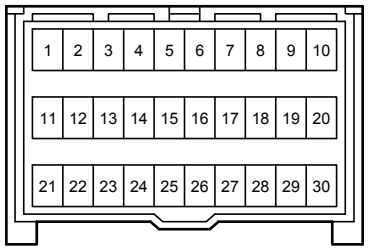


H 57
White

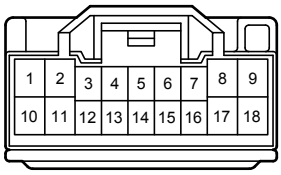


H 79
Black

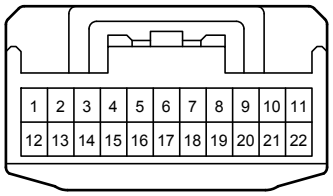


H 81
White

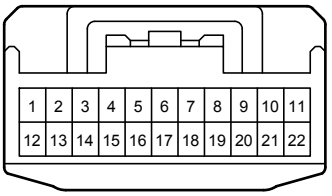


H 82
White

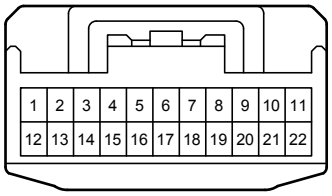


H 85
White

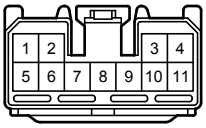


H 88
White

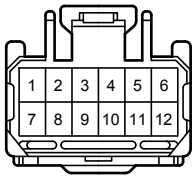


H 89
White

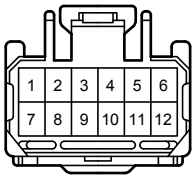


H115
Gray

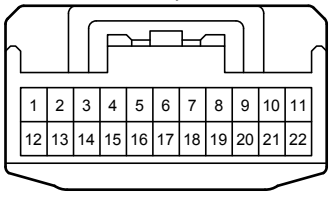


H116
Black

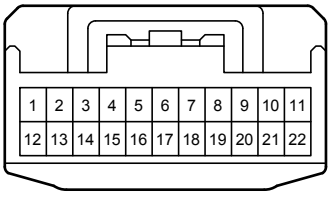


H117
White

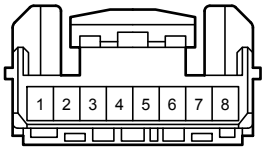


H119
Gray

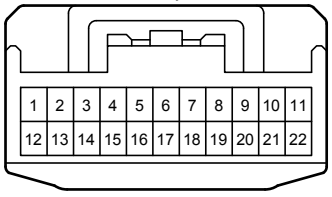


H120
White

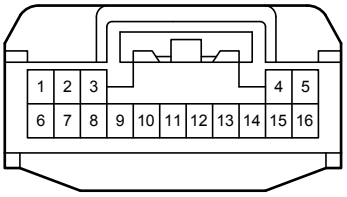


M 8
White

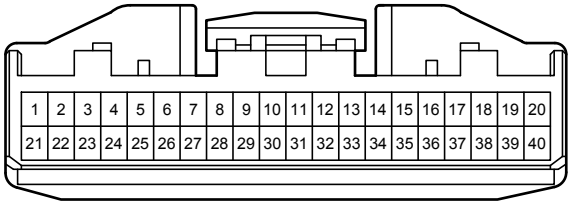


O 16
Black

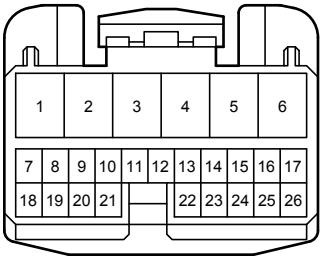


O 30
White

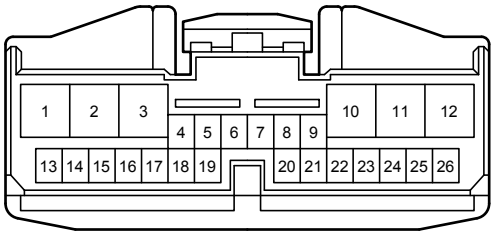


O 40
White

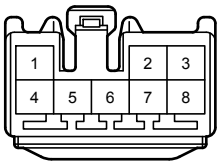


O 41
White

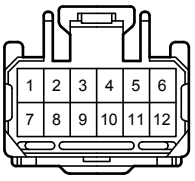


O 42
White

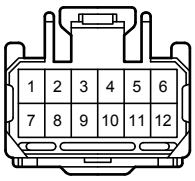


O 46
Black

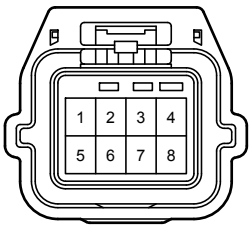


O 47
White

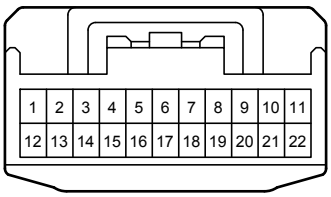


O 48
White

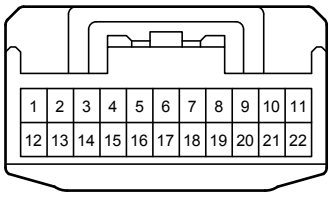


O 49
White

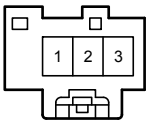


P 25
Black

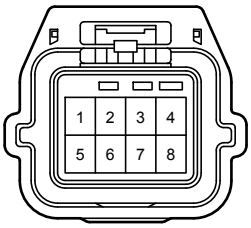


X 11
White

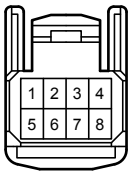


DB
White

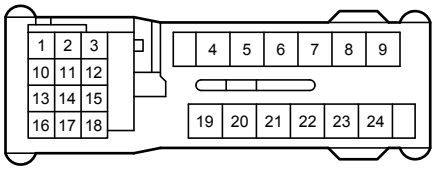


DD
White

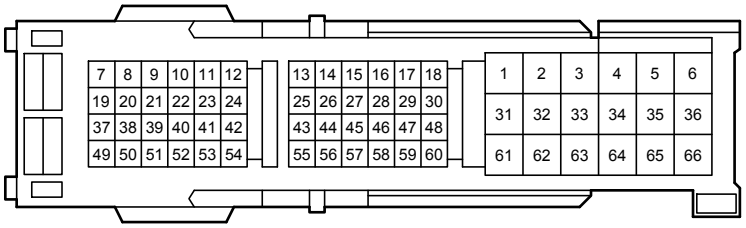


AH3
White

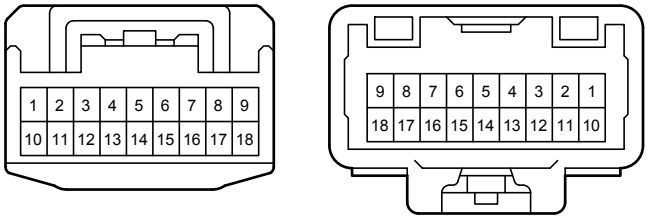


AH5
White

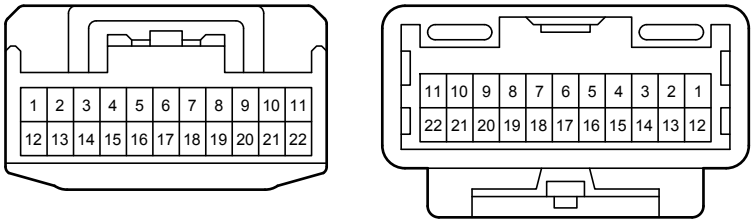


AH10
Gray

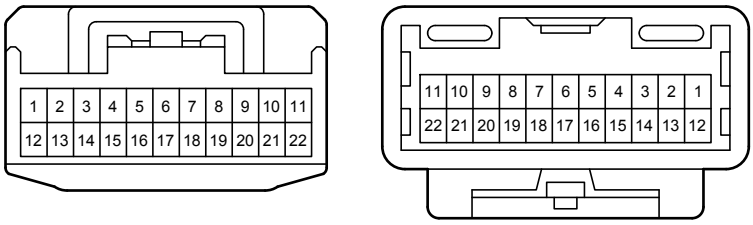


HO2
White

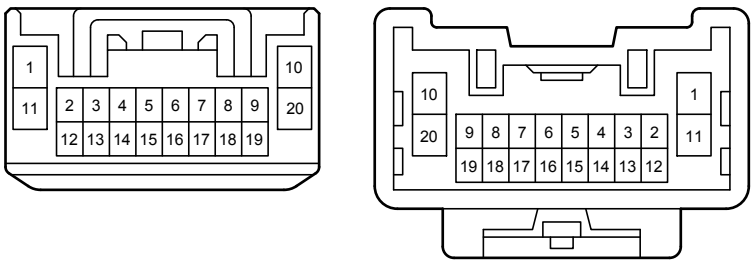


MH3
Blue

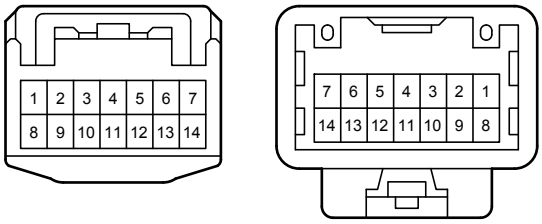


OH2
Black

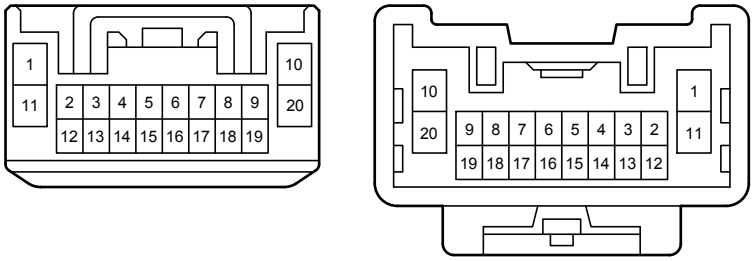

OH3
White

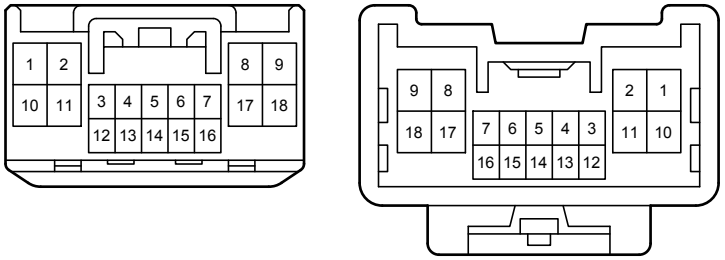

OX1
White

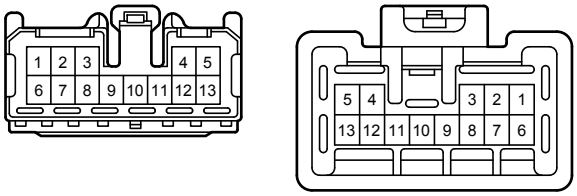

PO2
White

