


(BAT)
7. 5A
AM1
47 DD
W
4 AM1
ACC 2
IG1
ST1
H10
Ignition or Starter
Switch Assembly
(BAT)
150A
LH–J/B
1 1F
B
1 DA
W
1
3
GR
2
4
G
H61
ACC Cut Relay
BE
15A
PWR OUTLET
POWER OUTLET
Relay
45 DD
61 DD
62 DD
∗1 : w/o Rear Seat Entertainment System
V
W–B
LG
10 SH1
2 B E
H51
Front Power
Point Socket
Assembly
5 B
6 B
1 A
2 A
H88(A), H89(B)
Junction Connector
W–B
(∗1)
H85
Junction
Connector
4
5
10
W–B
10
11
H83
Junction
Connector
H3
BE
W
2 E B 1
O38
Rear Power Point
Socket Assembly
V
8 OH3
1 E B 2
S2
Center Power
Point Socket
Assembly
R
18 SH1
1 E B 2
S3
Center Power Outlet
Socket Assembly
2
8
O40
Junction
Connector
O1
O2
H1
H2


H 10
White

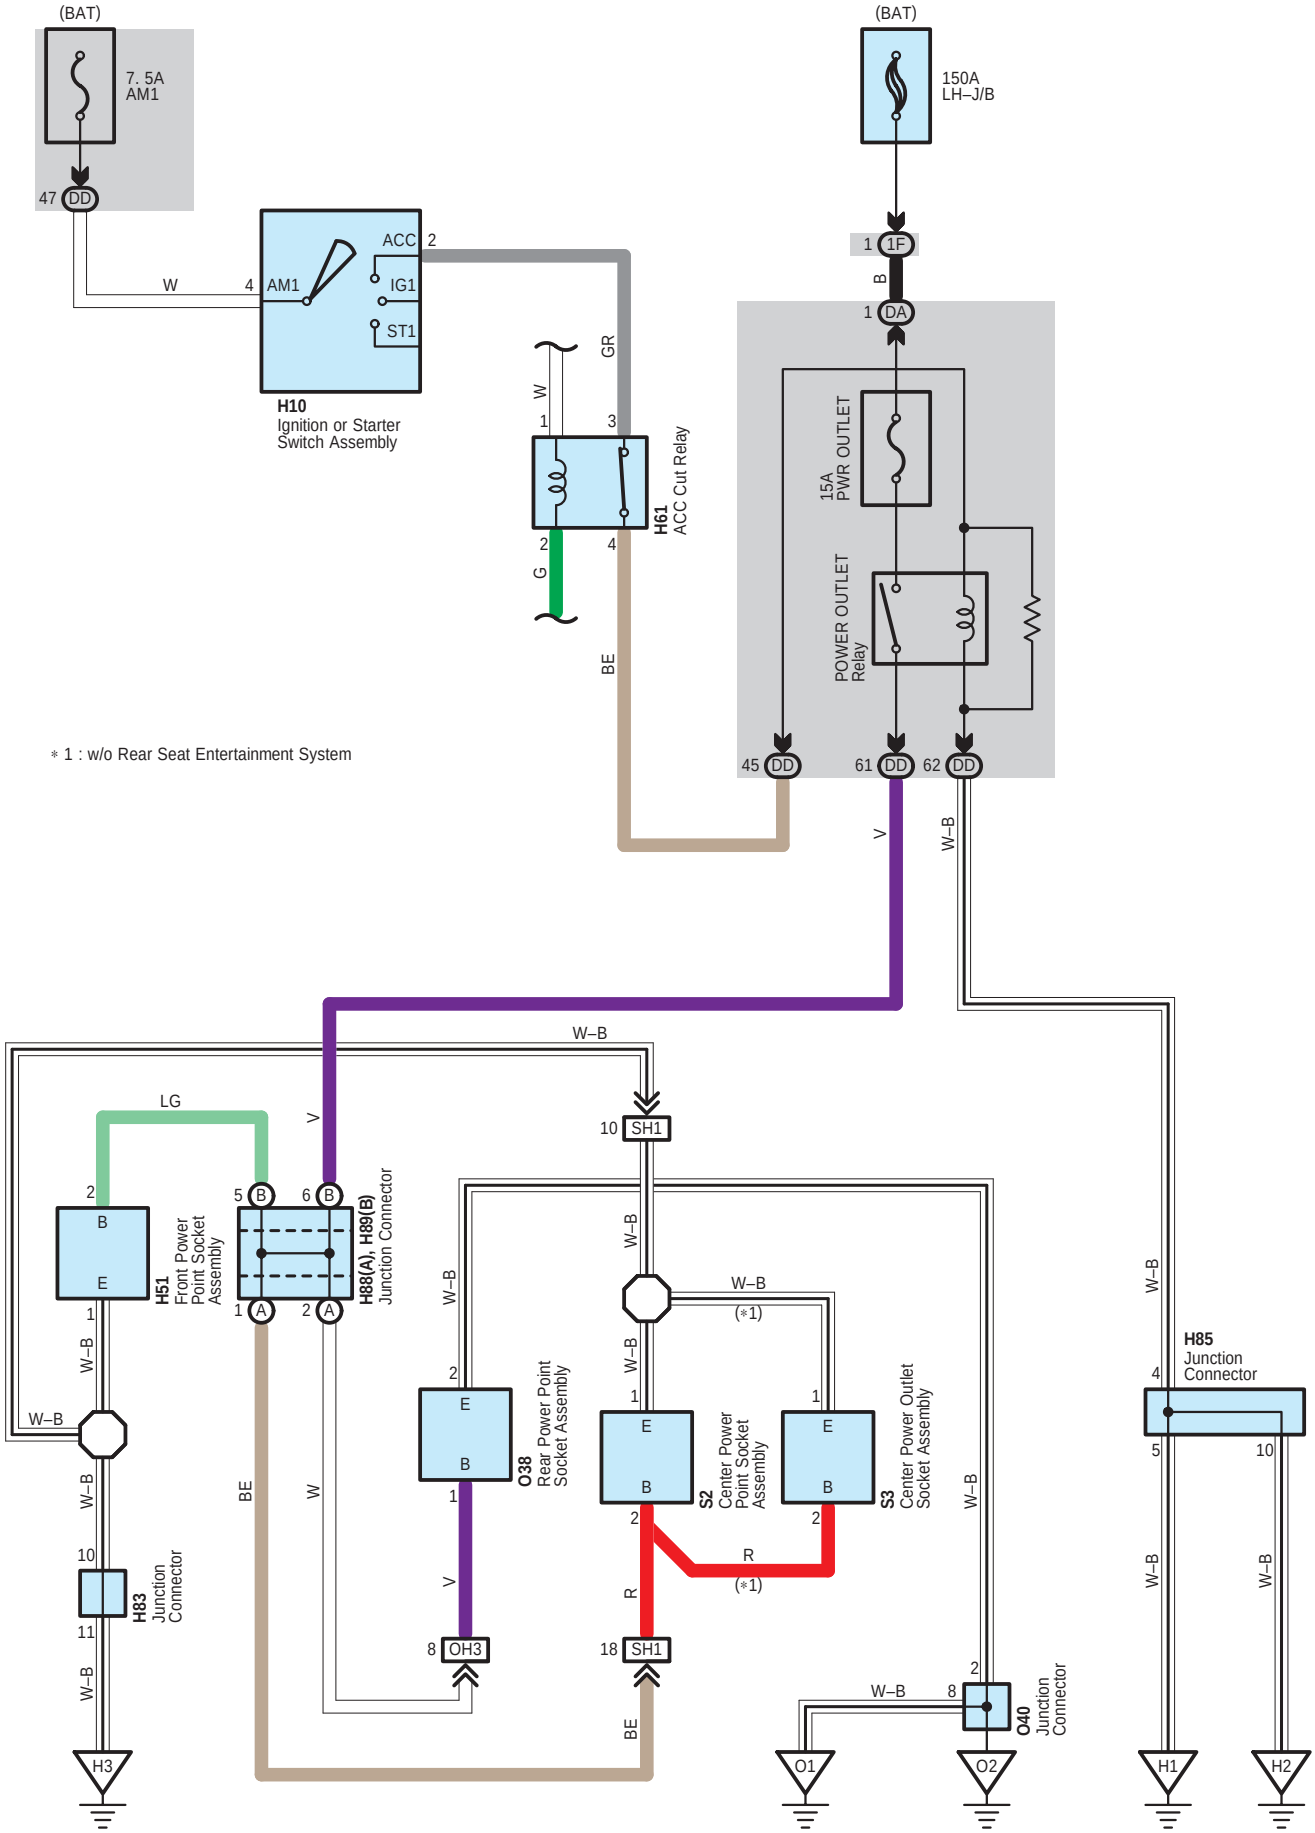


H 51
White

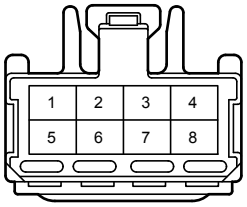


H 61
Gray

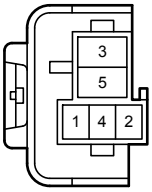


H 83
Gray

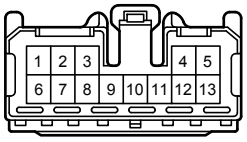


H 85
White

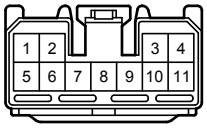

H 88
White

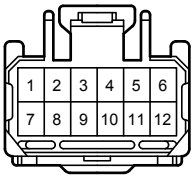


H 89
White

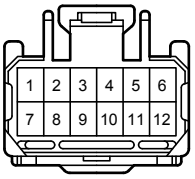

O 38
White



O 40
White

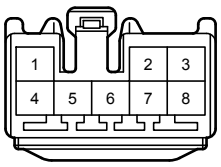


S 2
White




S 3
White




1F




DA
White




DD
White

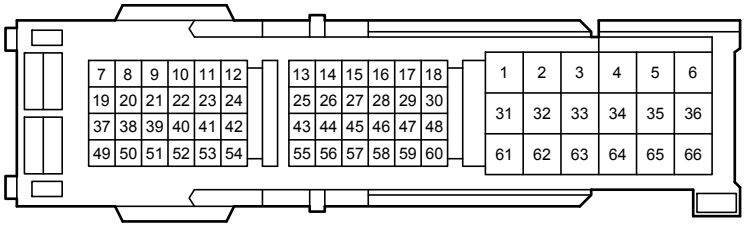

OH3
White

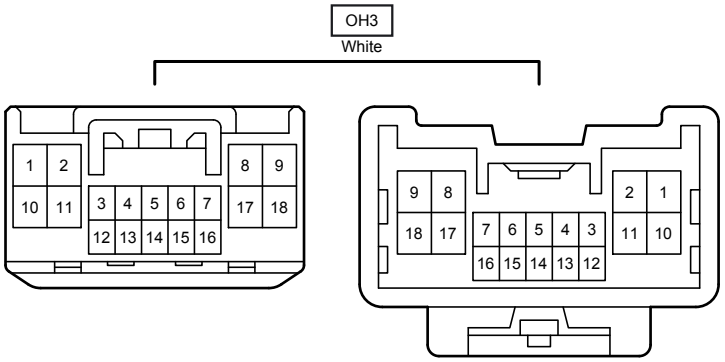

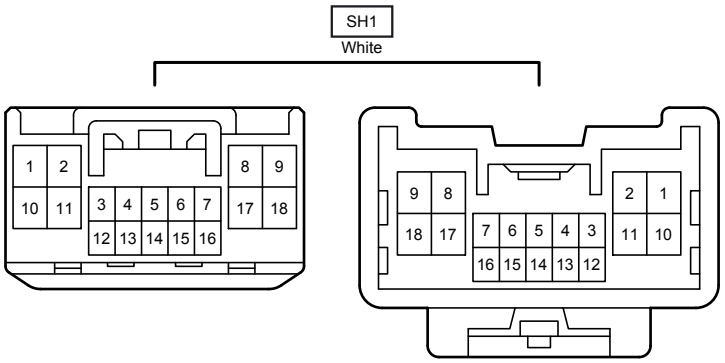
SH1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10