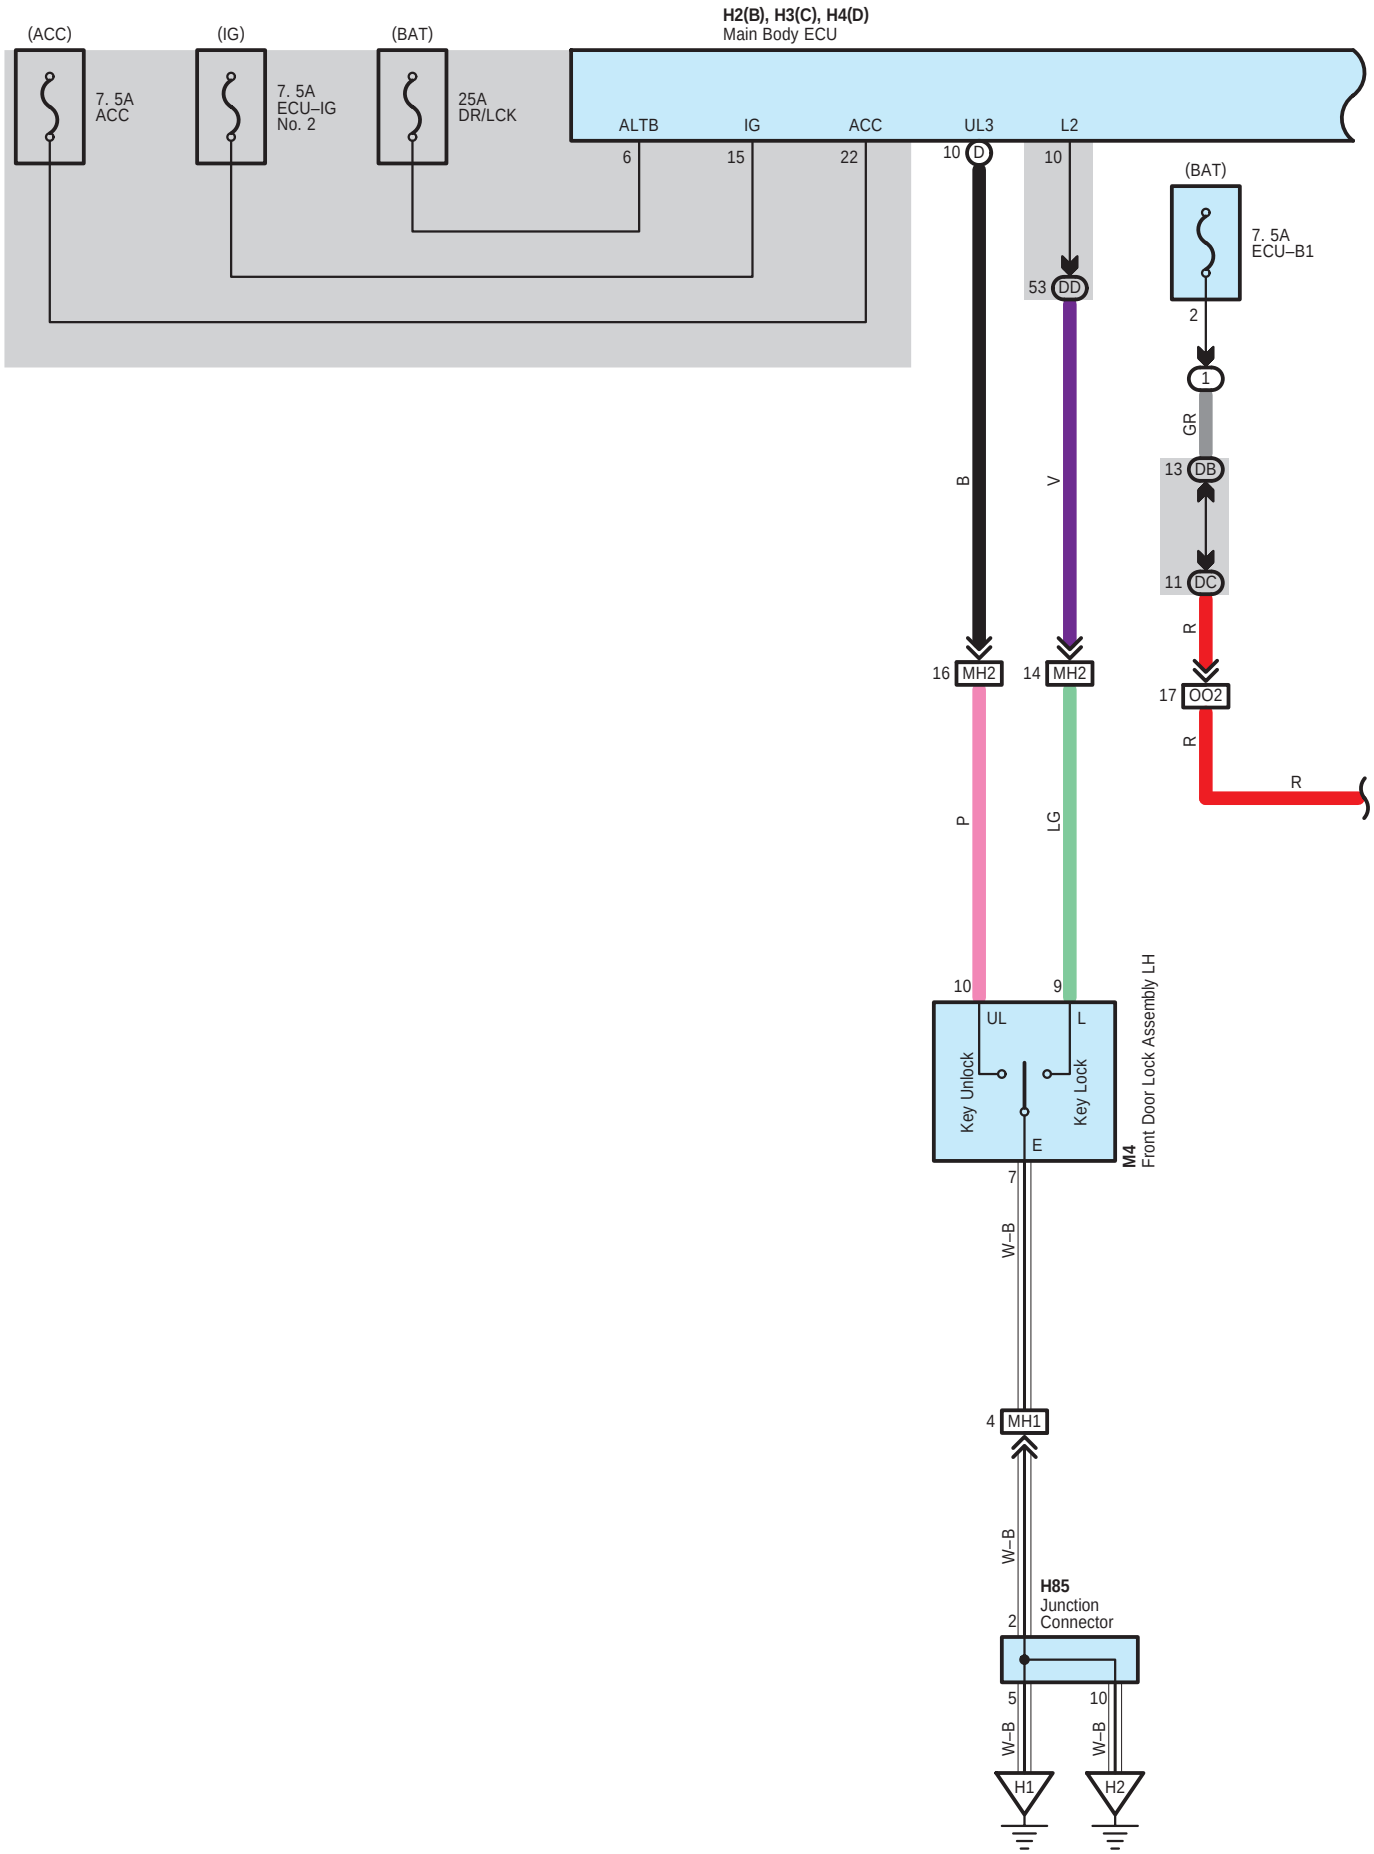
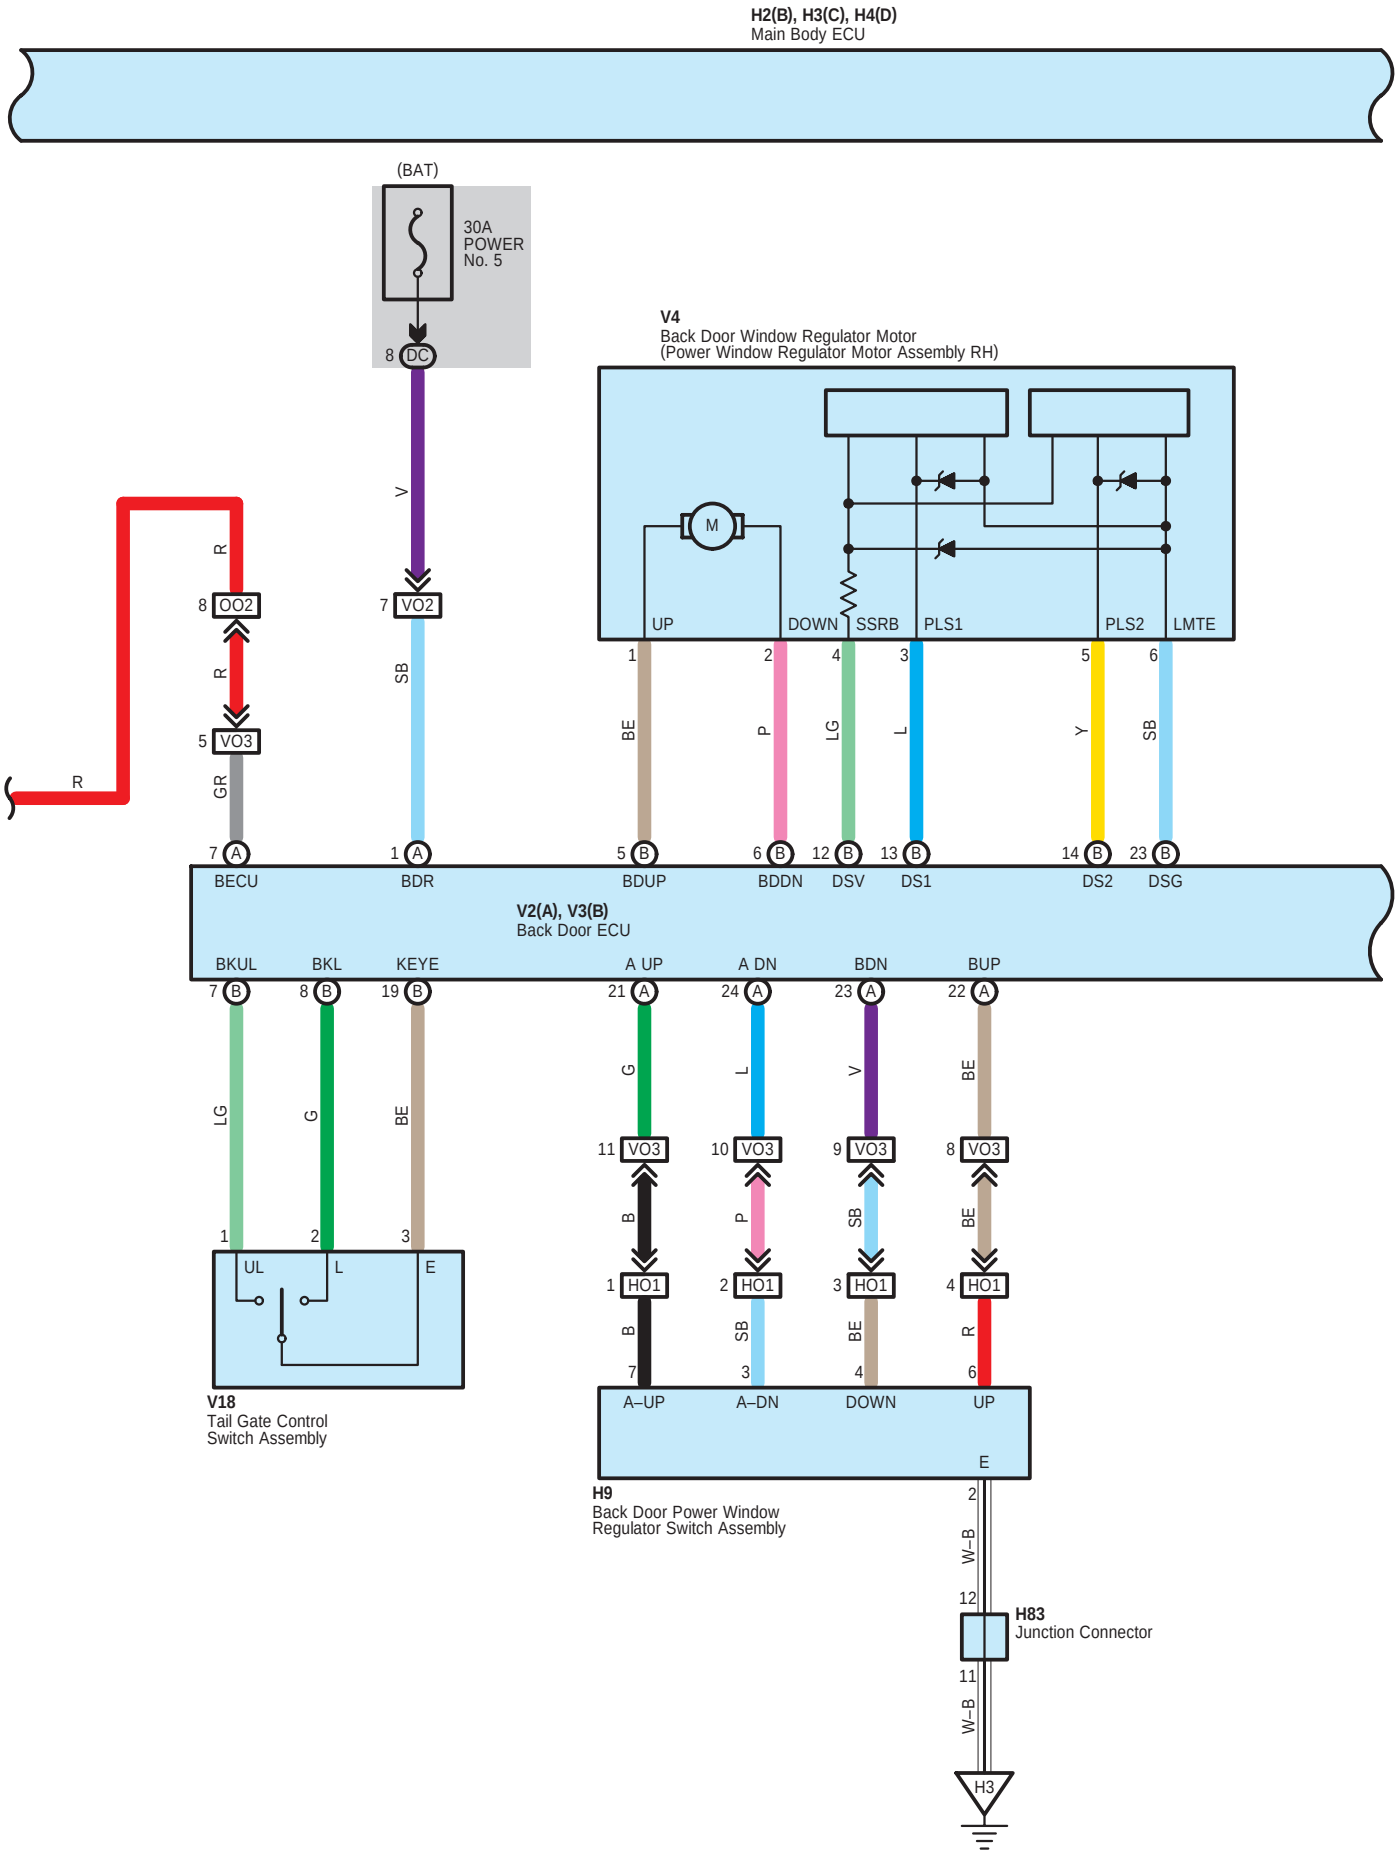
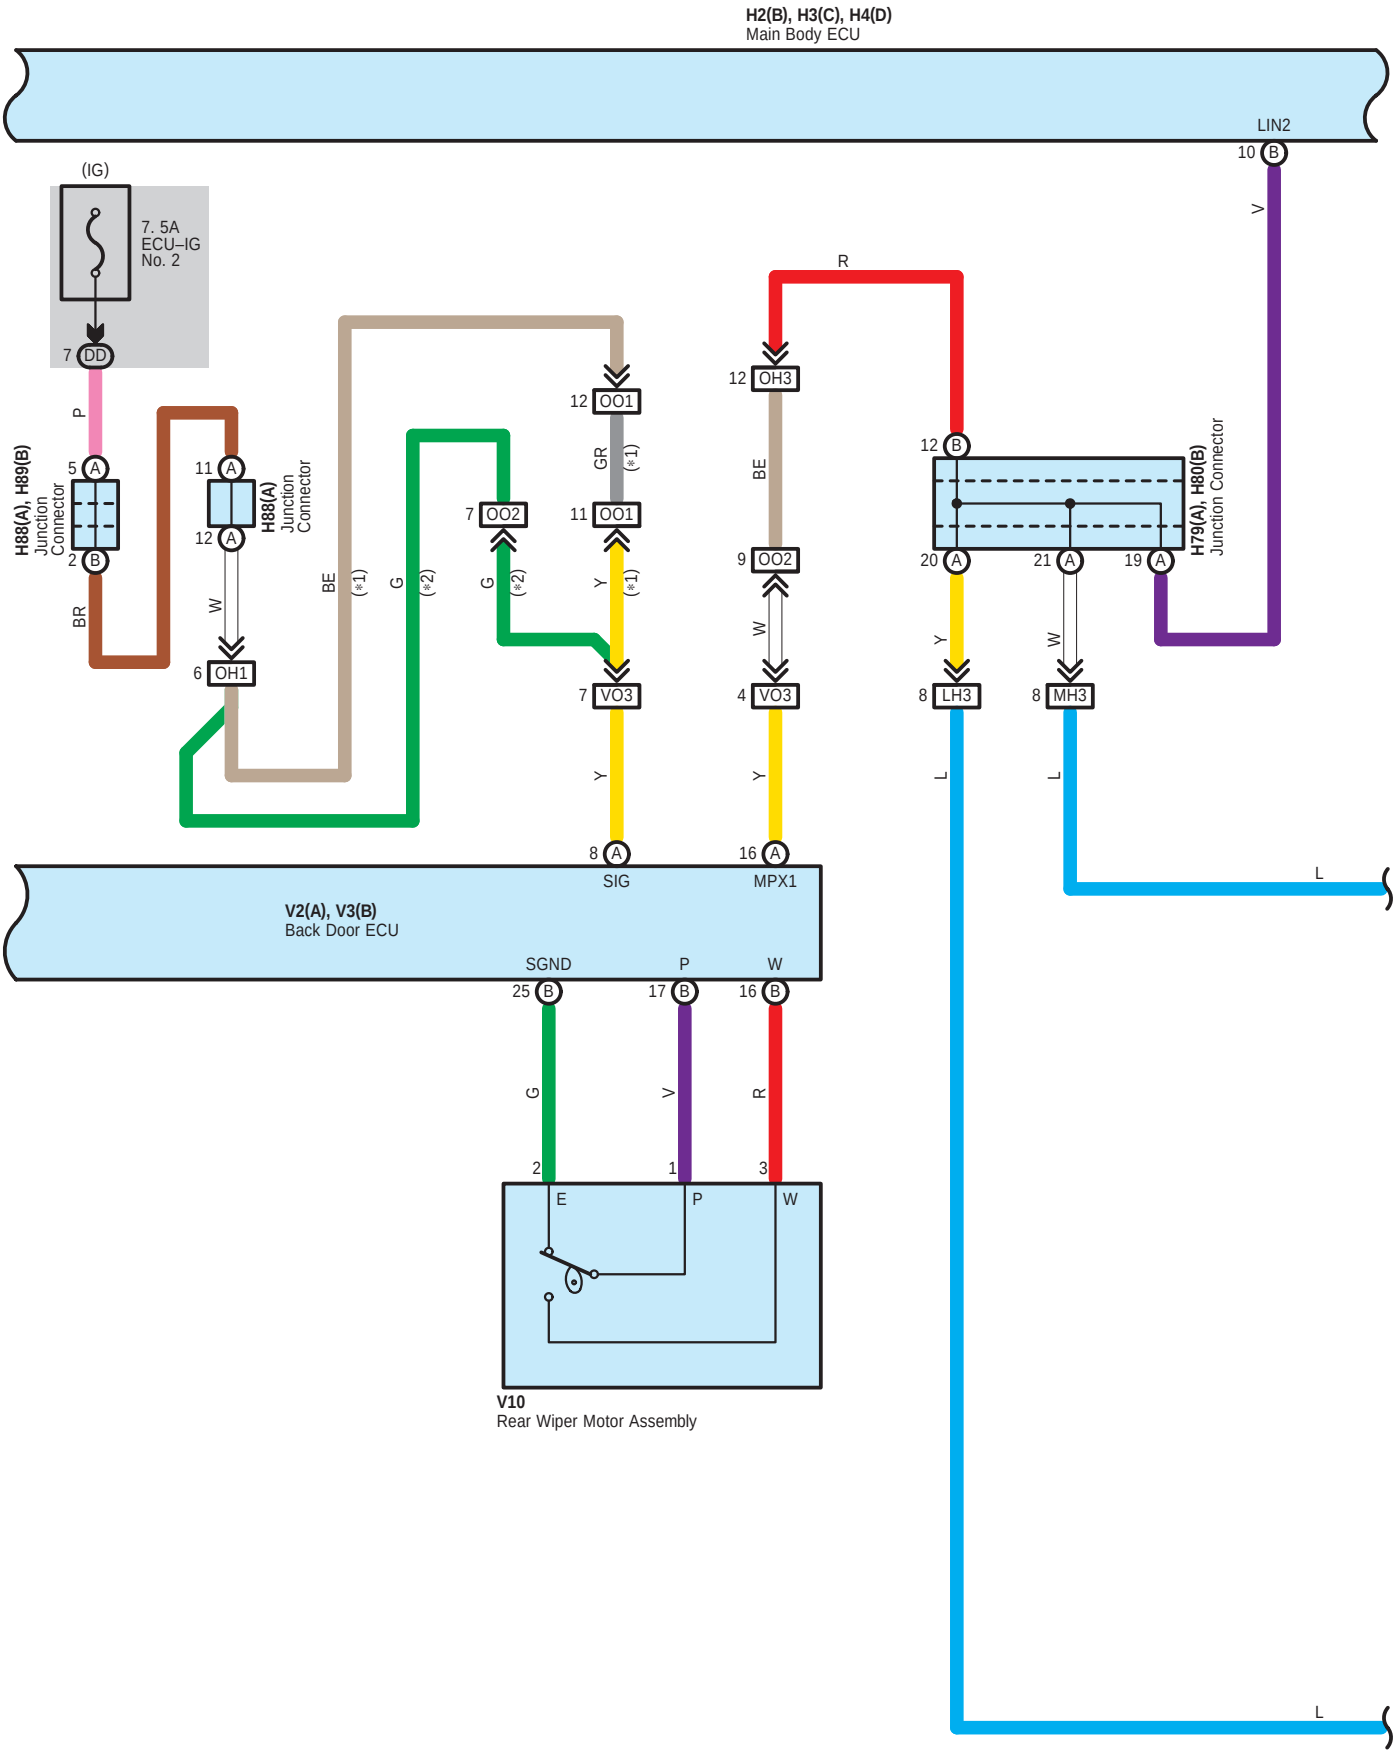
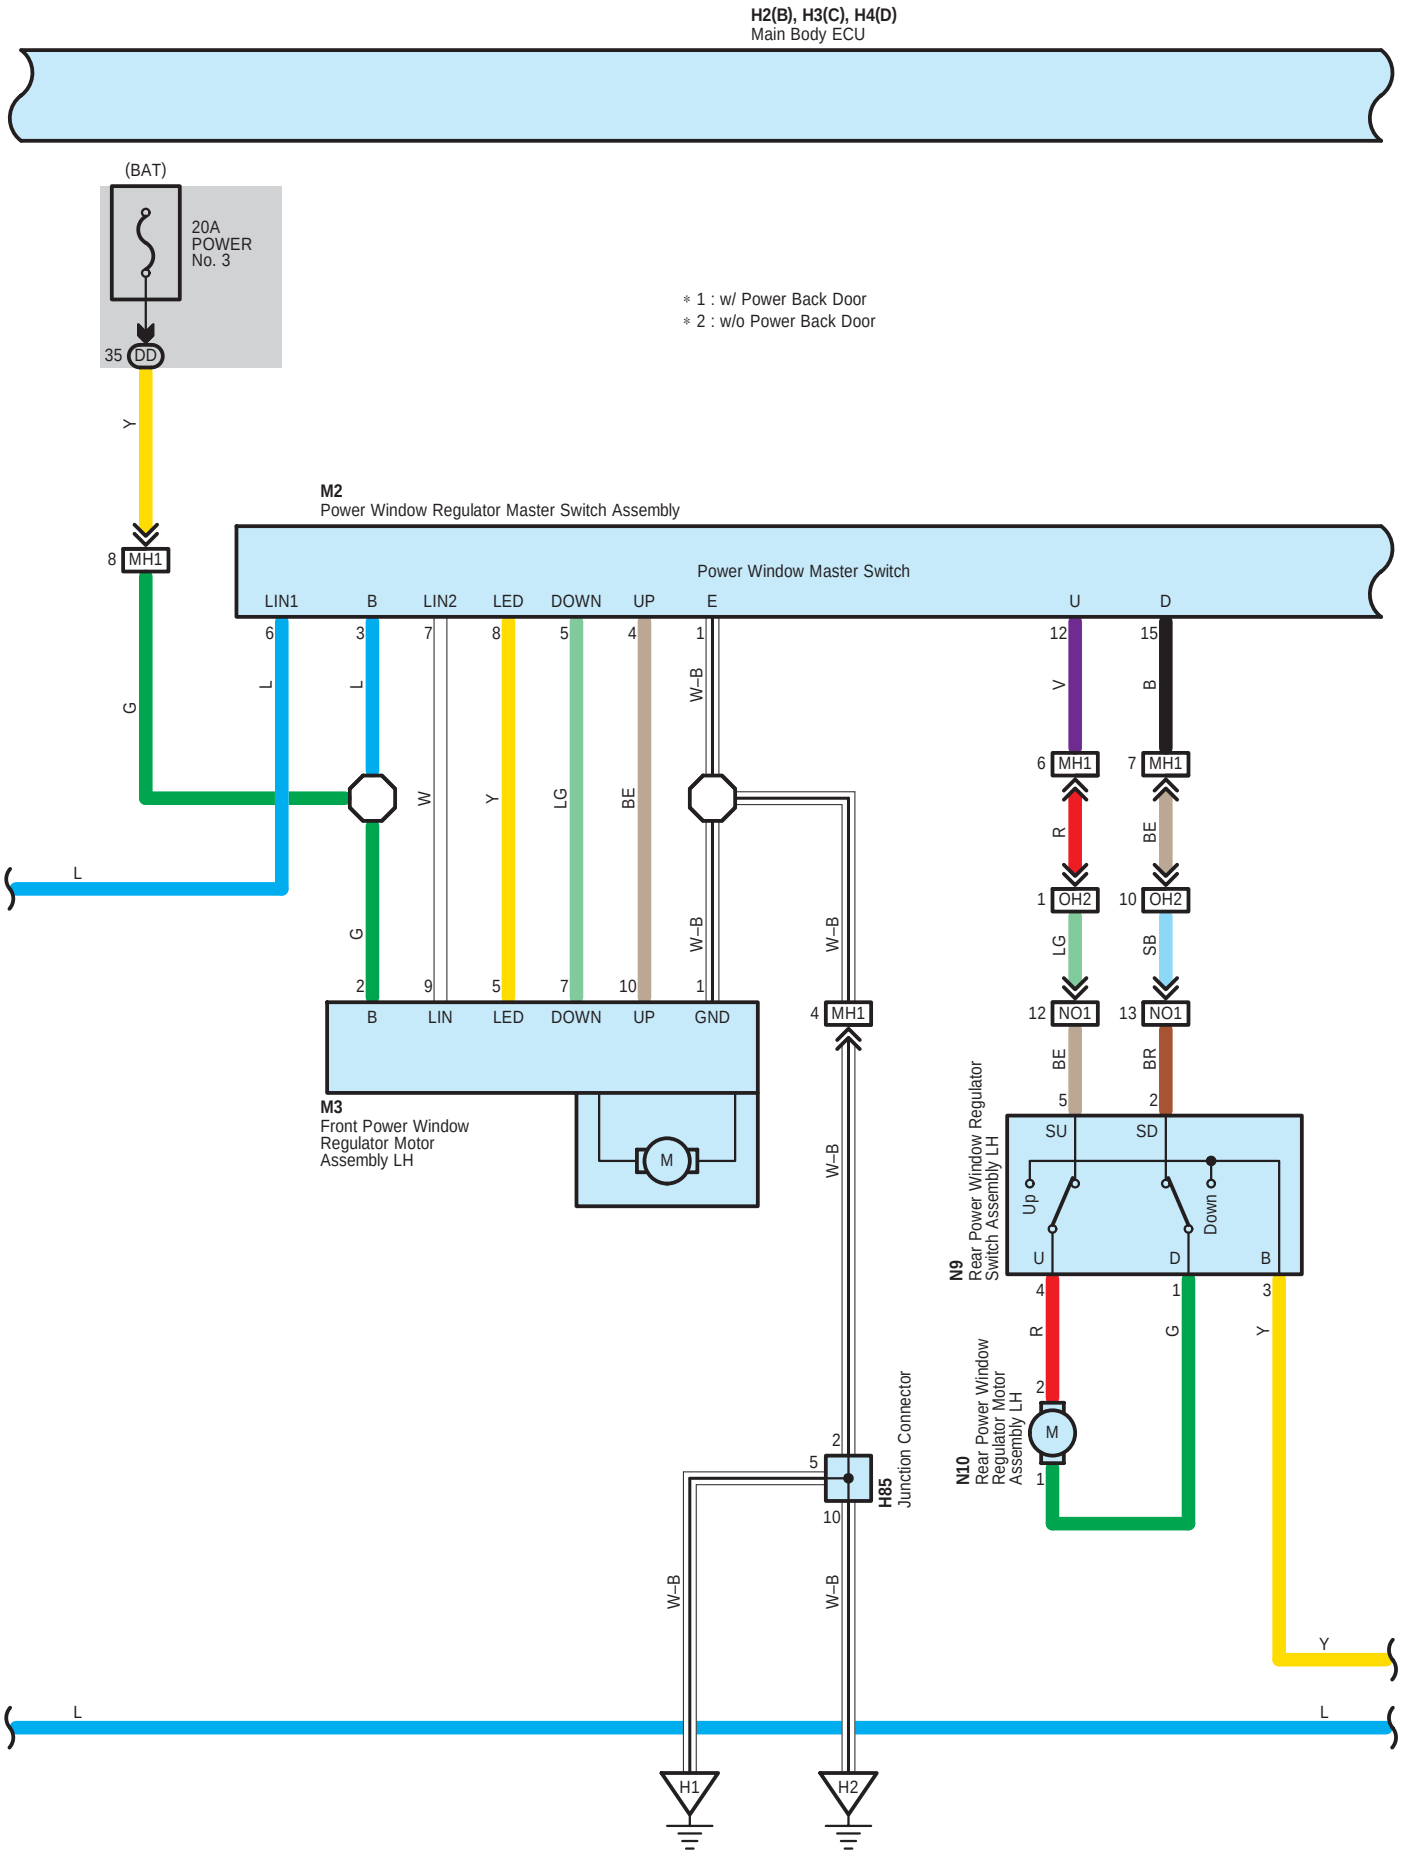
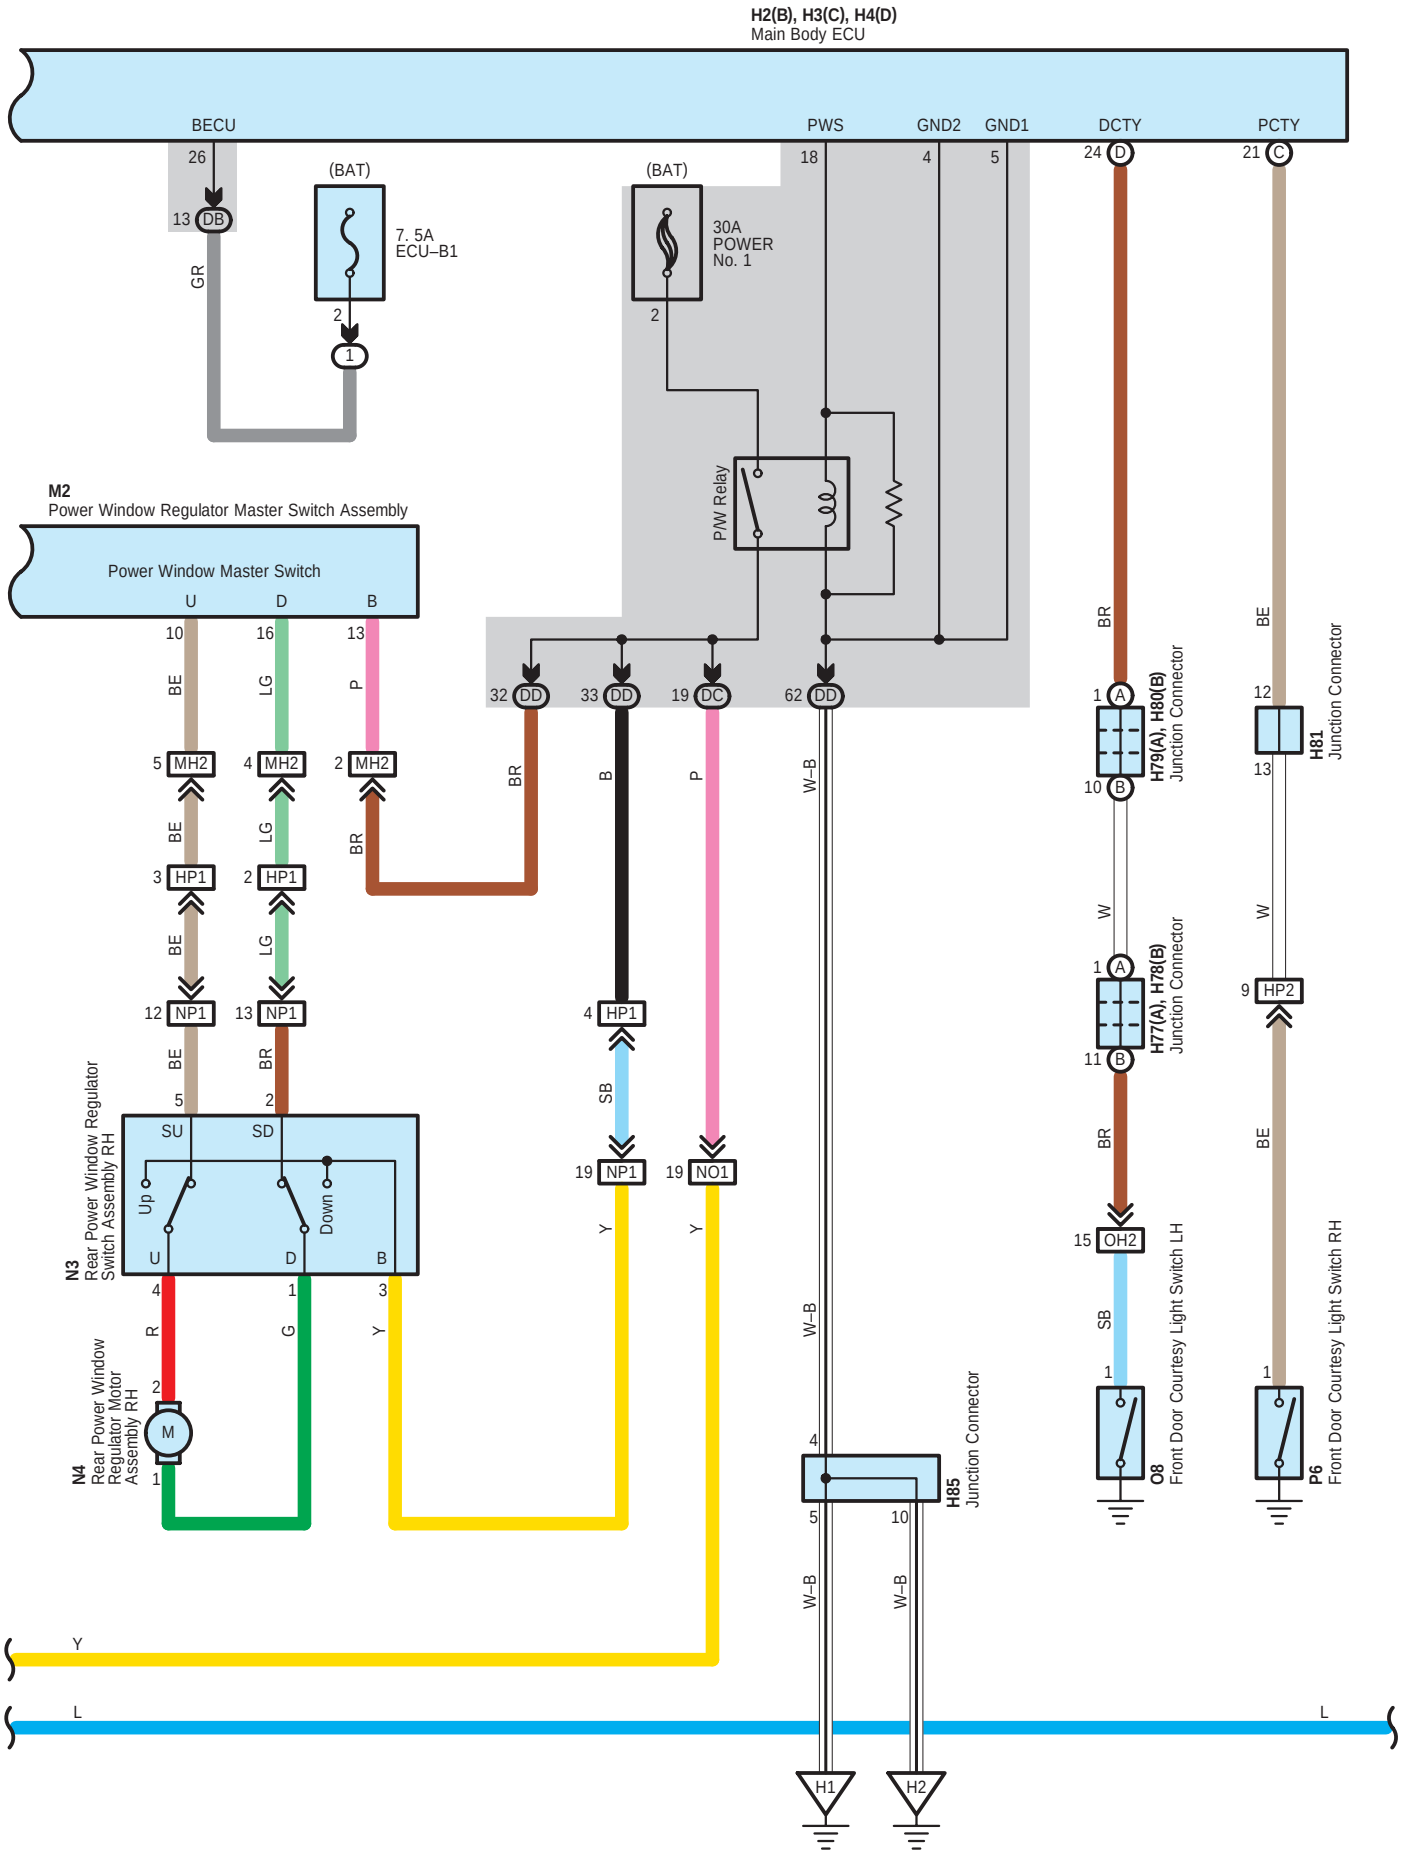
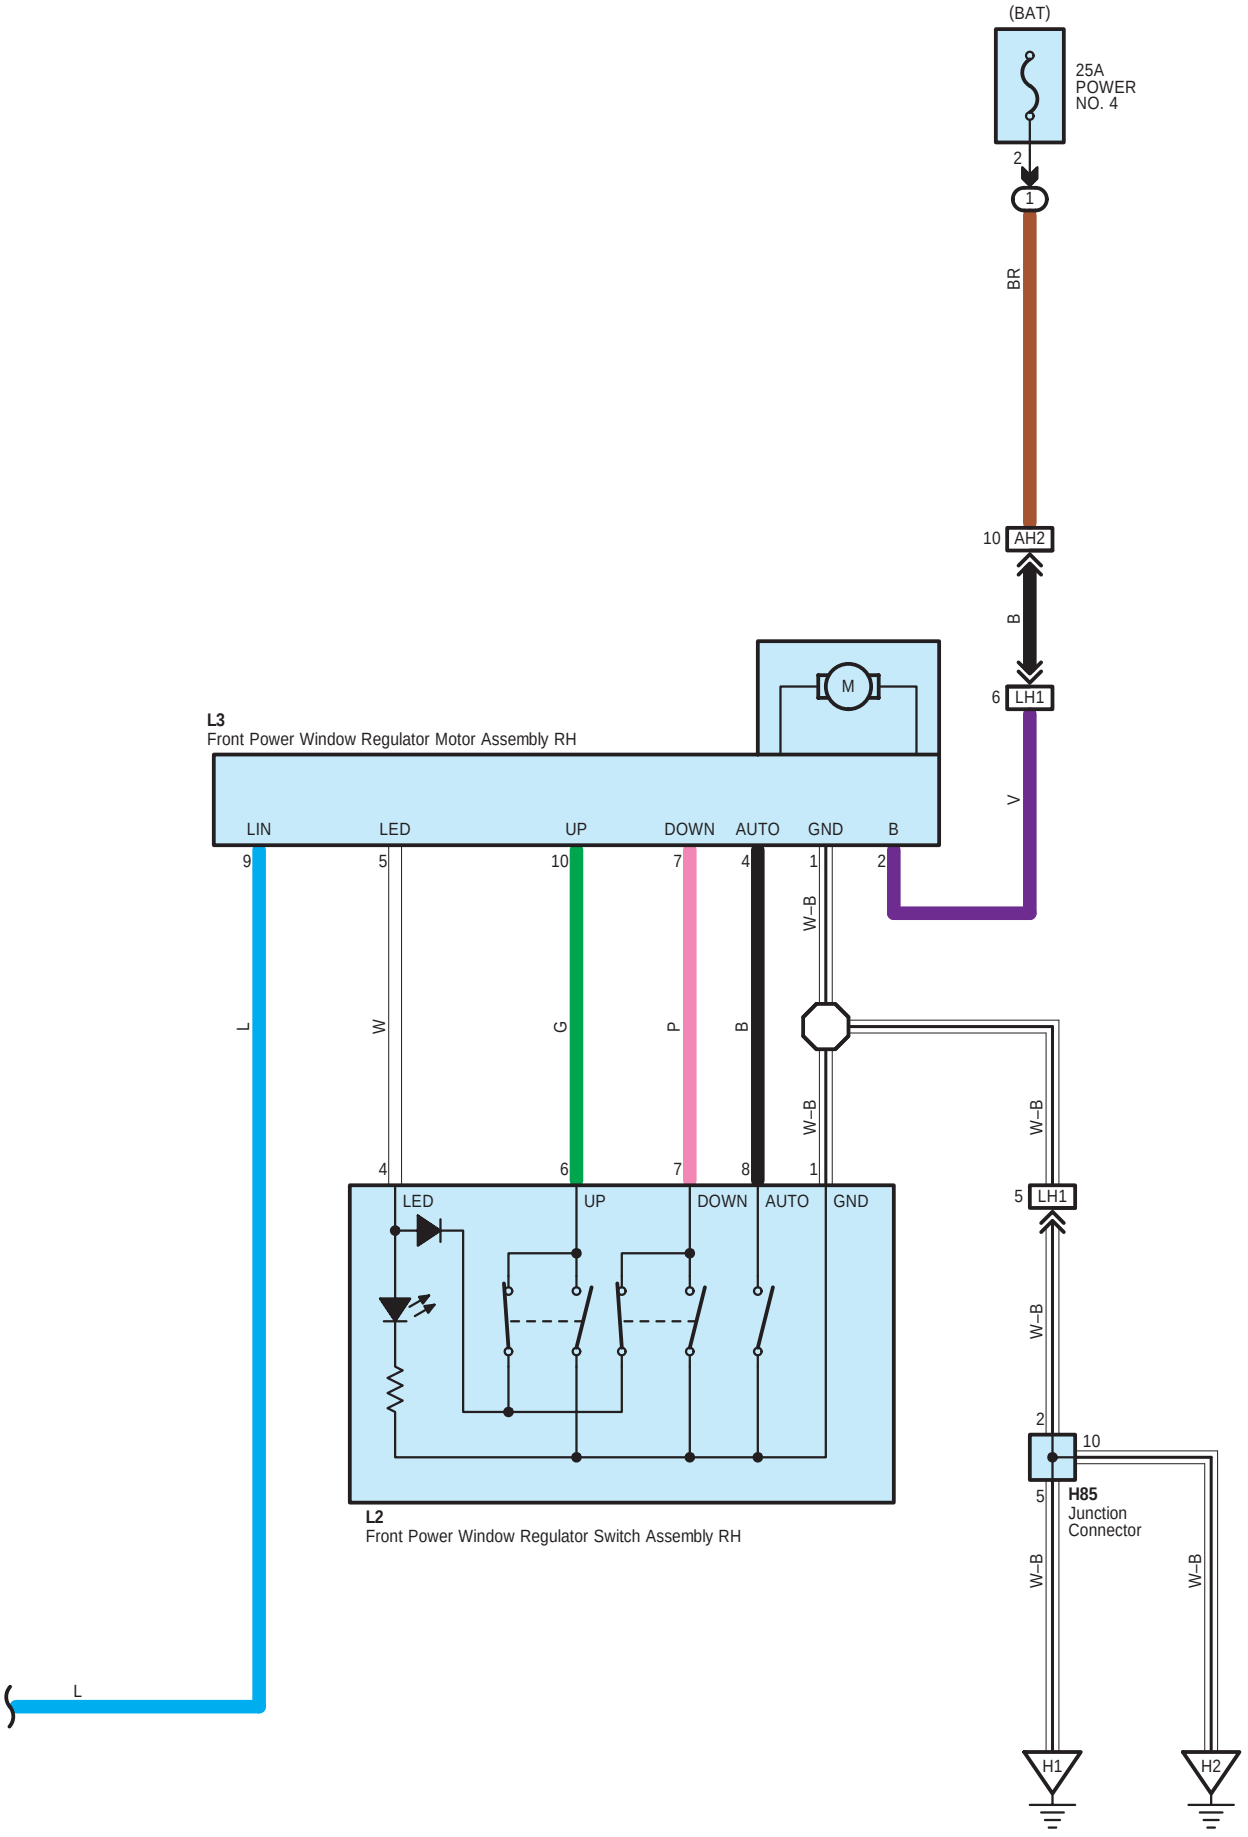

(ACC)
(IG)
(BAT)
7. 5A
ACC
7. 5A
ECU–IG
No. 2
25A
DR/LCK
H2(B), H3(C), H4(D)
Main Body ECU
ALTB
IG
ACC
UL3
L2
6
15
22
10 D
10
53 DD
(BAT)
7. 5A
ECU–B1
2
1
GR
13 DB
11 DC
R
17 OO2
R
R
B
V
16 MH2
14 MH2
P
LG
10
9
UL
L
Key Unlock
Key Lock
E
M4
Front Door Lock Assembly LH
7
W–B
4 MH1
W–B
H85
Junction
Connector
2
5
10
W–B
W–B
H1
H2


H2(B), H3(C), H4(D)
Main Body ECU
(BAT)
30A
POWER
No. 5
8 DC
V
V4
Back Door Window Regulator Motor
(Power Window Regulator Motor Assembly RH)
M
UP
DOWN
SSRB
PLS1
PLS2
LMTE
1 BE
2 P
4 LG
3 L
5 Y
6 SB
R
8 OO2
R
5 VO3
GR
7 A BECU
7 VO2
SB
1 A BDR
5 B BDUP
6 B BDDN
12 B DSV
13 B DS1
14 B DS2
23 B DSG
V2(A), V3(B)
Back Door ECU
BKUL
BKL
KEYE
A UP
A DN
BDN
BUP
7 B
8 B
19 B
21 A
24 A
23 A
22 A
LG
G
BE
G
L
V
BE
11 VO3
10 VO3
9 VO3
8 VO3
B
P
SB
BE
1 HO1
2 HO1
3 HO1
4 HO1
B
SB
BE
R
7
3
4
6
1
2
3
UL
L
E
A–UP
A–DN
DOWN
UP
E
V18
Tail Gate Control
Switch Assembly
H9
Back Door Power Window
Regulator Switch Assembly
2
W–B
12
H83
Junction Connector
11
W–B
H3



H2(B), H3(C), H4(D)
Main Body ECU
LIN2
10 B
V
(IG)
7. 5A
ECU–IG
No. 2
7 DD
P
BR
H88(A), H89(B)
Junction
Connector
5 A
2 B
11 A
12 A
H88(A)
Junction
Connector
W
6 OH1
BE
(*1)
G
(*2)
7 OO2
G
(*2)
12 OO1
GR
(*1)
11 OO1
Y
(*1)
7 VO3
Y
8 A
SIG
R
12 OH3
BE
9 OO2
W
4 VO3
Y
16 A
MPX1
12 B
20 A
21 A
19 A
H79(A), H80(B)
Junction Connector
Y
8 LH3
L
W
8 MH3
L
L
L
V2(A), V3(B)
Back Door ECU
SGND
P
W
25 B
17 B
16 B
G
V
R
2
1
3
E
P
W
V10
Rear Wiper Motor Assembly


H2(B), H3(C), H4(D)
Main Body ECU
(BAT)
20A
POWER
No. 3
35 DD
Y
8 MH1
G
L
M2
Power Window Regulator Master Switch Assembly
Power Window Master Switch
LIN1 B LIN2 LED DOWN UP E
6 3 7 8 5 4 1
L L W Y LG BE W-B
G
2 9 5 7 10 1
B LIN LED DOWN UP GND
M3
Front Power Window
Regulator Motor
Assembly LH
M
W-B
4 MH1
W-B
U D
12 15
V B
6 MH1 7 MH1
R BE
1 OH2 10 OH2
LG SB
12 NO1 13 NO1
BE BR
5 2
SU SD
Up Down
U D B
N9
Rear Power Window Regulator
Switch Assembly LH
4 1 3
R G Y
2
M
1
N10
Rear Power Window
Regulator Motor
Assembly LH
2
5
10
H85
Junction Connector
W-B
W-B
Y
L
L
H1
H2
∗ 1 : w/ Power Back Door
∗ 2 : w/o Power Back Door



H2(B), H3(C), H4(D)
Main Body ECU
BECU
PWS
GND2
GND1
DCTY
PCTY
(BAT)
7. 5A
ECU–B1
30A
POWER
No. 1
P/W Relay
M2
Power Window Regulator Master Switch Assembly
Power Window Master Switch
N3
Rear Power Window Regulator Switch Assembly RH
N4
Rear Power Window Regulator Motor Assembly RH
H79(A), H80(B)
Junction Connector
H77(A), H78(B)
Junction Connector
H81
Junction Connector
H85
Junction Connector
O8
Front Door Courtesy Light Switch LH
P6
Front Door Courtesy Light Switch RH
H1
H2


(BAT)
25A
POWER
NO. 4
2
1
BR
10 AH2
B
6 LH1
V
M
L3
Front Power Window Regulator Motor Assembly RH
LIN
LED
UP
DOWN
AUTO
GND
B
9
5
10
7
4
1
2
L
W
G
P
B
W–B
W–B
4
6
7
8
1
LED
UP
DOWN
AUTO
GND
L2
Front Power Window Regulator Switch Assembly RH
W–B
5 LH1
W–B
2
10
5
H85
Junction
Connector
W–B
W–B
L
H1
H2


H 2
White

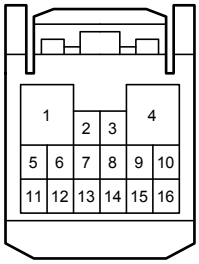


H 3
White

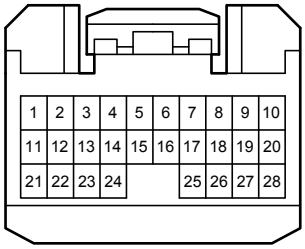


H 4
White

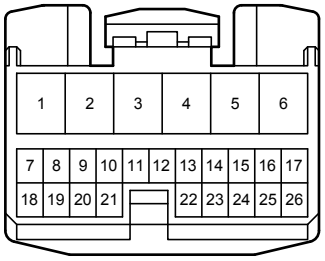


H 9
White

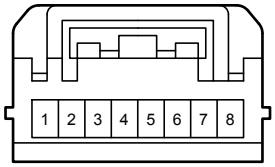


H 77
Black

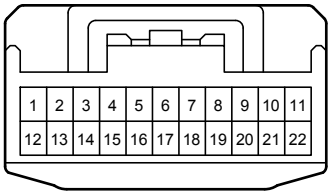


H 78
Black

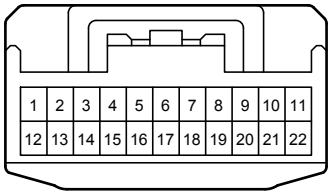


H 79
Black

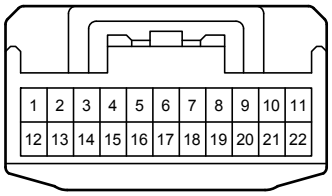


H 80
Black

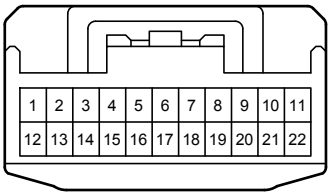


H 81
White

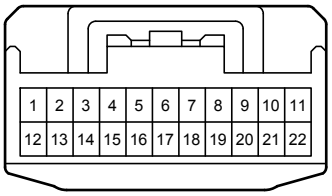


H 83
Gray

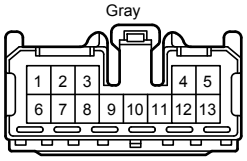


H 85
White

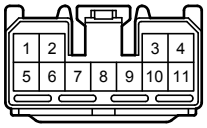


H 88
White

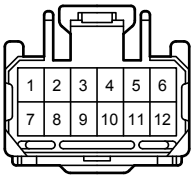


H 89
White

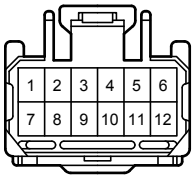


L 2
White

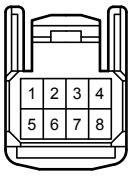


L 3
White

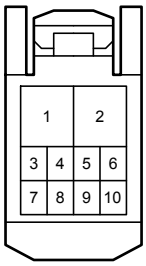


M 2
White

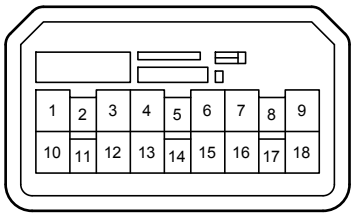


M 3
White

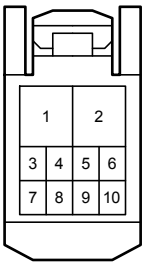


M 4
White

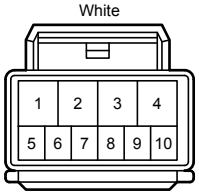


N 3
White

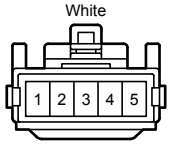


N 4
Black

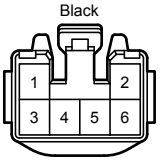

N 9
White

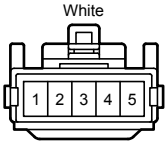

N 10
Black

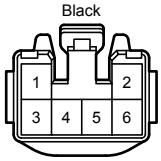


O 8
White




P 6
White




V 2
White

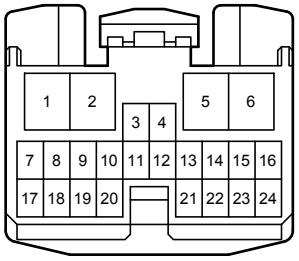

V 3
White

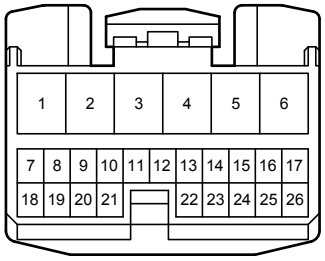


V 4
Black

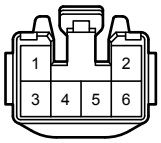


V 10
Gray




V 18
White

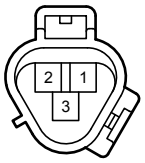


DB
White

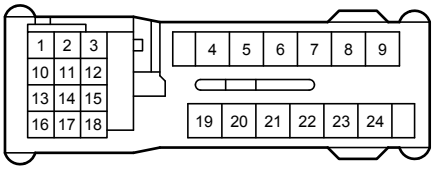


DC
White

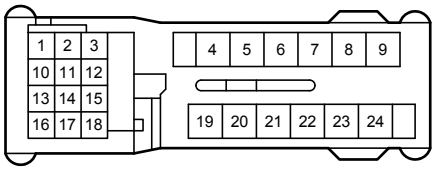


DD
White

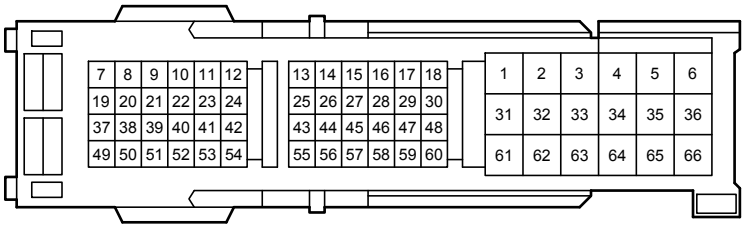


AH2
White

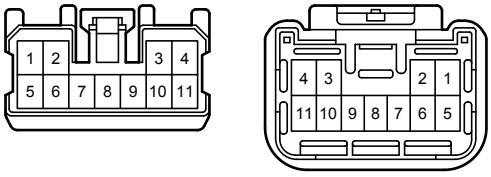


HO1
White

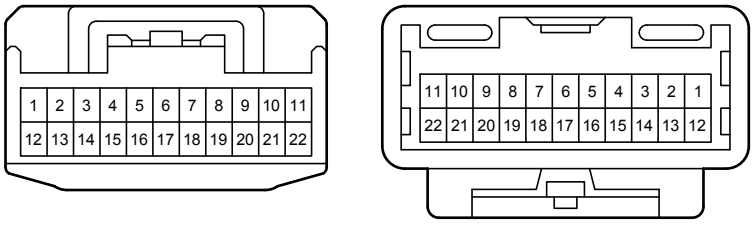


HP1
Gray

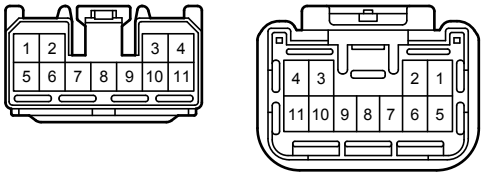


HP2
Gray

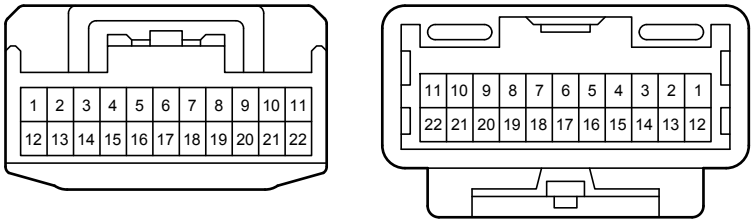


LH1
Blue

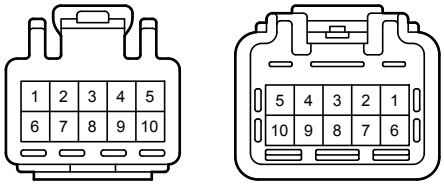


LH3
Blue

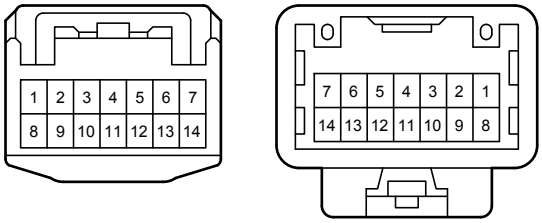


MH1
Blue

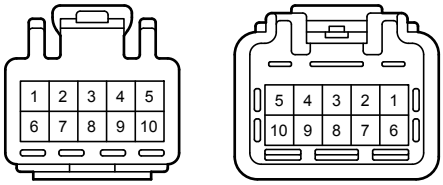


MH2
Blue

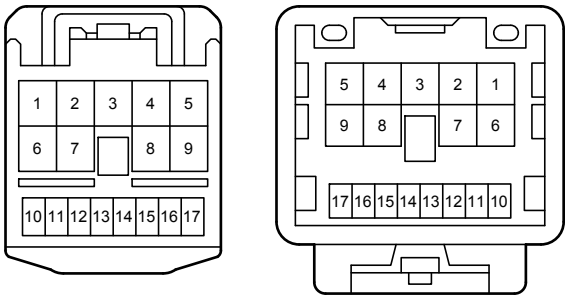


MH3
Blue

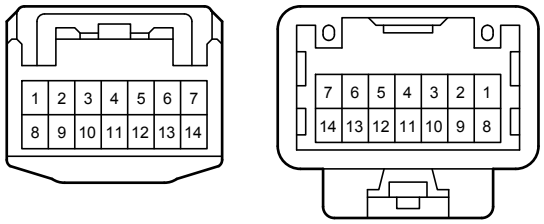


NO1
White

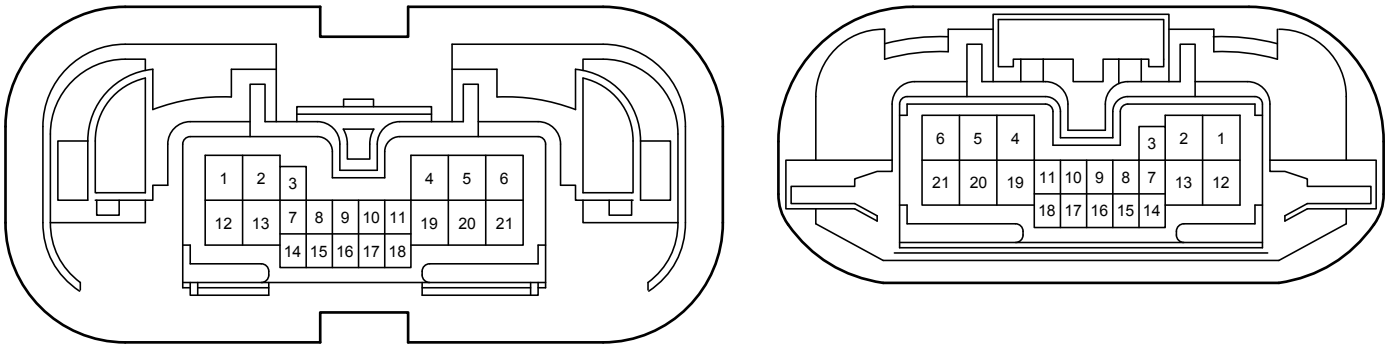


NP1
White

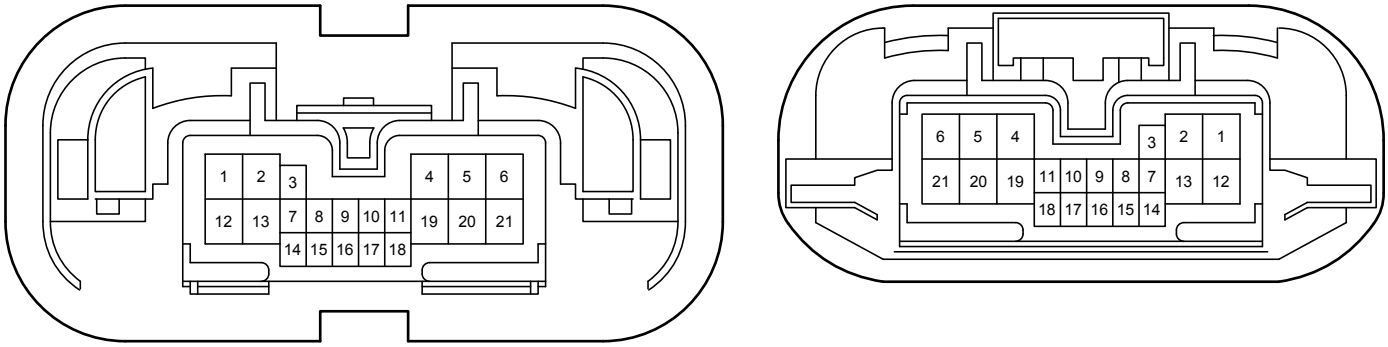


OH1
Black

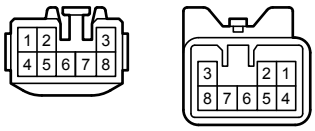


OH2
Black

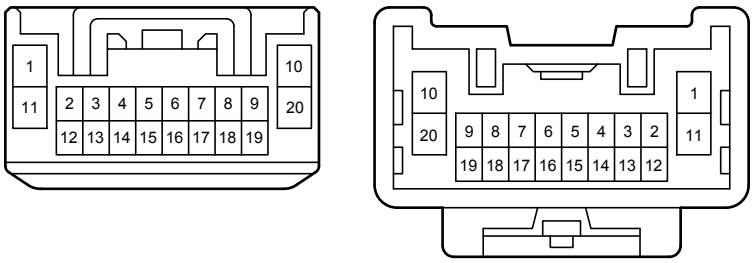


OH3
White

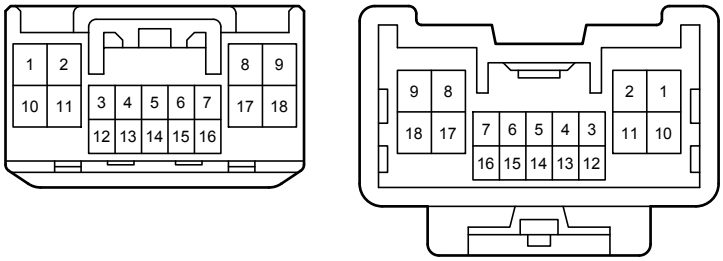


OO1
White

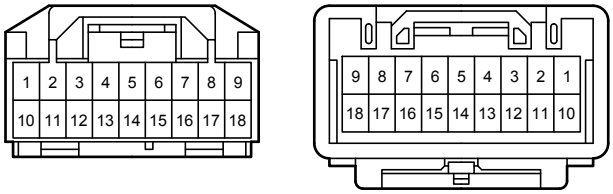

OO2
White

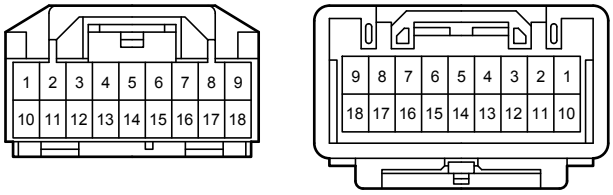

VO2
White

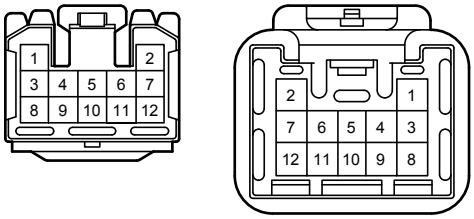

VO3
White

