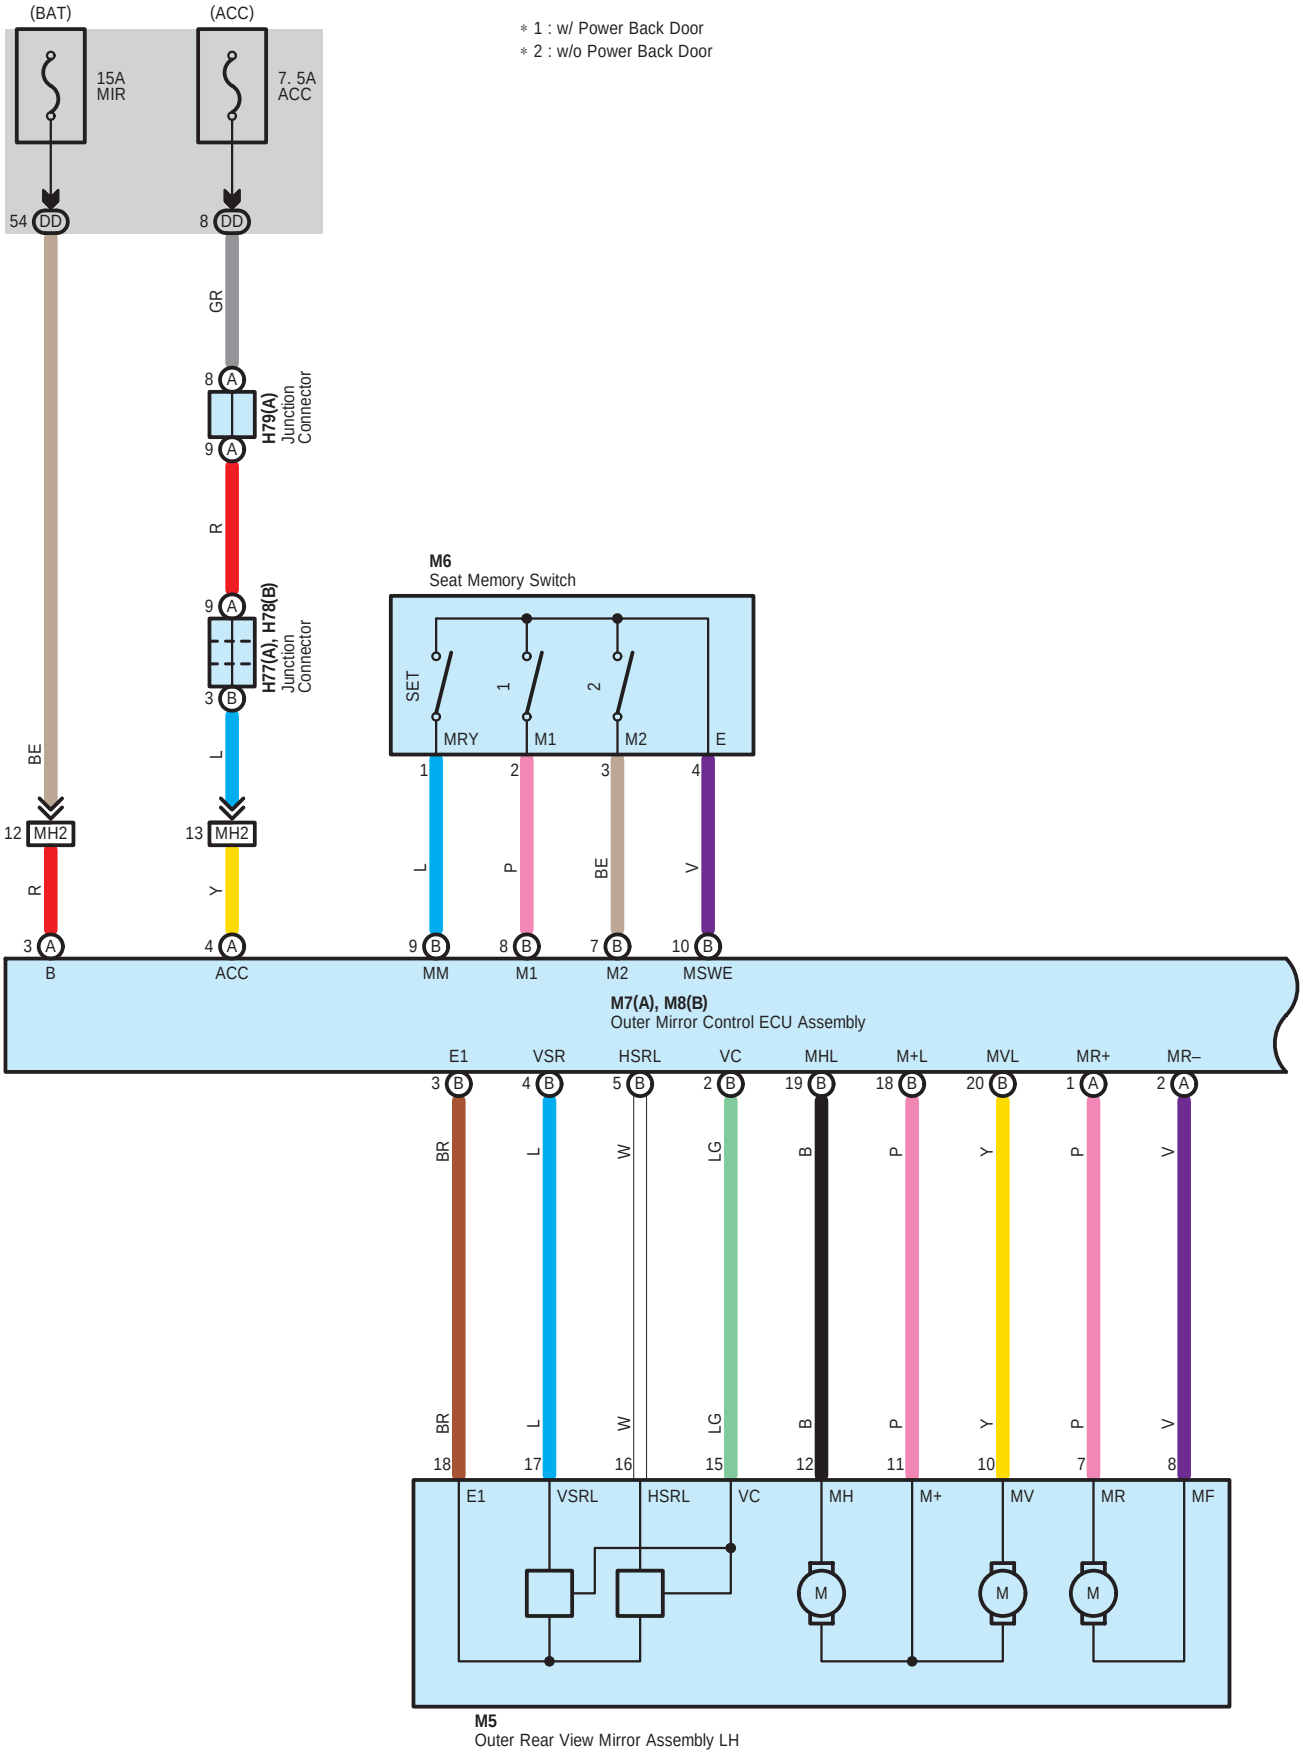
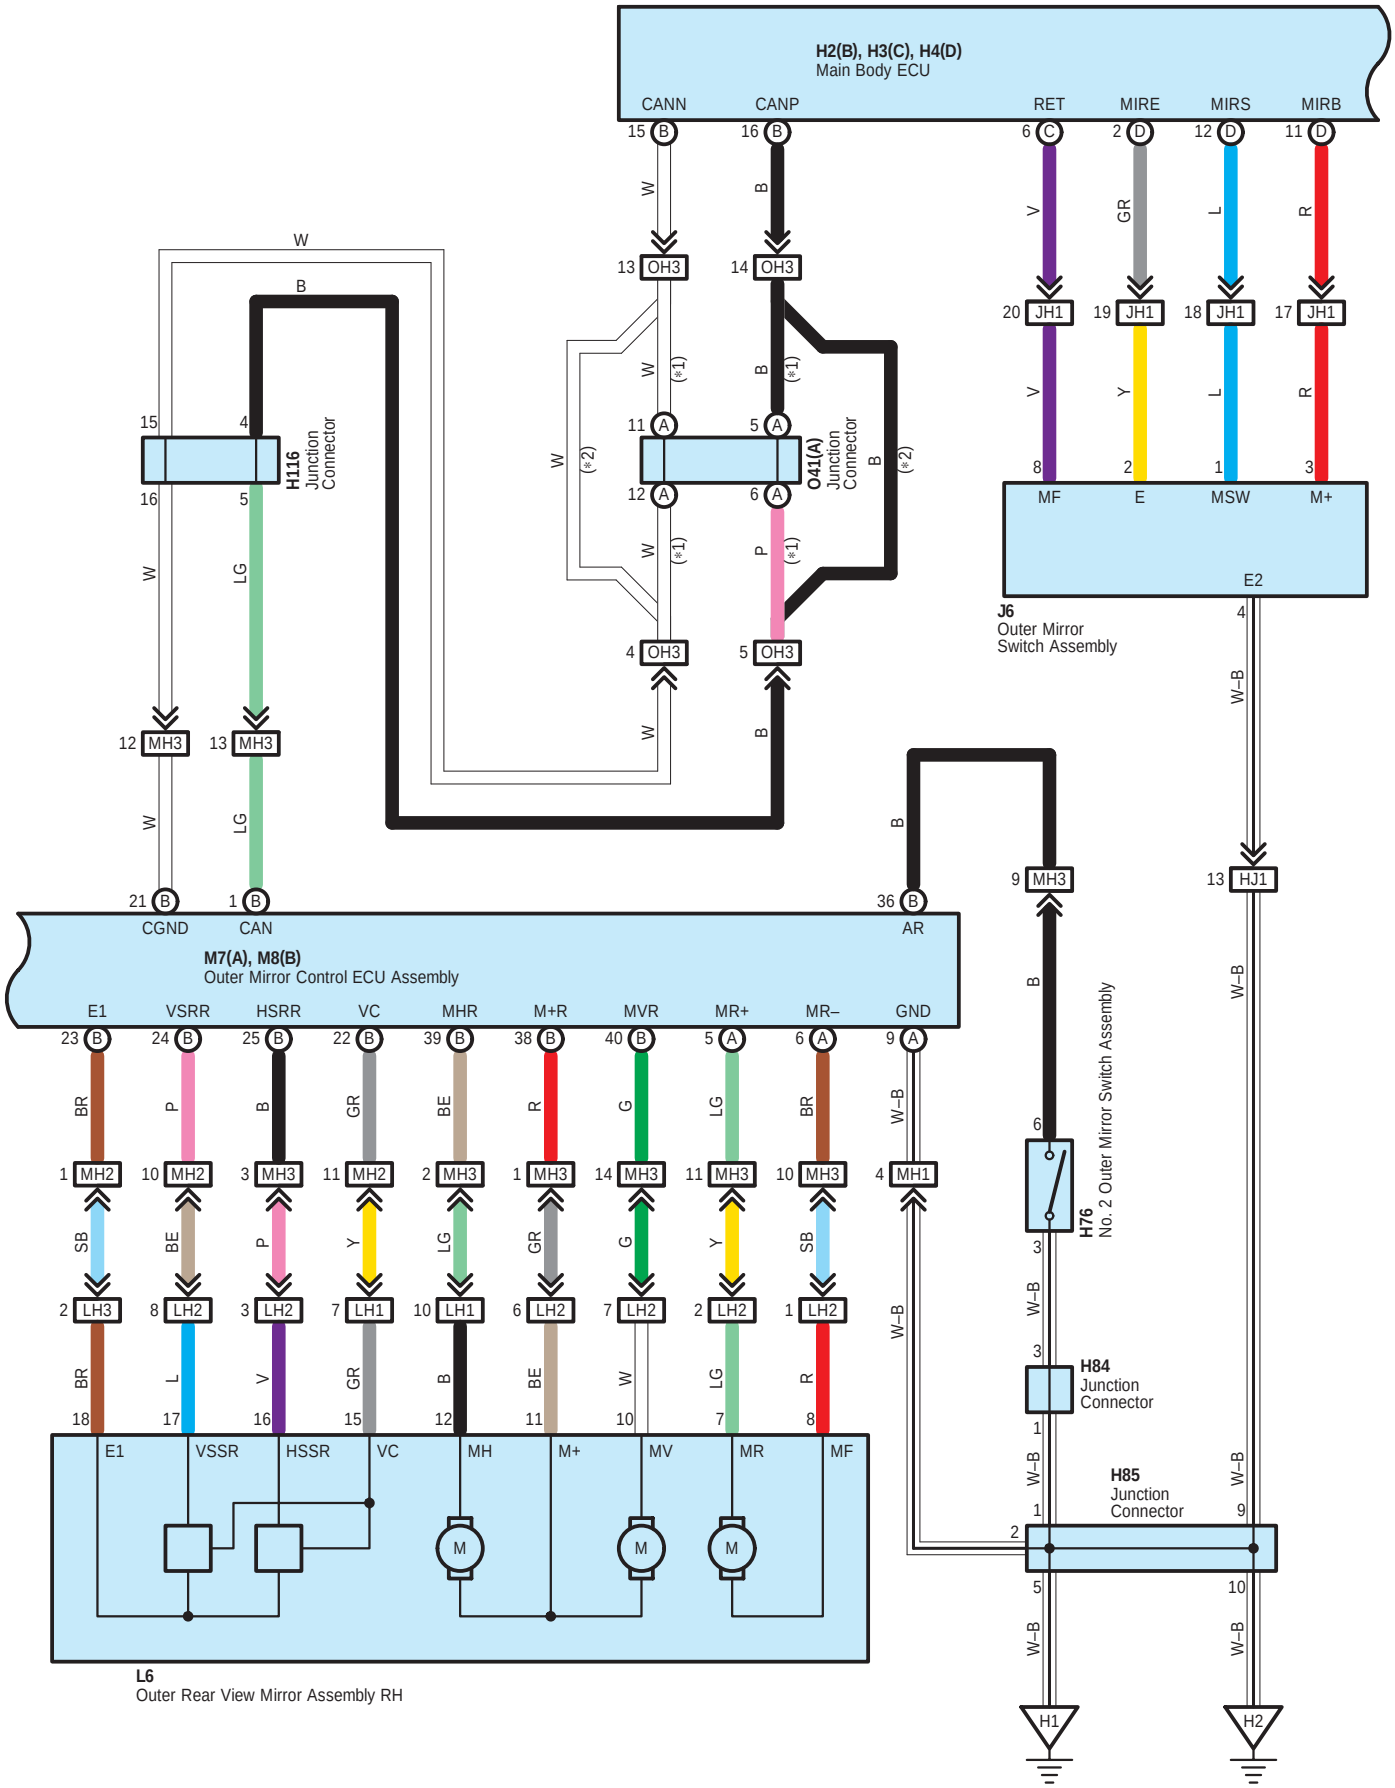
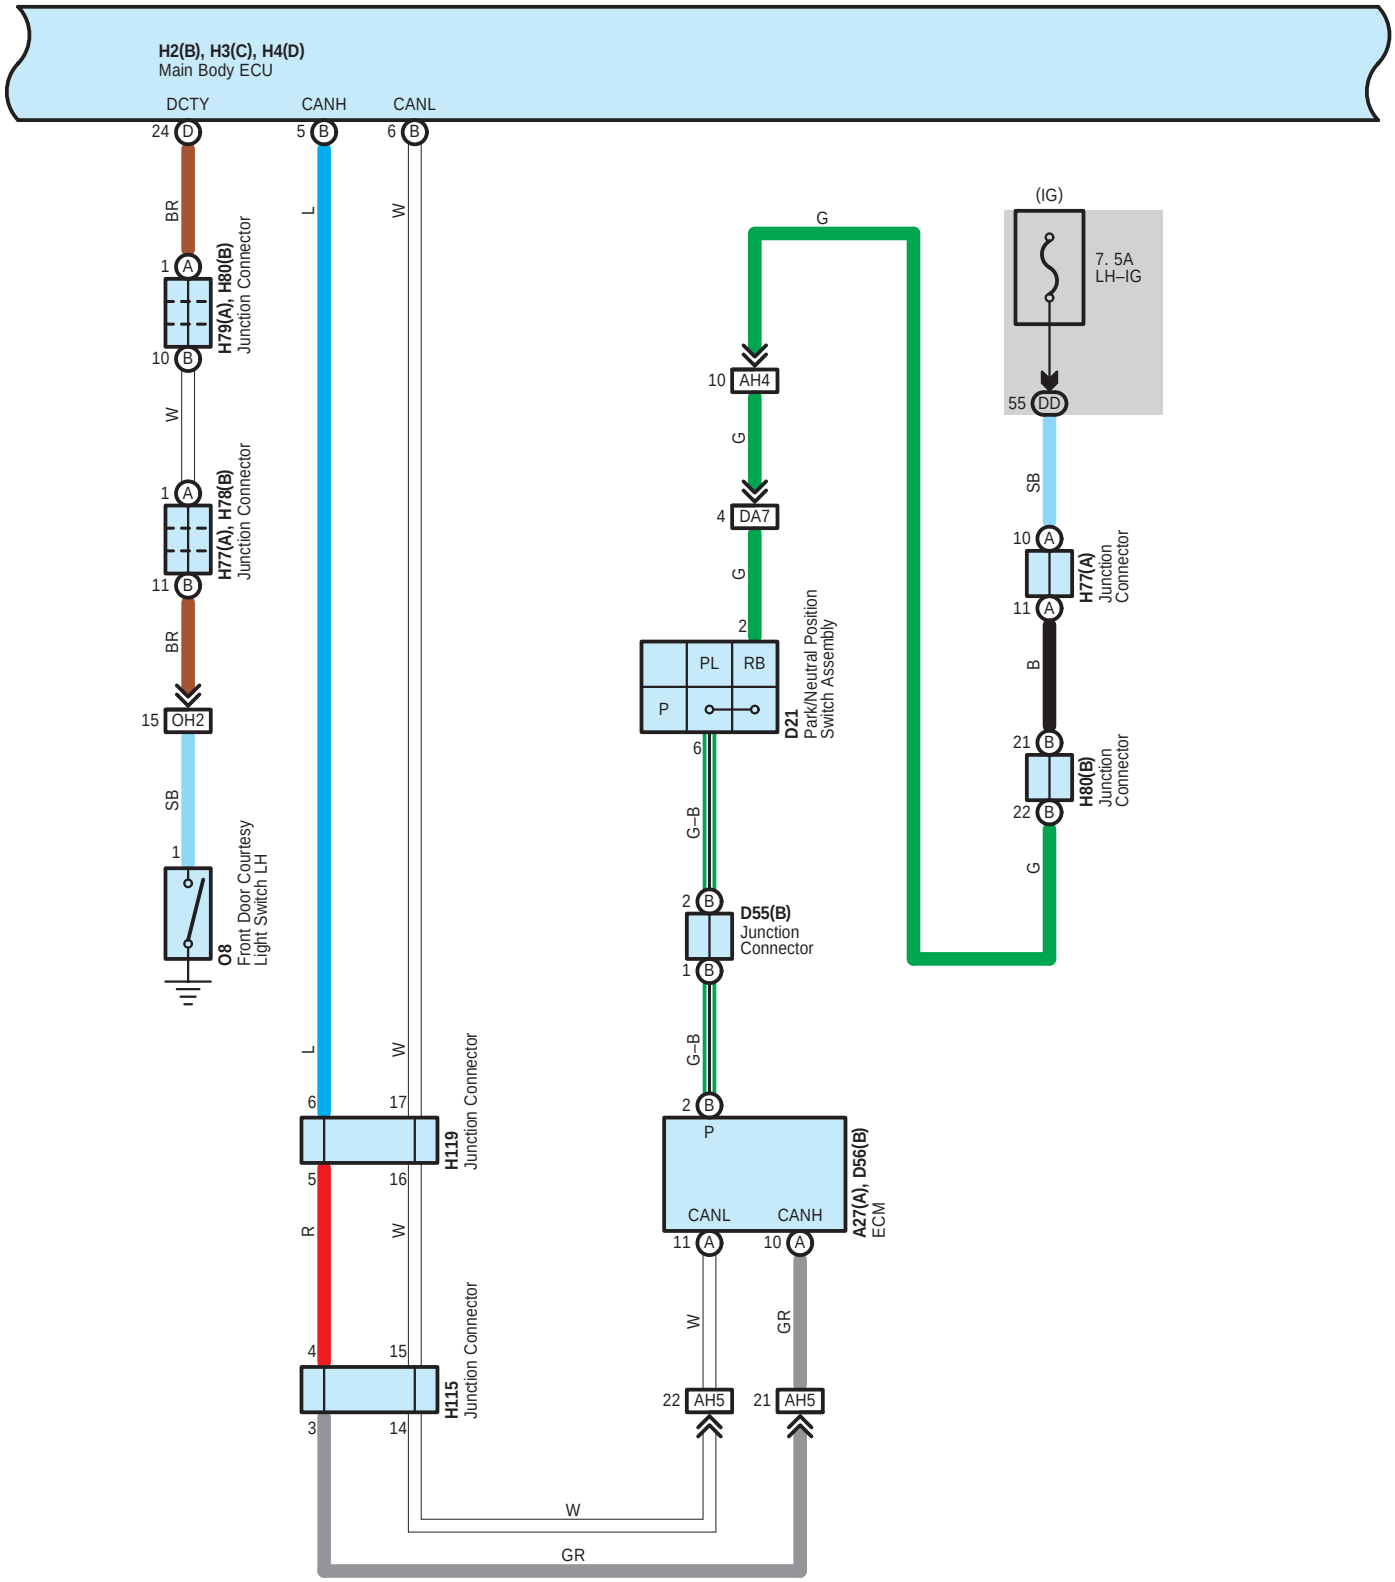
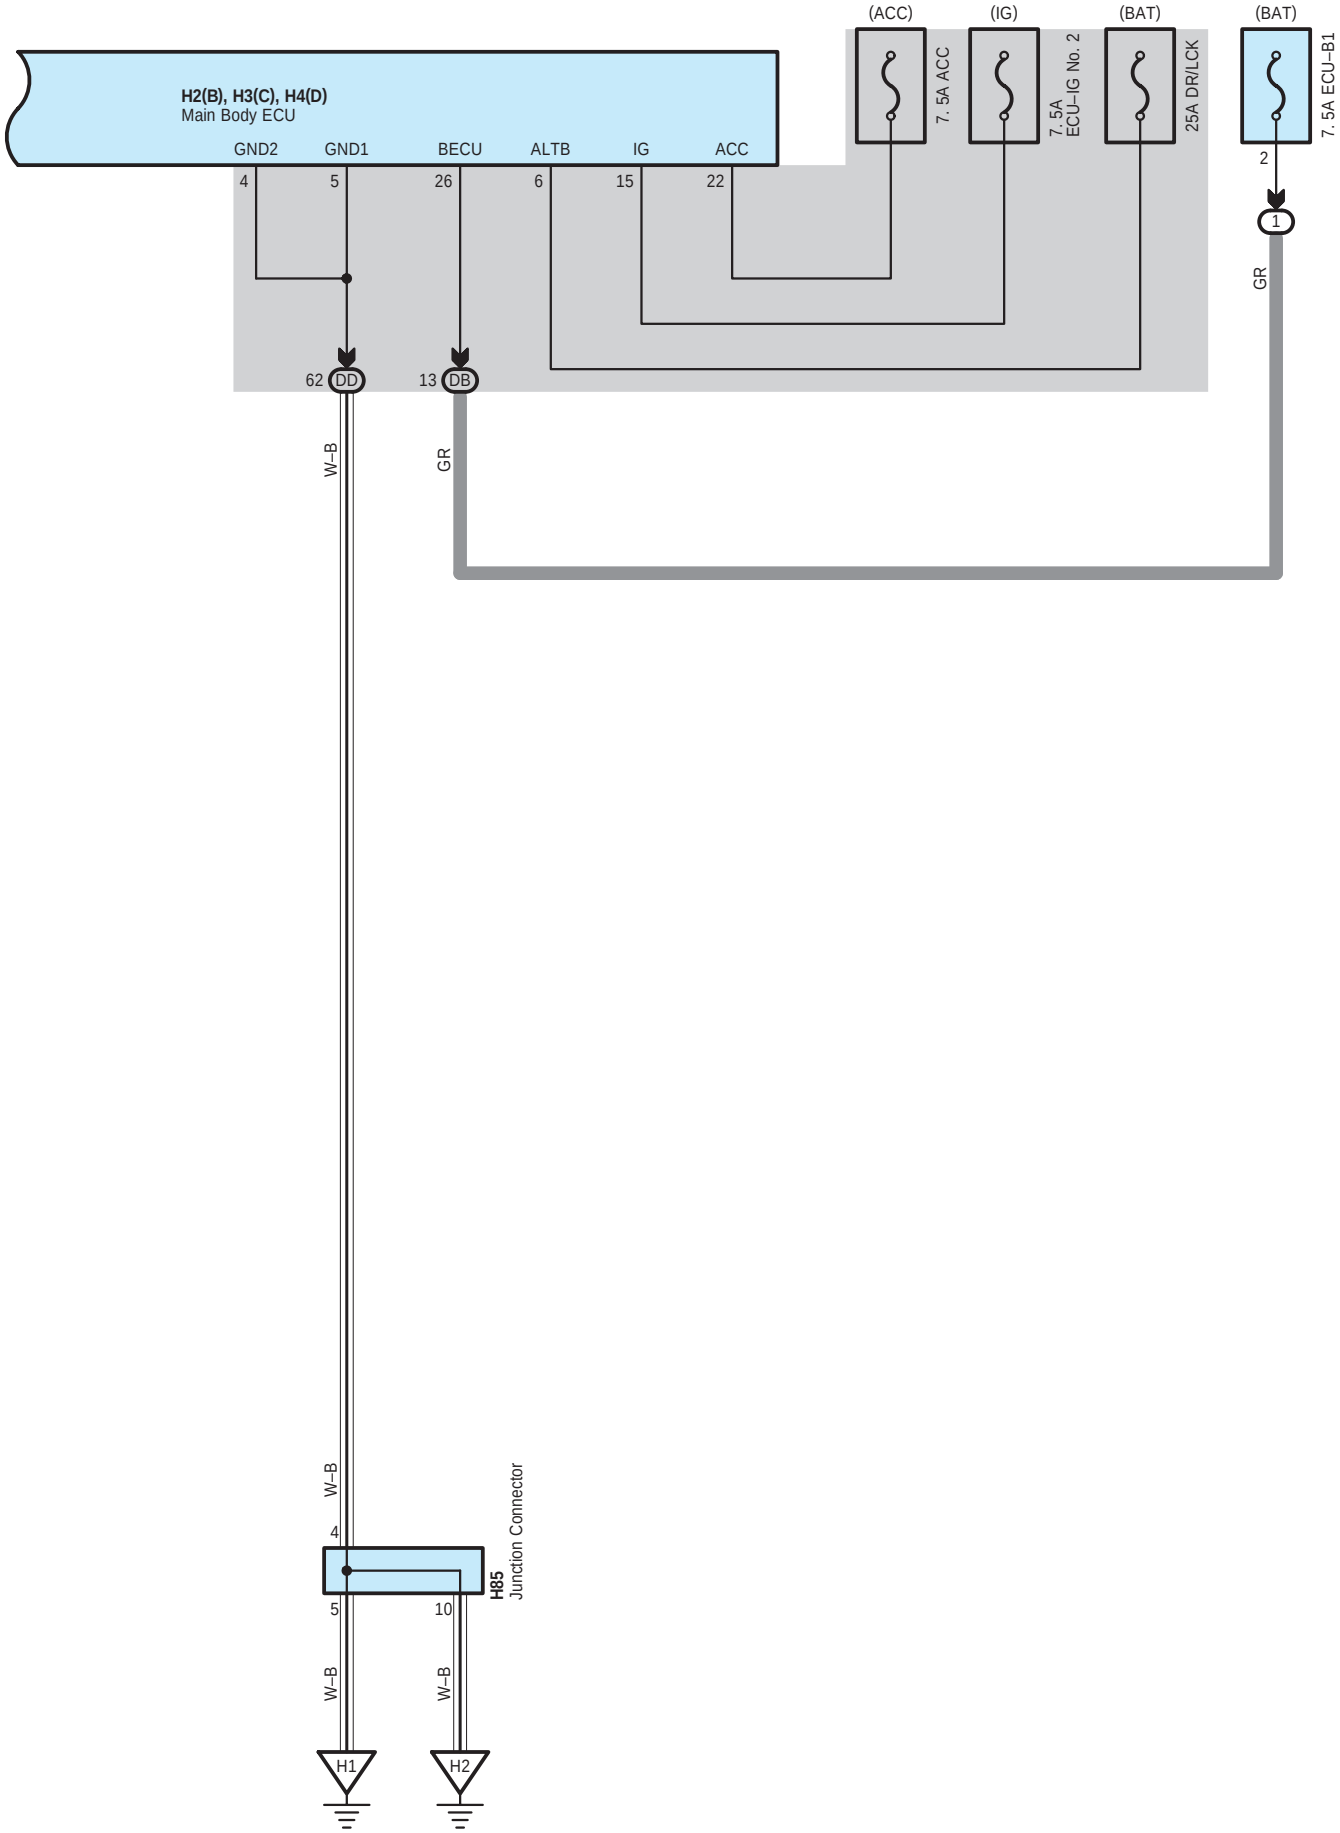



* 1 : w/ Power Back Door
* 2 : w/o Power Back Door


H2(B), H3(C), H4(D)
Main Body ECU
CANN
CANP
RET
MIRE
MIRS
MIRB
MF
E
MSW
M+
E2
J6
Outer Mirror
Switch Assembly
H116
Junction
Connector
O41(A)
Junction
Connector
M7(A), M8(B)
Outer Mirror Control ECU Assembly
CGND
CAN
AR
E1
VSRR
HSRR
VC
MHR
M+R
MVR
MR+
MR–
GND
H76
No. 2 Outer Mirror Switch Assembly
H84
Junction
Connector
H85
Junction
Connector
L6
Outer Rear View Mirror Assembly RH
E1
VSSR
HSSR
VC
MH
M+
MV
MR
MF
H1
H2



H2(B), H3(C), H4(D)
Main Body ECU
DCTY
CANH
CANL
24 D
5 B
6 B
BR
L
W
1 A
10 B
H79(A), H80(B)
Junction Connector
W
1 A
11 B
H77(A), H78(B)
Junction Connector
BR
15 OH2
SB
1
O8
Front Door Courtesy
Light Switch LH
L
W
6
17
H119
Junction Connector
5
16
R
W
4
15
H115
Junction Connector
3
14
W
GR
G
10 AH4
G
4 DA7
G
2
PL
RB
P
D21
Park/Neutral Position
Switch Assembly
6
G–B
2 B
D55(B)
Junction
Connector
1 B
G–B
2 B
P
CANL
CANH
11 A
10 A
A27(A), D56(B)
ECM
W
GR
22 AH5
21 AH5
(IG)
7. 5A
LH–IG
55 DD
SB
10 A
11 A
H77(A)
Junction
Connector
B
21 B
22 B
H80(B)
Junction
Connector
G


H2(B), H3(C), H4(D)
Main Body ECU
GND2
GND1
BECU
ALTB
IG
ACC
4
5
26
6
15
22
(ACC)
(IG)
(BAT)
(BAT)
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
7. 5A ECU–B1
2
1
GR
62 DD
13 DB
W–B
GR
W–B
4
H85
Junction Connector
5
10
W–B
W–B
H1
H2


A 27
Black

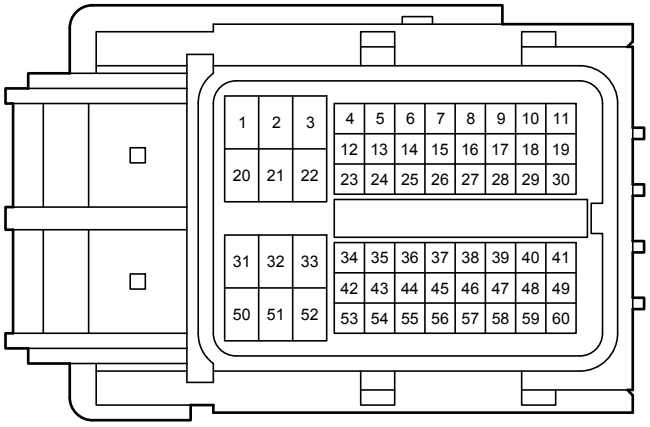


D 21
Gray

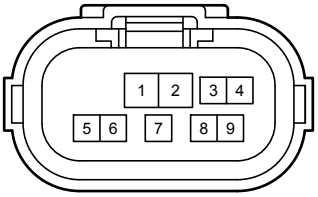


D 55
Blue

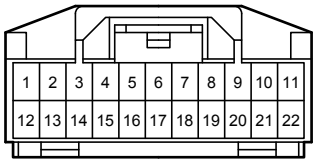


D 56
Black

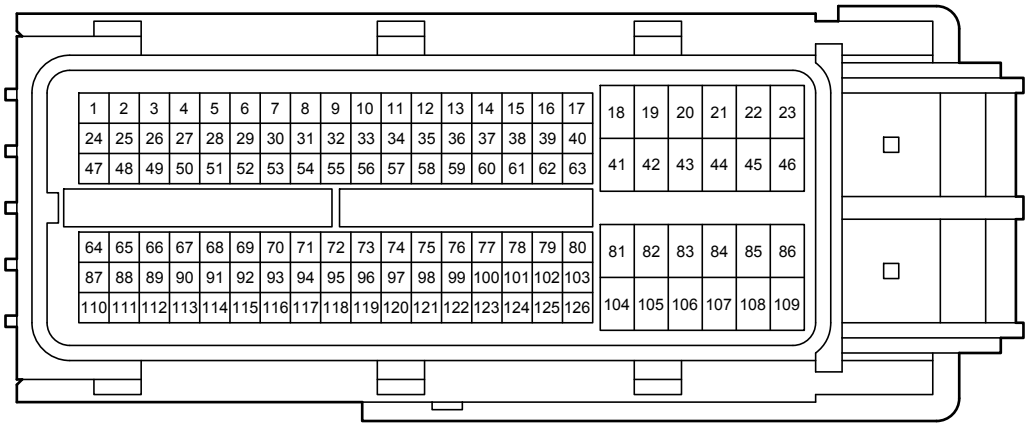


H 2
White

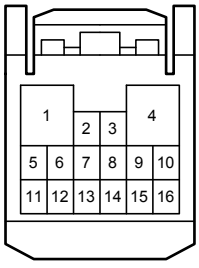


H 3
White

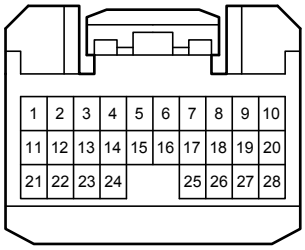


H 4
White

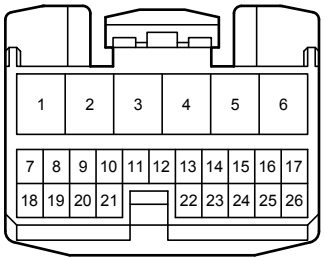


H 76
Gray

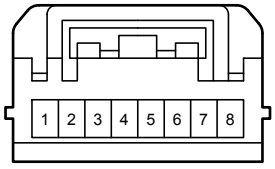


H 77
Black

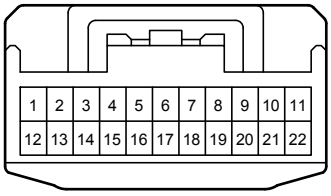


H 78
Black

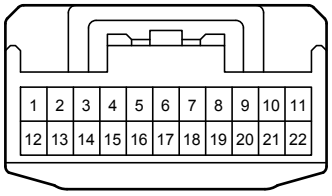


H 79
Black

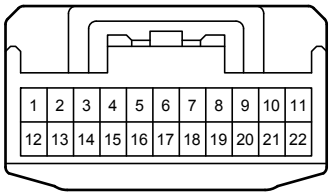


H 80
Black

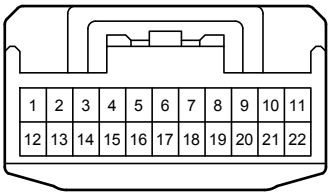


H 84
White

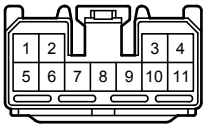


H 85
White

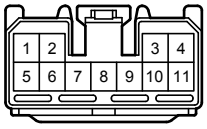


H115
Gray

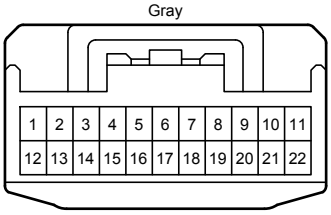


H116
Black

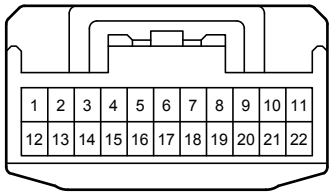


H119
Gray

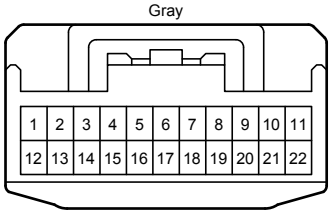


J 6
Black

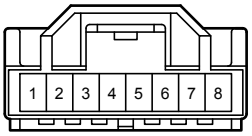


L 6
White

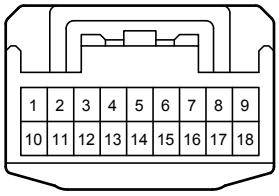


M 5
White

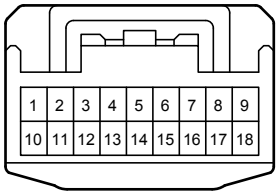


M 6
White



M 7
White

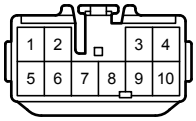


M 8
White

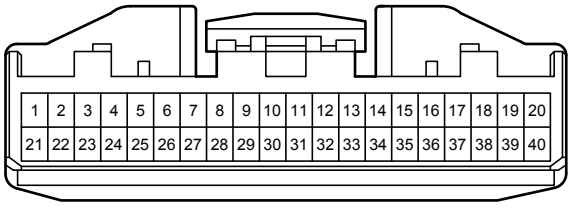


O 8
White




O 41
White

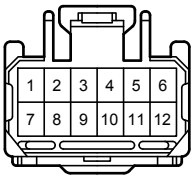


DB
White

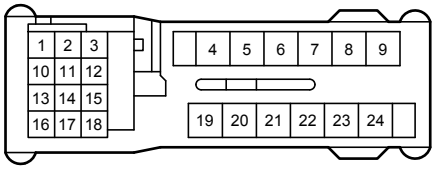


DD
White

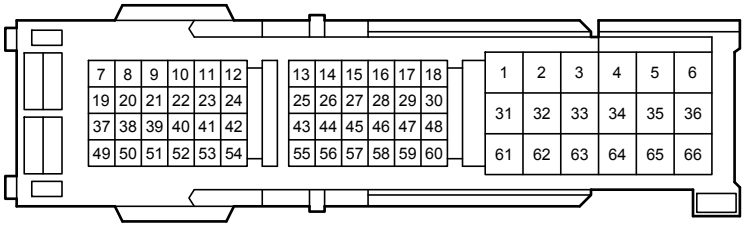


AH4
White

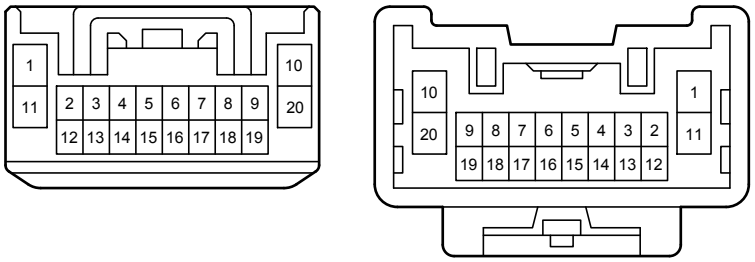


AH5
White

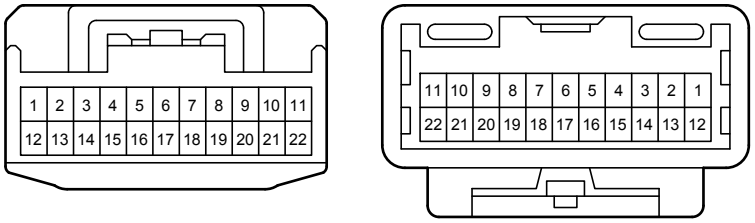


DA7
Gray

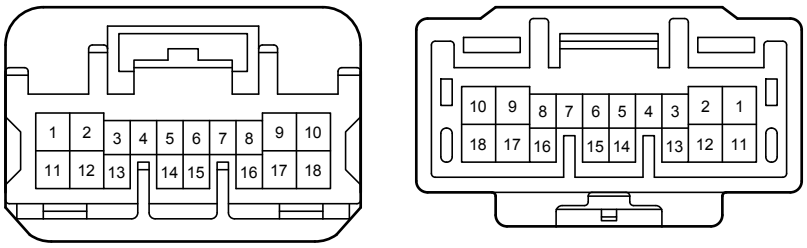


HJ1
White

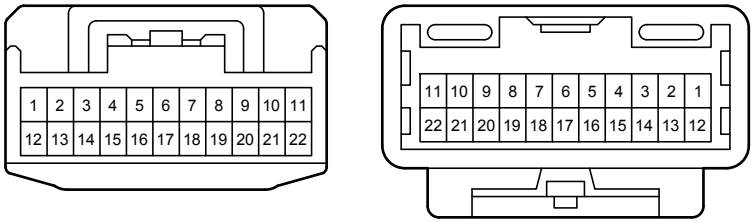


JH1
White

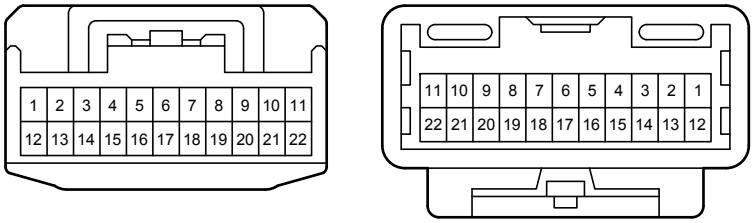


LH1
Blue

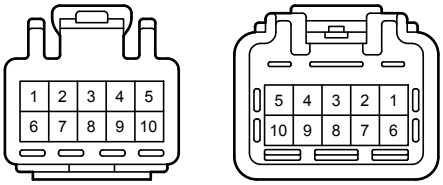


LH2
Blue

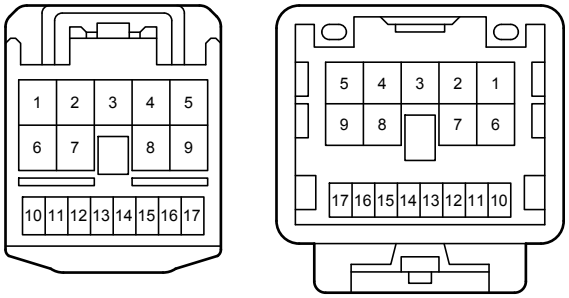


LH3
Blue

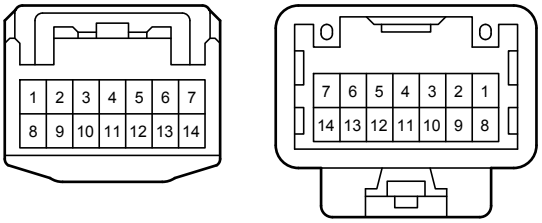


MH1
Blue

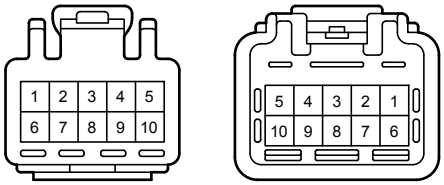


MH2
Blue

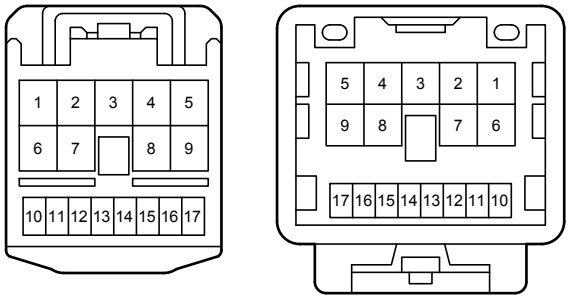

MH3
Blue

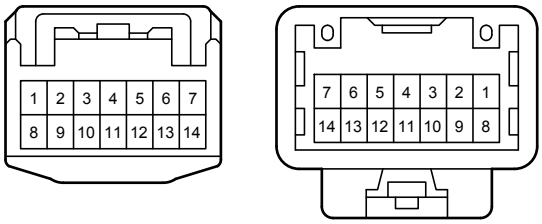

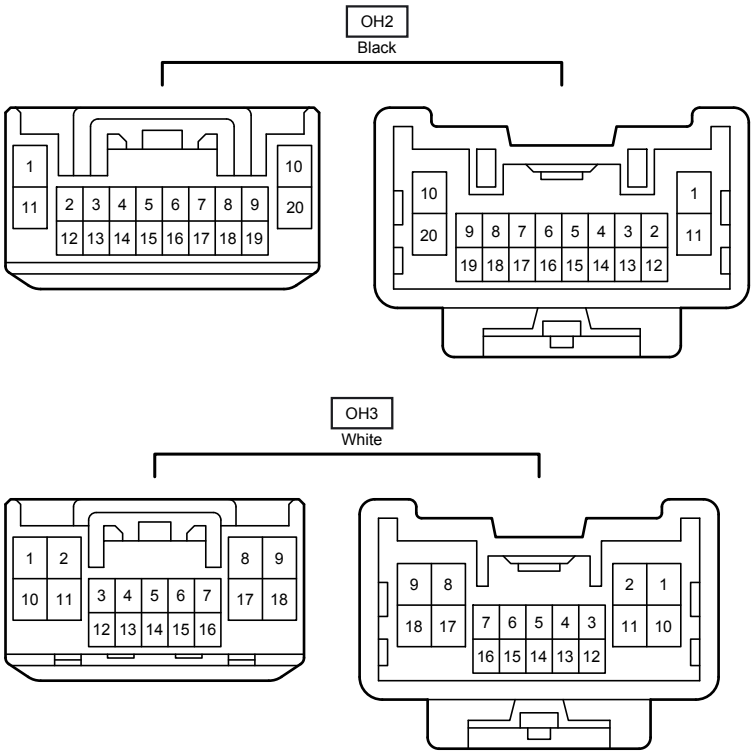
OH2
Black
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11
OH3
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10