




(IG)
(IG)
7. 5A
LH–IG
10A
RR SEAT
HTR RH
55 DD
6 DD
P23
Rear Seat Heater Control Sub–Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
R
B
G
Y
L
V
B1
TC
INDR
PR
SWR
HIR
1
13
2
4
10
12
SB
G
10 A
11 A
H77(A)
Junction
Connector
8 HP1
B
21 B
15 A
H79(A), H80(B)
Junction
Connector
LG
6 HP2
SB
G
W–B
W
R
V
P
8
2
3
5
IND
R
LO
HI
IG
E
7
4
P18
Rear Seat Heater Switch RH
SB
W–B
6
SB
4
5
SB
P21
Junction
Connector
W–B
W–B
W–B
7
P22
Junction
Connector
P2


(IG)
10A
RR SEAT
HTR LH
21 DC
G
O43
Rear Seat Heater Control Sub–Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
R
B
G
INDL
Y
PL
L
SWL
V
HIL
B
E
1
2
4
10
12
13
W
R
V
P
15 PO2
16 PO2
12 PO2
13 PO2
W
R
V
BR
8
2
3
5
IND
R
LO
HI
IG
E
7
4
P17
Rear Seat Heater Switch LH
SB
W–B
W–B
12
O39
Junction
Connector
1
W–B
1
O40
Junction
Connector
8
W–B
O1
SB
W–B


H 77
Black

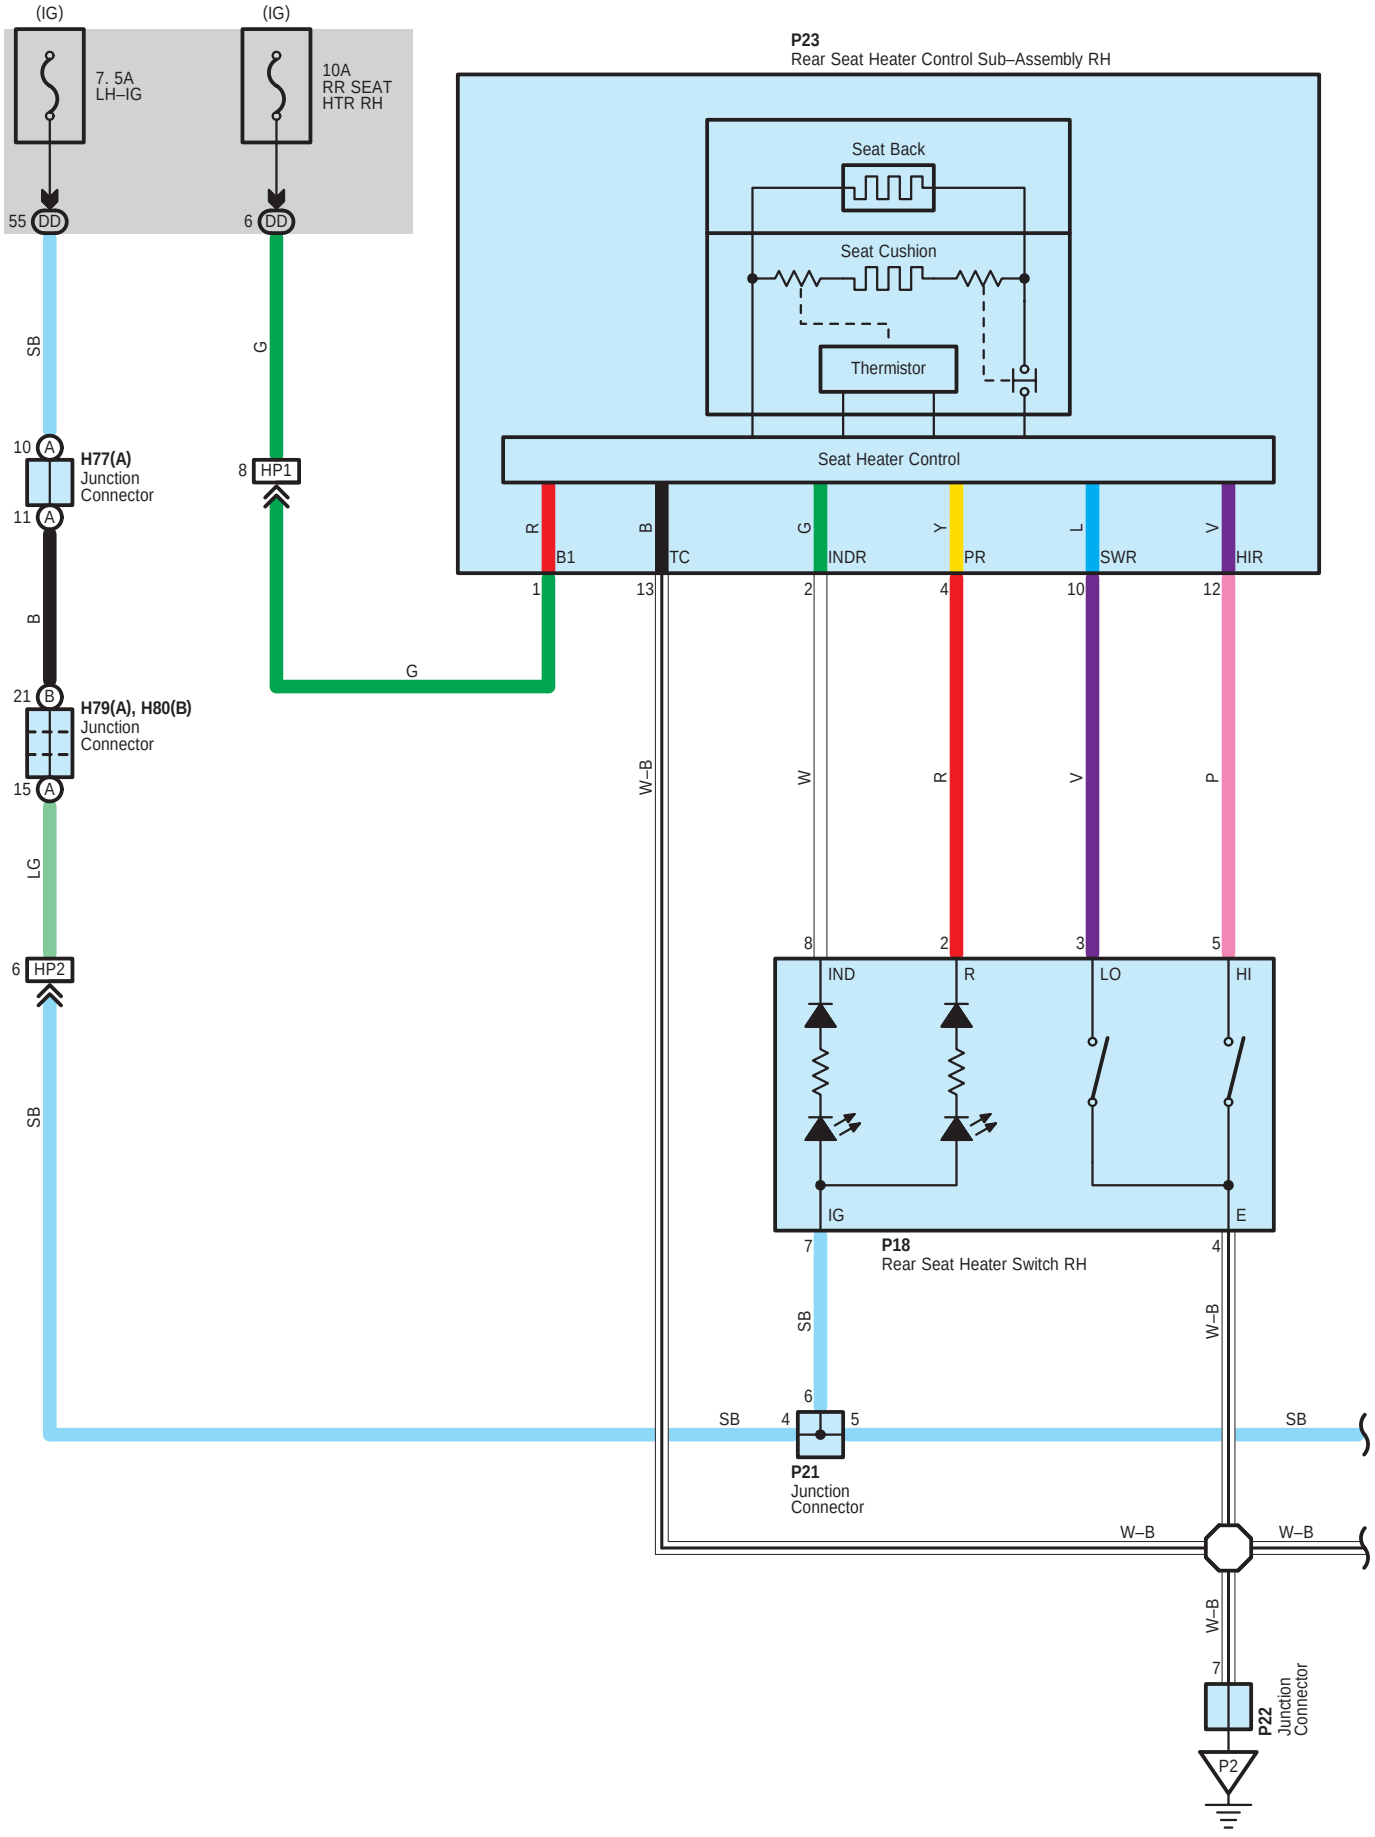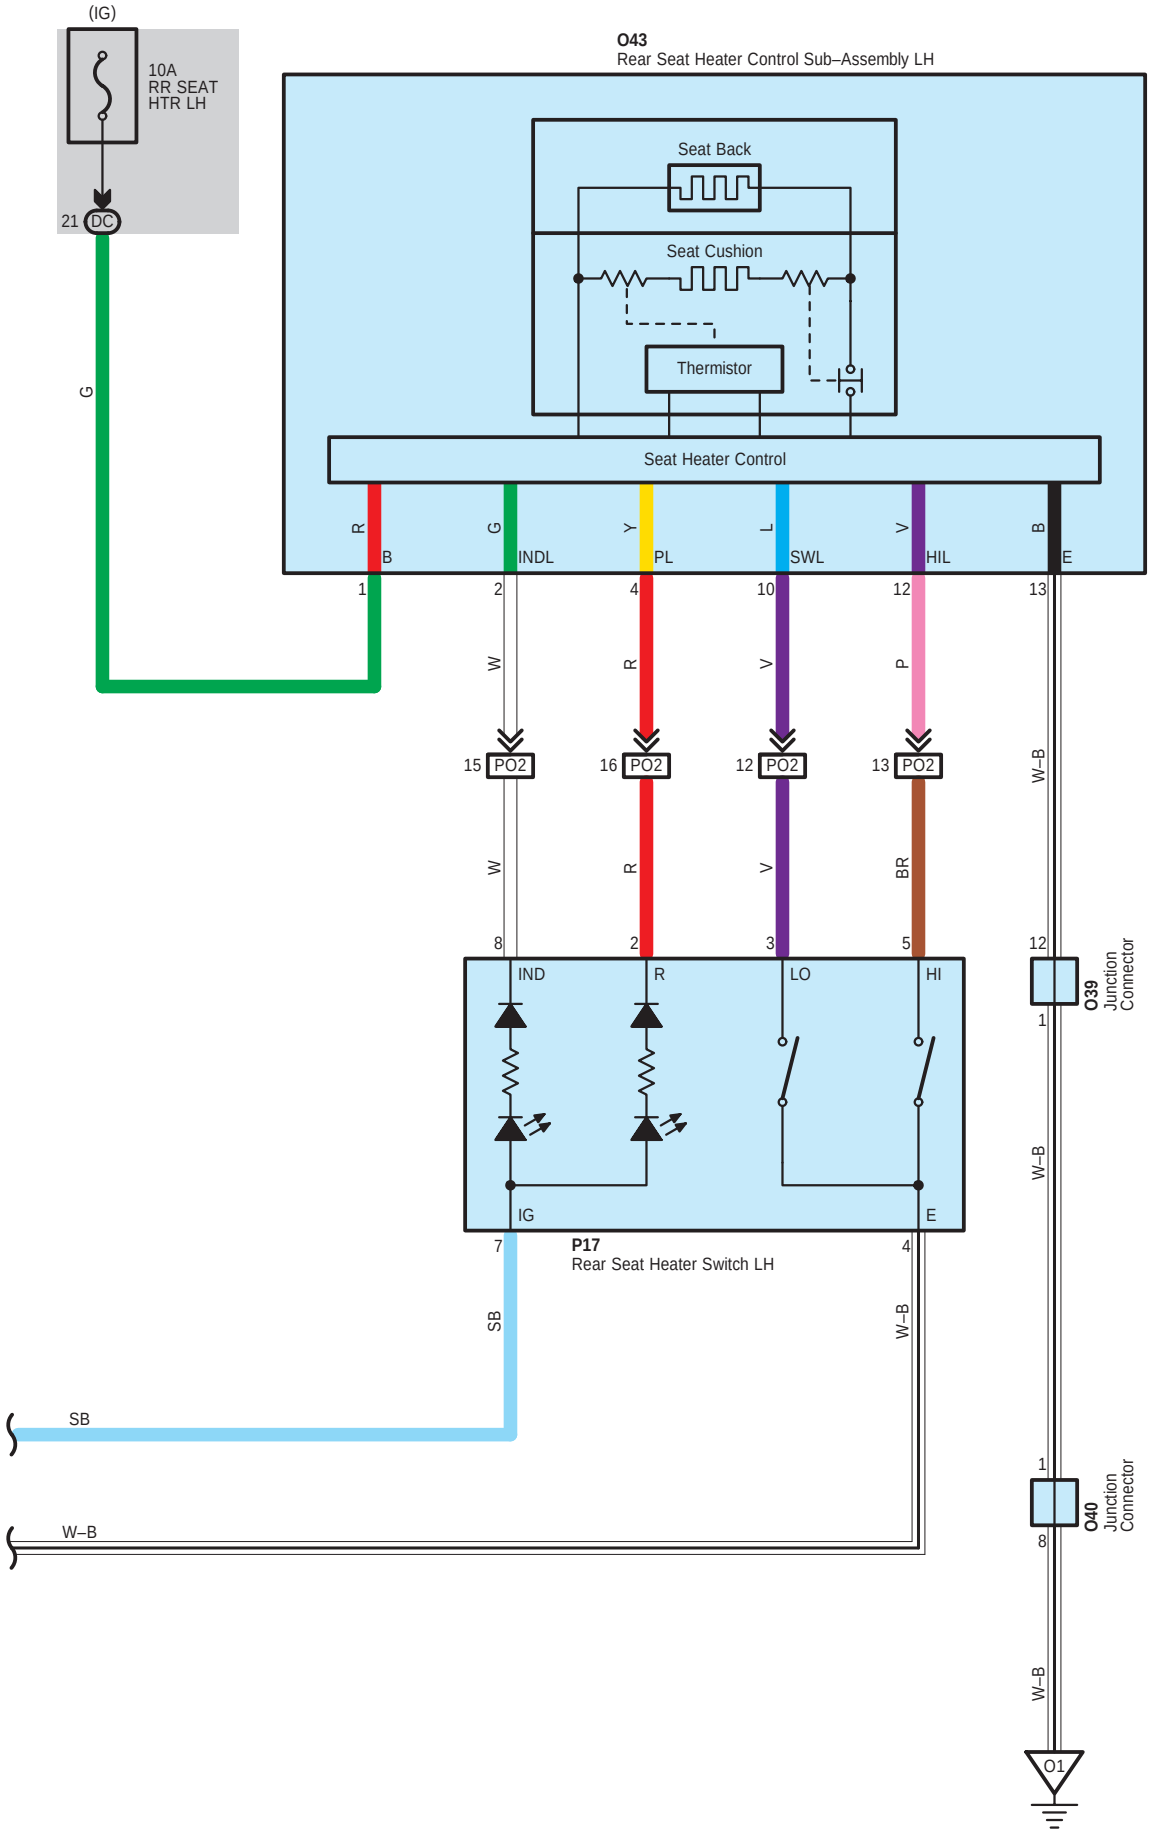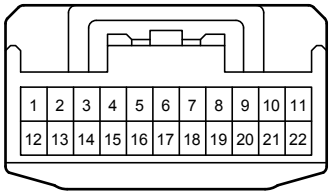


H 79
Black

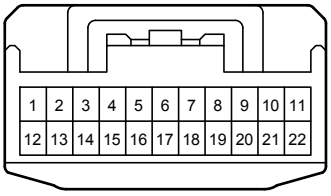


H 80
Black

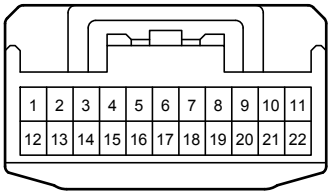


O 39
White

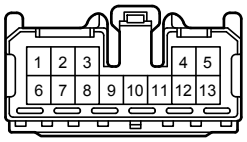


O 40
White

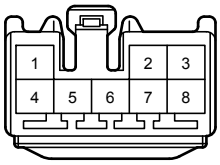


O 43
White

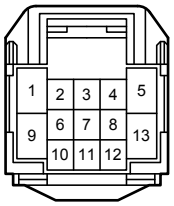


P 17
Black

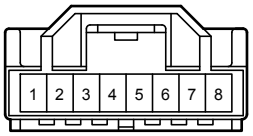


P 18
Black

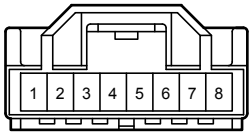


P 21
White

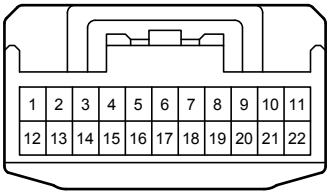


P 22
White

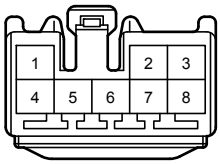


P 23
White

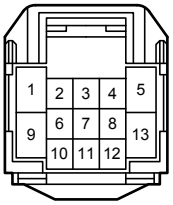


DC
White

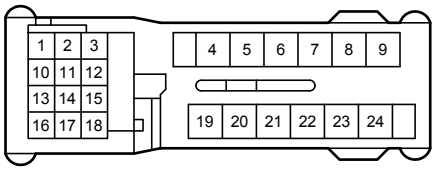


DD
White

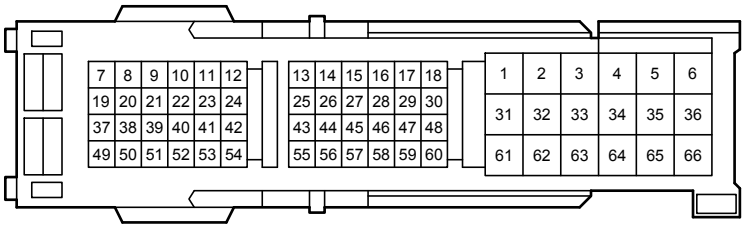


HP1
Gray

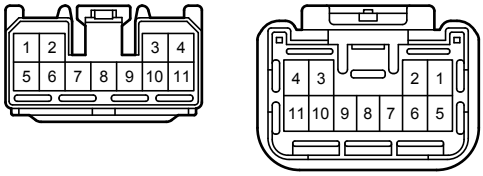

HP2
Gray

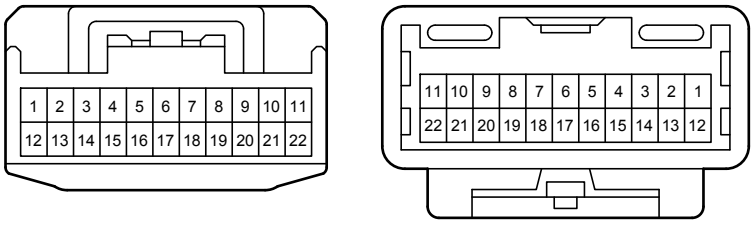

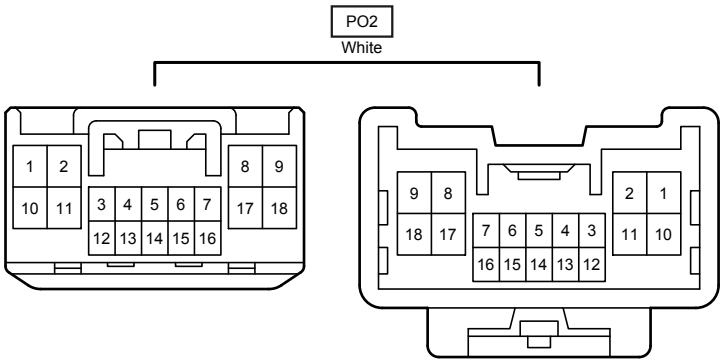
PO2
White
1
2
10
11
3
4
5
6
7
12
13
14
15
16
8
9
17
18
9
8
18
17
7
6
5
4
3
16
15
14
13
12
2
1
11
10