




(IG)
V
V
20A
SEAT–HTR
5 DD
6 DC
GR
9 OX1
G
X12
Front Seat Heater Control Sub–Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
4
G
6
W–B
11 OX1
W–B
5
Y
2 OX1
V
2 OH2
L
7
1
P
1 OX1
P
3 OH2
P
3
(IG)
7. 5A
LH–IG
55 DD
SB
H77(A), H78(B)
Junction
Connector
10 A
1 B
B
B
9
RV
SW
IG
E
H47
Front Seat Heater
Switch LH
4
W–B
W–B
W–B
2
H85
Junction
Connector
5
W–B
10
W–B
W–B
O1
H1
H2


V
W8
Front Seat Heater Control Sub–Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
SWR
THR
E
B1
V
5 HP1
Y
2 PW2
P
H77(A), H78(B)
Junction
Connector
2 B
V
1
R
2 PW1
L
10 HP2
BE
2
5
LG
1 PW1
W
11 HP2
GR
5
6
W–B
P
4
8
W14
Junction
Connector
2
W–B
3 PW2
W–B
P1
V
7
IG
SW
RV
E
3
H48
Front Seat Heater Switch RH
W–B


H 47
Black

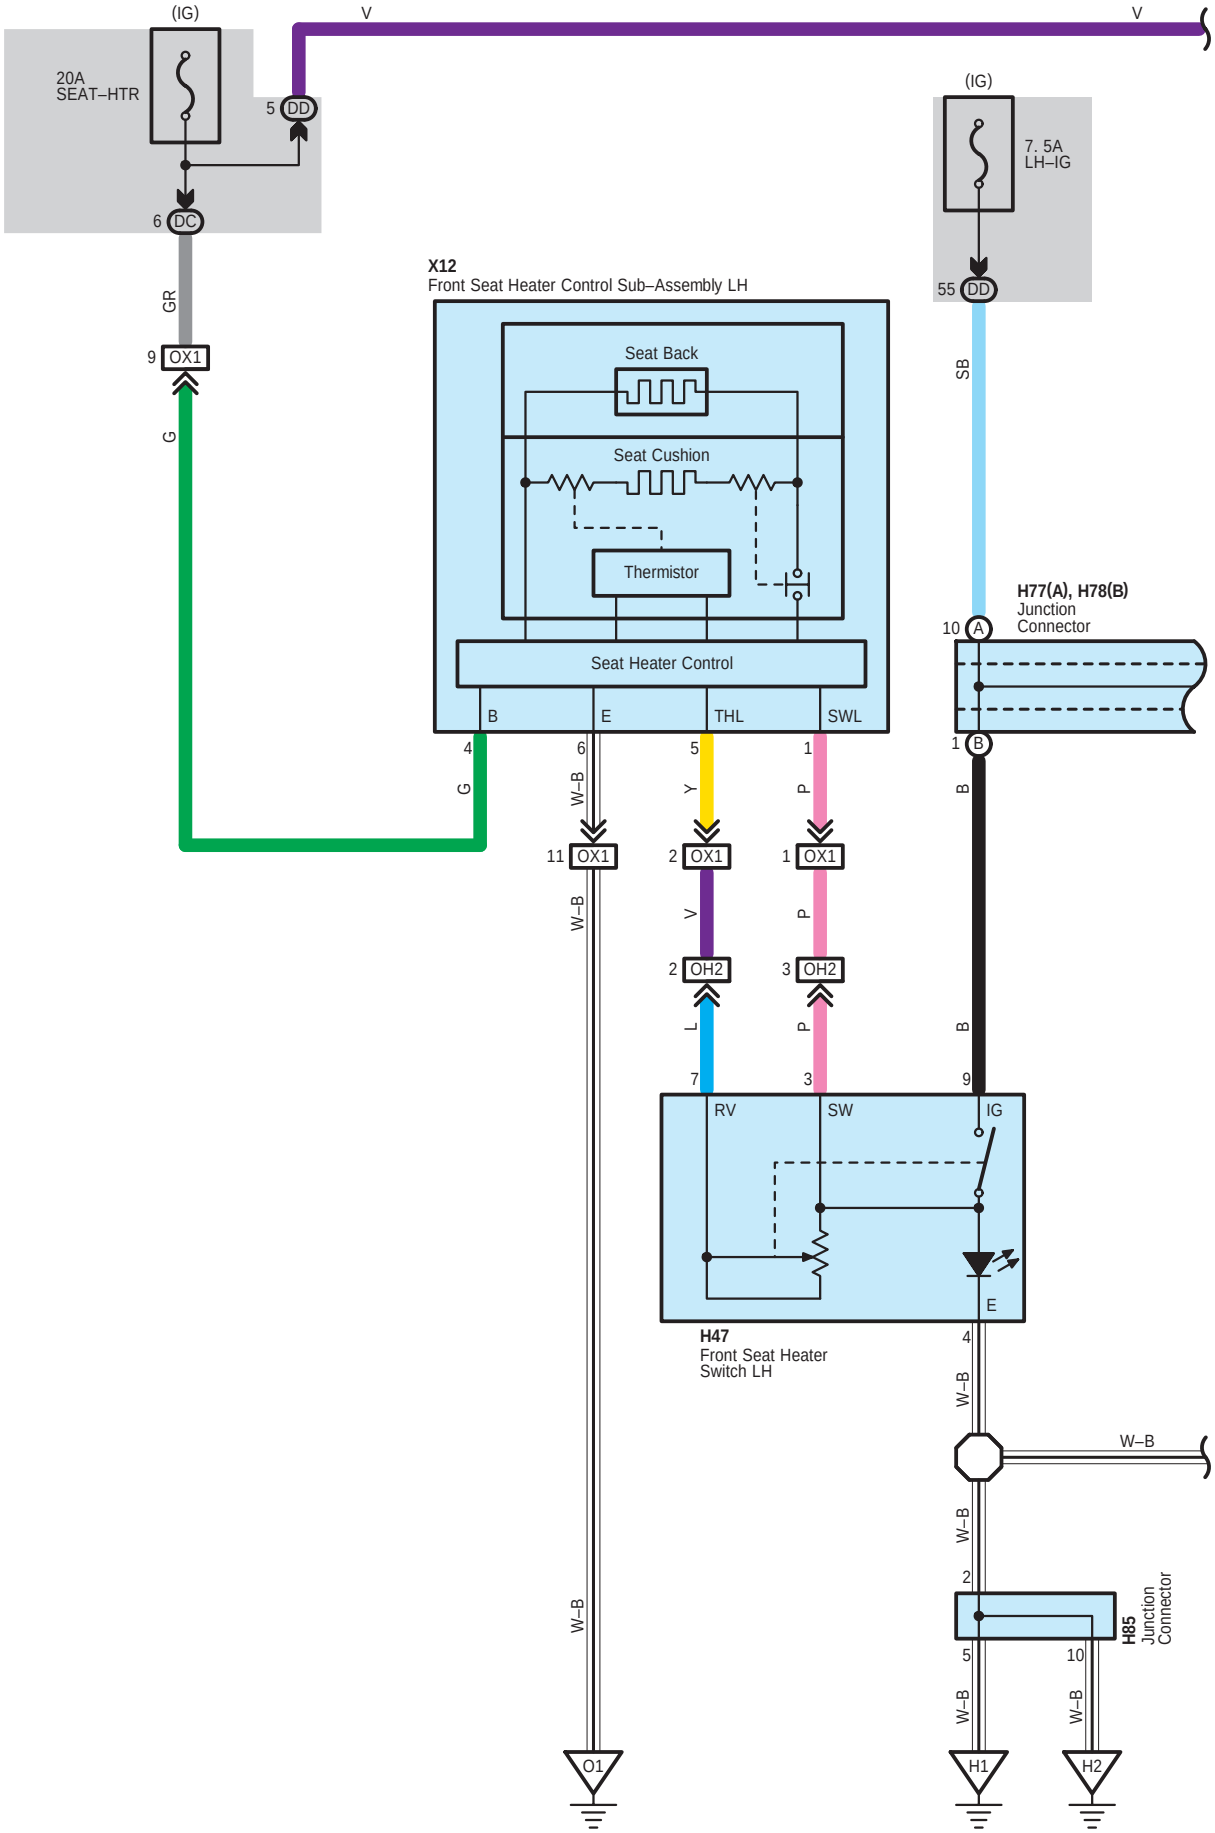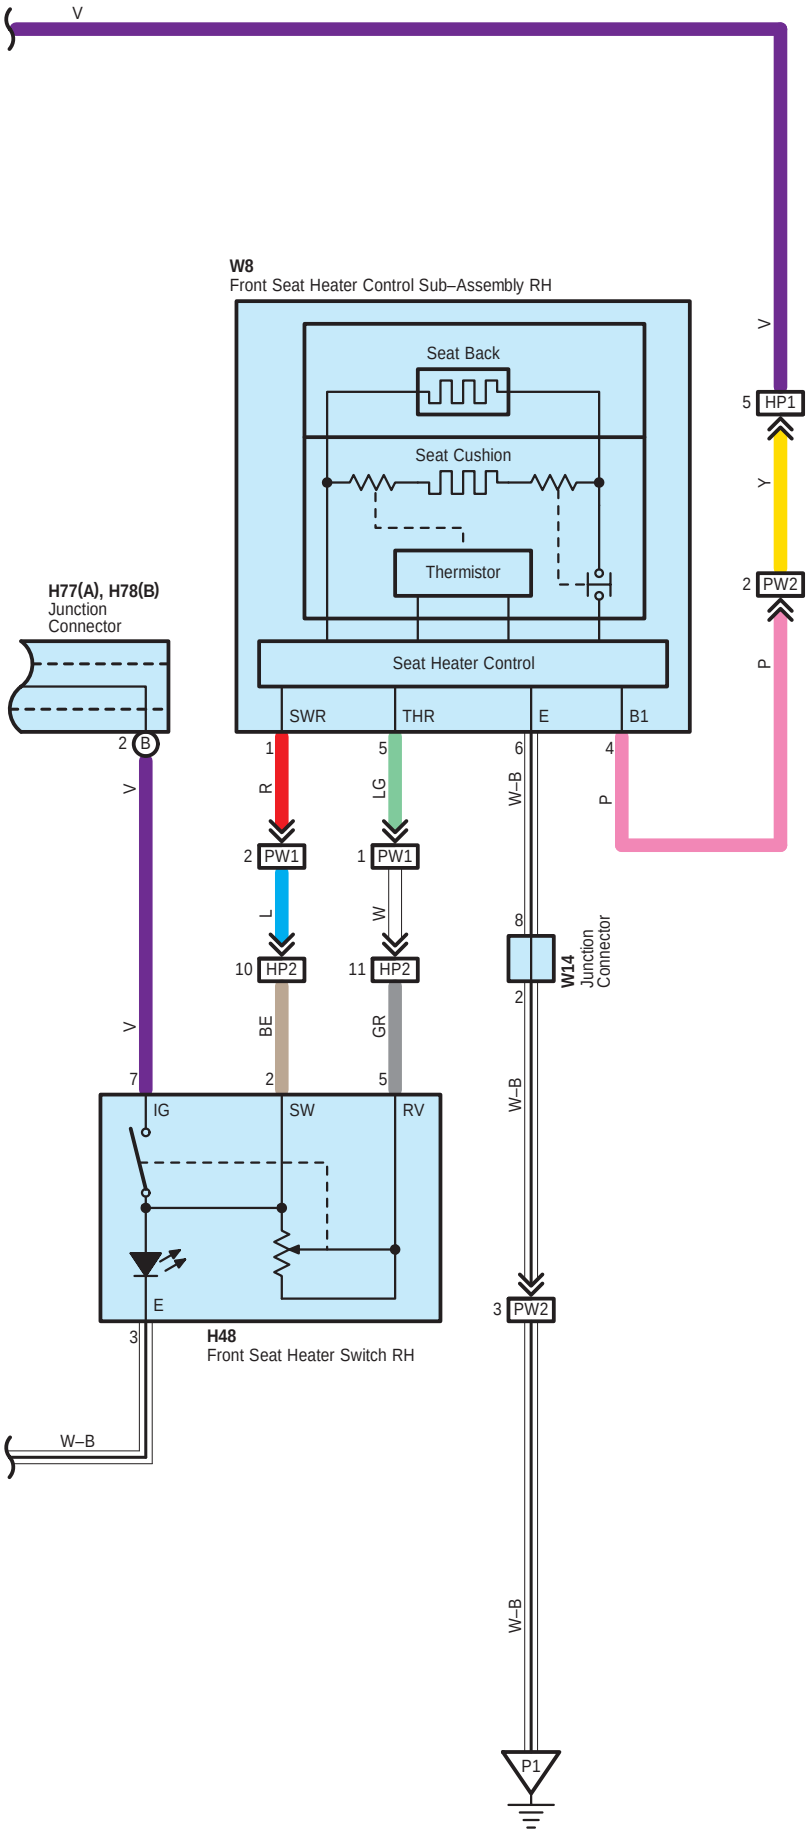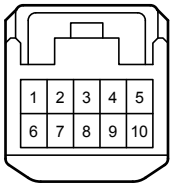


H 48
Black

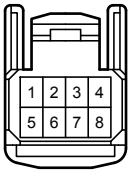


H 77
Black

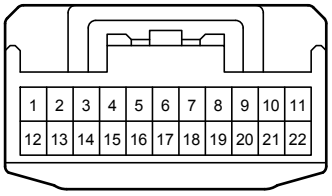

H 78
Black

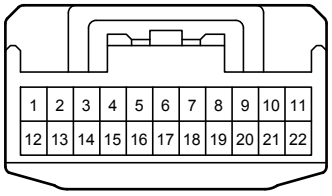


H 85
White

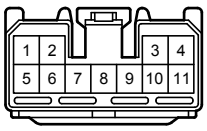

W 8
White




W 14
White

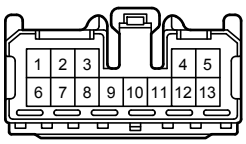


X 12
White




DC
White

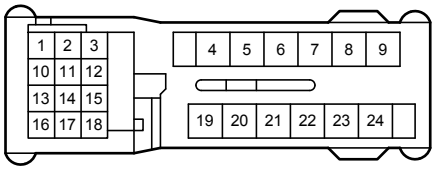


DD
White

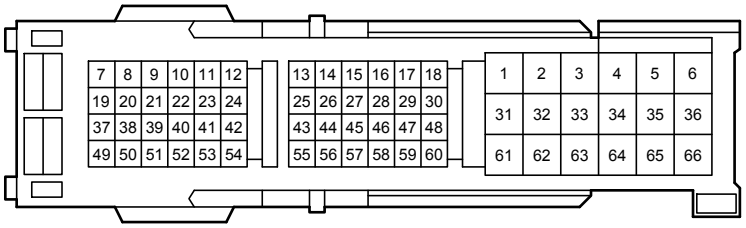


HP1
Gray

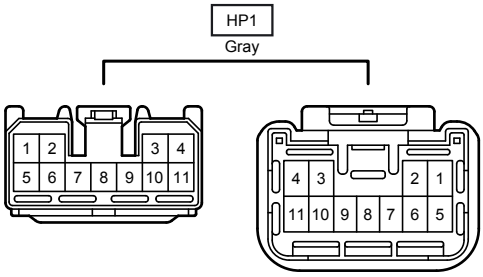



HP2
Gray

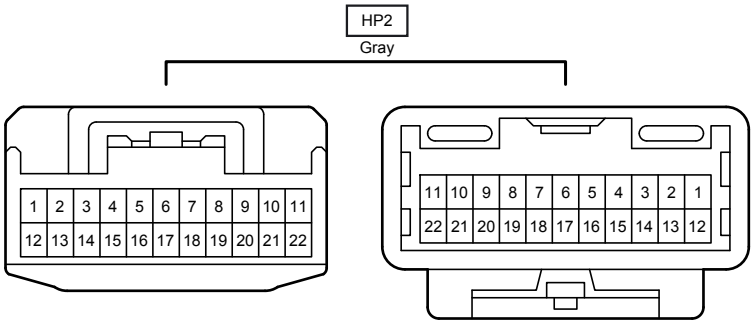


OH2
Black

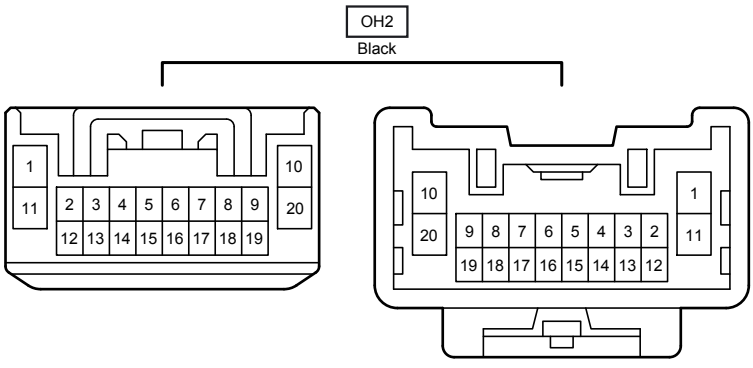

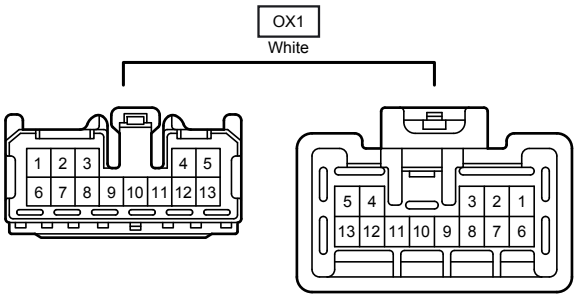
OX1
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6

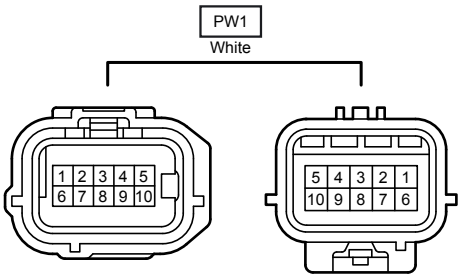
PW1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

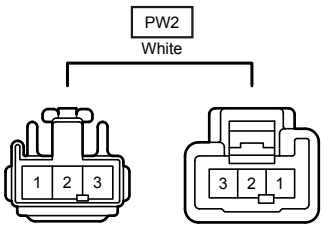
PW2
White
1 2 3
3 2 1