




(BAT)
(ACC)
(IG)
(BAT)
7. 5A ECU–B1
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
H2(B), H3(C), H4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND2
GND1
DCTY
2
1
GR
6
15
22
26
4
5
24
D
BR
13
DB
62
DD
GR
W–B
1
A
10
B
H79(A), H80(B)
Junction Connector
W
1
A
11
B
H77(A), H78(B)
Junction Connector
BR
15
OH2
SB
1
O8
Front Door Courtesy
Light Switch LH
W–B
4
H85
Junction Connector
5
10
W–B
W–B
H1
H2



H2(B), H3(C), H4(D)
Main Body ECU
PCTY
LIN2
UL3
L2
(BAT)
(IG)
25A S/ROOF
7.5A ECU–IG No. 1
H81 Junction Connector
H79(A) Junction Connector
H77(A), H78(B) Junction Connector
P6 Front Door Courtesy Light Switch RH
M4 Front Door Lock Assembly LH
Key Unlock
Key Lock
U3
Sliding Roof Control ECU
MPX1
B
IG
OPN
CLS
DWN
UP
E
Sliding Roof Control Switch
Open
Close
Down
Up
SLIDE
TILT
U7
Roof Console Box Assembly
H85 Junction Connector


* 1 : w/o Electronic Modulated Air Suspension
* 2 : w/ Electronic Modulated Air Suspension
H2(B), H3(C), H4(D)
Main Body ECU
CANL
CANH
(BAT)
(IG)
5A
MET–B
7. 5A
MET
H37
Combination
Meter Assembly
Power Circuit
Buzzer
B
IG+
+B
IG
E1
CANH
CANL
AH9
OH3
O41(A)
Junction
Connector
H119
Junction Connector
AH10
H85
Junction
Connector
H1
H2
A19
ABS and Traction Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors


A 19
Black

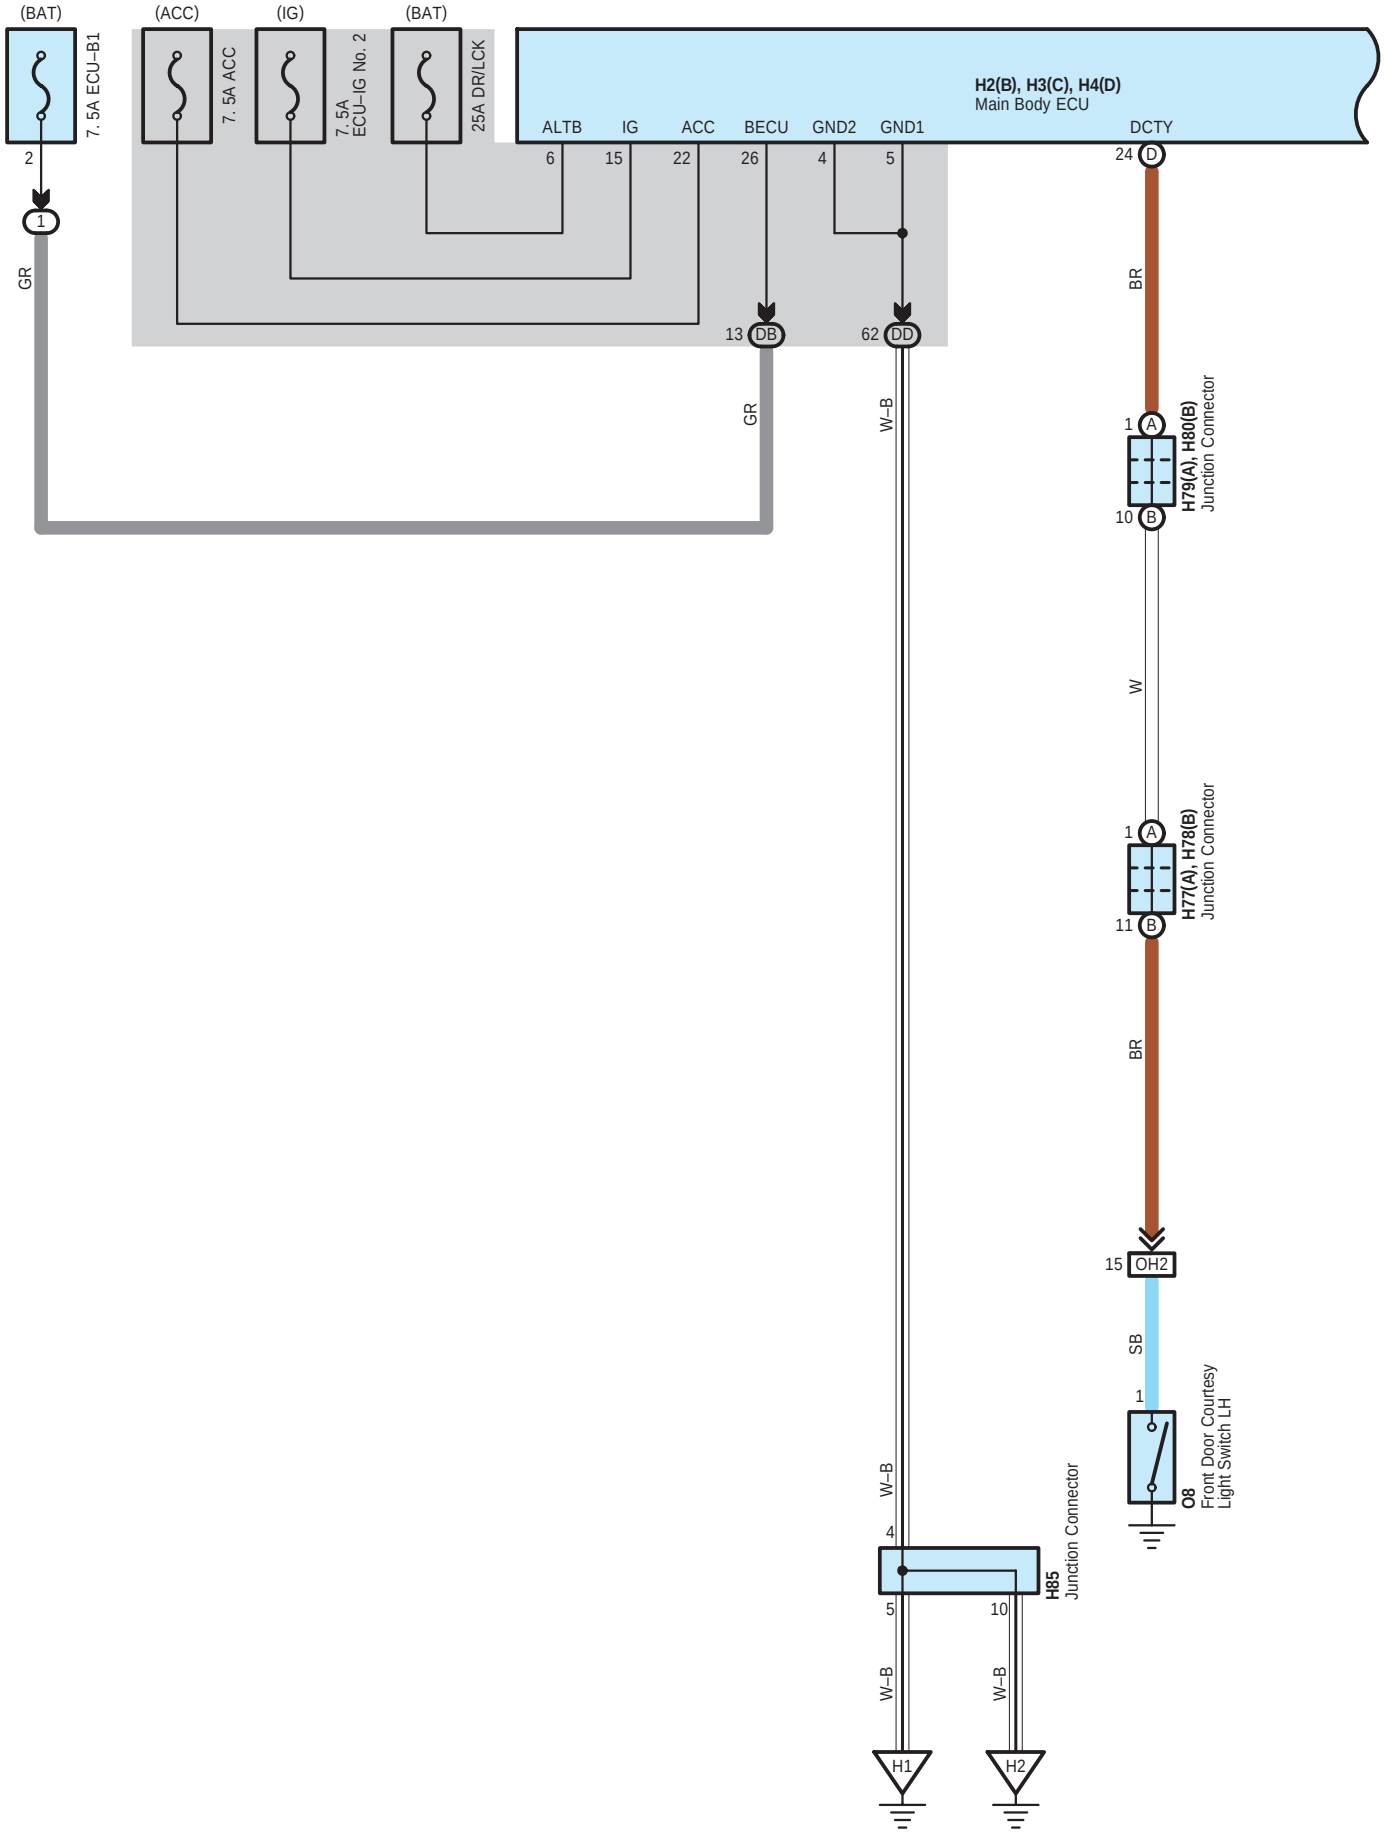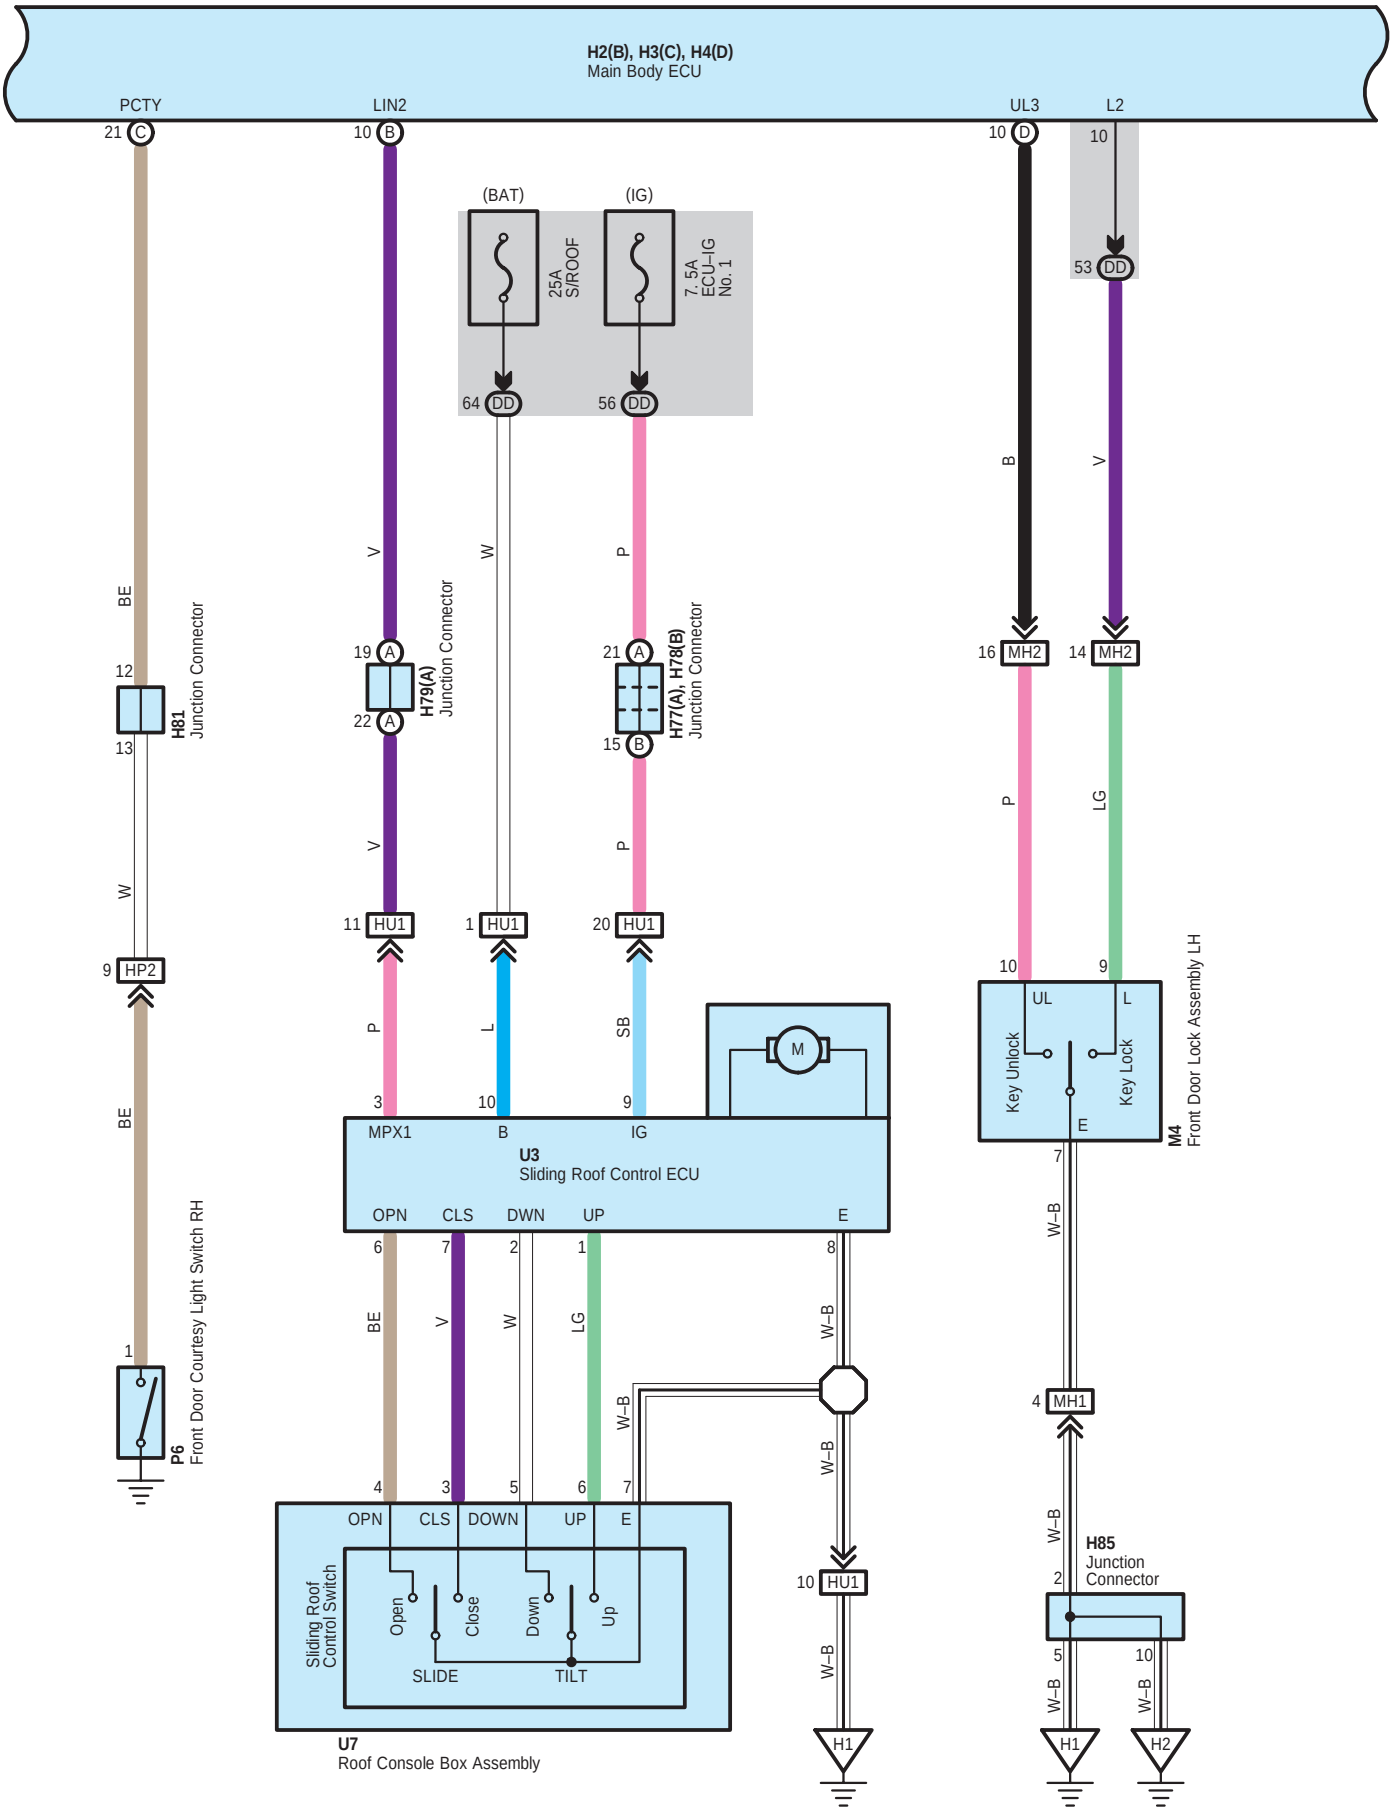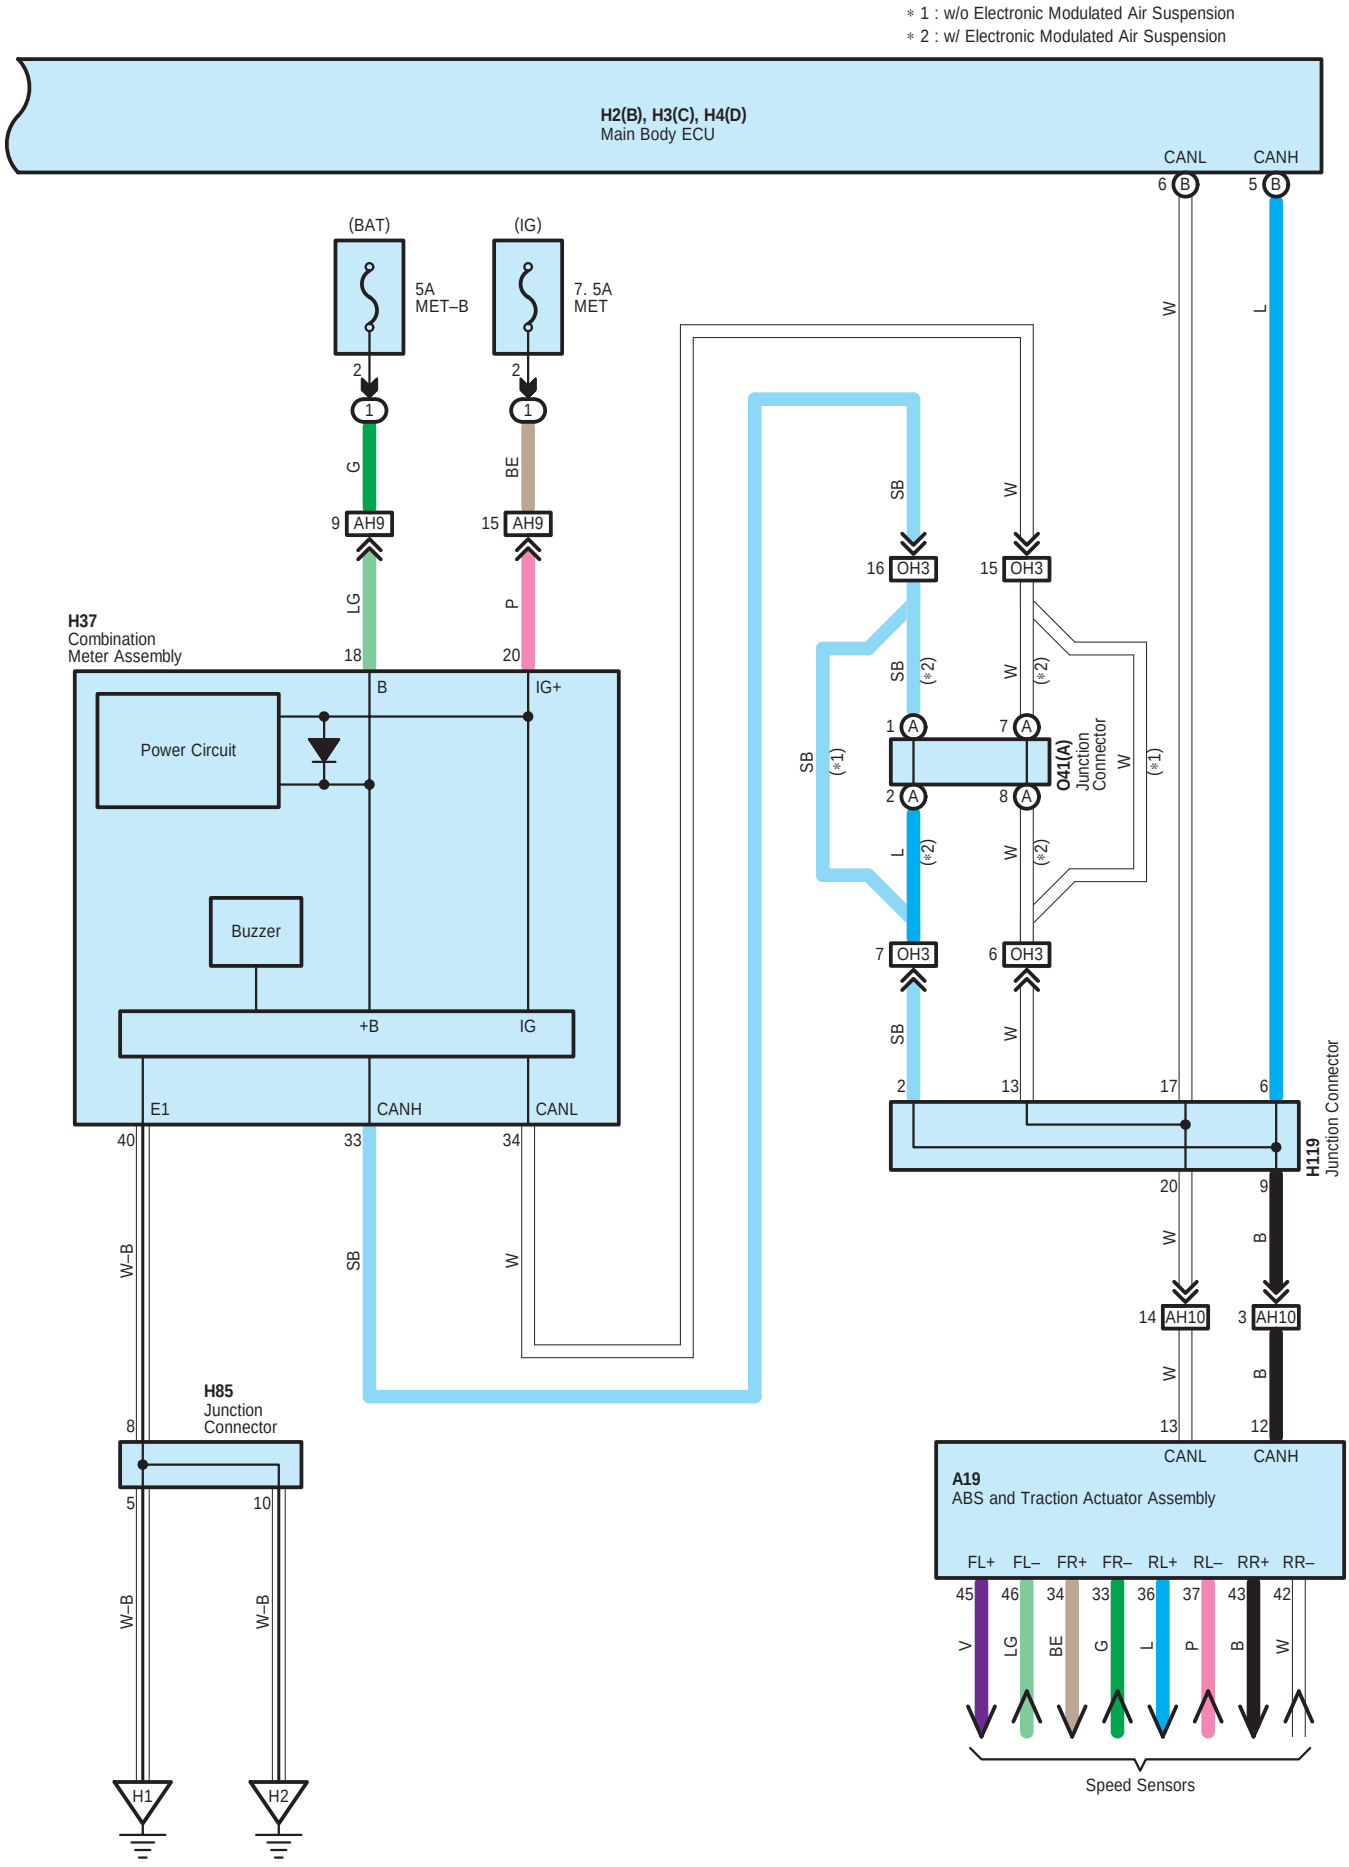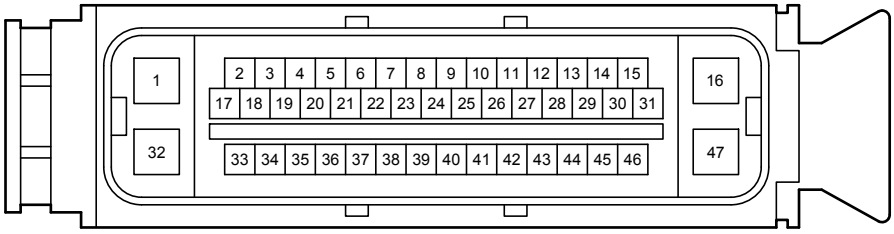


H 2
White

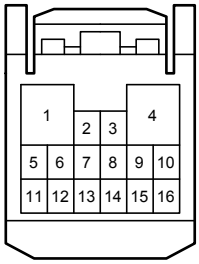


H 3
White

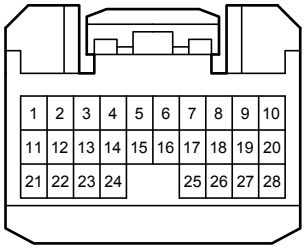


H 4
White

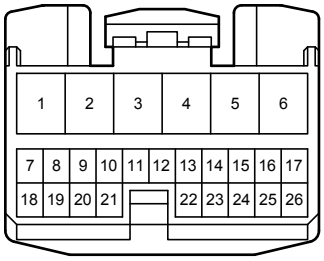


H 37
White

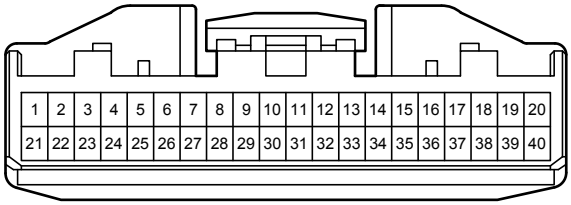


H 77
Black

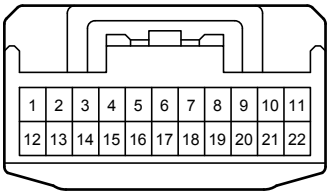


H 78
Black

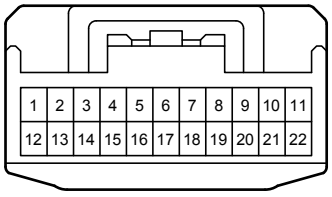


H 79
Black

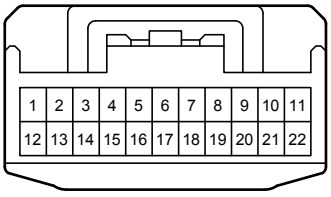


H 80
Black

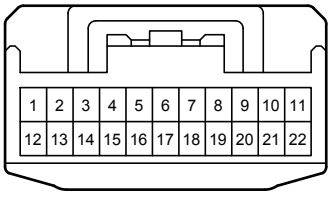


H 81
White

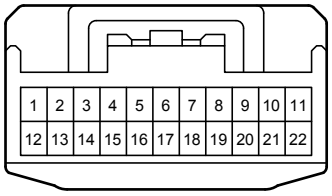


H 85
White

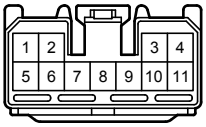

H119
Gray

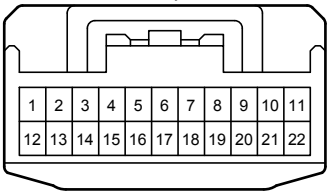


M 4
White

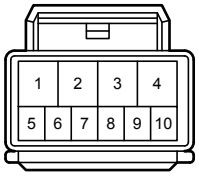

O 8
White




O 41
White

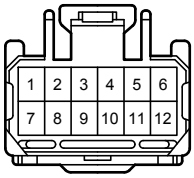


P 6
White




U 3
White

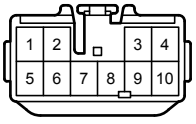


U 7
White

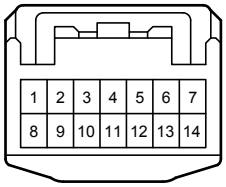


DB
White

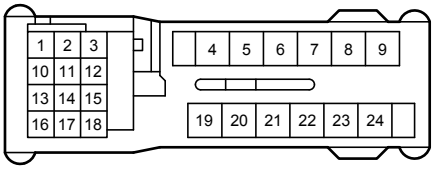


DD
White

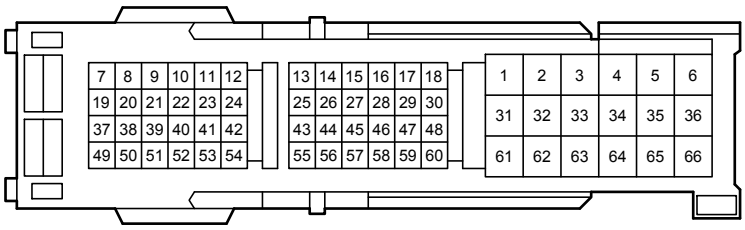


AH9
Gray

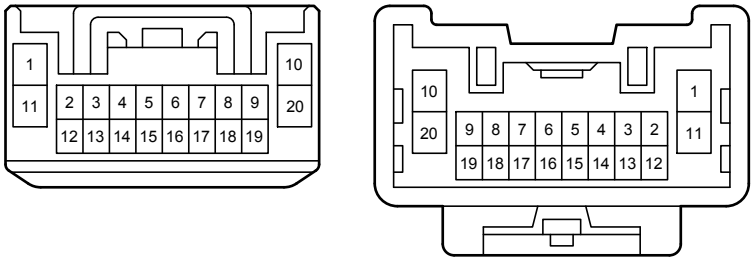


AH10
Gray

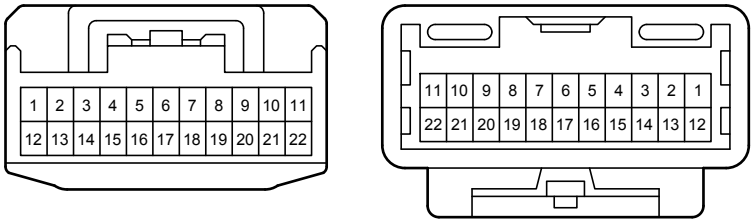


HP2
Gray

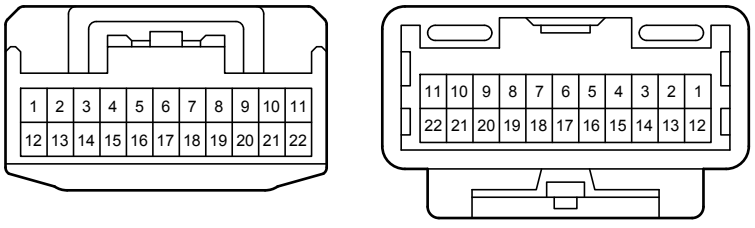


HU1
White

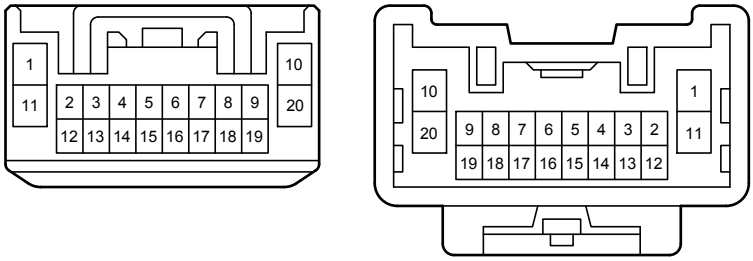


MH1
Blue

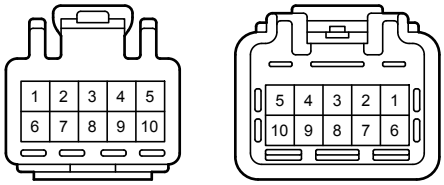

MH2
Blue

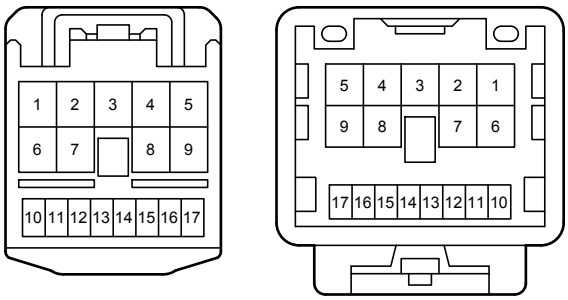

OH2
Black

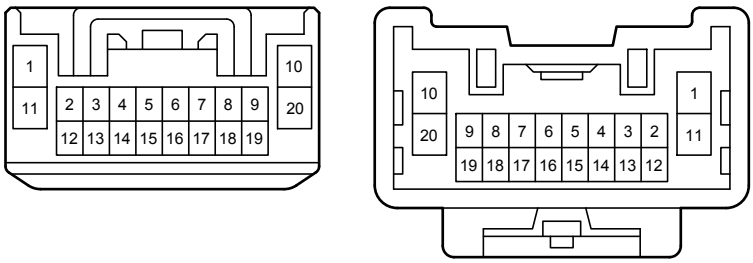

OH3
White

