





(BAT)
7. 5A ECU–B1
2
1
GR
(ACC)
7. 5A ACC
(IG)
7. 5A ECU–IG No. 2
(BAT)
25A DR/LCK
H1(A), H2(B), H3(C), H4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND2
GND1
6
15
22
26
4
5
13 DB
62 DD
GR
W–B
W–B
4
H85
Junction Connector
5
10
W–B
W–B
H1
H2



H1(A), H2(B), H3(C), H4(D)
Main Body ECU
TRLY
HRLY
HORN
HAZ
(BAT)
150A
LH–J/B
40A
MAIN
10A
HORN
HORN Relay
TAIL Relay
HEAD Relay
H86(A)
Junction Connector
H39
Turn Signal Flasher Assembly
A9
Low Pitched
Horn Assembly
A8
High Pitched
Horn Assembly



H1(A), H2(B), H3(C), H4(D)
Main Body ECU
SH
DCTY
PCTY
LCTY
RRCY
(BAT)
5A
MET–B
SECURITY
HORN Relay
A33
Security
Horn Assembly
AH10
H79(A), H80(B)
Junction Connector
H77(A), H78(B)
Junction Connector
H81(A)
Junction Connector
OH2
HP2
OO1
HP2
O8
Front Door Courtesy
Light Switch LH
P6
Front Door Courtesy
Light Switch RH
O7
Rear Door Courtesy
Light Switch LH
P7
Rear Door Courtesy
Light Switch RH
(BAT)
7. 5A
DOME
AH9
W
BR
BE
G
LG
SB
L
R
Y
B
(*3)
(*4)

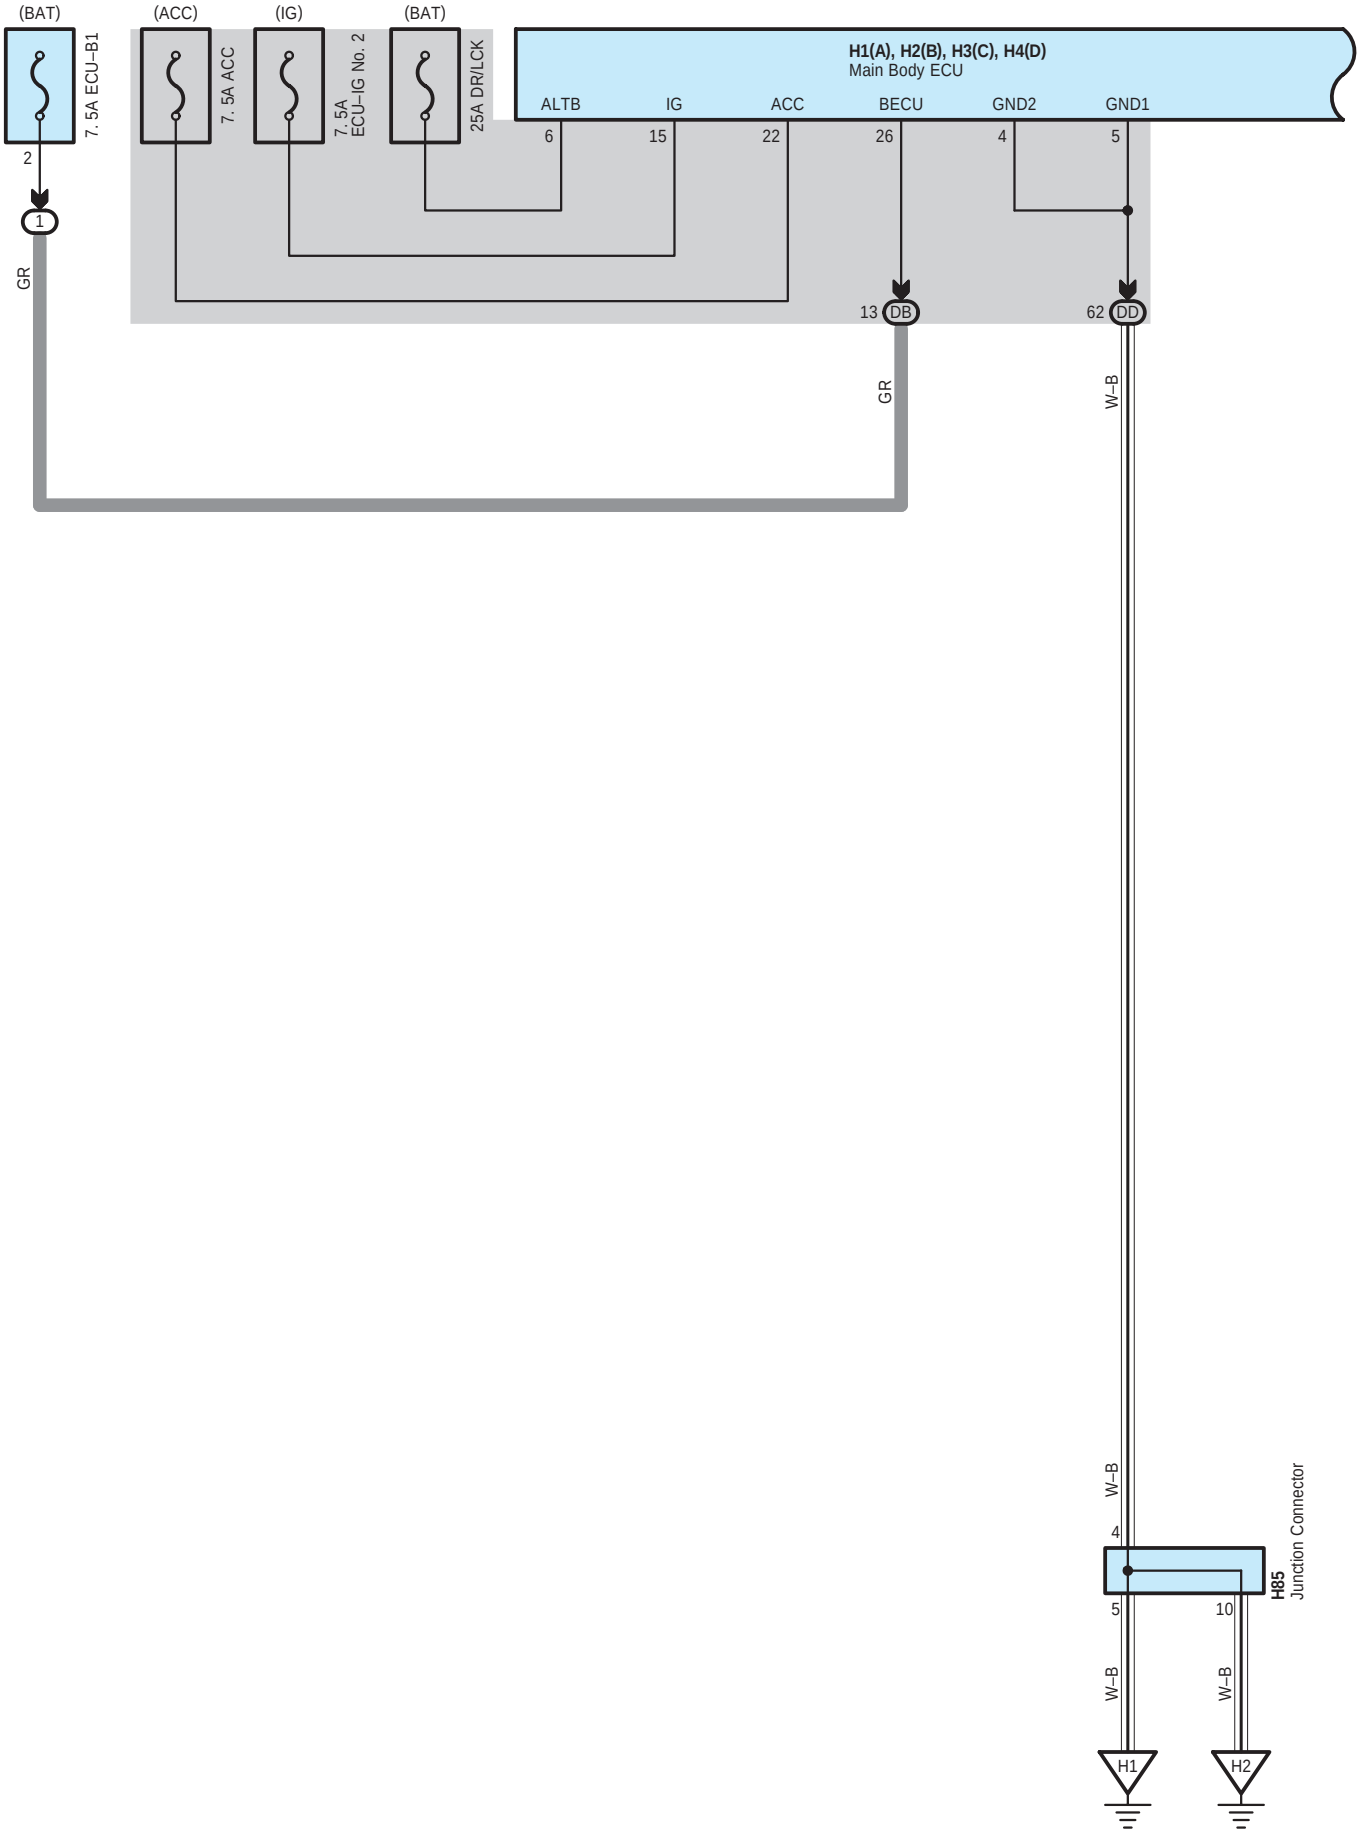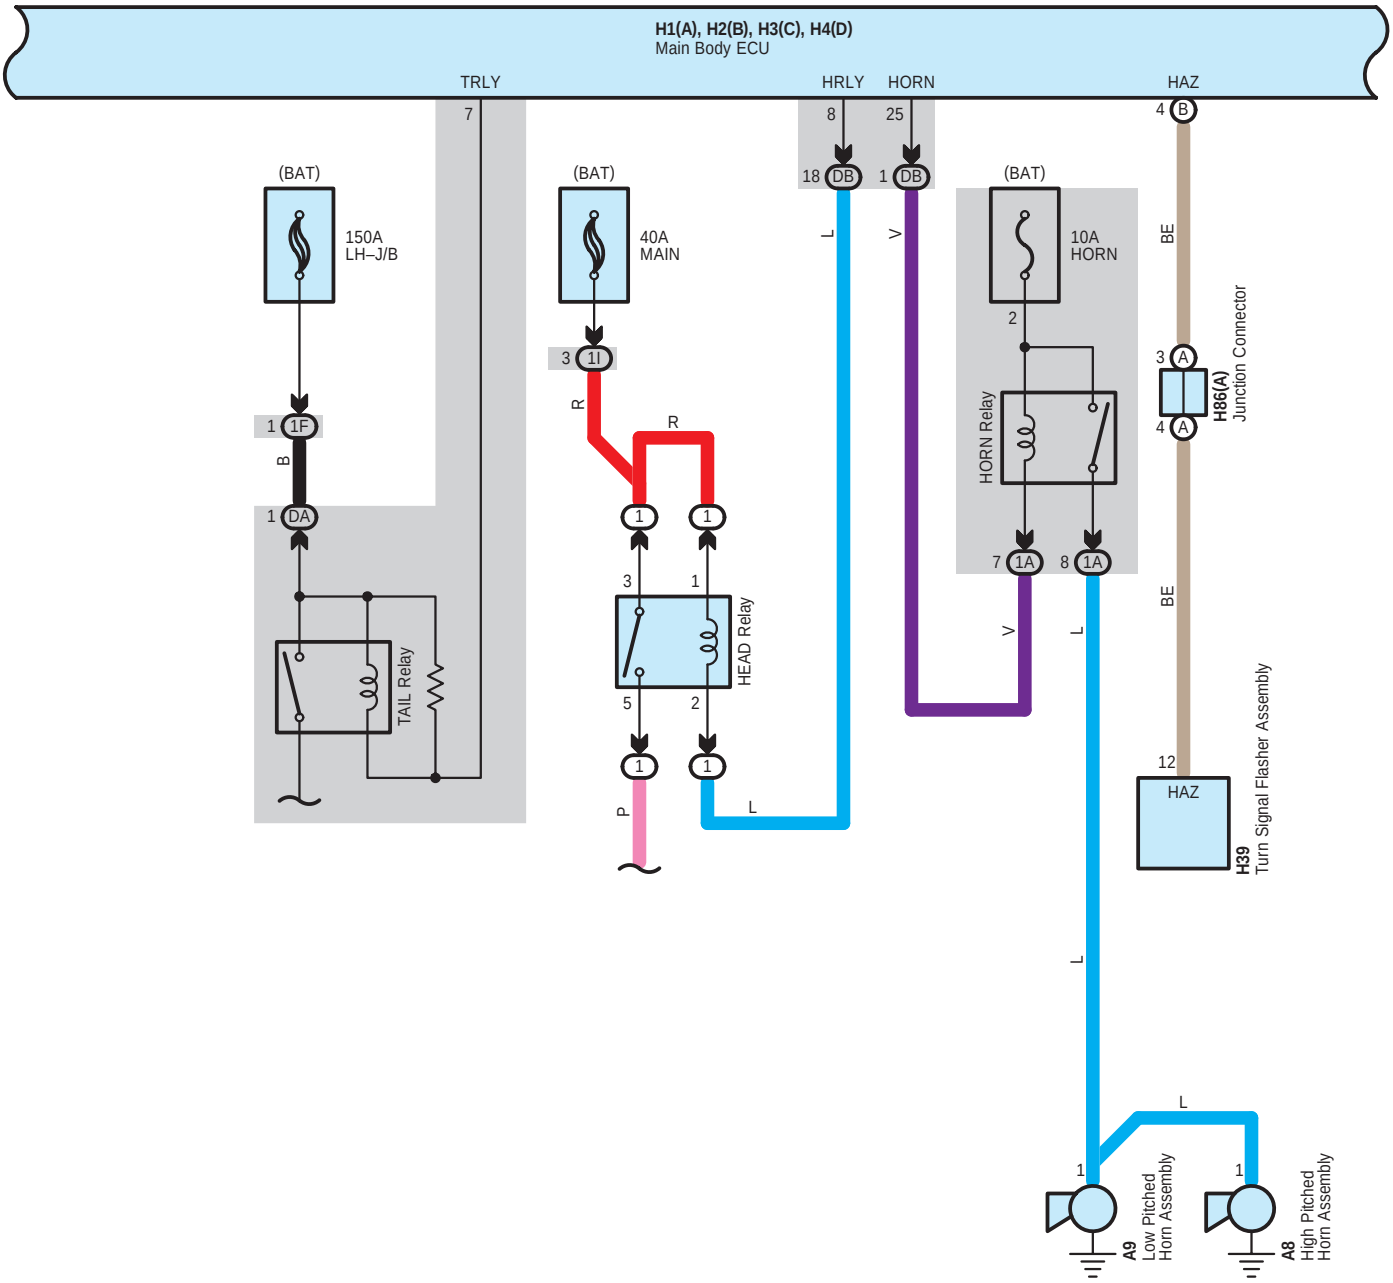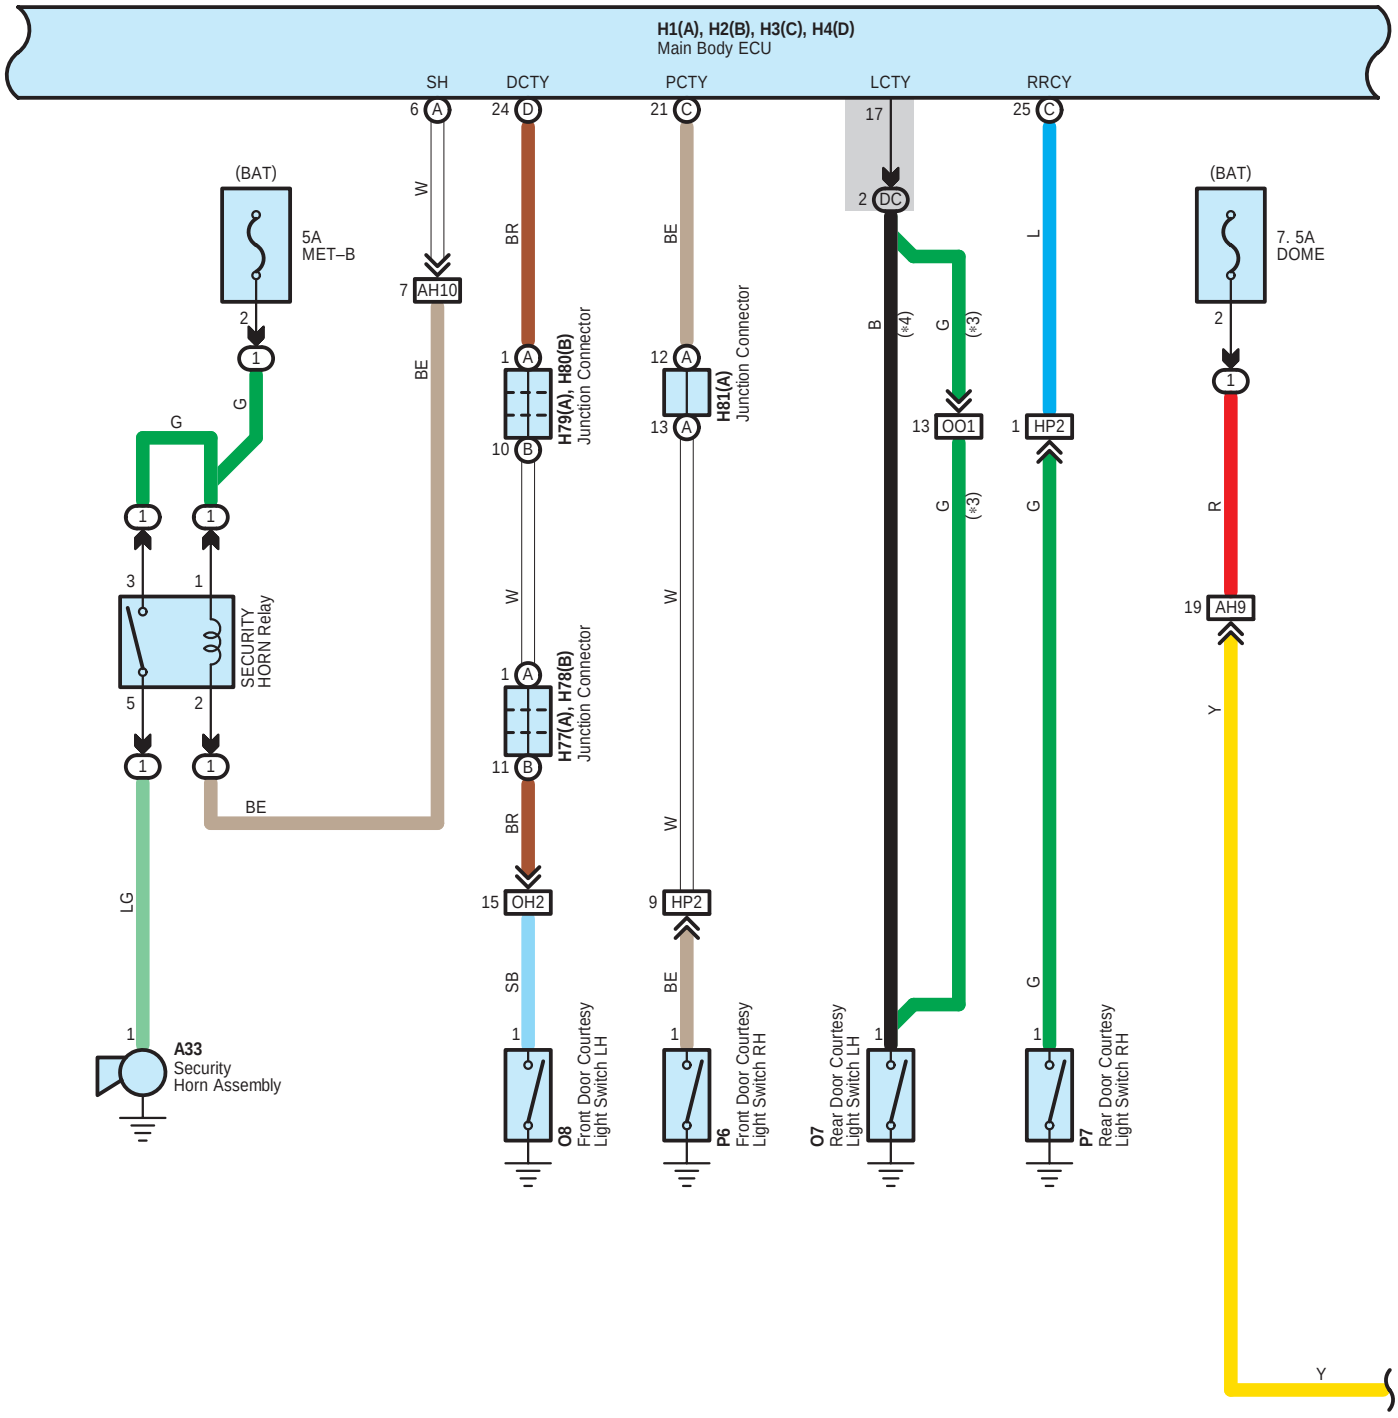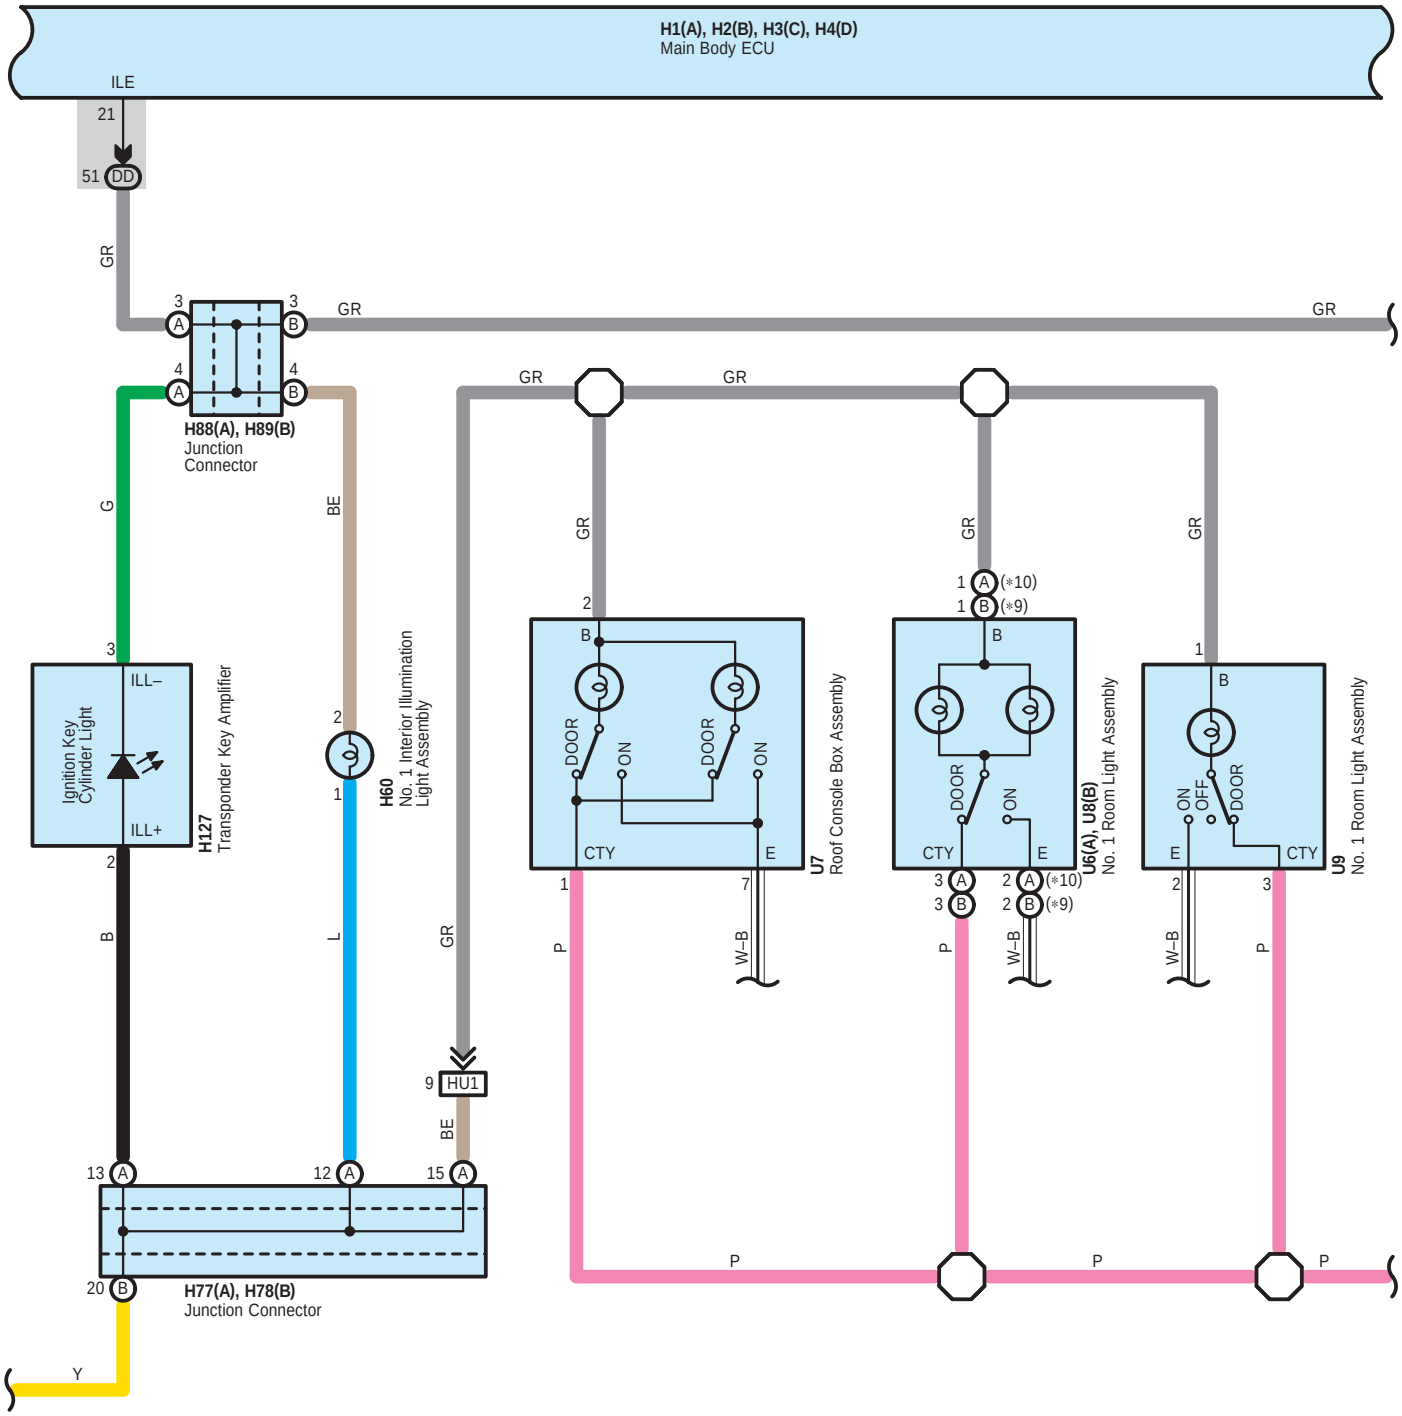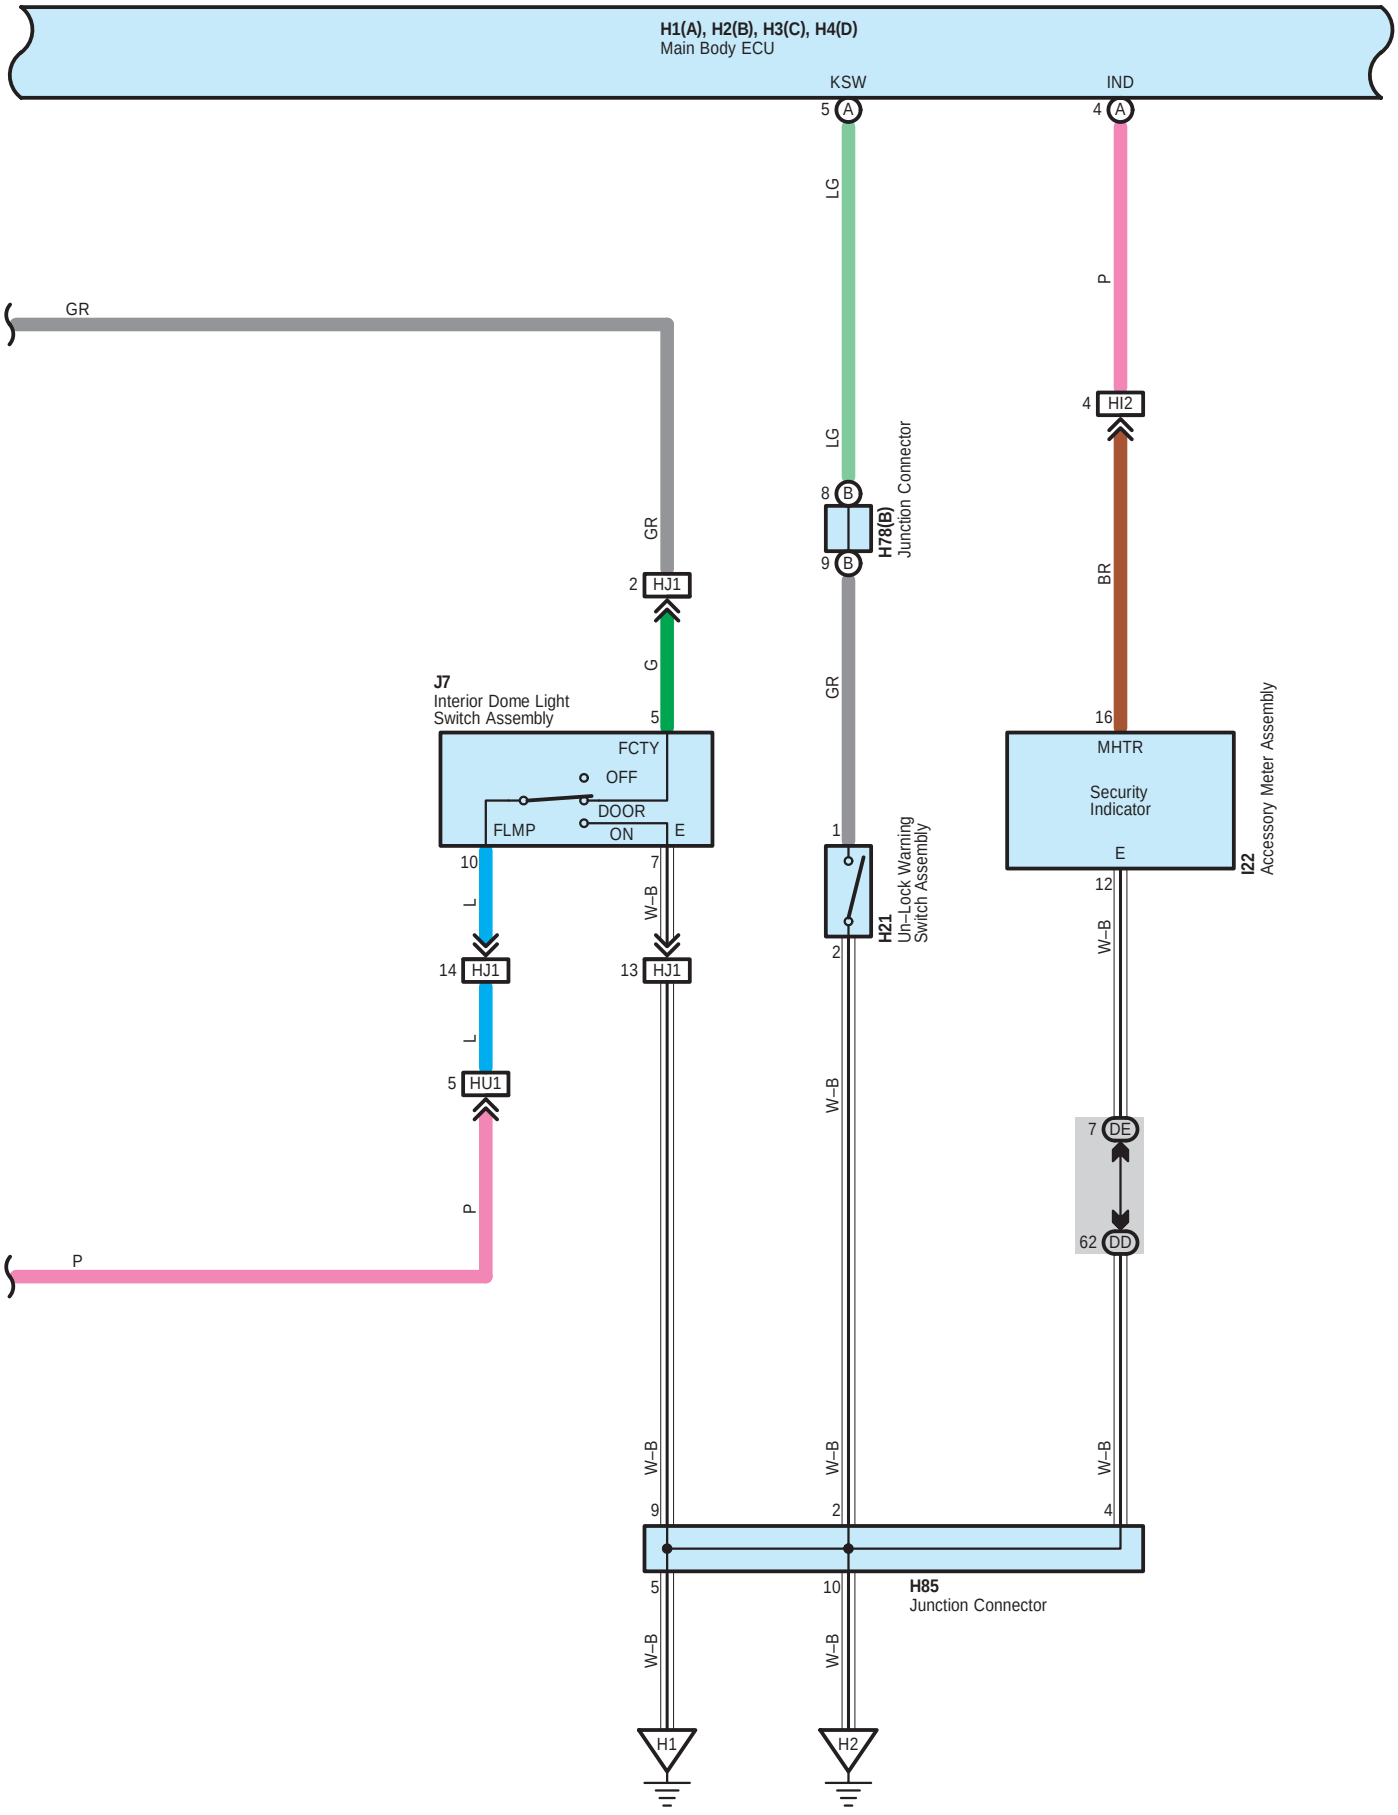


∗ 3 : w/ Power Rear No. 2 Seat with Stowing Function
∗ 4 : w/o Power Rear No. 2 Seat with Stowing Function
∗ 9 : w/ Rear Seat Entertainment System
∗10 : w/o Rear Seat Entertainment System



H1(A), H2(B), H3(C), H4(D)
Main Body ECU
KSW
IND
5 A
4 A
LG
P
GR
4 HI2
LG
8 B
H78(B)
Junction Connector
9 B
BR
GR
2 HJ1
G
J7
Interior Dome Light
Switch Assembly
5
16
MHTR
Security
Indicator
E
I22
Accessory Meter Assembly
FCTY
OFF
DOOR
FLMP
ON
E
1
H21
Un–Lock Warning
Switch Assembly
10
7
12
W–B
L
14 HJ1
13 HJ1
L
5 HU1
P
7 DE
62 DD
P
W–B
9
2
4
5
10
H85
Junction Connector
W–B
W–B
H1
H2

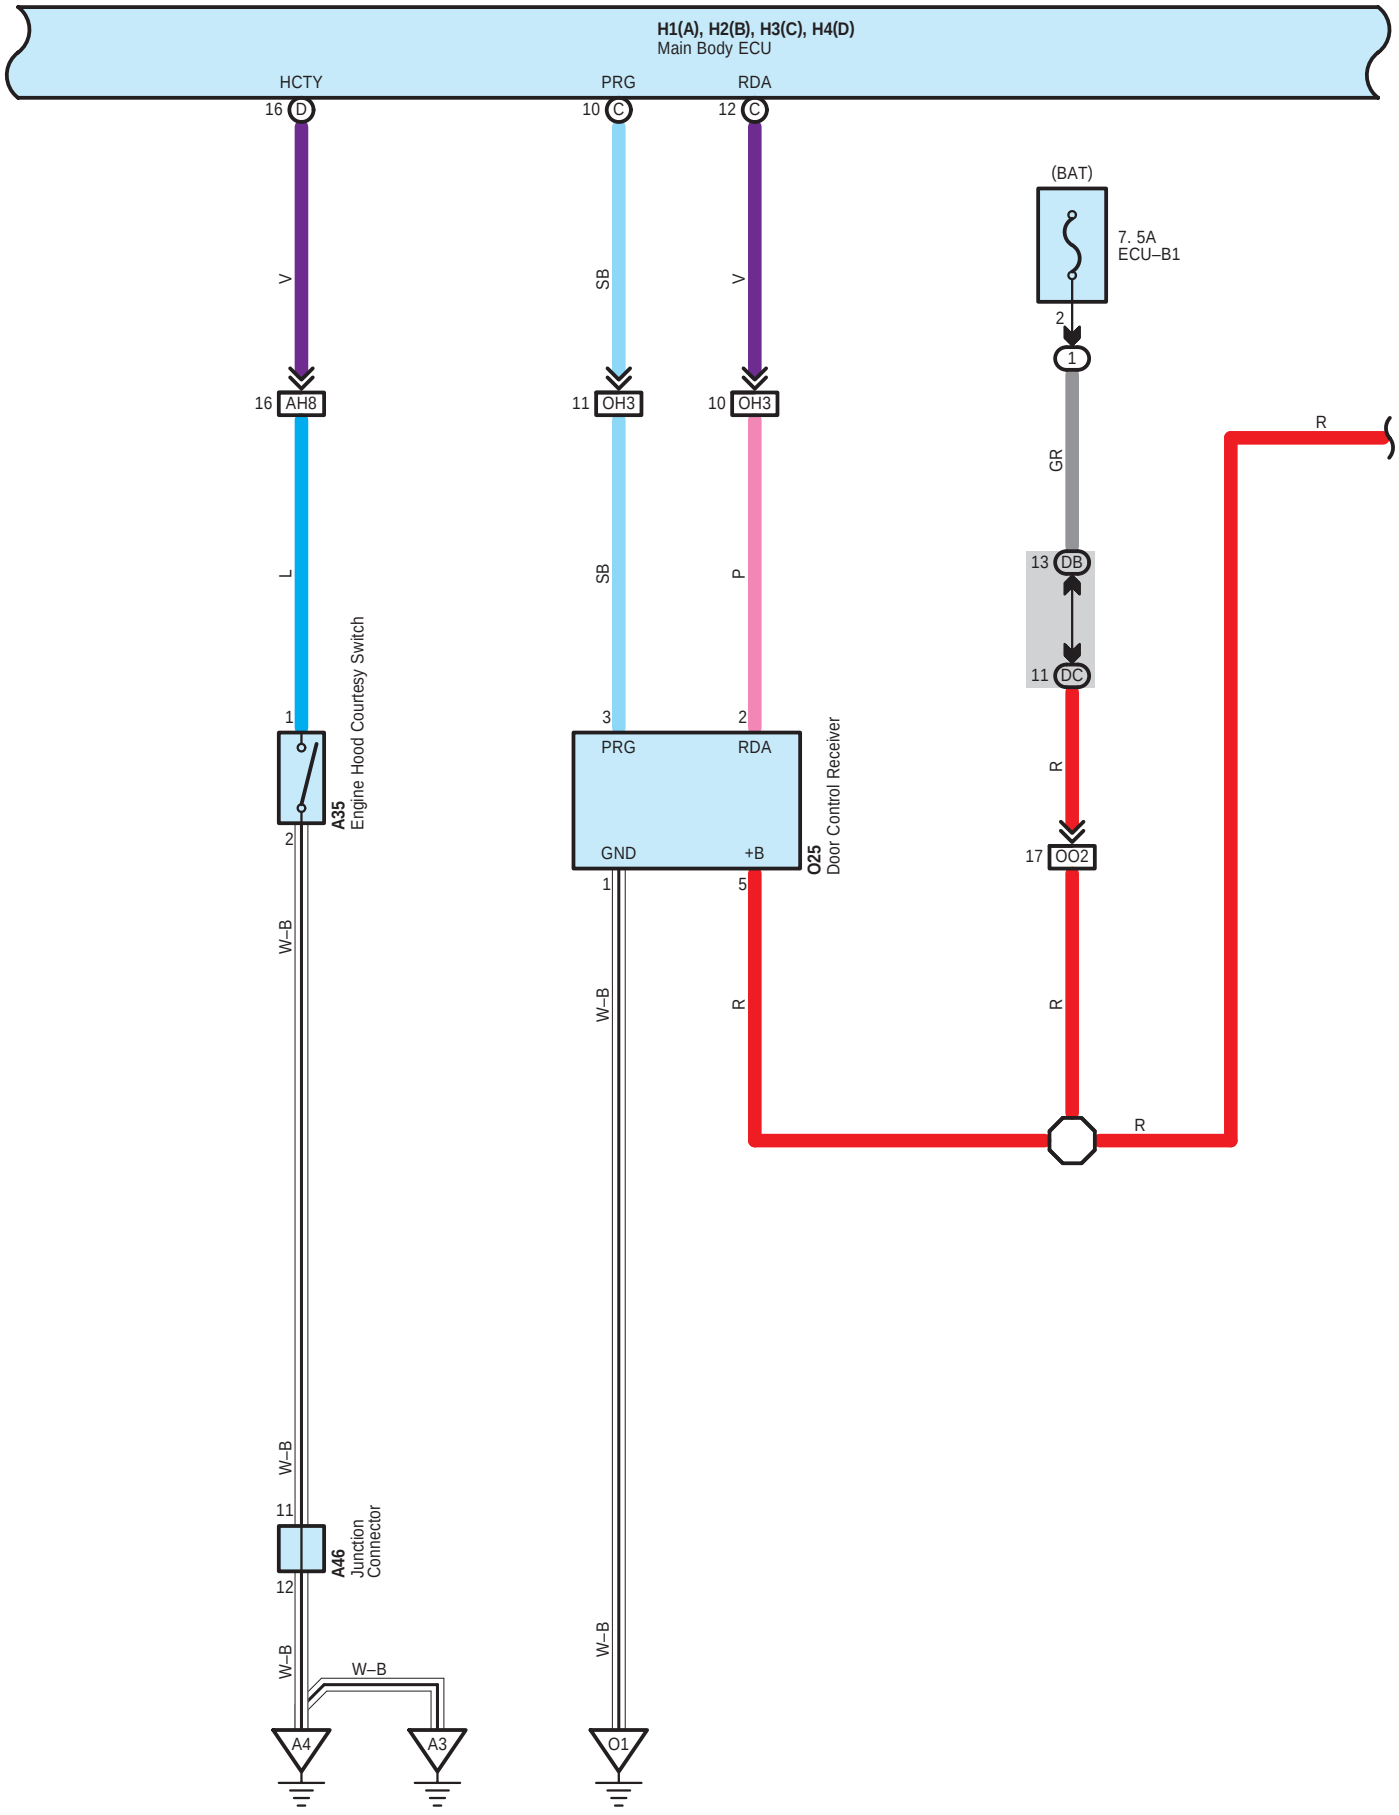
H1(A), H2(B), H3(C), H4(D)
Main Body ECU
HCTY
PRG
RDA
16 D
10 C
12 C
V
SB
V
16 AH8
11 OH3
10 OH3
L
SB
P
1
3
2
A35
Engine Hood Courtesy Switch
PRG
RDA
GND
+B
O25
Door Control Receiver
2
1
5
W–B
W–B
R
11
A46
Junction Connector
12
W–B
W–B
A4
A3
O1
(BAT)
7. 5A
ECU–B1
2
1
GR
13 DB
11 DC
R
17 OO2
R
R
R

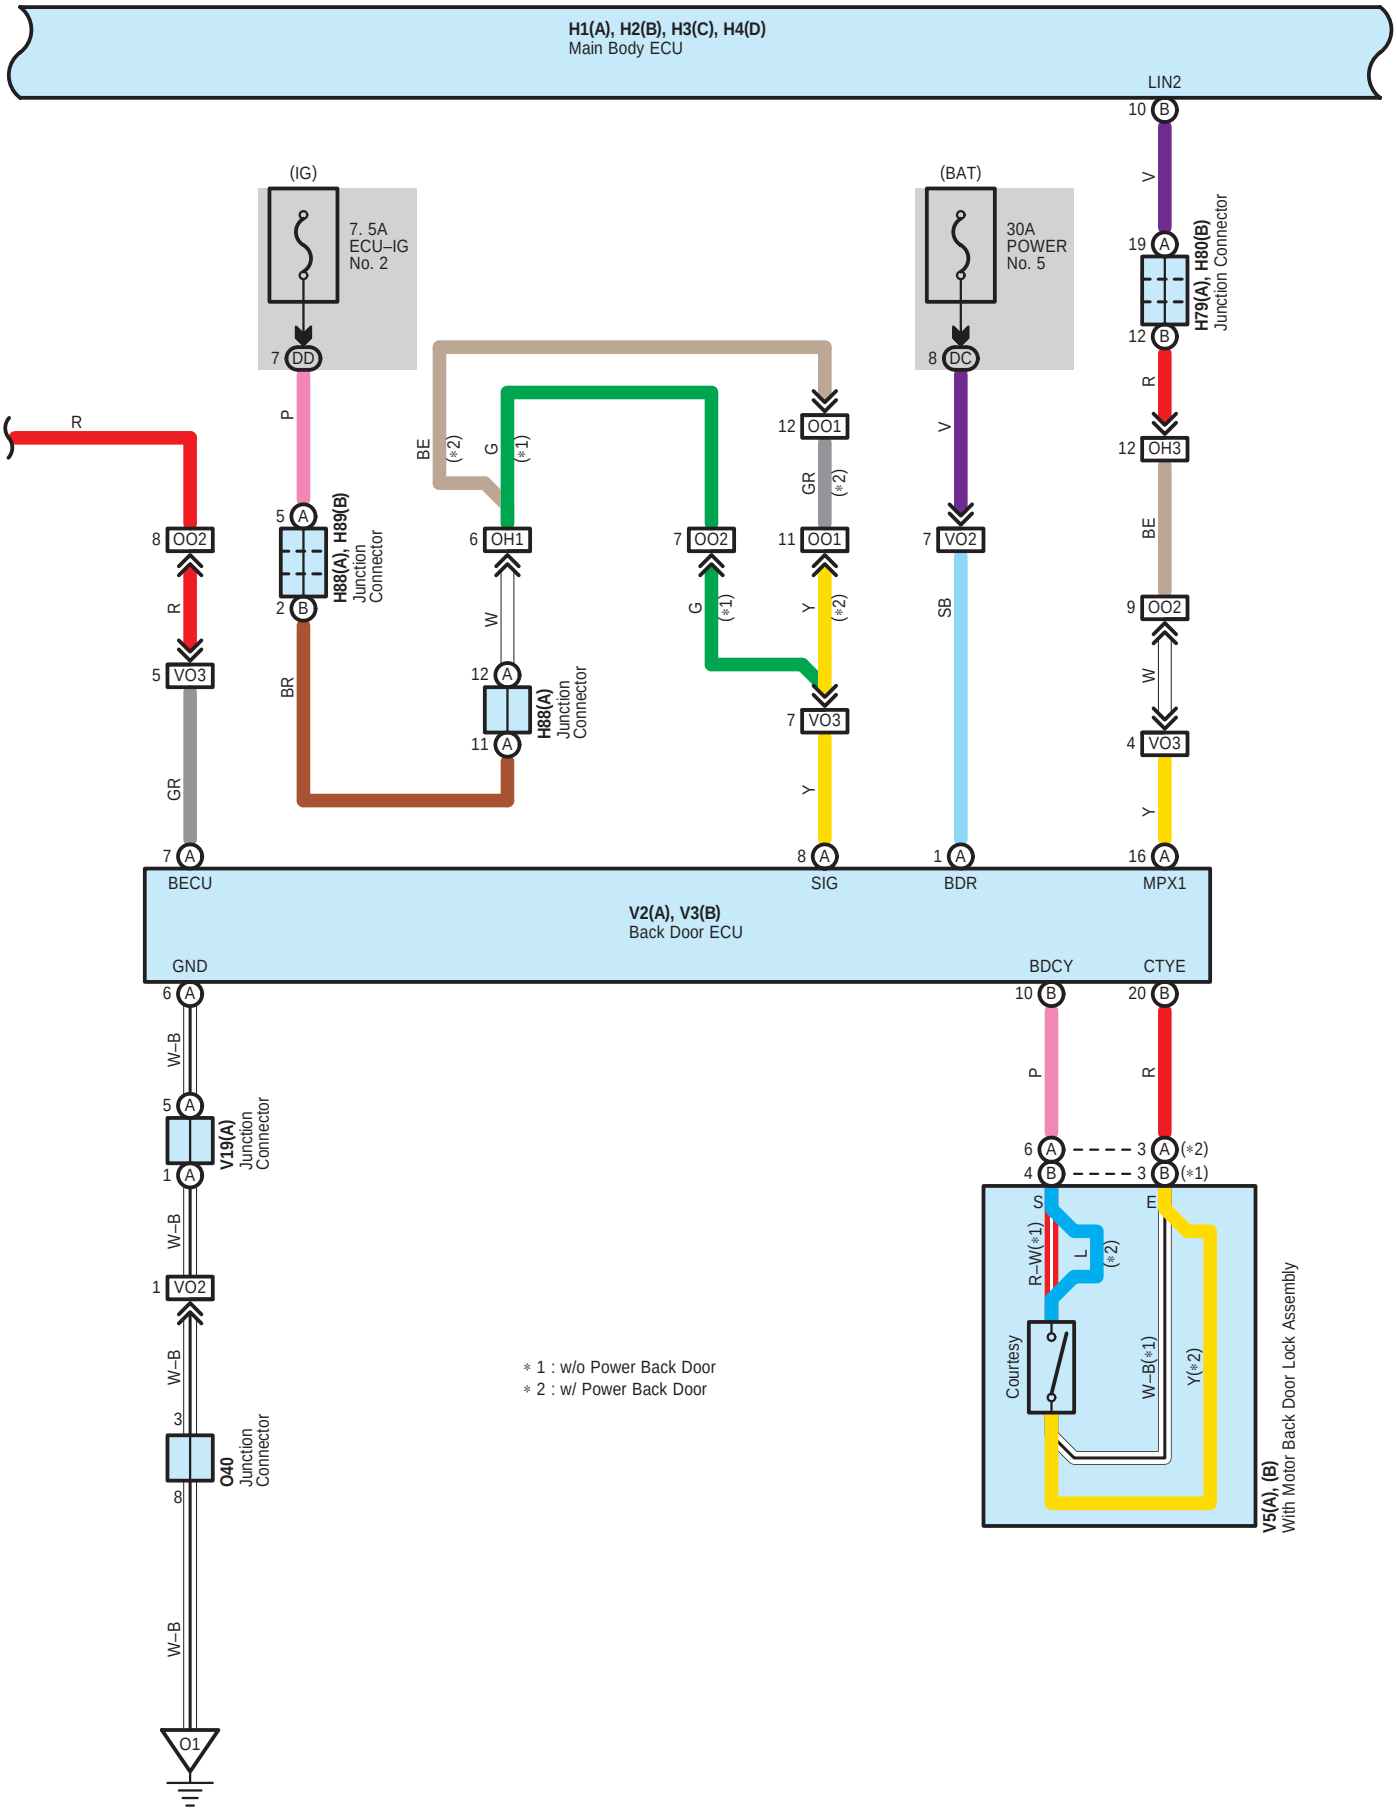
H1(A), H2(B), H3(C), H4(D)
Main Body ECU
LIN2
10 B
V
19 A
12 B
H79(A), H80(B)
Junction Connector
R
12 OH3
BE
9 OO2
W
4 VO3
Y
16 A
MPX1
(IG)
7. 5A
ECU–IG
No. 2
7 DD
P
5 A
2 B
H88(A), H89(B)
Junction
Connector
BR
(BAT)
30A
POWER
No. 5
8 DC
V
7 VO2
SB
1 A
BDR
R
8 OO2
R
5 VO3
GR
7 A
BECU
BE
(*2)
G
(*1)
6 OH1
W
12 A
11 A
H88(A)
Junction
Connector
12 OO1
GR
(*2)
7 OO2
G
(*1)
11 OO1
Y
(*2)
7 VO3
Y
8 A
SIG
V2(A), V3(B)
Back Door ECU
GND
6 A
W–B
5 A
1 A
V19(A)
Junction
Connector
W–B
1 VO2
W–B
3
8
O40
Junction
Connector
W–B
O1
BDCY
CTYE
10 B
20 B
P
R
6 A
4 B
3 A
3 B
(*2)
(*1)
S
E
R–W(*1)
L
(*2)
Courtesy
W–B(*1)
Y(*2)
V5(A), (B)
With Motor Back Door Lock Assembly
* 1 : w/o Power Back Door
* 2 : w/ Power Back Door

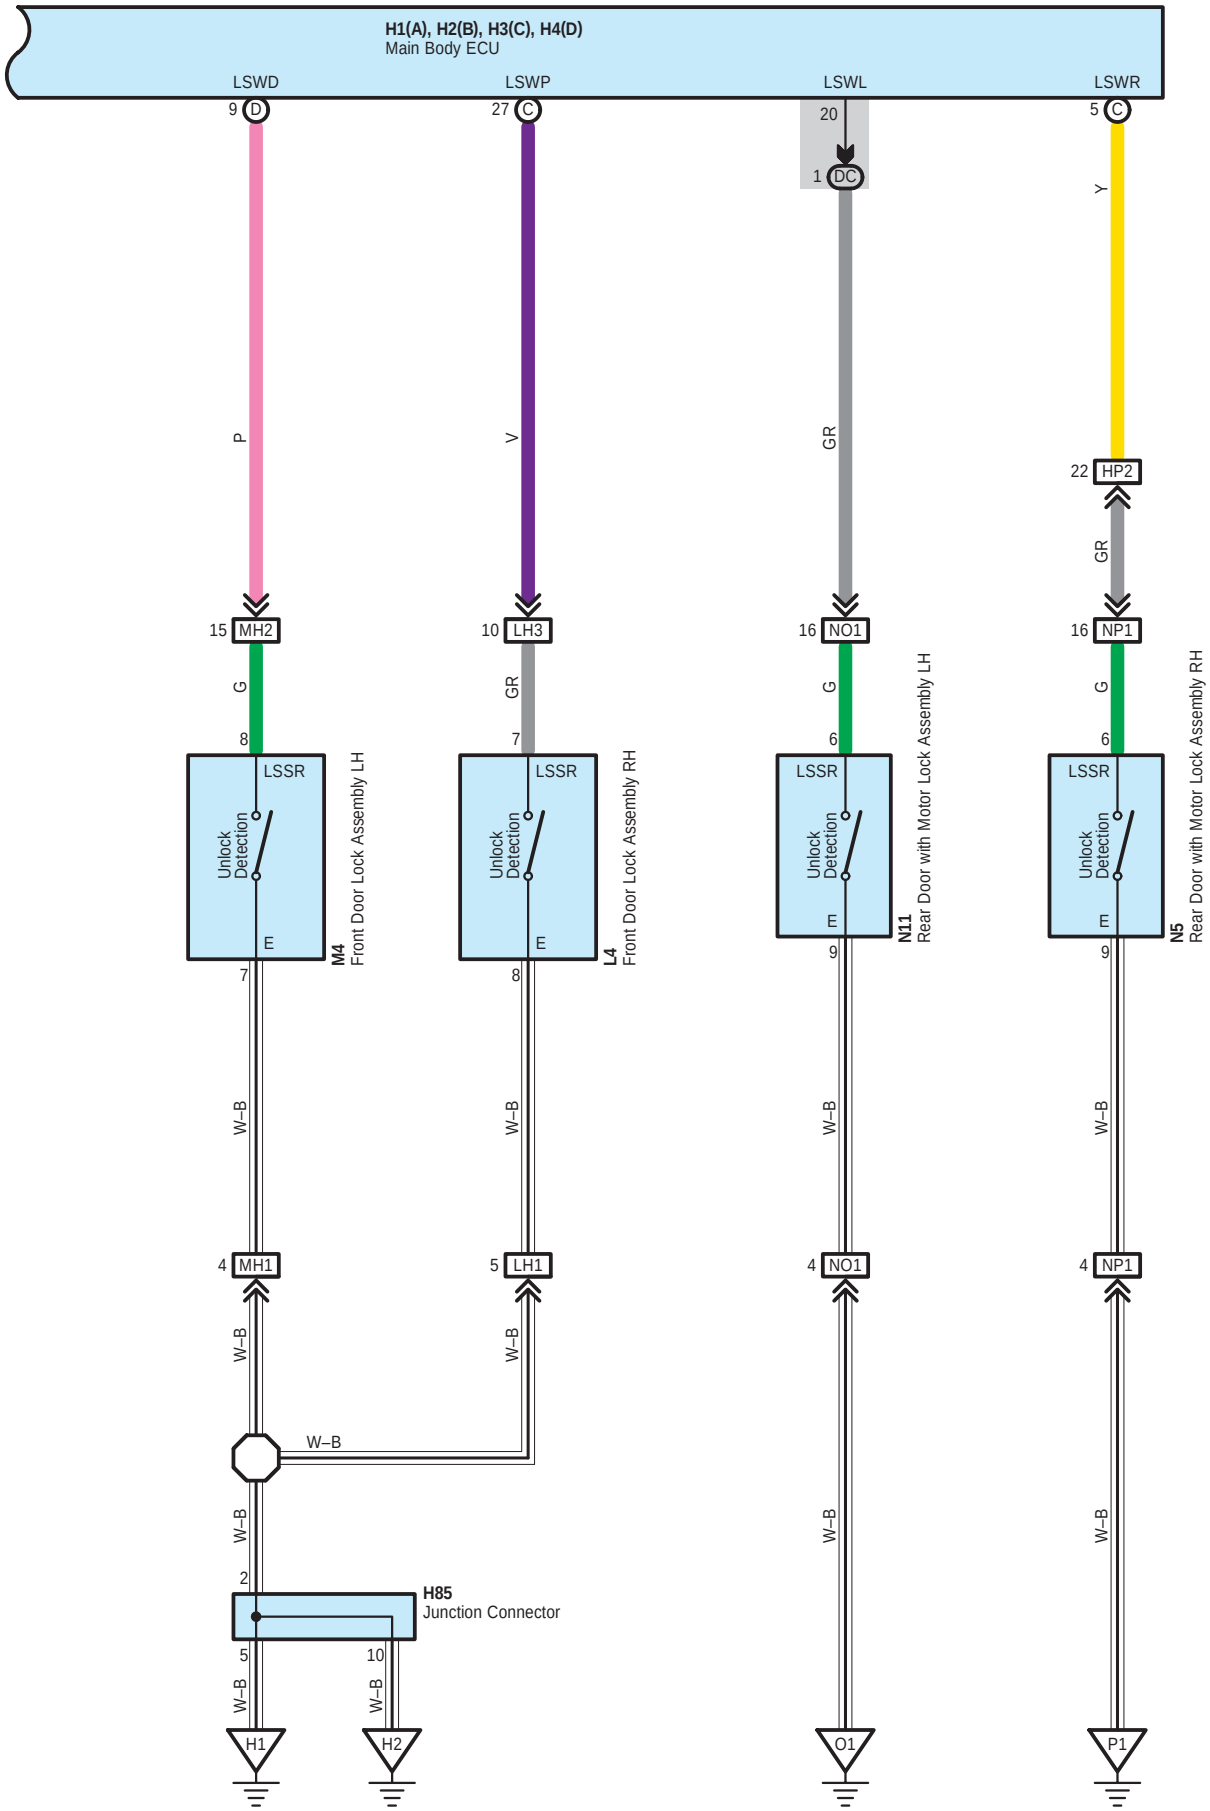
H1(A), H2(B), H3(C), H4(D)
Main Body ECU
LSWD
LSWP
LSWL
LSWR
9 D
27 C
20
1 DC
5 C
Y
P
V
GR
22 HP2
GR
15 MH2
10 LH3
16 NO1
16 NP1
G
GR
G
G
8
7
6
6
LSSR
Unlock Detection
E
M4
Front Door Lock Assembly LH
L4
Front Door Lock Assembly RH
N11
Rear Door with Motor Lock Assembly LH
N5
Rear Door with Motor Lock Assembly RH
7
8
9
9
W–B
4 MH1
5 LH1
4 NO1
4 NP1
W–B
H85
Junction Connector
2
5
10
H1
H2
O1
P1


A 8
Black



A 9
Black




A 33
Black




A 35
White




A 46
White

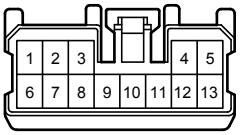


H 1
White

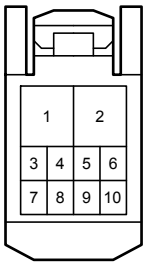


H 2
White

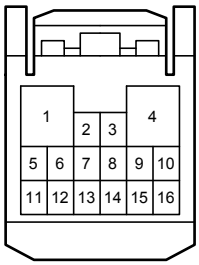


H 3
White

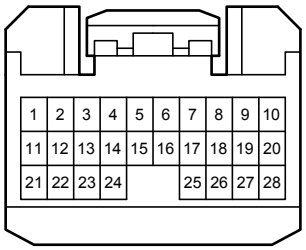


H 4
White

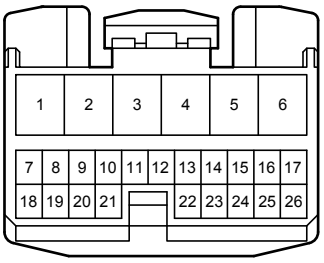


H 21
White




H 39
White

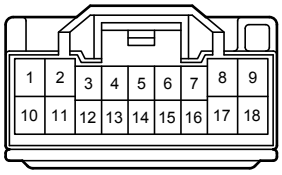


H 60
Black

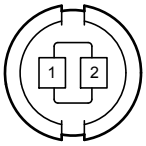


H 77
Black

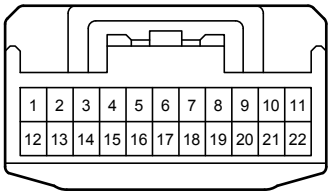


H 78
Black

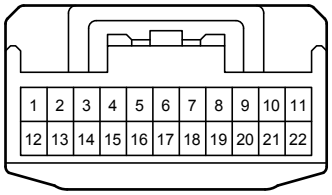


H 79
Black

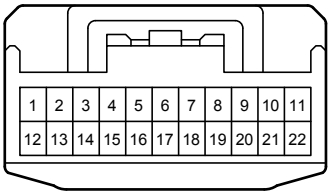


H 80
Black

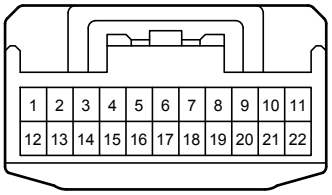


H 81
White

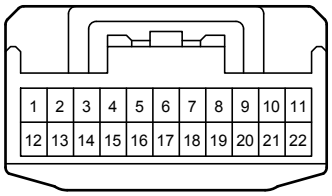


H 85
White

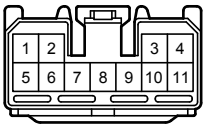


H 86
White

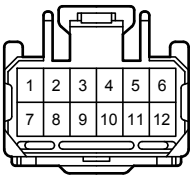


H 88
White

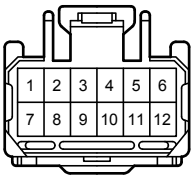


H 89
White

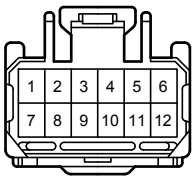


H127
Black

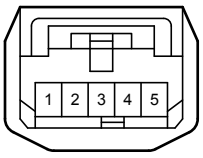


I 22
White

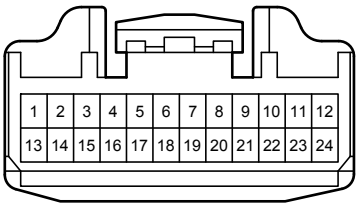


J 7
Black

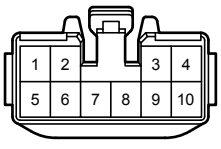


L 4
White

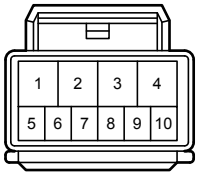


M 4
White

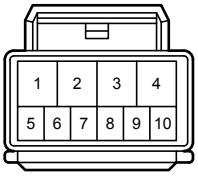

N 5
White

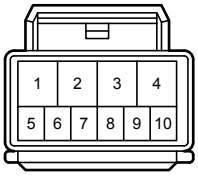

N 11
White

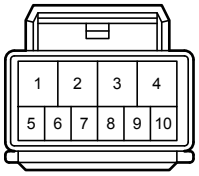


O 7
White




O 8
White



O 25
White

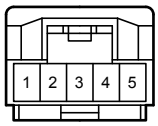

O 40
White

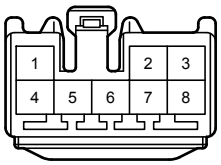


P 6
White




P 7
White




U 6
White

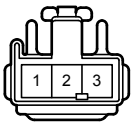


U 7
White

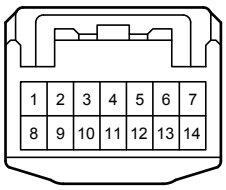


U 8
White

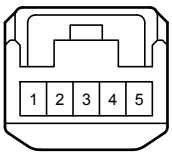


U 9
White

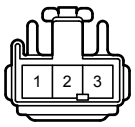


V 2
White

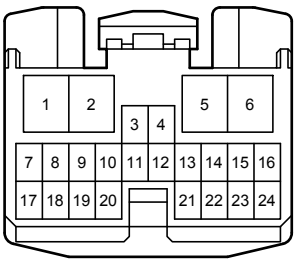


V 3
White

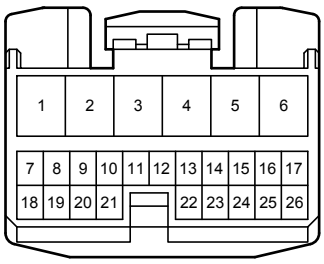


V 5
White

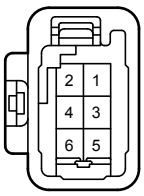


V 19
Gray

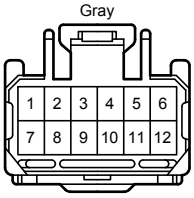


1A
White

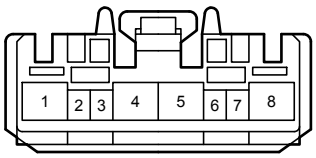


1F




1I
White

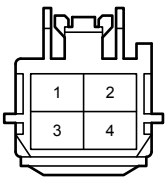


DA
White




DB
White

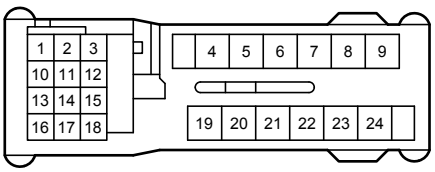


DC
White

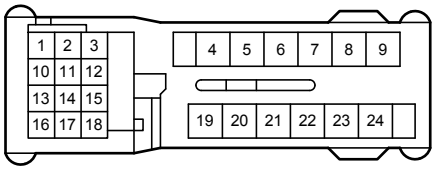


DD
White

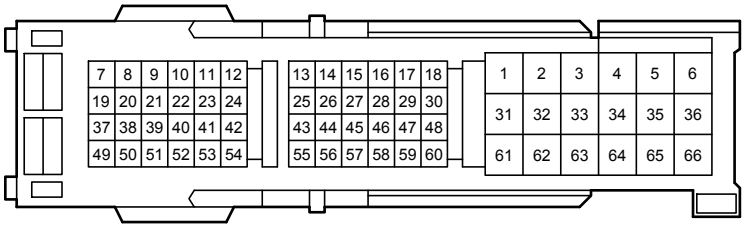


DE
White

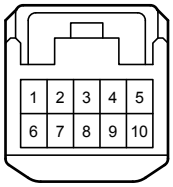


AH8
Gray

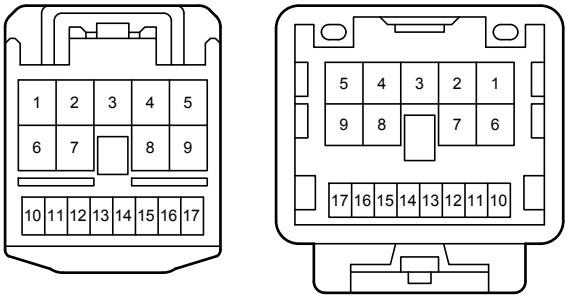


AH9
Gray

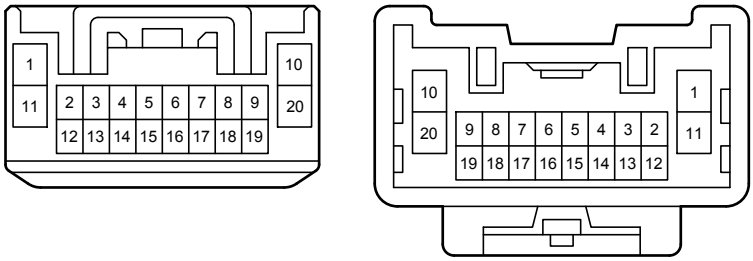


AH10
Gray

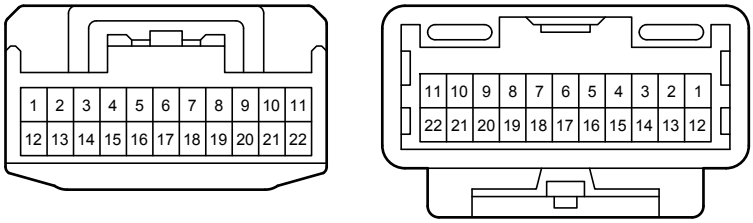


HI2
White

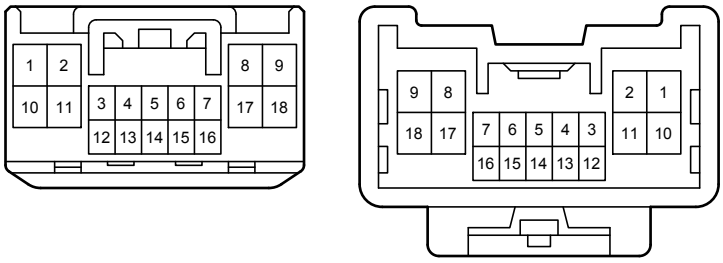


HJ1
White

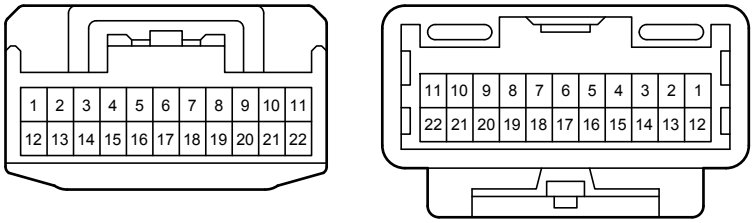


HP2
Gray

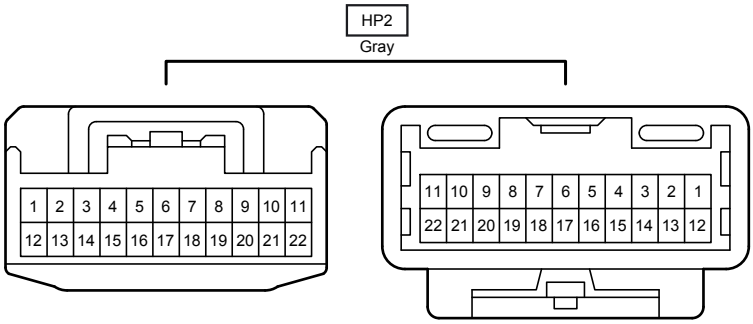


HU1
White

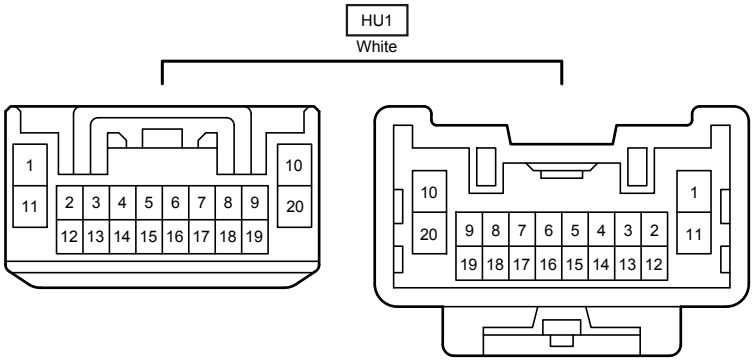


LH1
Blue

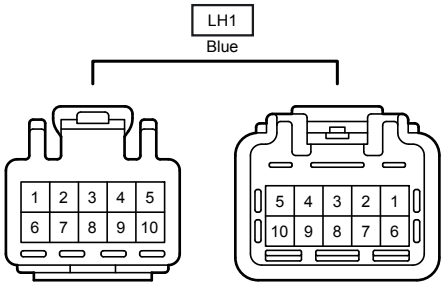


LH3
Blue

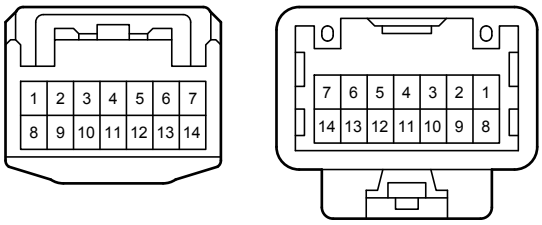


MH1
Blue

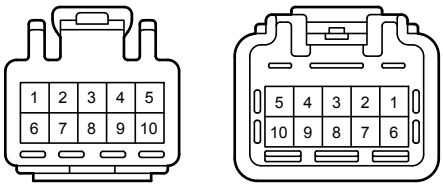


MH2
Blue

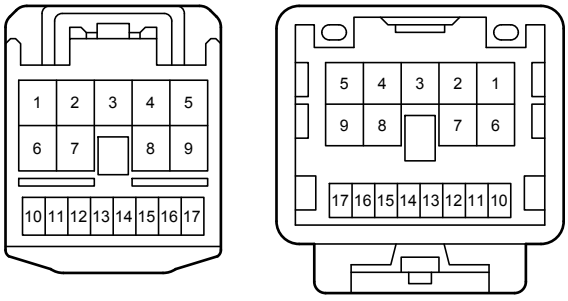


NO1
White

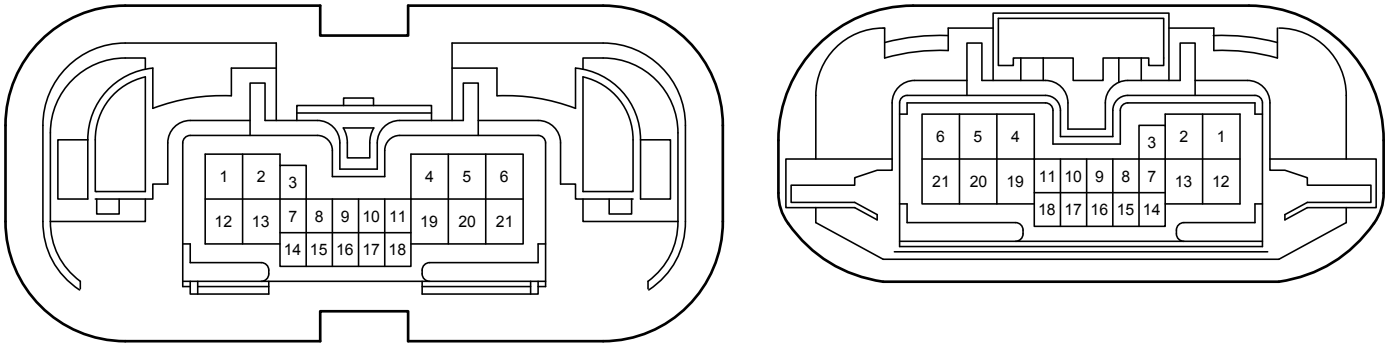


NP1
White

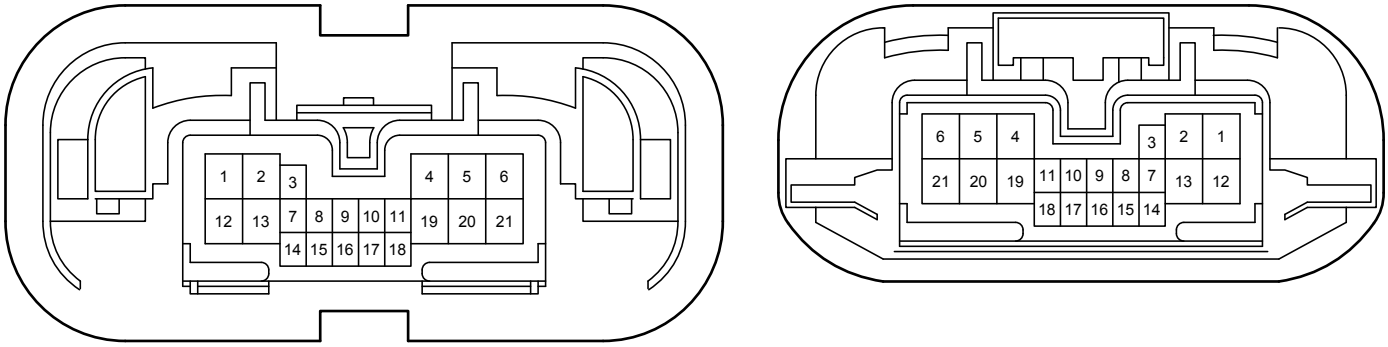


OH1
Black

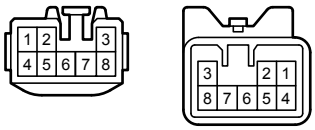


OH2
Black

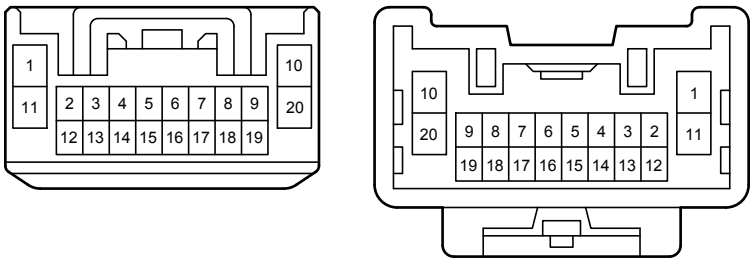


OH3
White

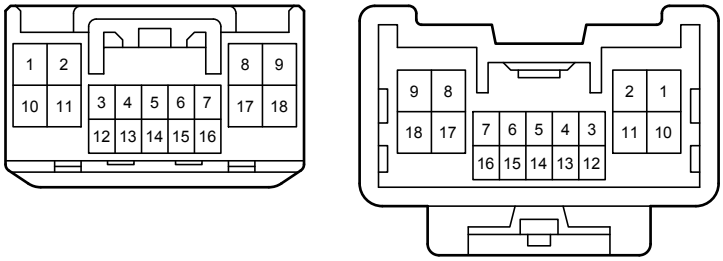


OO1
White

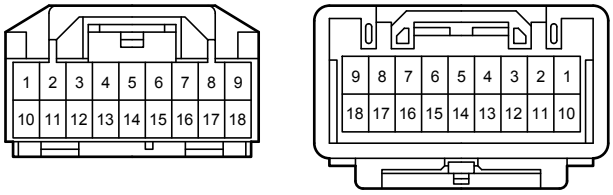

OO2
White

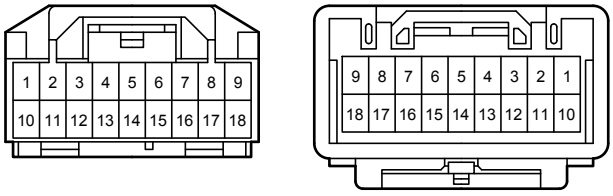

VO2
White

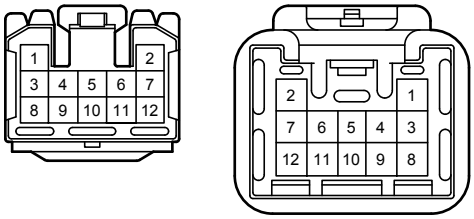

VO3
White

