



(BAT)
150A
LH–J/B
1
1F
B
1
DA
(ACC)
7. 5A
ACC
(IG)
7. 5A
ECU–IG
No. 2
(BAT)
25A
DR/LCK
22
ACC
15
IG
6
ALTB
H2(B), H4(D)
Main Body ECU
TRLY
7
TAIL Relay
15A
TAIL
8
DB
22
DC
G
G
10
B
12
B
A49(B)
Junction Connector
V
G
V
G
V
G
1
2
1
2
B
Parking
E
Side Marker
Parking
Side Marker
A15
Turn Signal Light and Parking Light LH
(Headlight Assembly LH)
A39
Side Marker Light LH
(Headlight Assembly LH)
A16
Turn Signal Light and Parking Light RH
(Headlight Assembly RH)
A38
Side Marker Light RH
(Headlight Assembly RH)
2
1
2
1
W–B
W–B
W–B
W–B
W–B
W–B
W–B
A1
A4
A3


H2(B), H4(D)
Main Body ECU
GND2
GND1
4
5
62
DD
W–B
G
5
VO2
V
8
B
7
B
V19(A), V20(B)
Junction Connector
10
A
11
A
R
2
TL
Tail/Side Marker Light
Stop
E
O21
Rear Combination Light Assembly LH
O20
Rear Combination Light Assembly RH
1
B
Tail
V9
License Plate Light Assembly
V8
Rear Combination Light Assembly LH
V7
Rear Combination Light Assembly RH
3
4
A
O40
Junction Connector
V19(A)
Junction Connector
H85
Junction Connector
O1
H2
H1


∗ 1 : w/ Seat Position Memory
∗ 4 : w/ Electronic Modulated Air Suspension
∗ 5 : w/o Electronic Modulated Air Suspension
∗ 6 : w/ Daytime Running Light
∗ 7 : w/o Daytime Running Light
(BAT)
7. 5A
ECU–B1
(BAT)
5A
MET–B
(IG)
7. 5A
MET
GR
G
BE
H2(B), H4(D)
Main Body ECU
TAIL
CANH
CANL
BECU
BE
L
W
LG
P
H37
Combination
Meter Assembly
Power Circuit
B
IG+
Tail (Except USA)
+B
IG
CANL
CANH
E1
Light
Control
Switch
EL
T
H
A
Off (∗7)
DRL OFF (∗6)
AUTO (∗6)
Tail
Head
AUTO (∗7)
H11
Headlight Dimmer Switch Assembly
H119
Junction Connector
O41(A)
Junction
Connector
H83
Junction
Connector
H85
Junction
Connector
W–B
SB
(∗1)
(∗4)
(∗5)
H1
H2
H3
H4


A 15
Gray

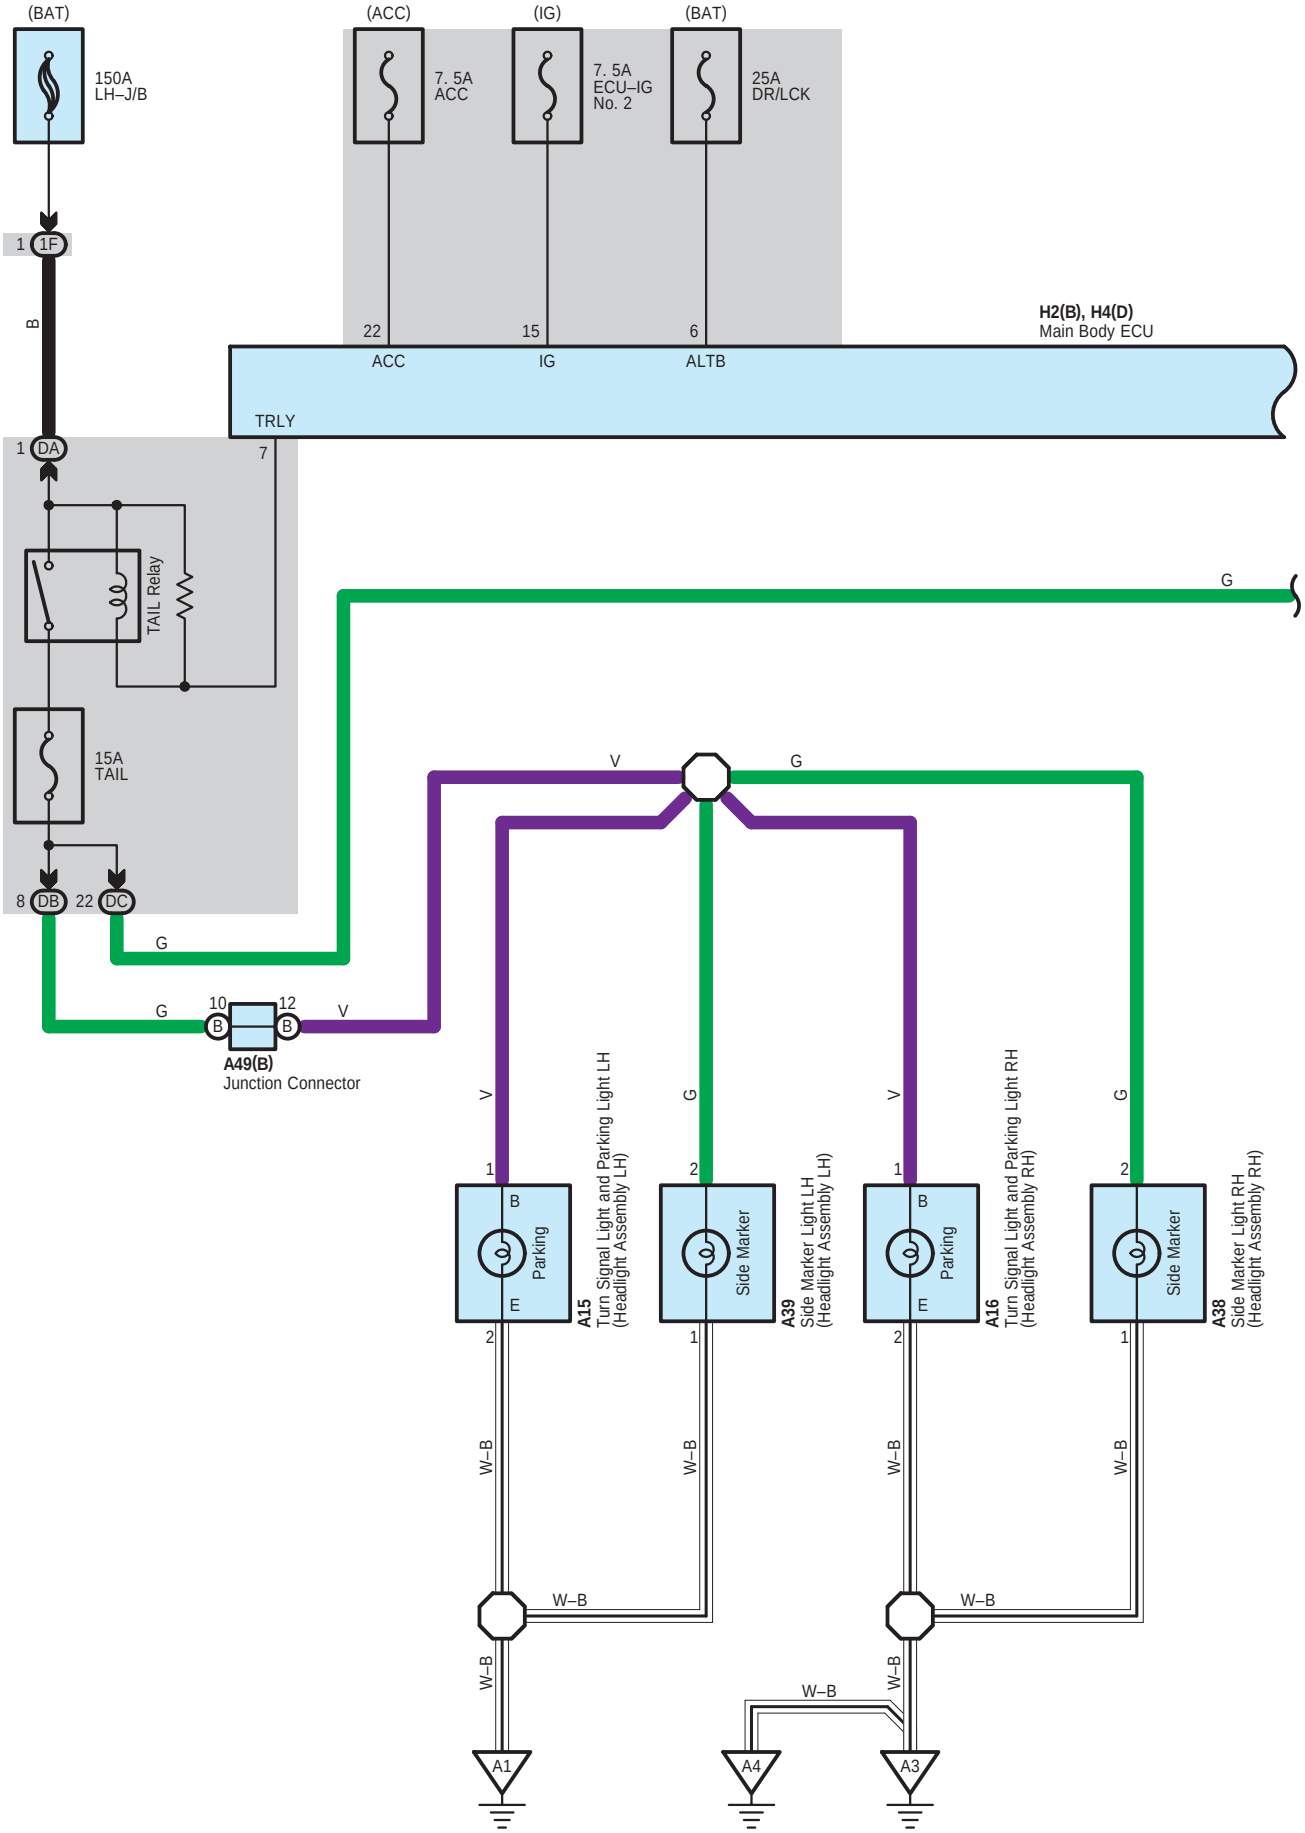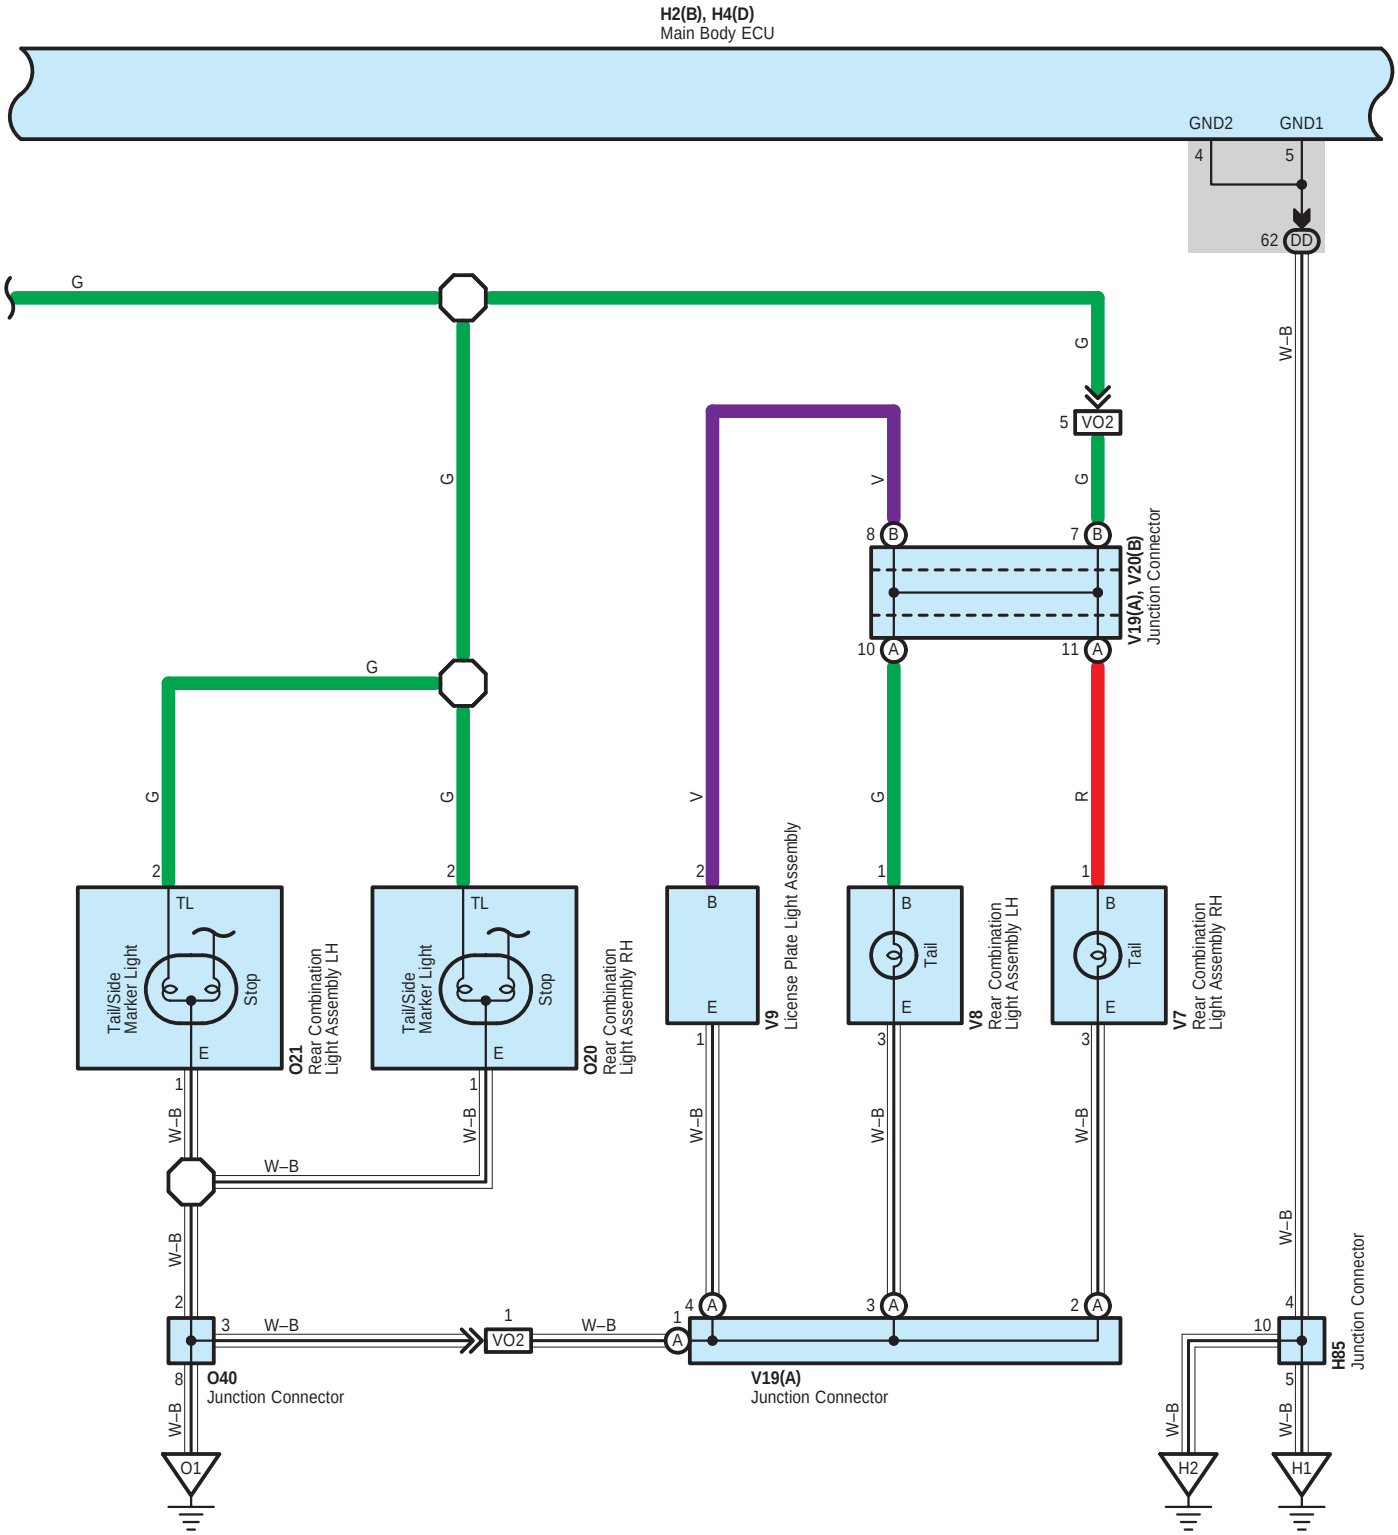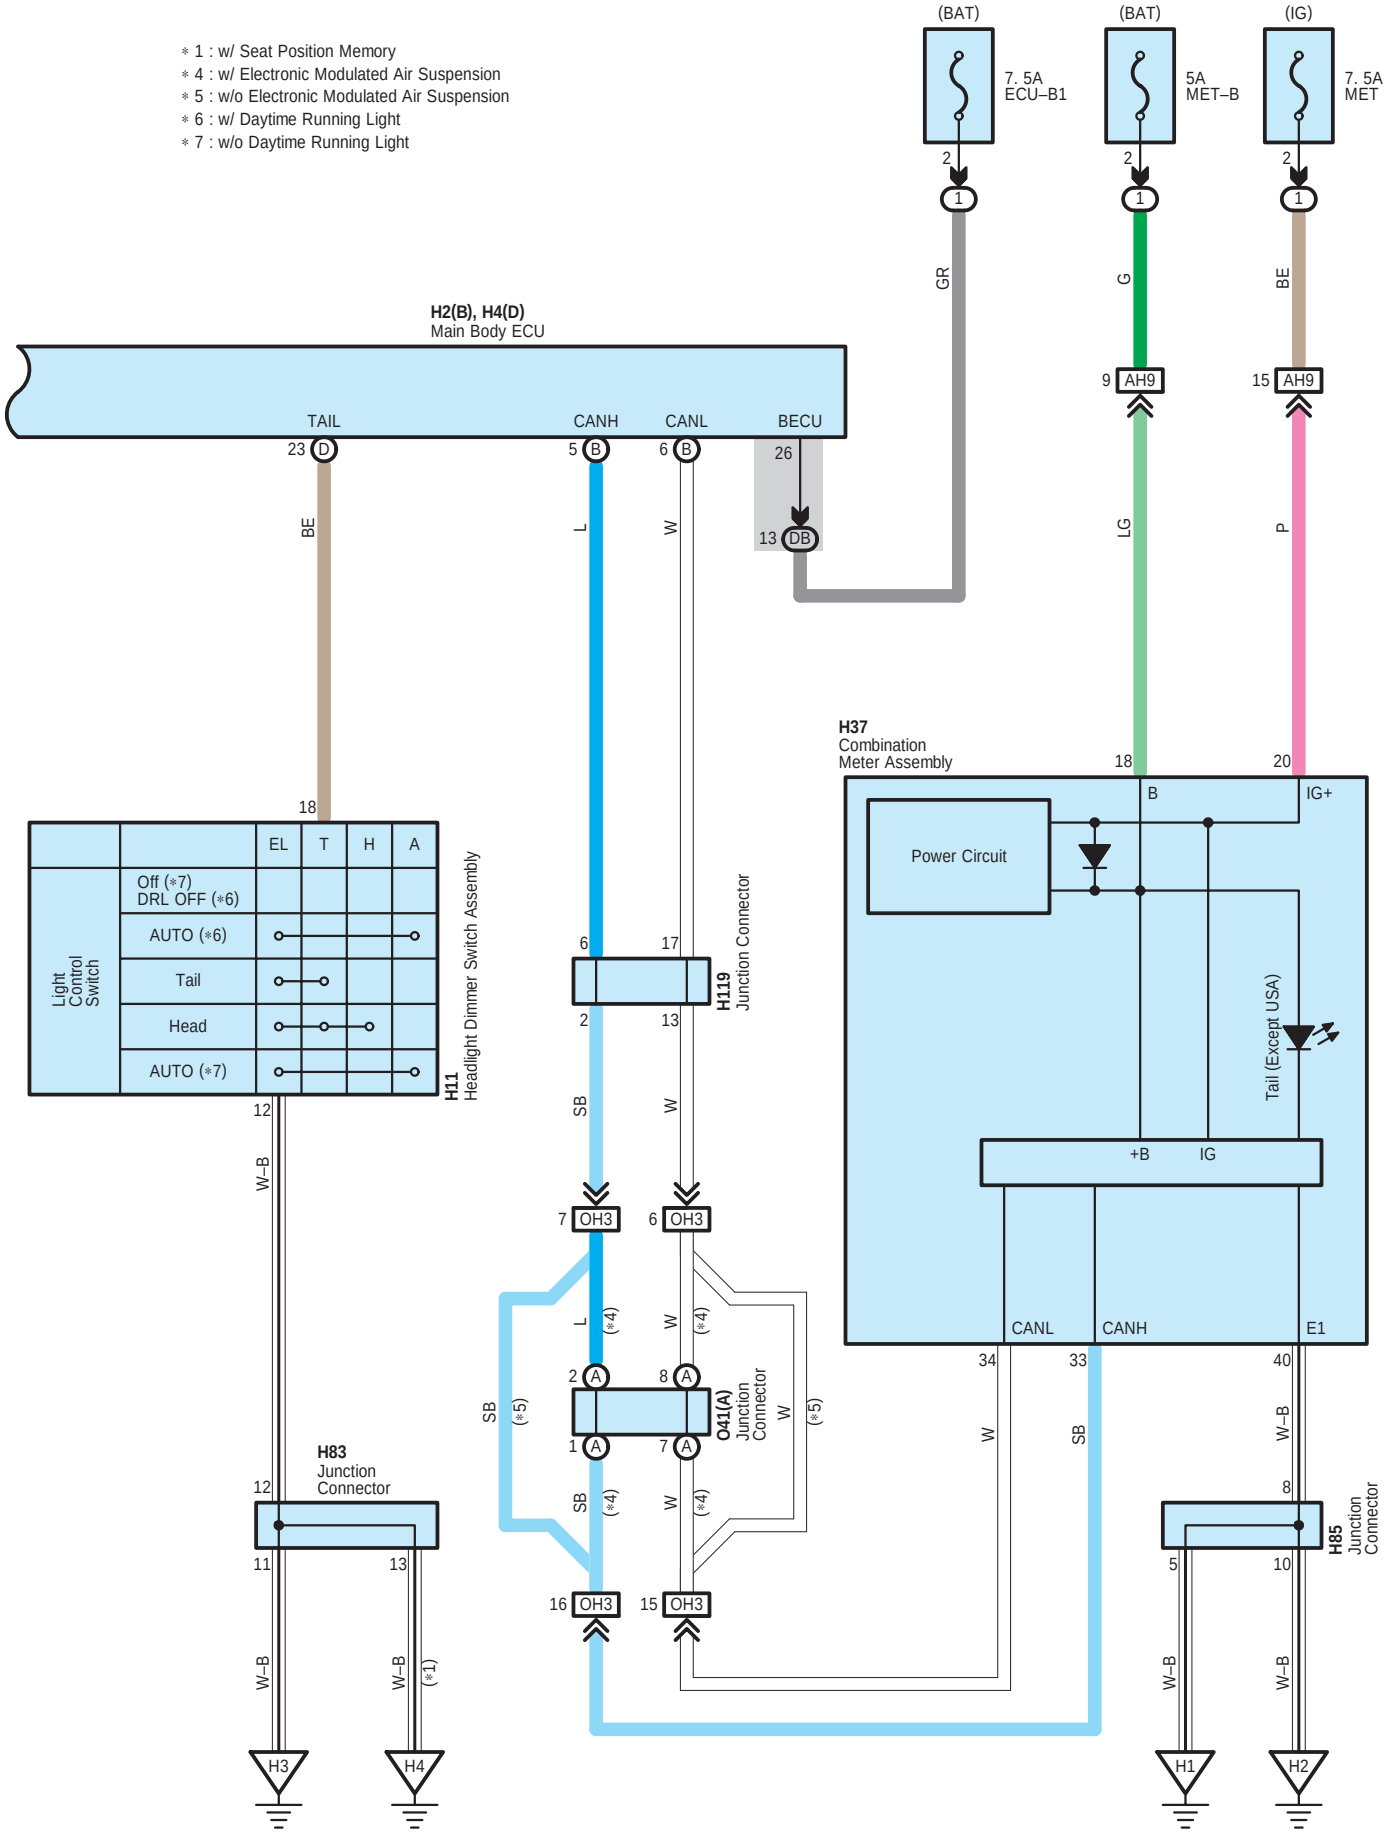


A 16
Gray




A 38
Gray

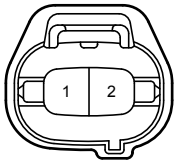


A 39
Gray

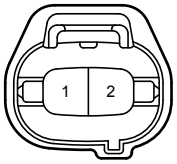


A 49
White

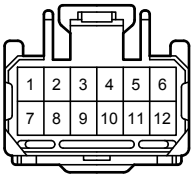


H 2
White

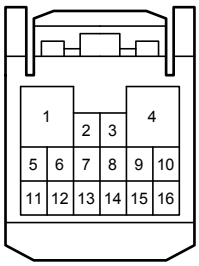


H 4
White

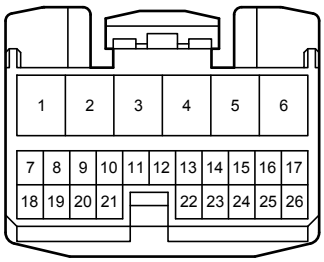


H 11
White

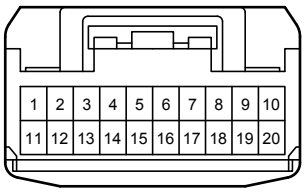


H 37
White

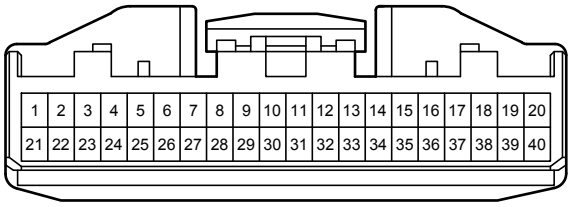


H 83
Gray

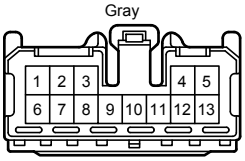


H 85
White

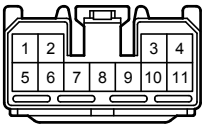


H119
Gray

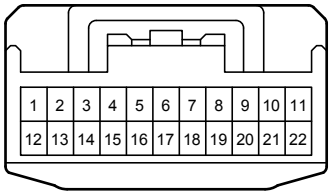


O 20
Black

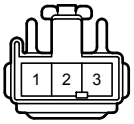


O 21
Black

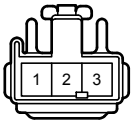

O 40
White

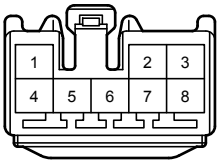

O 41
White

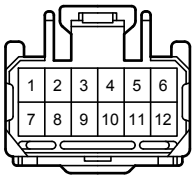


V 7
Gray




V 8
Gray




V 9
Black

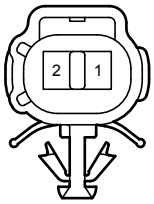


V 19
Gray

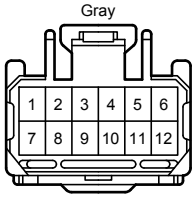


V 20
Gray

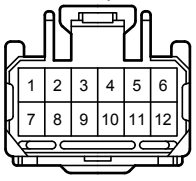


1F




DA
White




DB
White

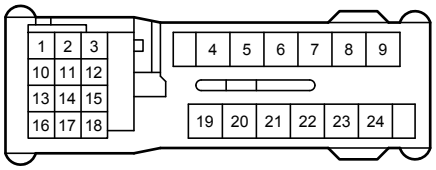


DC
White

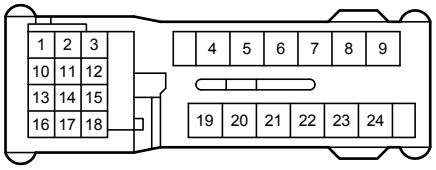


DD
White

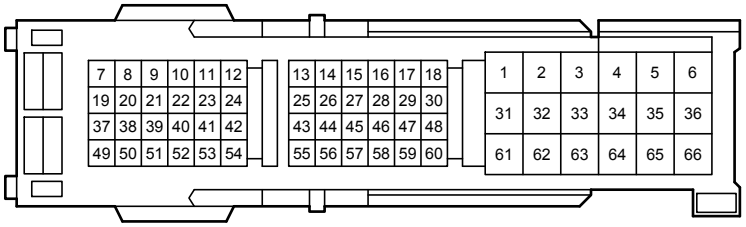

AH9
Gray

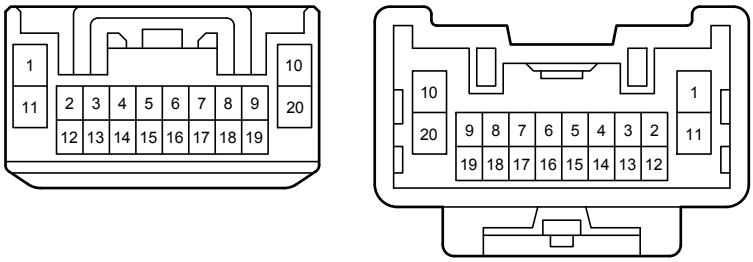

OH3
White

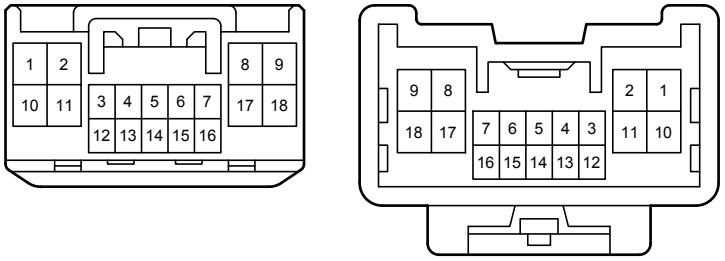

VO2
White

