


(IG)
7. 5A
LH–IG
55 DD
SB
10 A
H77(A)
Junction
Connector
11 A
B
21 B
H79(A), H80(B)
Junction
Connector
13 A
W
3
IG
(BAT)
15A
TURN–HAZ
2
1
BE
20 AH9
B
1
B
L
P
8
2
LR
LL
H39
Turn Signal Flasher Assembly
EL
ER
LTRN
RTRN
E
HAZ
6
7
10
17
4
12
LG
(*3)
LG
(*4)
G
(*4)
G
(*3)
H79(A)
Junction
Connector
4 A
3 A
LG
(*3)
9 A
8 A
H81(A)
Junction
Connector
G
(*3)
15
13
TL
EL
TR
RH
Off
LH
Turn
Signal
Switch
H11
Headlight Dimmer
Switch Assembly
12
W–B
12
13
H83
Junction
Connector
11
W–B
(*1)
W–B
H4
H3
G
11 AH9
R
3
B
Turn
E
2
W–B
A1
A15
Turn Signal Light and Parking Light LH
(Headlight Assembly LH)
BE
8 AH2
P
3
B
Turn
E
2
W–B
A3
A16
Turn Signal Light and Parking Light RH
(Headlight Assembly RH)
W–B
3
5
W–B
H1
W–B
9
10
W–B
H2
H85
Junction
Connector
8
2
W–B
W–B
(*2)
W–B
13 HJ1
W–B
1
E
B1
4
J3
Hazard Warning Signal
Switch Assembly
BE
4 A
3 B
H86(A), H87(B)
Junction Connector
SB
21 HJ1
GR


∗ 1 : w/ Seat Position Memory
∗ 2 : Outer Rear View Mirror w/ Turn Signal Light
∗ 3 : w/ Blind Spot Monitor System
∗ 4 : w/o Blind Spot Monitor System
L
P
G
P
L
Y
7 A
8 A
10 A
9 A
11 B
12 B
9 B
10 B
H86(A), H87(B)
Junction Connector
G
R (∗2)
B
G
L (∗2)
Y
2 OH1
5 MH1
5 LH2
1 OH1
R
R (∗2)
P (∗2)
P
1
4
4
1
TRN
Turn
E
B
Turn
E
B
Turn
E
TRN
Turn
E
O23
Rear Combination Light Assembly LH
M5
Outer Rear View Mirror Assembly LH
16
17
B
B
Turn LH
Turn RH
L6
Outer Rear View Mirror Assembly RH
O22
Rear Combination Light Assembly RH
2
3
3
2
W–B
W–B (∗2)
W–B (∗2)
W–B
E1
40
H37
Combination
Meter Assembly
4 MH1
5 LH1
W–B
W–B (∗2)
W–B (∗2)
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
(∗2)
W–B
(∗2)
2
8
O40
Junction Connector
O1


A 15
Gray

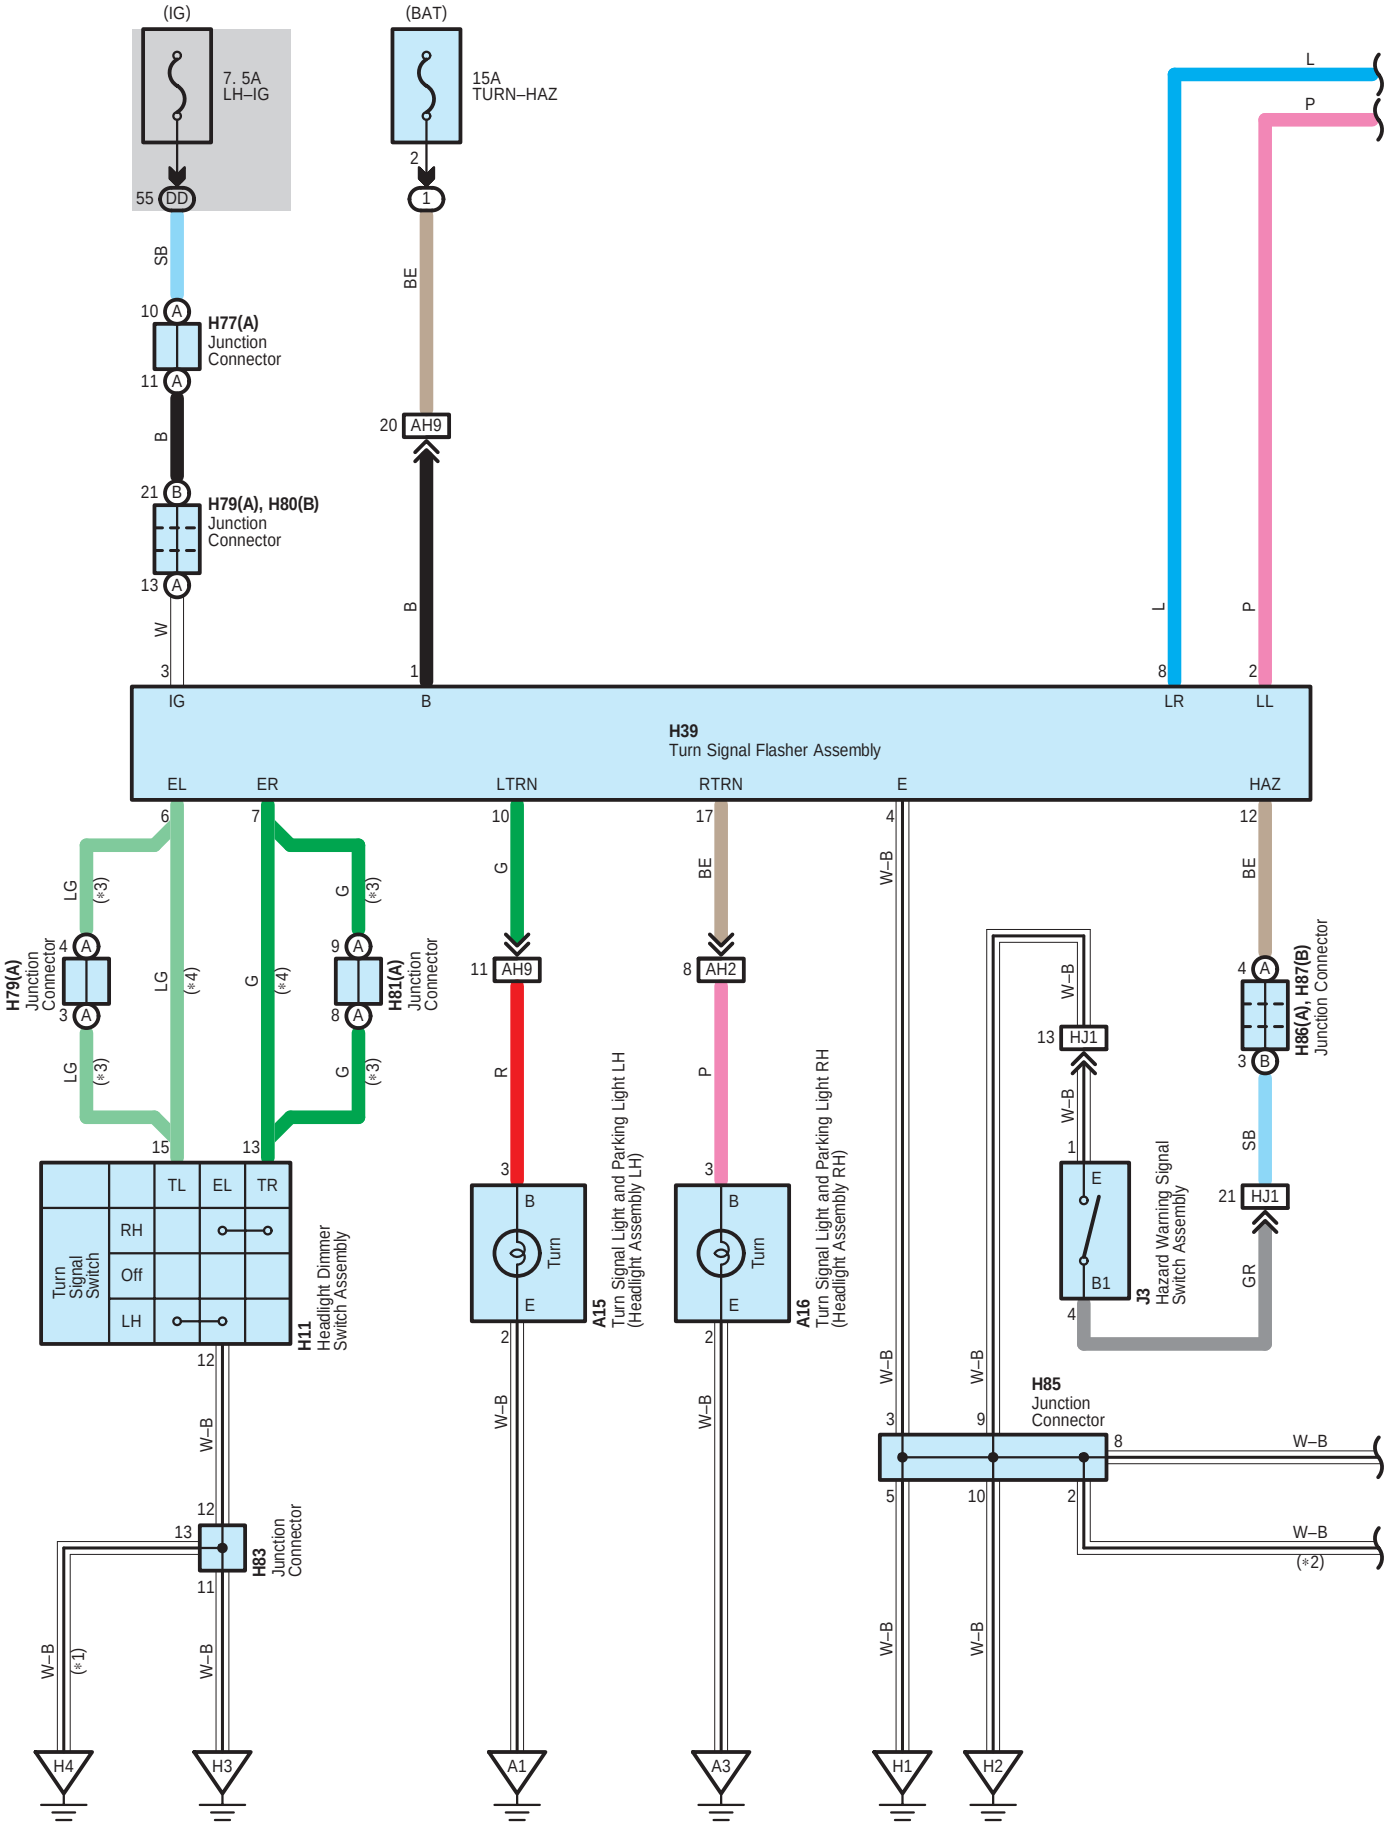


A 16
Gray

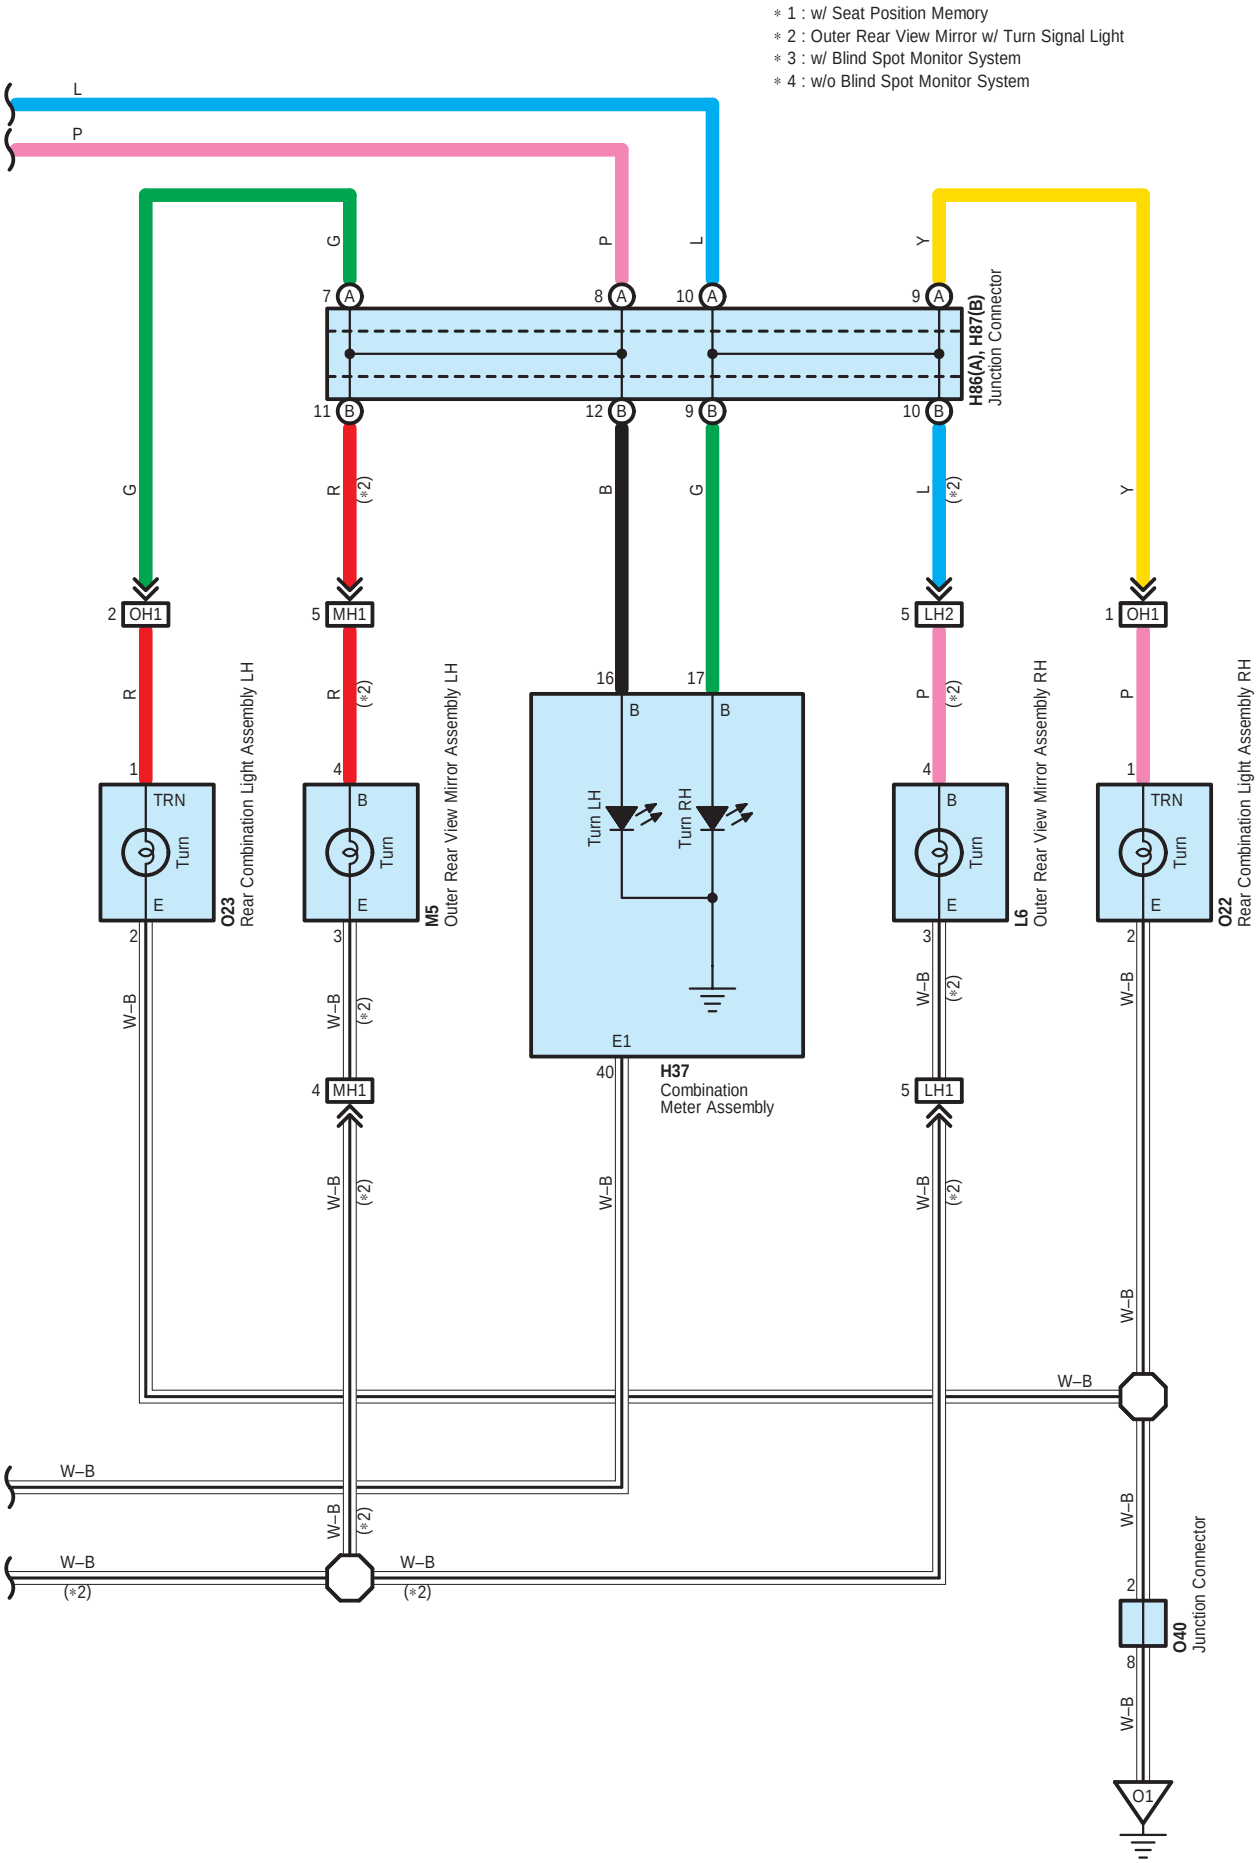


H 11
White

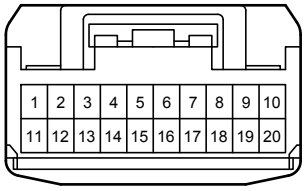


H 37
White

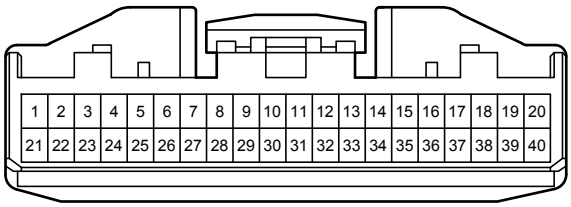


H 39
White

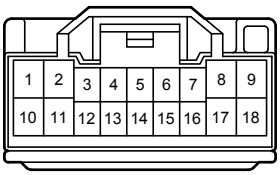


H 77
Black

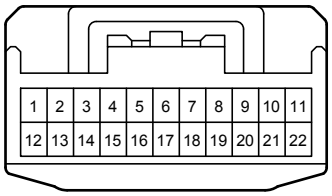


H 79
Black

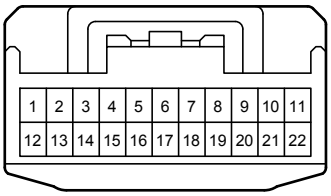


H 80
Black

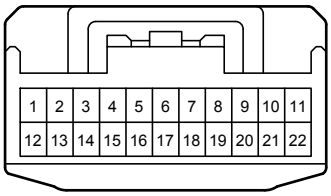


H 81
White

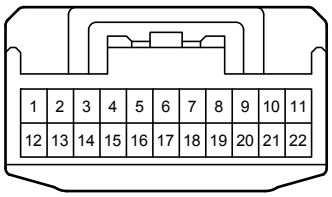


H 83
Gray

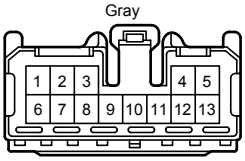


H 85
White

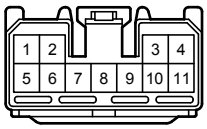


H 86
White

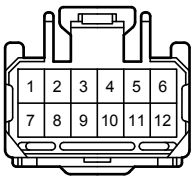


H 87
White

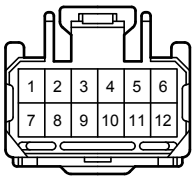


J 3
Gray

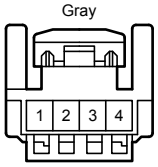


L 6
White

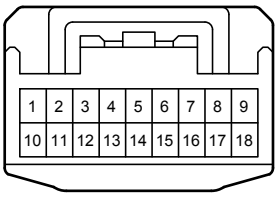


M 5
White

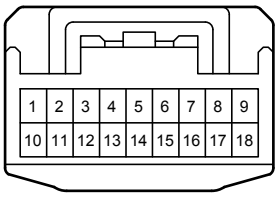


O 22
Gray




O 23
Gray




O 40
White

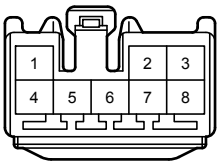


DD
White

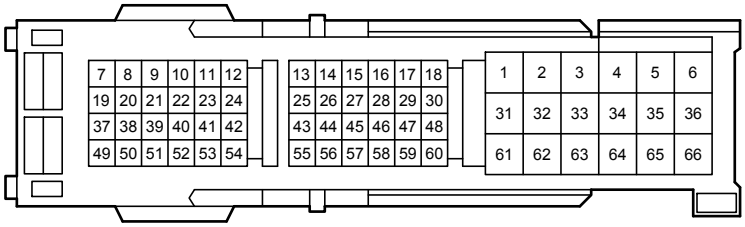


AH2
White

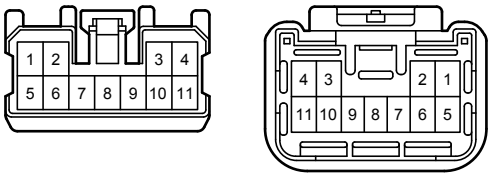


AH9
Gray

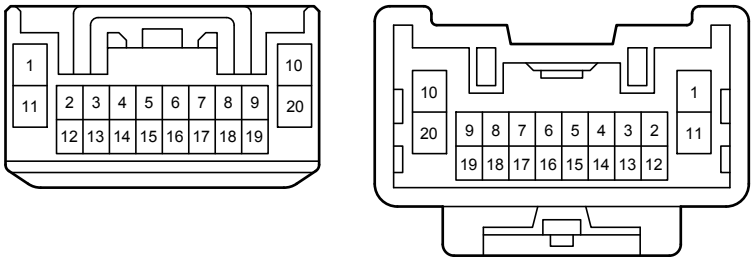


HJ1
White

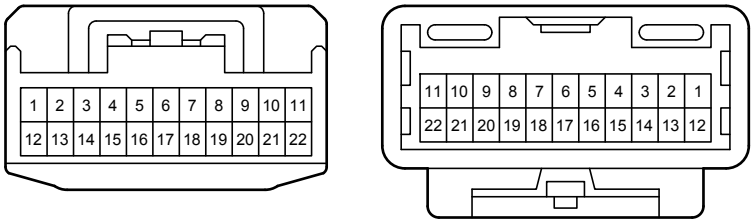


LH1
Blue

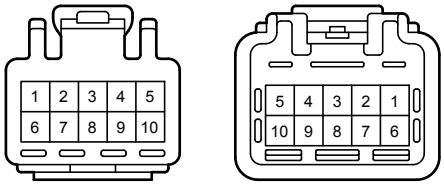


LH2
Blue

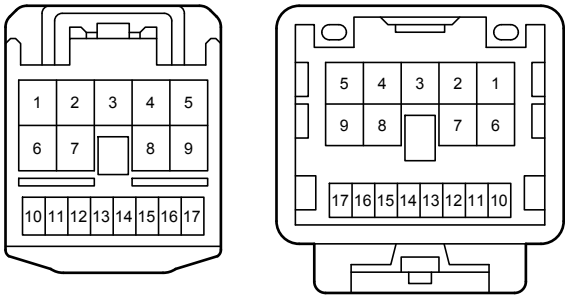

MH1
Blue

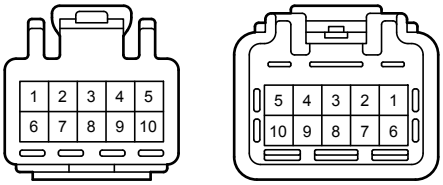

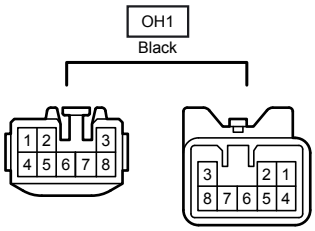
OH1
Black
1 2 3
4 5 6 7 8
3 2 1
8 7 6 5 4