





(BAT)
7. 5A ECU–B1
2
1
GR
(ACC)
7. 5A ACC
(IG)
7. 5A ECU–IG No. 2
(BAT)
25A DR/LCK
H1(A), H2(B), H3(C), H4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND2
GND1
6
15
22
26
4
5
13 DB
62 DD
GR
W–B
W–B
4
H85
Junction Connector
5
10
W–B
W–B
H1
H2



H1(A), H2(B), H3(C), H4(D)
Main Body ECU
TRLY
HRLY
HORN
HAZ
7
8
25
4 B
18 DB
1 DB
(BAT)
150A
LH–J/B
1 1F
B
1 DA
TAIL Relay
(BAT)
40A
MAIN
3 1I
R
R
1
1
3
1
HEAD Relay
5
2
1
1
P
L
L
V
(BAT)
10A
HORN
2
HORN Relay
7 1A
8 1A
V
L
BE
3 A
4 A
H86(A)
Junction Connector
BE
12
HAZ
H39
Turn Signal Flasher Assembly
L
L
1
1
A9
Low Pitched
Horn Assembly
A8
High Pitched
Horn Assembly


H1(A), H2(B), H3(C), H4(D)
Main Body ECU
SH
DCTY
PCTY
LCTY
RRCY
BZR
(BAT)
5A
MET–B
SECURITY
HORN Relay
A33
Security Horn Assembly
AH10
H79(A), H80(B)
Junction Connector
H77(A), H78(B)
Junction Connector
OH2
O8
Front Door Courtesy
Light Switch LH
H81(A)
Junction Connector
HP2
P6
Front Door Courtesy
Light Switch RH
DC
OO1
O7
Rear Door Courtesy
Light Switch LH
HP2
P7
Rear Door Courtesy
Light Switch RH
A40
Wireless Door Lock Buzzer
A54
Junction Connector
A2
W
BE
BR
G
LG
SB
L
R
W–B
B
(*1)
(*2)

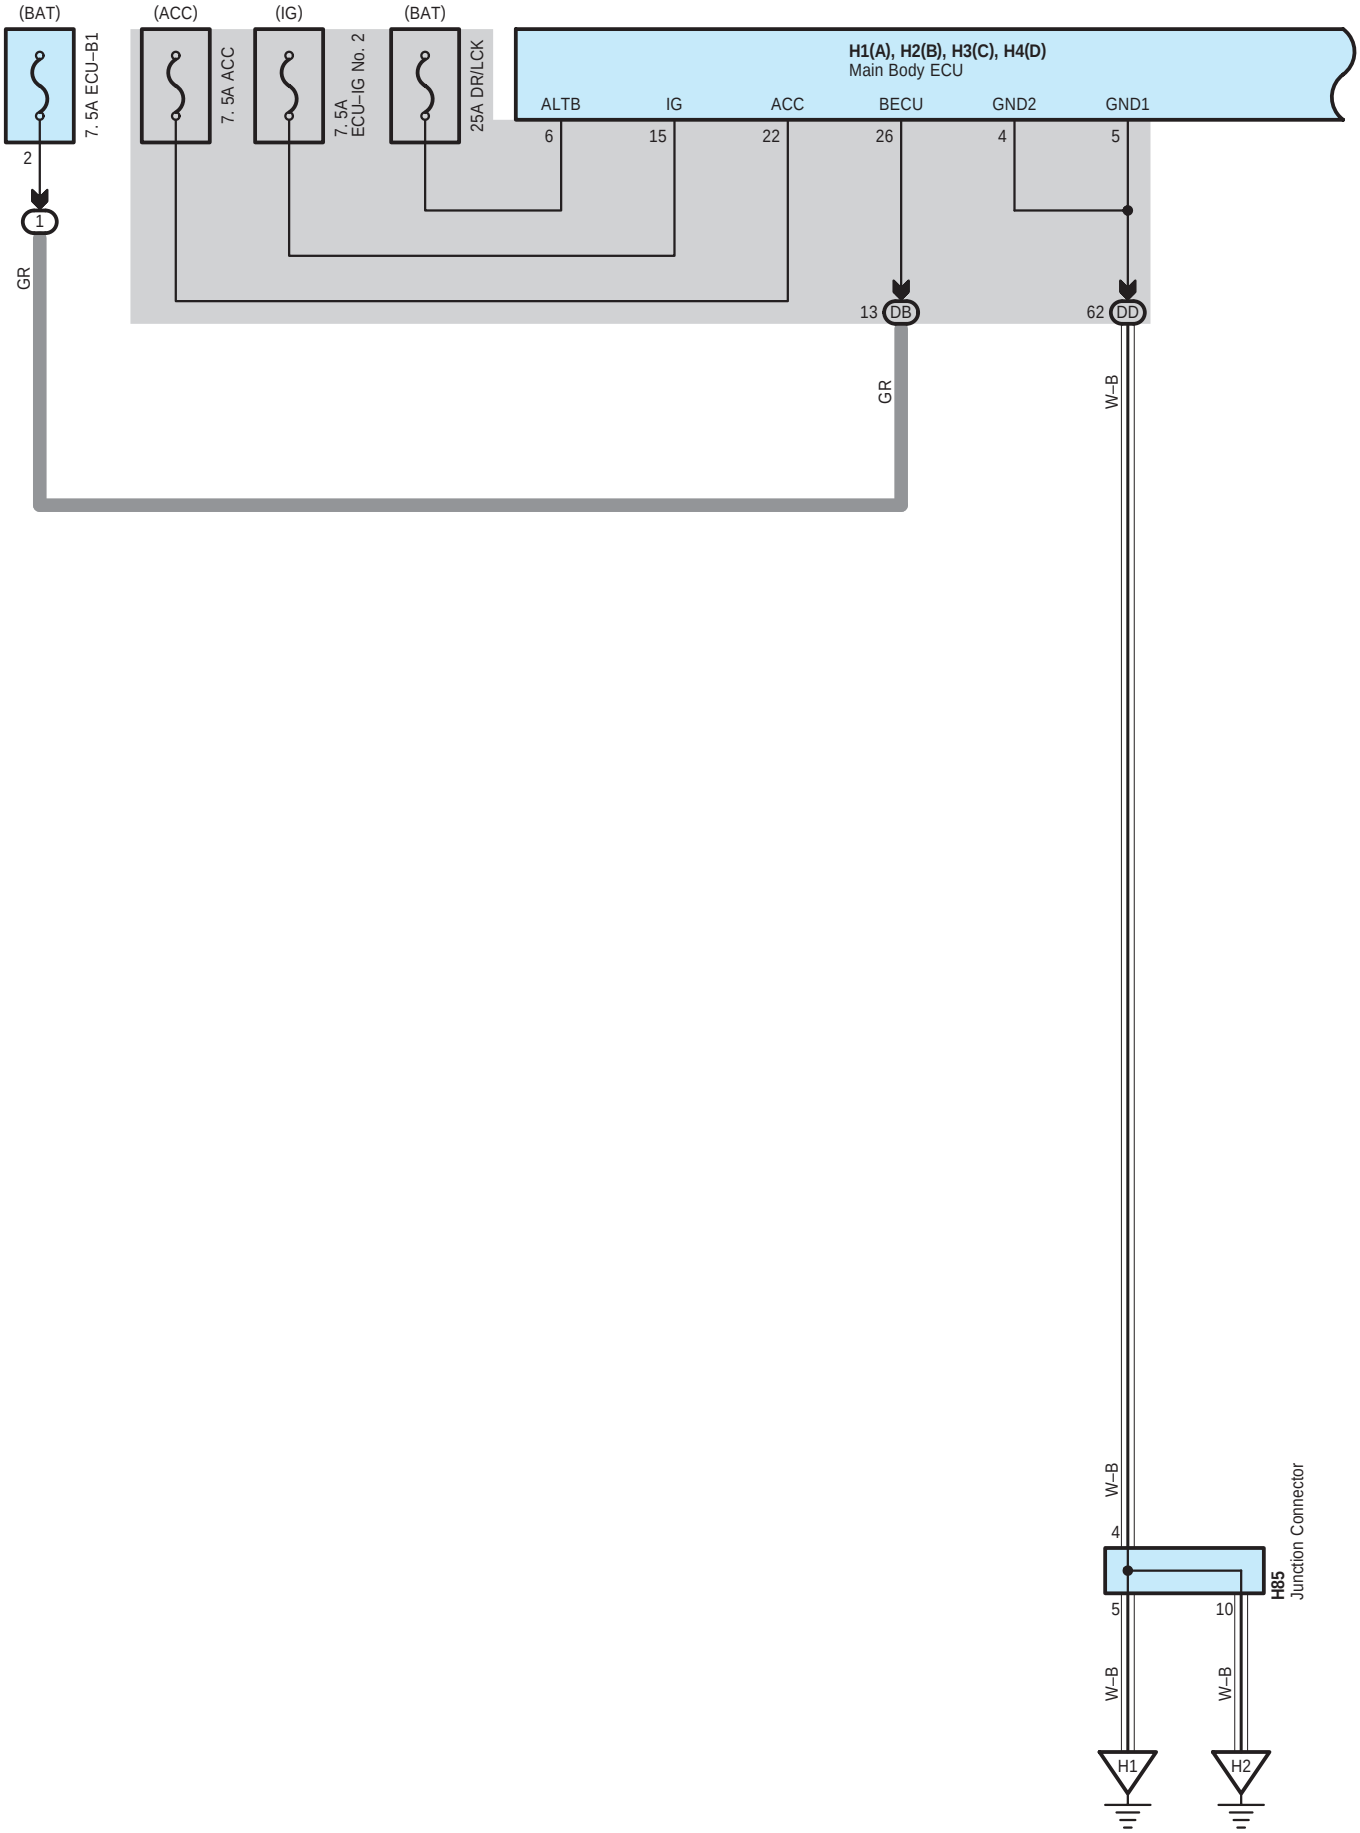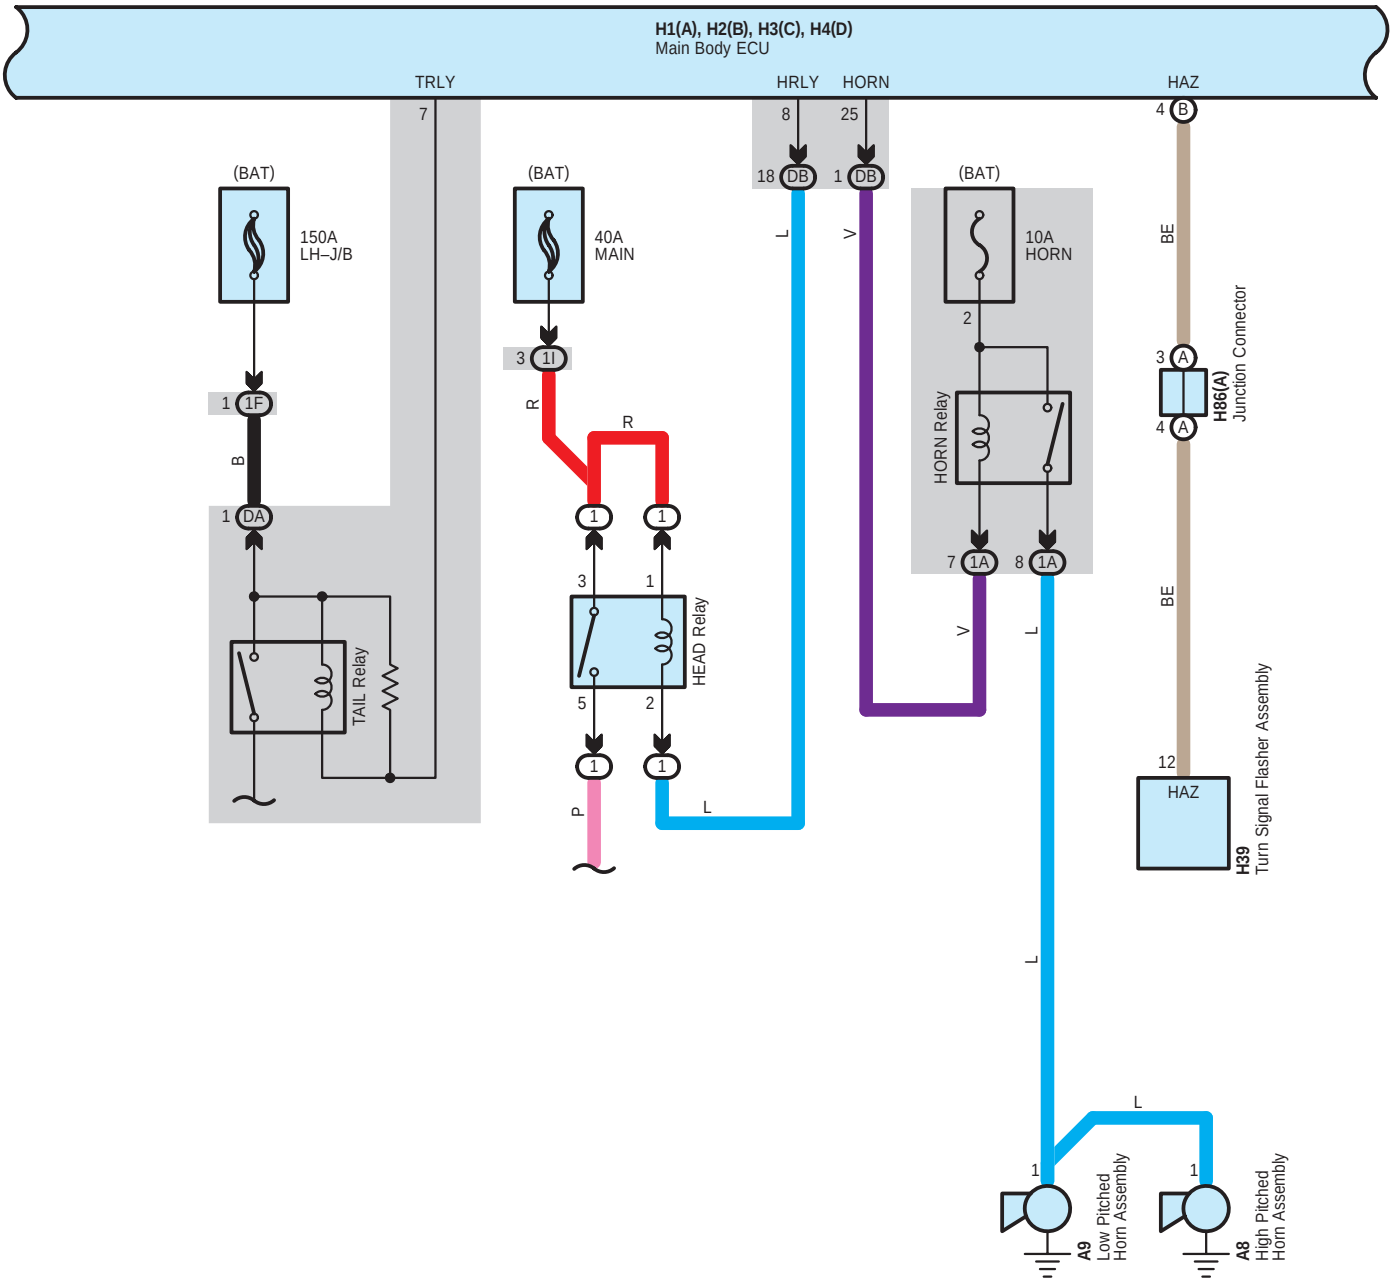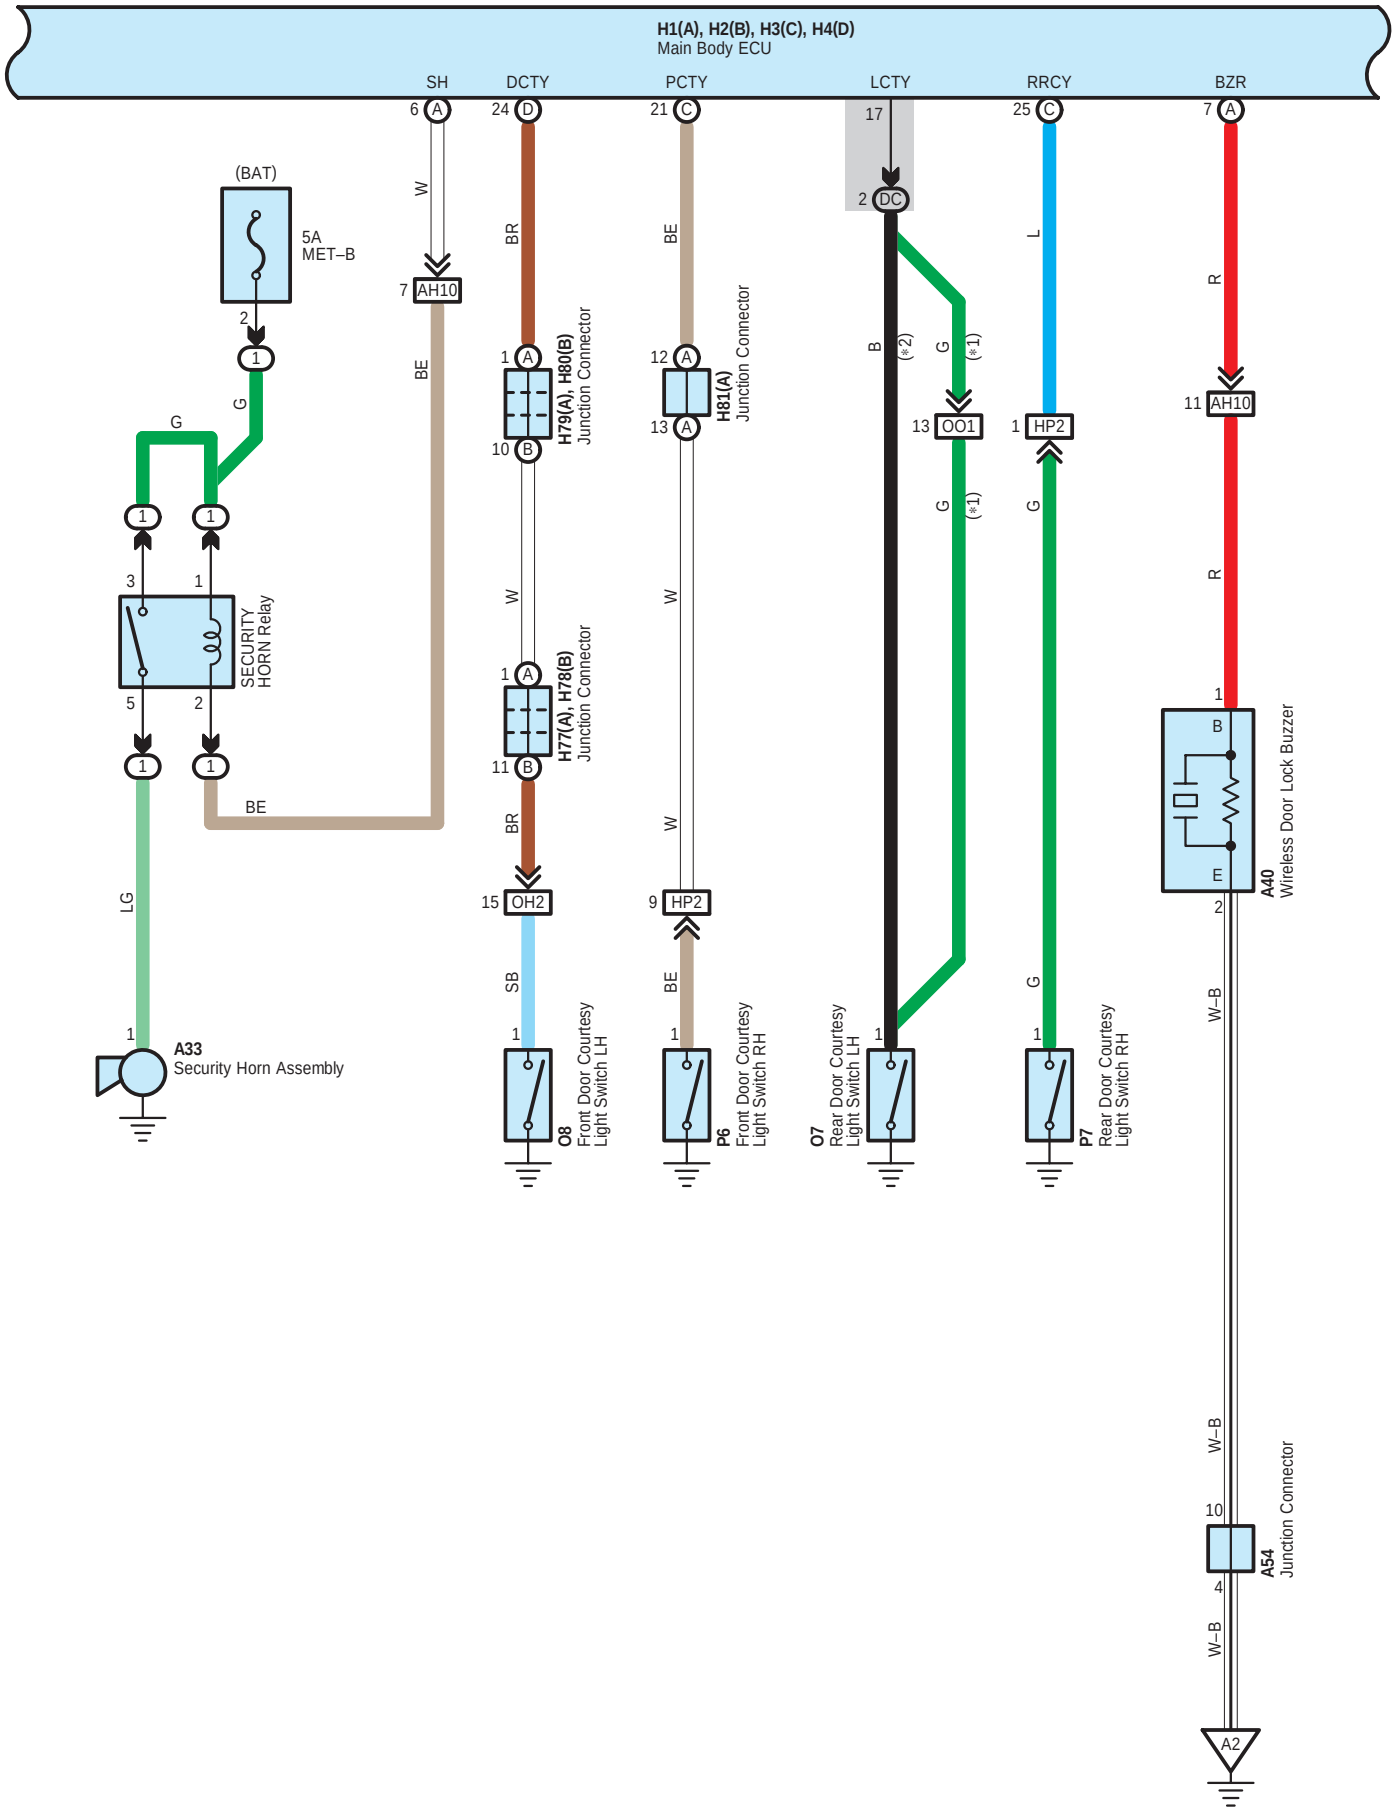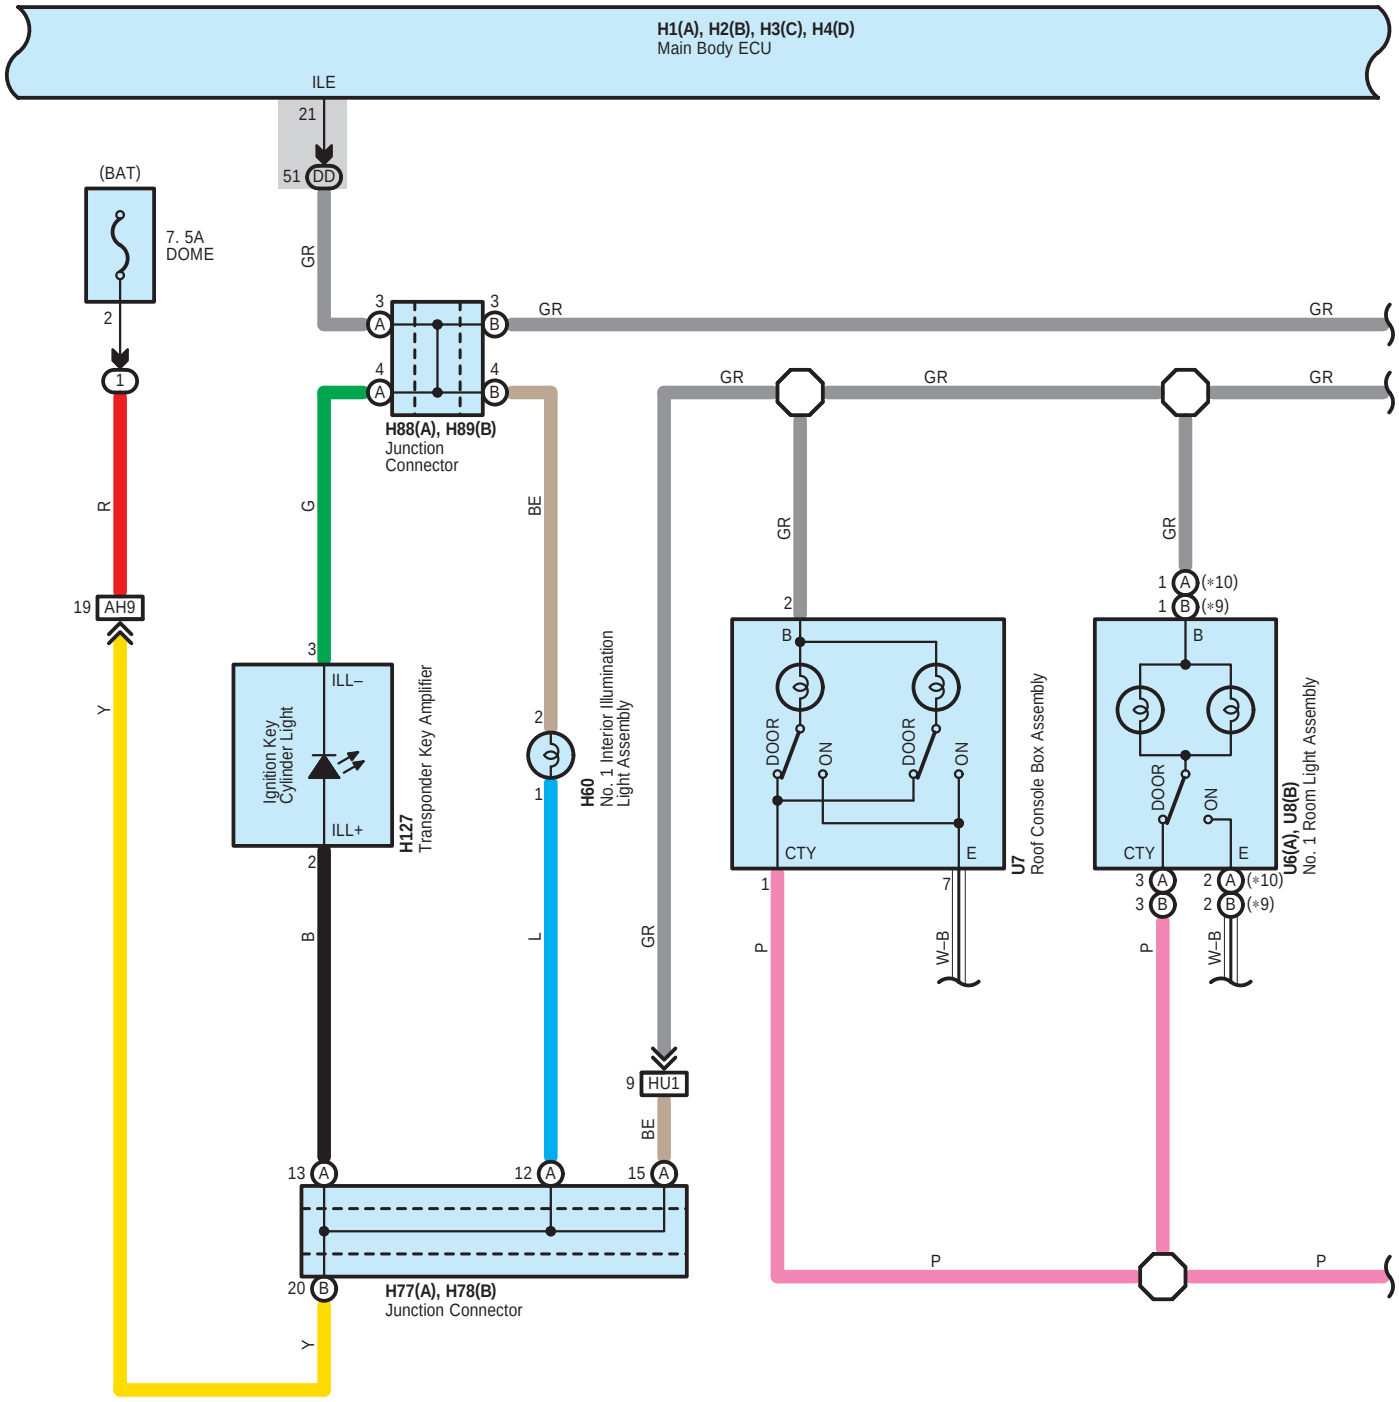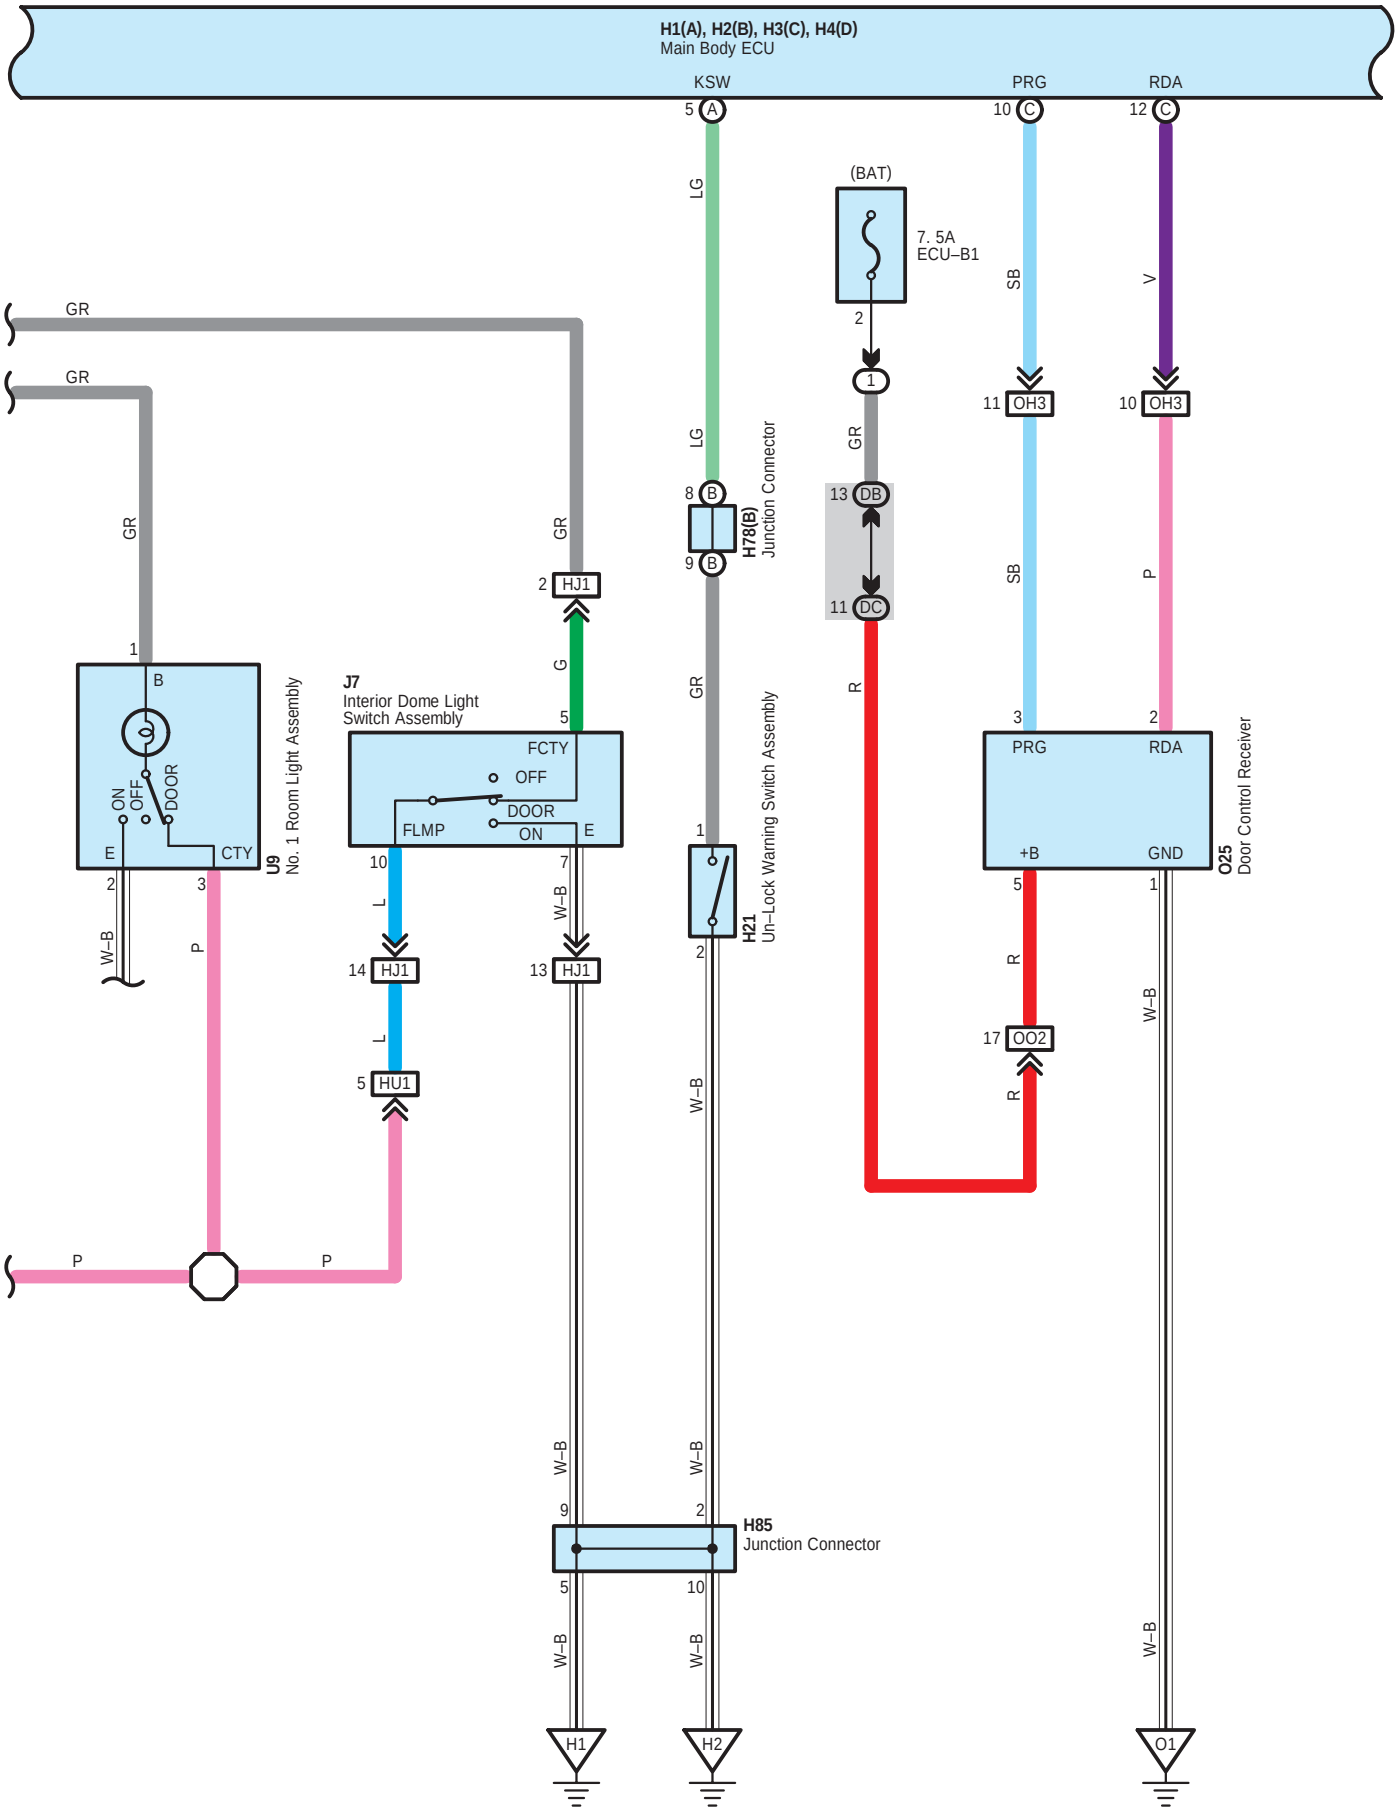


∗ 1 : w/ Power Rear No. 2 Seat with Stowing Function
∗ 2 : w/o Power Rear No. 2 Seat with Stowing Function
∗ 9 : w/ Rear Seat Entertainment System
∗10 : w/o Rear Seat Entertainment System


H1(A), H2(B), H3(C), H4(D)
Main Body ECU
KSW
PRG
RDA
5 A
10 C
12 C
LG
SB
V
(BAT)
7. 5A
ECU–B1
2
1
GR
11 OH3
10 OH3
LG
8 B
9 B
H78(B)
Junction Connector
13 DB
11 DC
R
P
GR
GR
GR
2 HJ1
G
1
B
J7
Interior Dome Light
Switch Assembly
5
FCTY
OFF
DOOR
FLMP
ON
E
10
7
L
W–B
14 HJ1
13 HJ1
L
5 HU1
ON
OFF
DOOR
E
CTY
2
3
W–B
P
U9
No. 1 Room Light Assembly
GR
1
H21
Un–Lock Warning Switch Assembly
2
W–B
3
PRG
RDA
2
+B
GND
5
1
R
17 OO2
R
W–B
O25
Door Control Receiver
P
P
W–B
9
2
H85
Junction Connector
5
10
W–B
W–B
W–B
W–B
H1
H2
O1

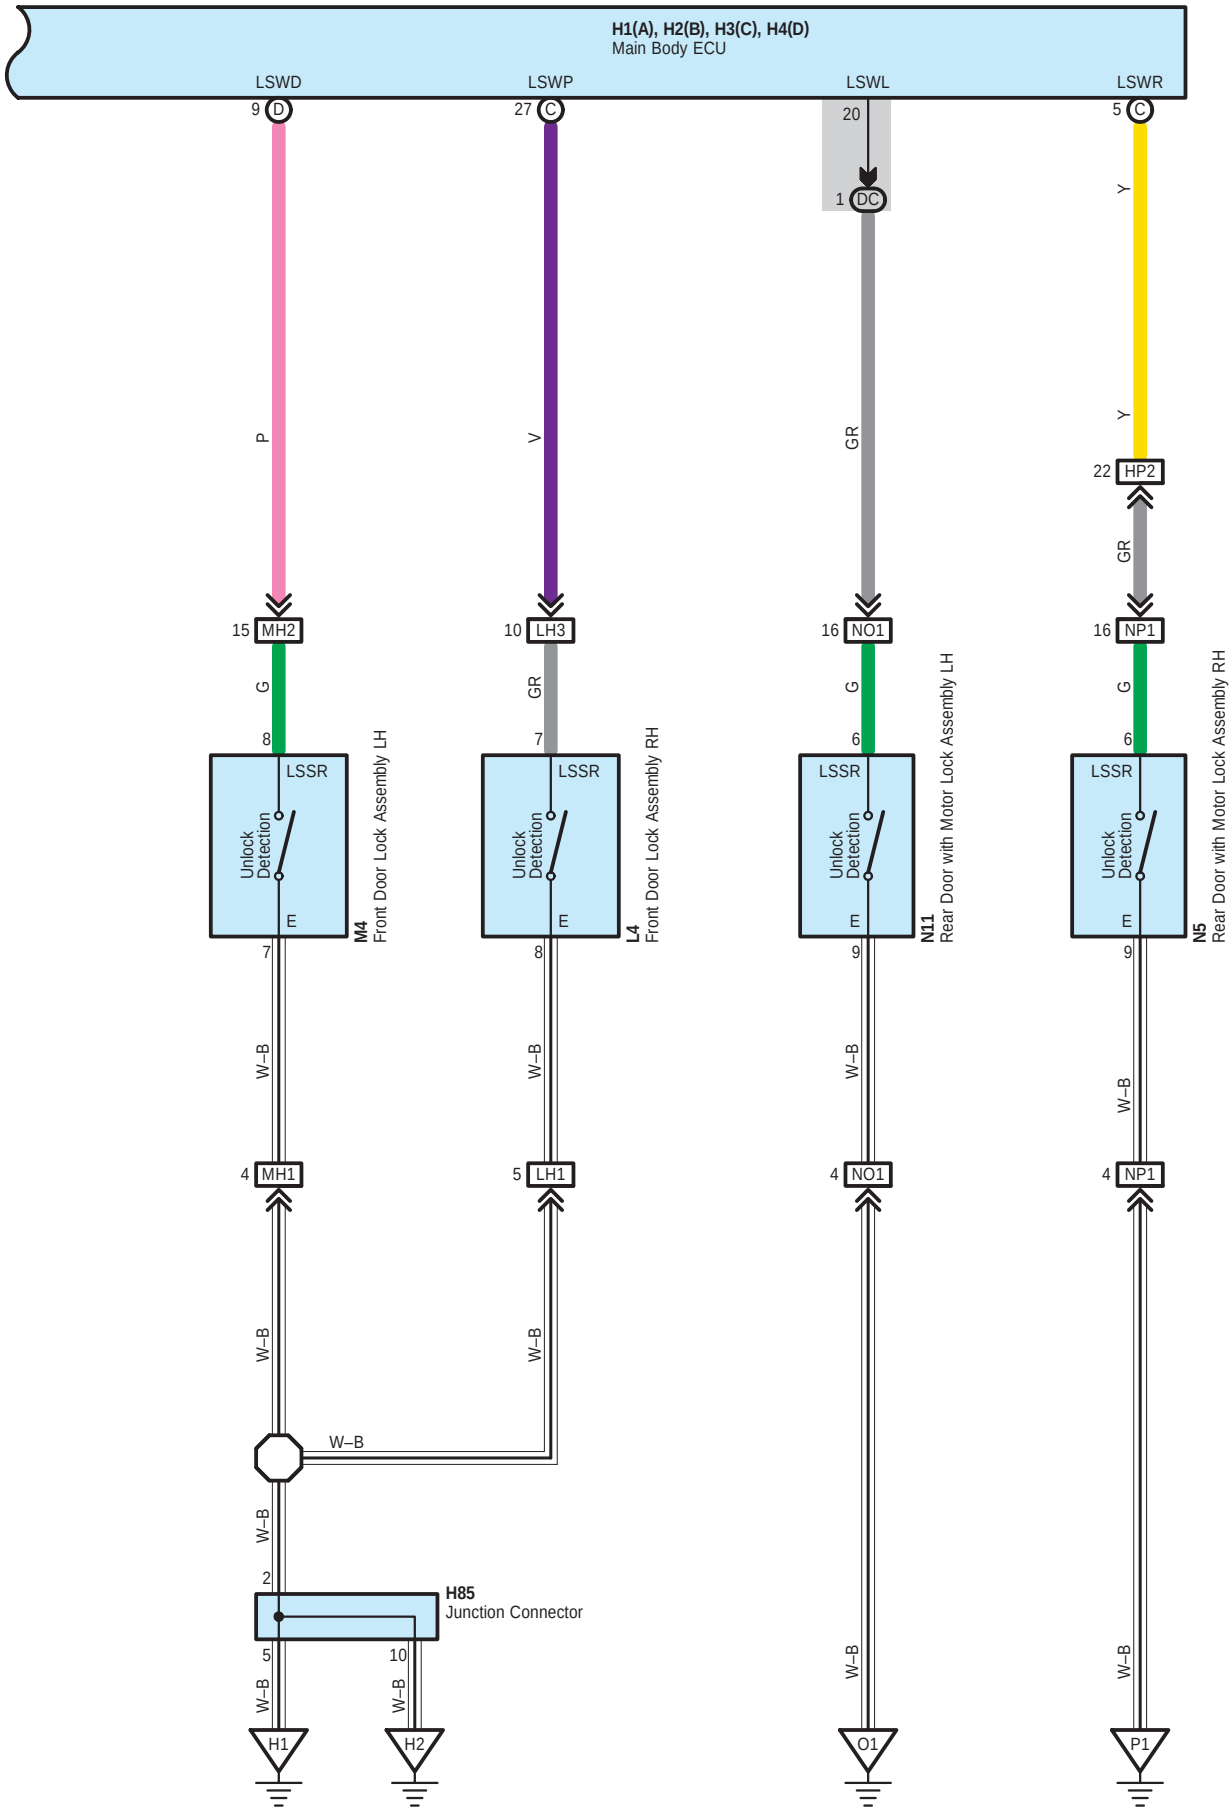
H1(A), H2(B), H3(C), H4(D)
Main Body ECU
LSWD
LSWP
LSWL
LSWR
9 D
27 C
20
1 DC
5 C
P
V
GR
Y
Y
22 HP2
GR
15 MH2
10 LH3
16 NO1
16 NP1
G
GR
G
G
8
7
6
6
LSSR
Unlock Detection
E
M4
Front Door Lock Assembly LH
L4
Front Door Lock Assembly RH
N11
Rear Door with Motor Lock Assembly LH
N5
Rear Door with Motor Lock Assembly RH
7
8
9
9
W–B
4 MH1
5 LH1
4 NO1
4 NP1
H85
Junction Connector
2
5
10
H1
H2
O1
P1


A 8
Black




A 9
Black




A 33
Black




A 40
Black




A 54
White

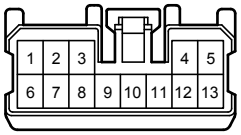


H 1
White

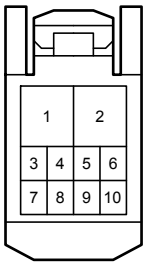


H 2
White

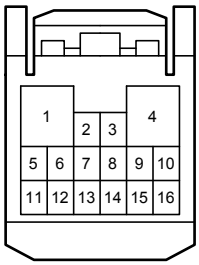


H 3
White

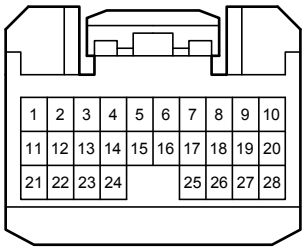


H 4
White

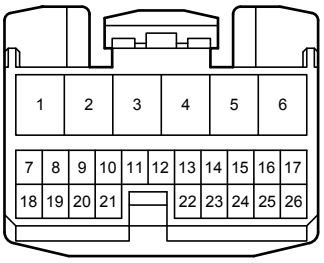


H 21
White




H 39
White

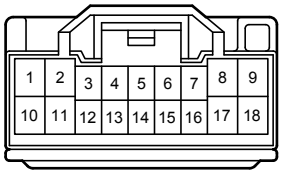


H 60
Black

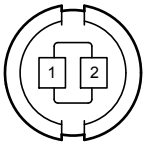


H 77
Black

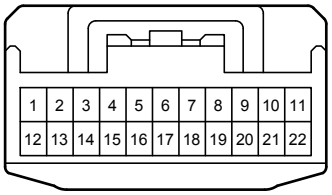


H 78
Black

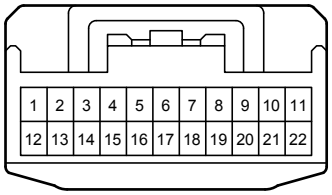


H 79
Black

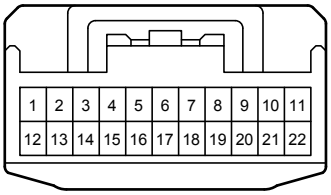


H 80
Black

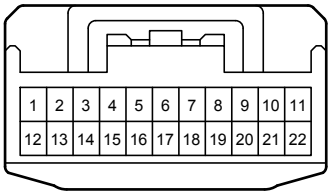


H 81
White

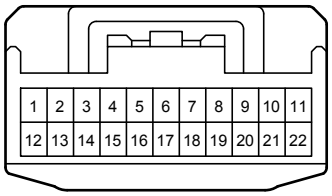


H 85
White

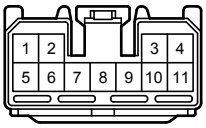


H 86
White

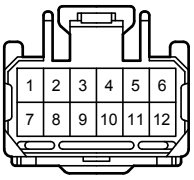


H 88
White

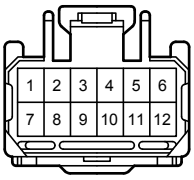


H 89
White

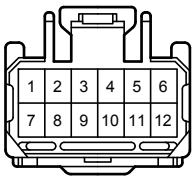


H127
Black

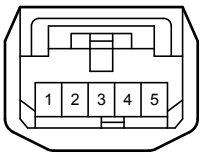


J 7
Black

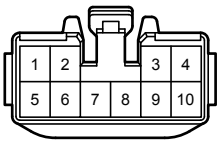


L 4
White

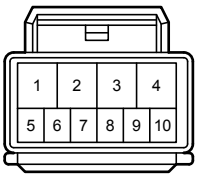


M 4
White

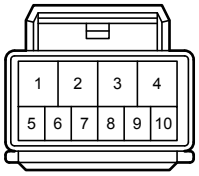

N 5
White

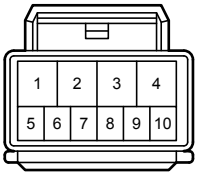

N 11
White

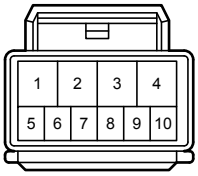


O 7
White



O 8
White



O 25
White

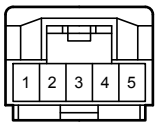


P 6
White




P 7
White




U 6
White

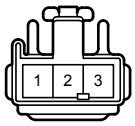


U 7
White

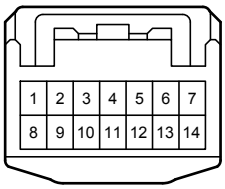


U 8
White

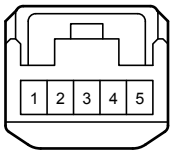


U 9
White

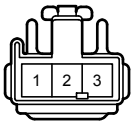


1A
White

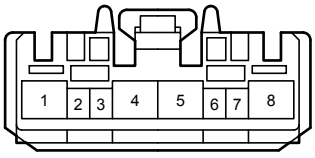


1F




1I
White

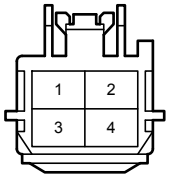


DA
White




DB
White

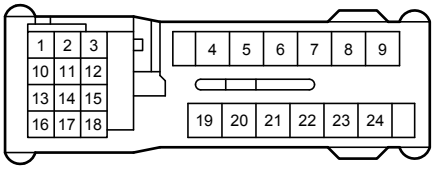


DC
White

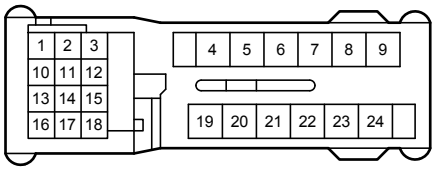


DD
White

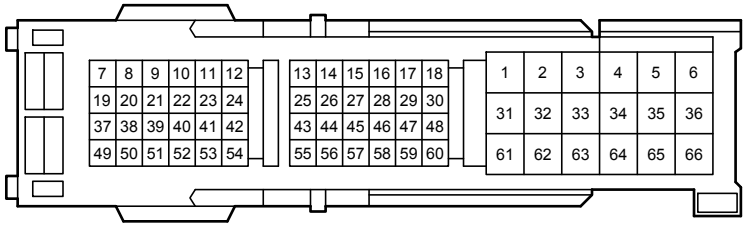


AH9
Gray

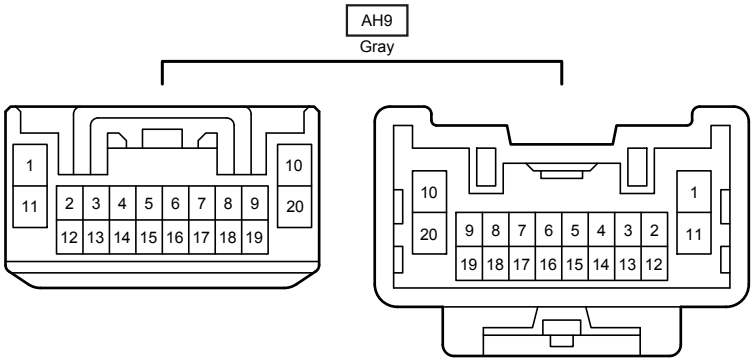


AH10
Gray

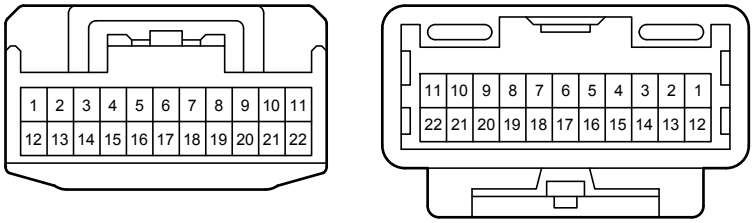


HJ1
White

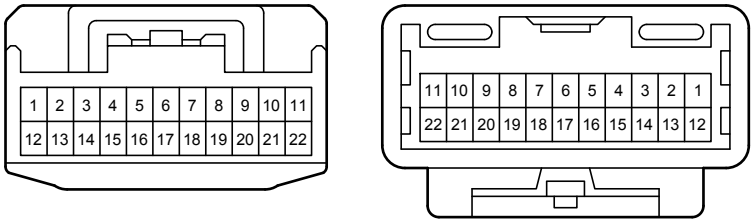


HP2
Gray

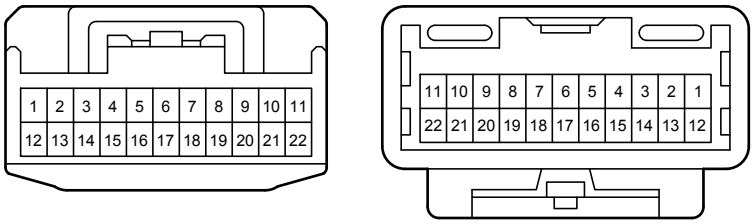


HU1
White

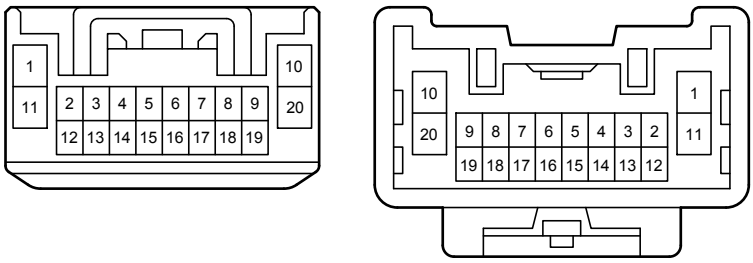


LH1
Blue

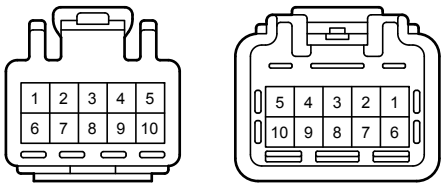


LH3
Blue

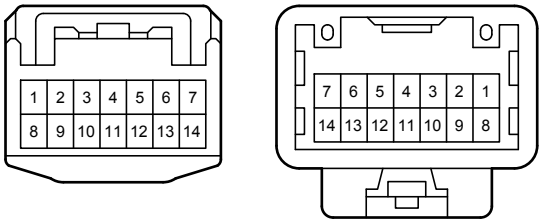


MH1
Blue

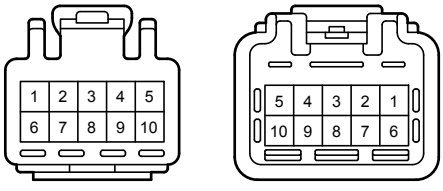


MH2
Blue

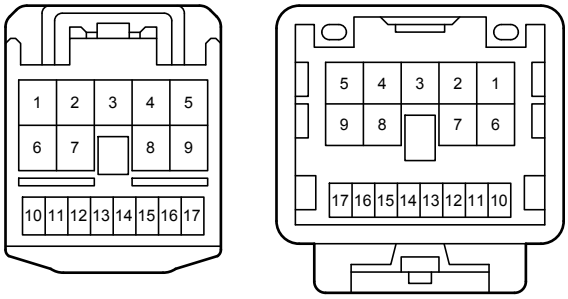


NO1
White

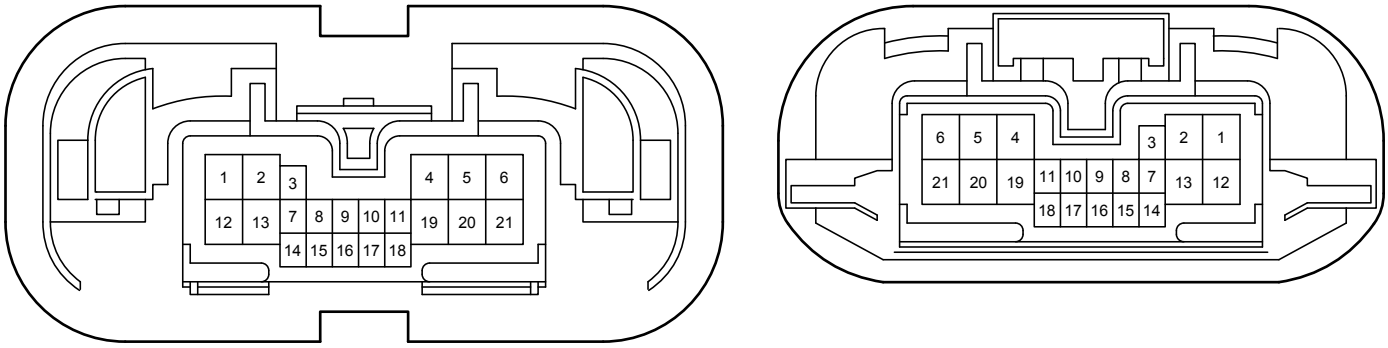



NP1
White

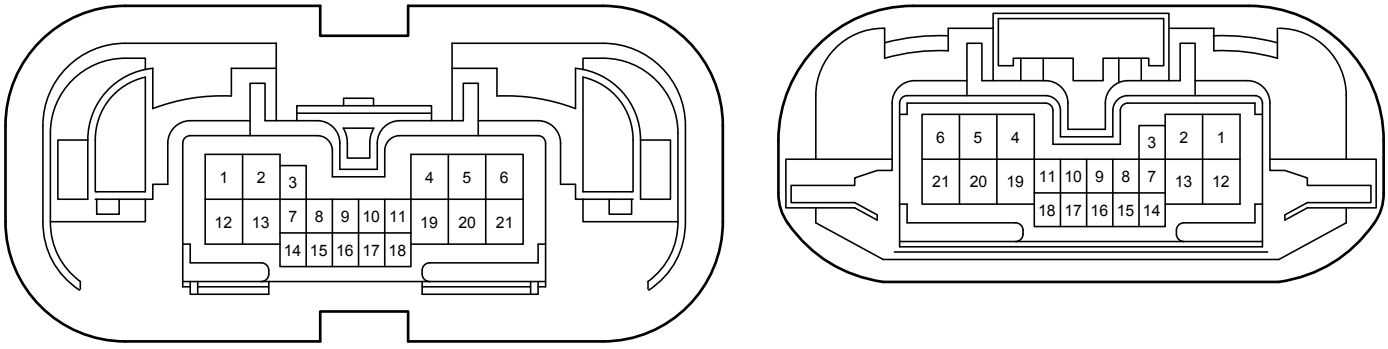


OH2
Black

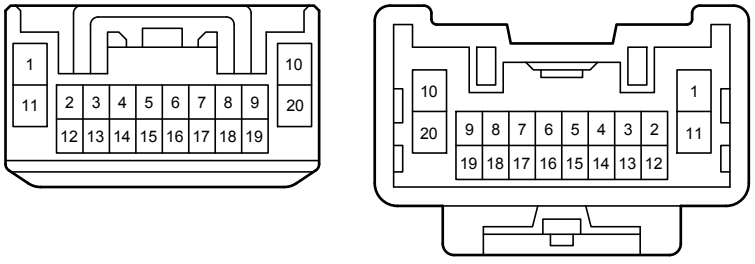

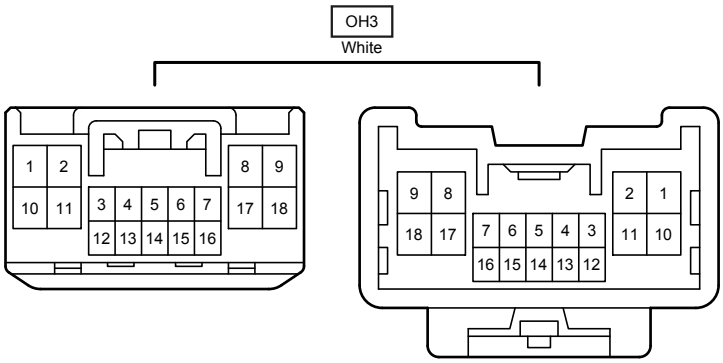
OH3
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

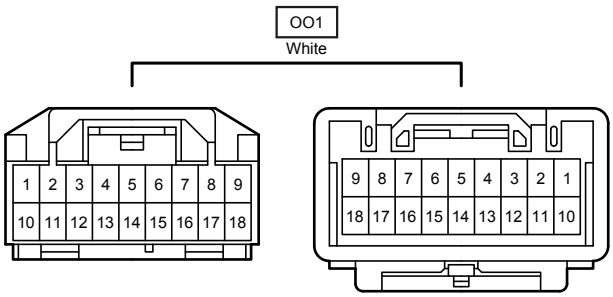
OO1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

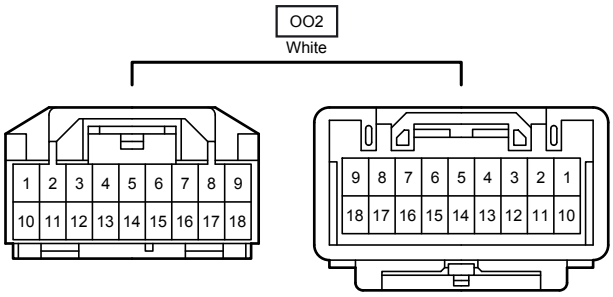
OO2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10