

CENTER BODY PILLAR (CUT)


F14979-A


REPLACEMENT


REMOVAL

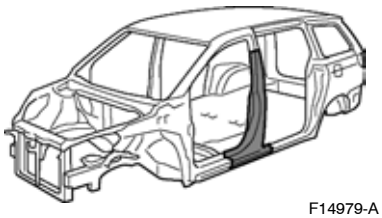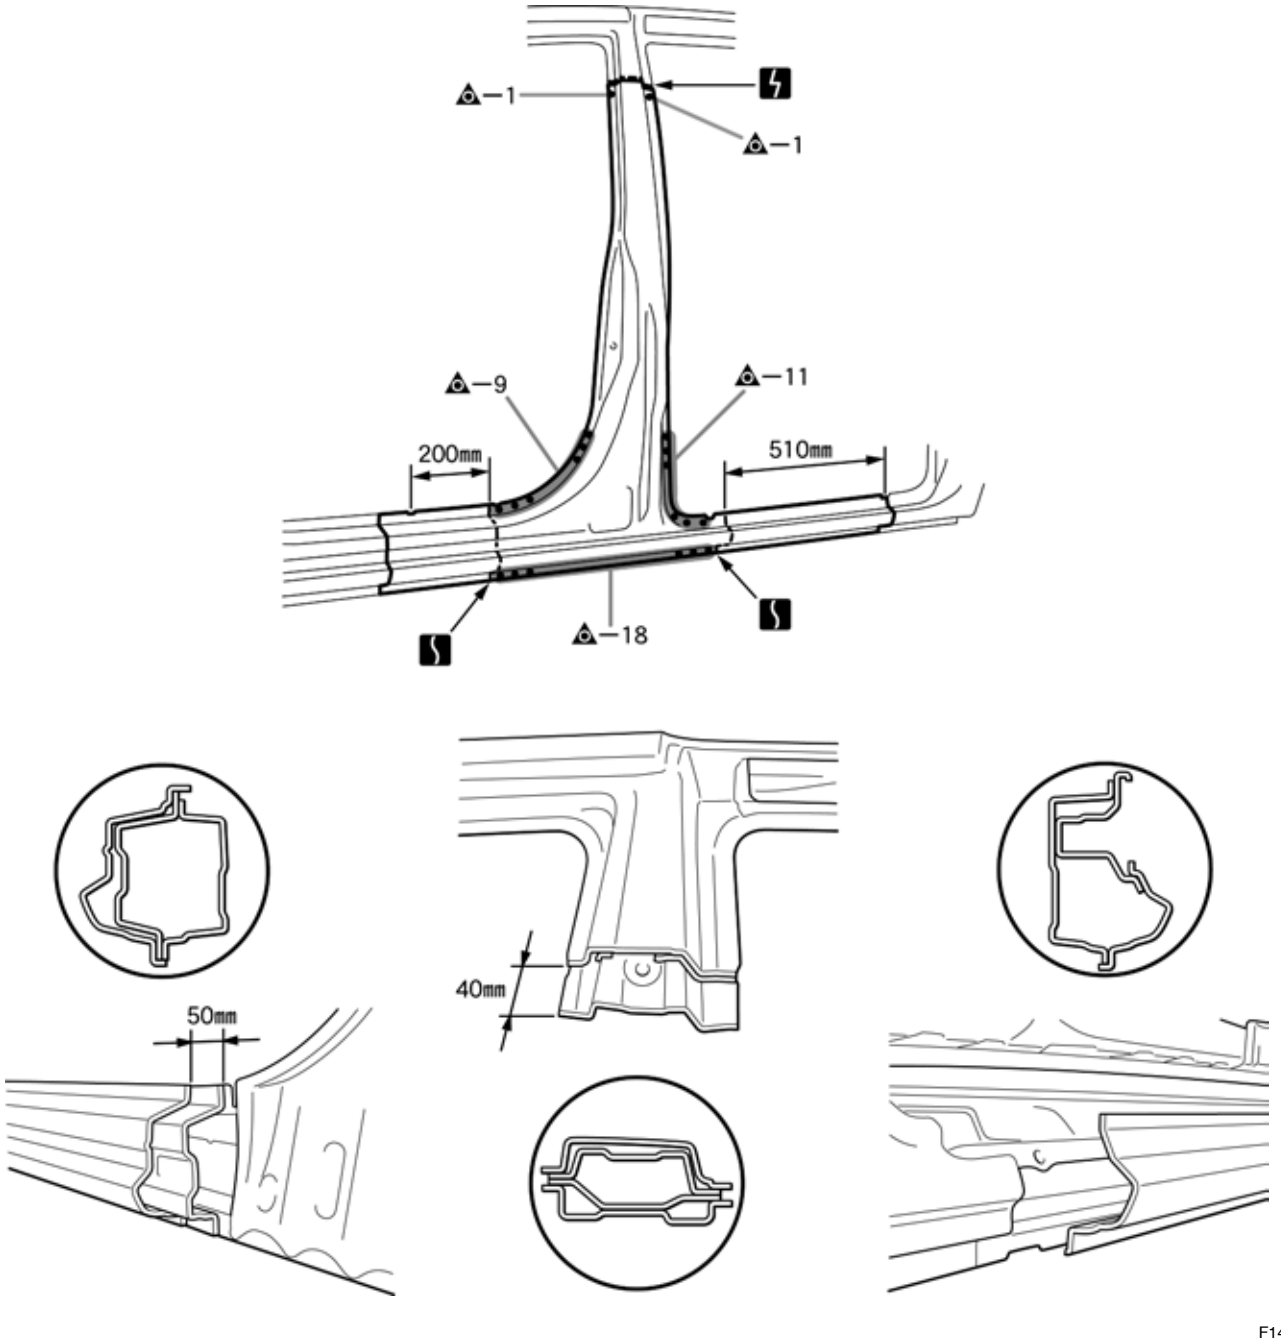


F14979

40mm (1.57in.) 50mm (1.97in.) 200mm (7.87in.) 510mm (20.08in.)

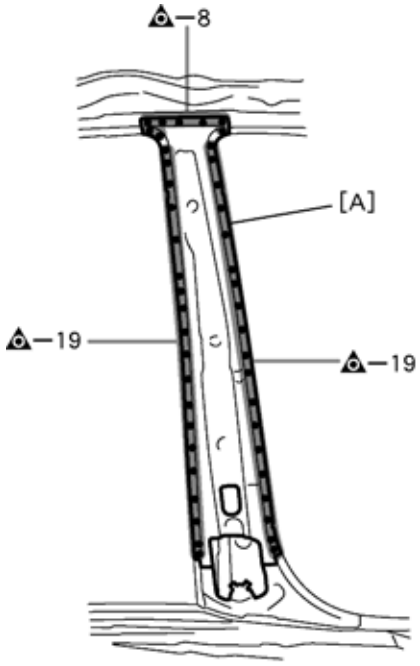

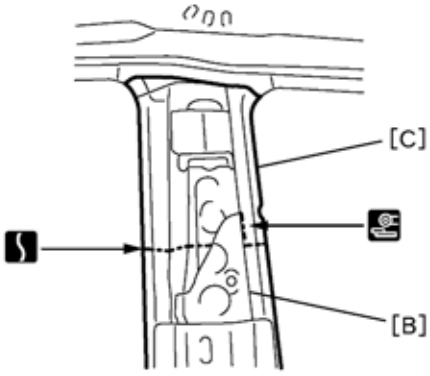

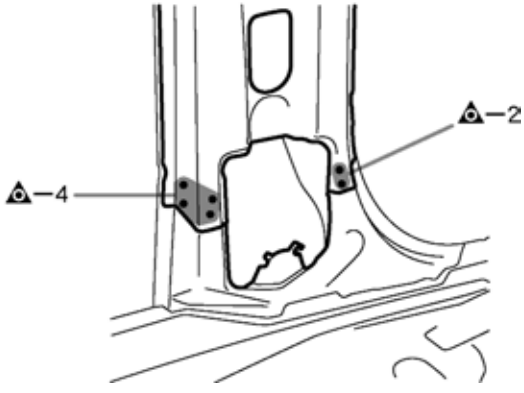

F14980

POINT


1 Separate the [B] and [C] at the welded part, at then remove the center body pillar.

PART NAME

[A] Center Body Inner Pillar [B] Center Body Pillar Center Reinforcement
[C] Center Body Pillar Outer Reinforcement

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

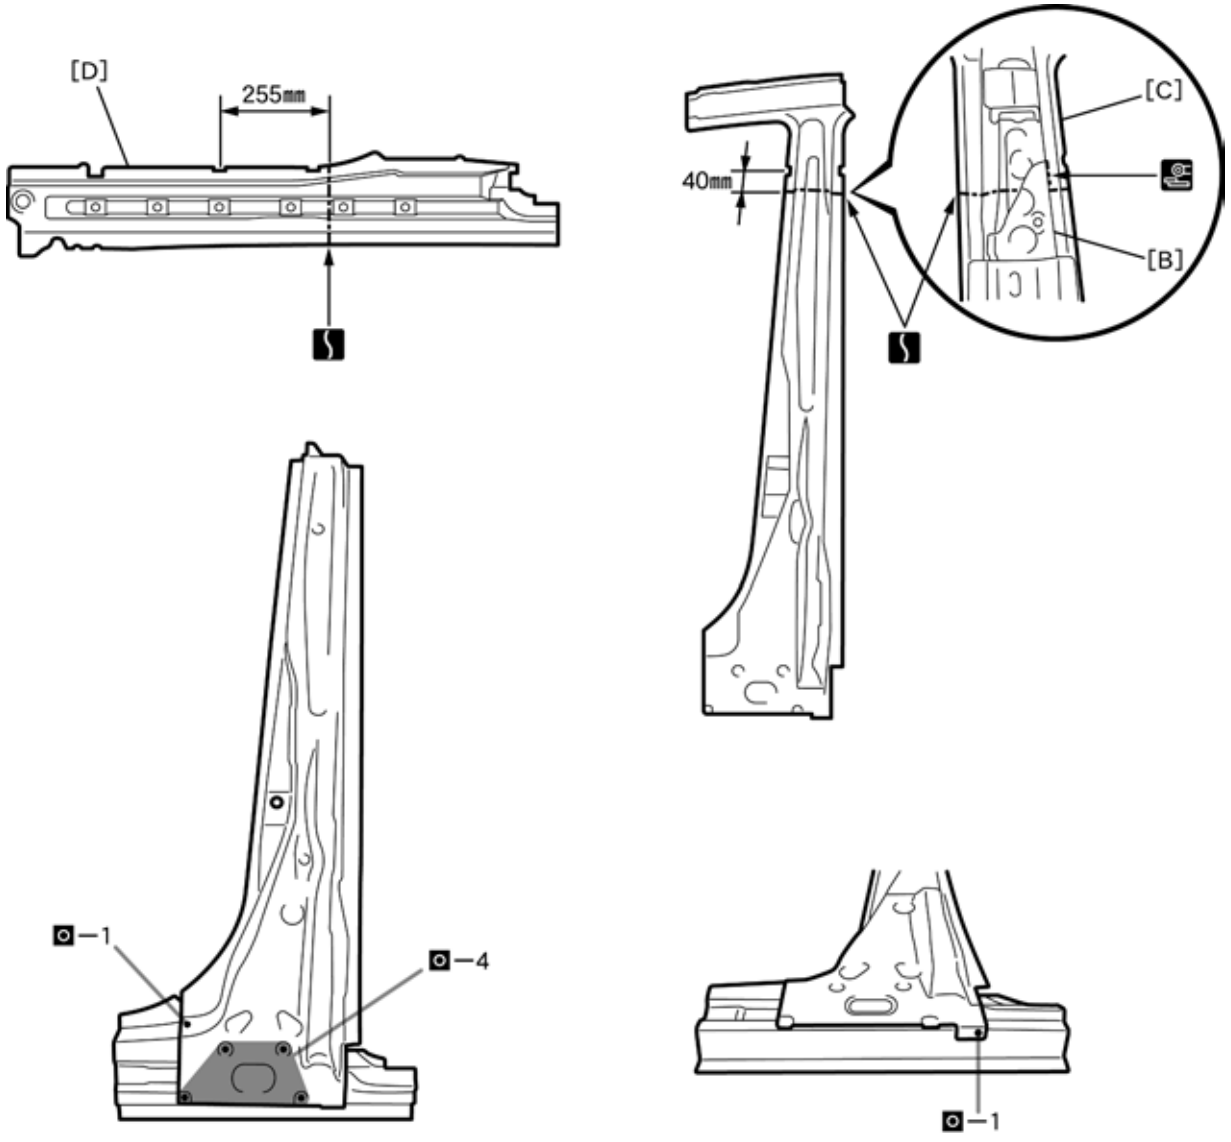


F14981

POINT

1 Take care not to damage the internal reinforcement.

PART NAME

[B] Center Body Pillar Center Reinforcement [C] Center Body Pillar Outer Reinforcement
[D] Rocker Outer Reinforce
40mm (1.57in.) 255mm (10.04in.)

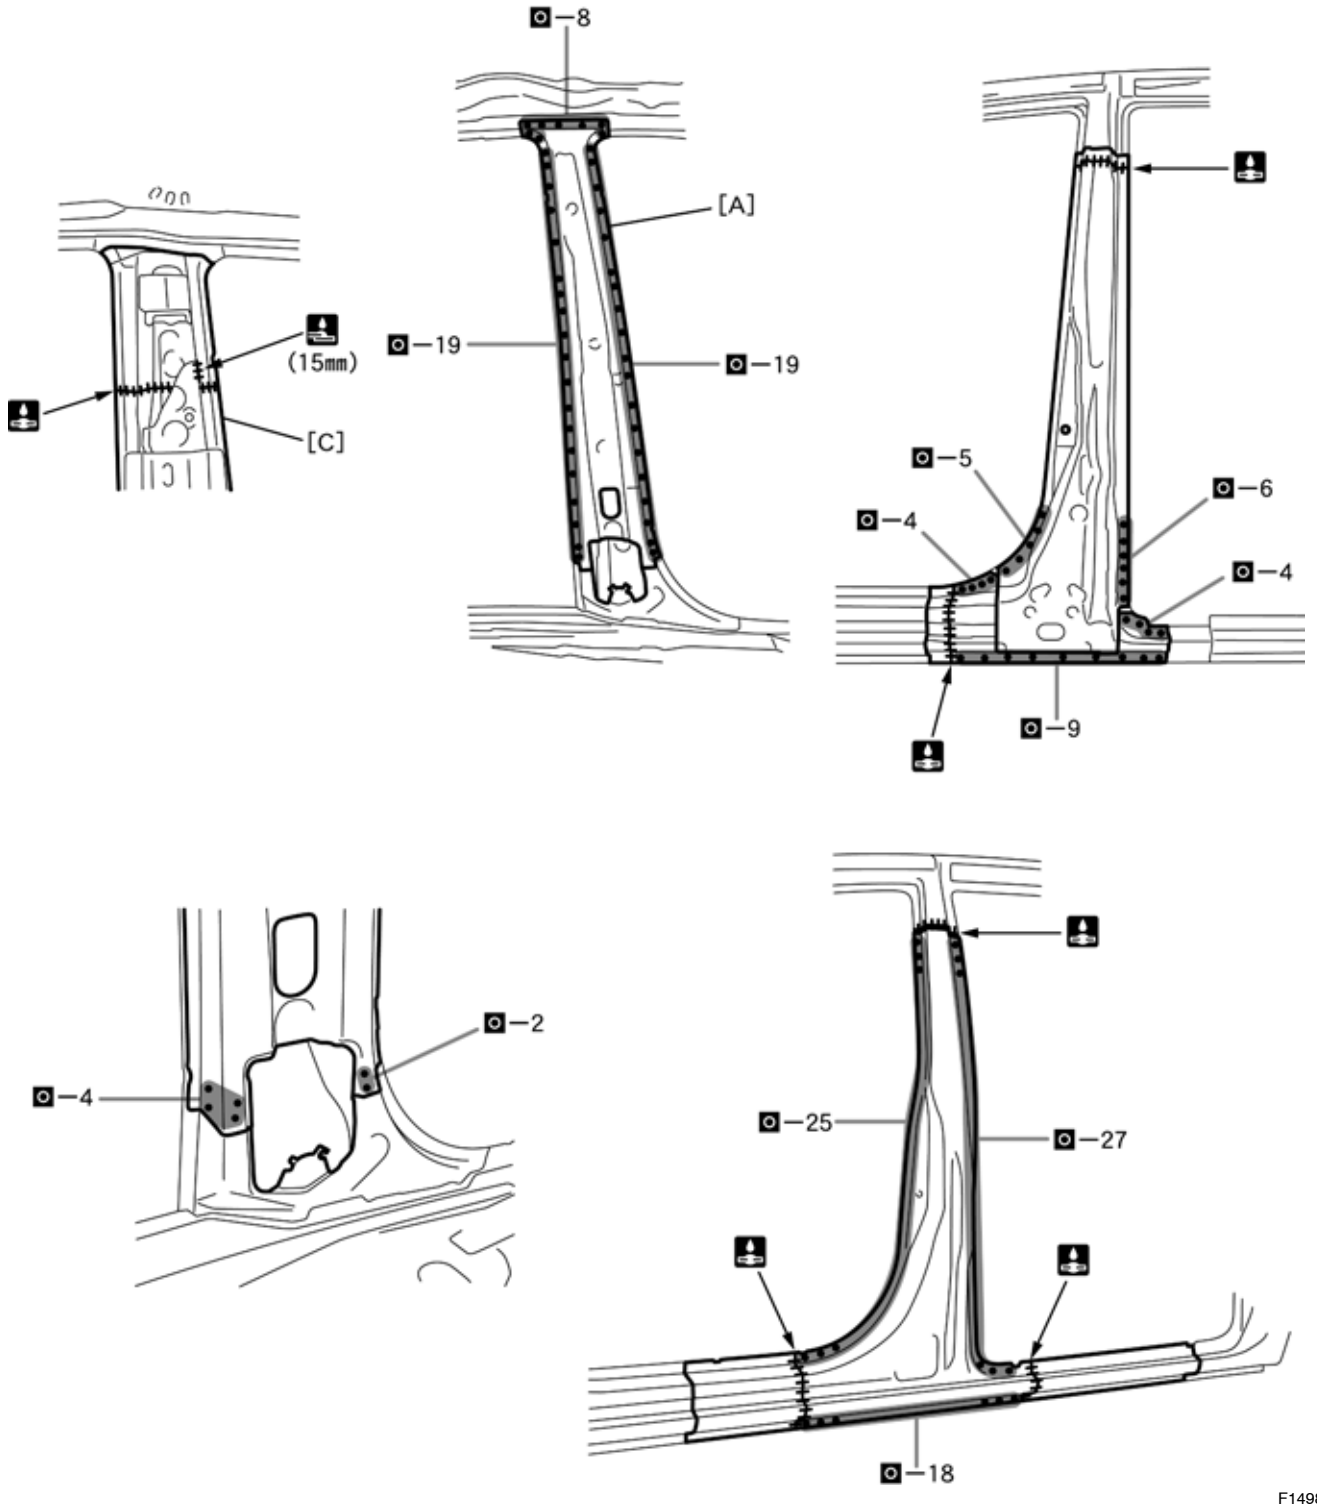

POINT

1 Inspect the fitting of the front door and slide door, etc., before welding, since this affects the appearance of the finish.

2 After welding the reinforcement to the vehicle side, install the outer panel.

PART NAME

[A] Center Body Inner Pillar [C] Center Body Pillar Outer Reinforcement

15mm (0.59in.)