

(Cont. next page)

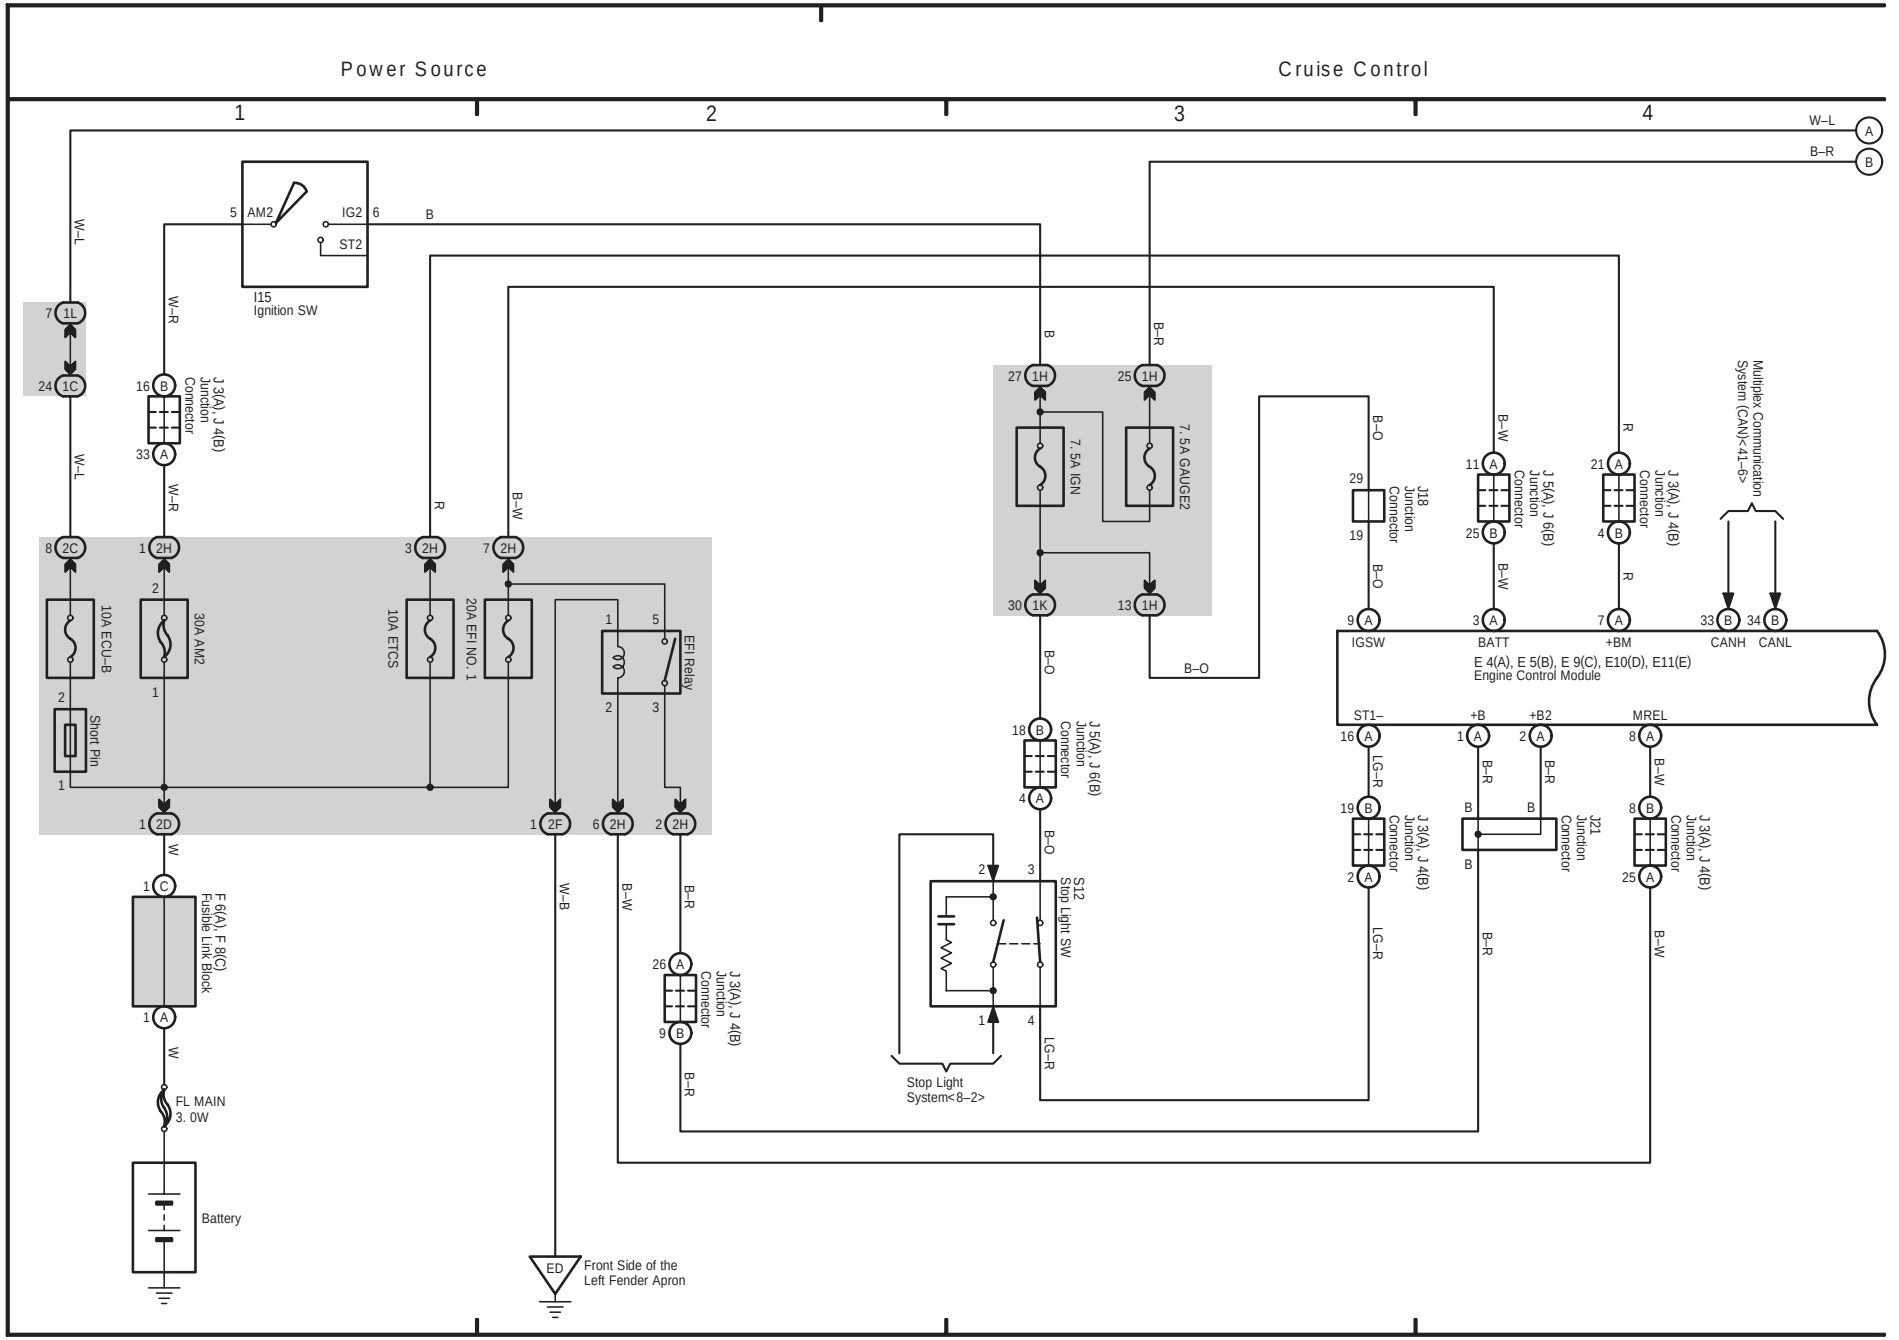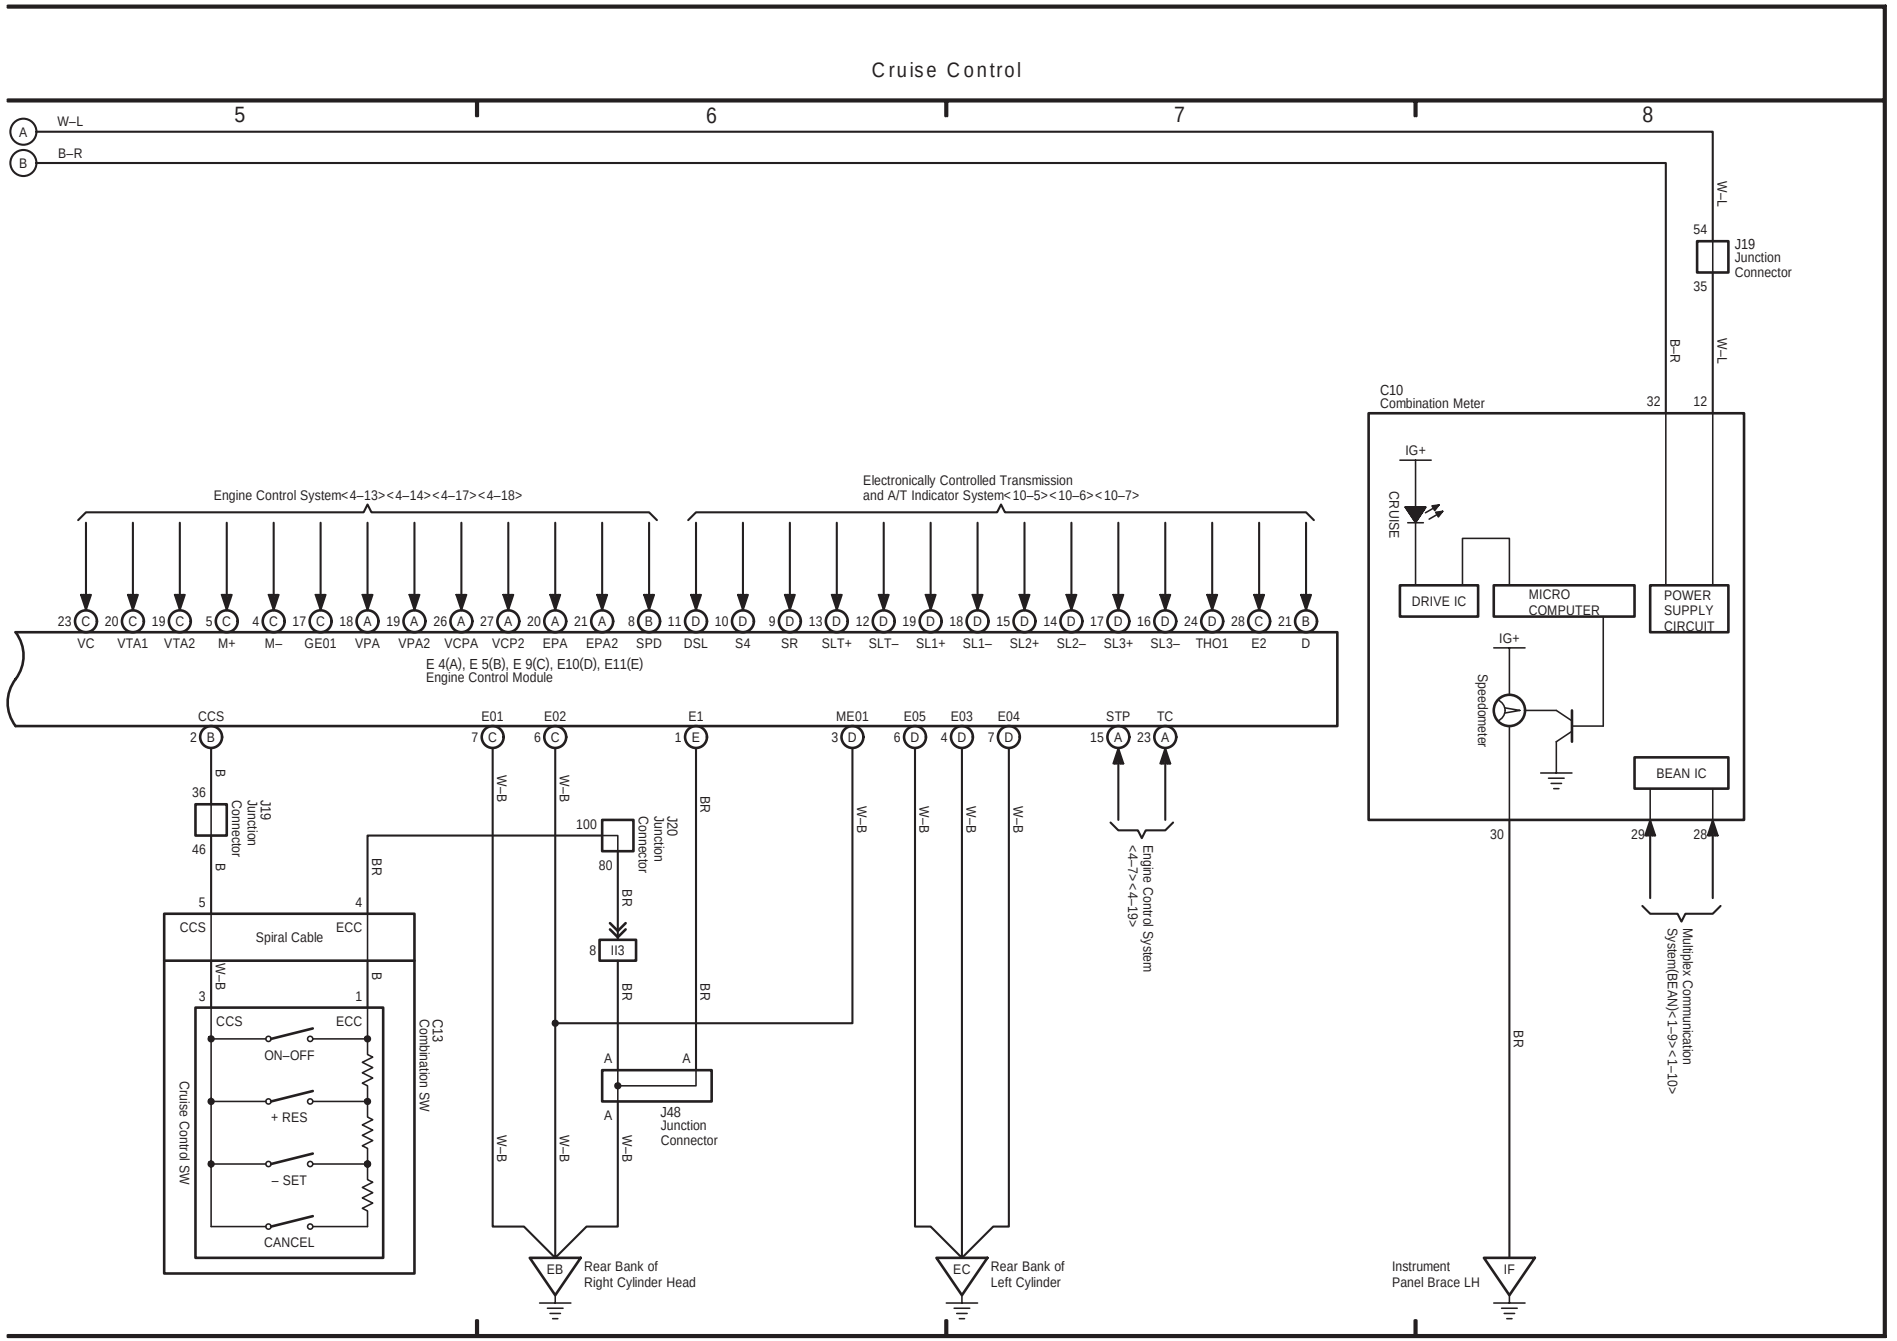


Cruise Control
5
6
7
8
W–L
B–R
J19 Junction Connector
C10 Combination Meter
IG+
CRUISE
DRIVE IC
MICRO COMPUTER
POWER SUPPLY CIRCUIT
Speedometer
BEAN IC
Engine Control System<4–13><4–14><4–17><4–18>
Electronically Controlled Transmission and A/T Indicator System<10–5><10–6><10–7>
VC VTA1 VTA2 M+ M– GE01 VPA VPA2 VCPA VCP2 EPA EPA2 SPD DSL S4 SR SLT+ SLT– SL1+ SL1– SL2+ SL2– SL3+ SL3– THO1 E2 D
E 4(A), E 5(B), E 9(C), E10(D), E11(E)
Engine Control Module
CCS E01 E02 E1 ME01 E05 E03 E04 STP TC
J19 Junction Connector
J20 Junction Connector
Spiral Cable
Cruise Control SW
ON–OFF
+ RES
– SET
CANCEL
C13 Combination SW
J48 Junction Connector
Engine Control System <4–7><4–19>
Multiplex Communication System(BEAN)<1–9><1–10>
EB Rear Bank of Right Cylinder Head
EC Rear Bank of Left Cylinder
Instrument Panel Brace LH
IF