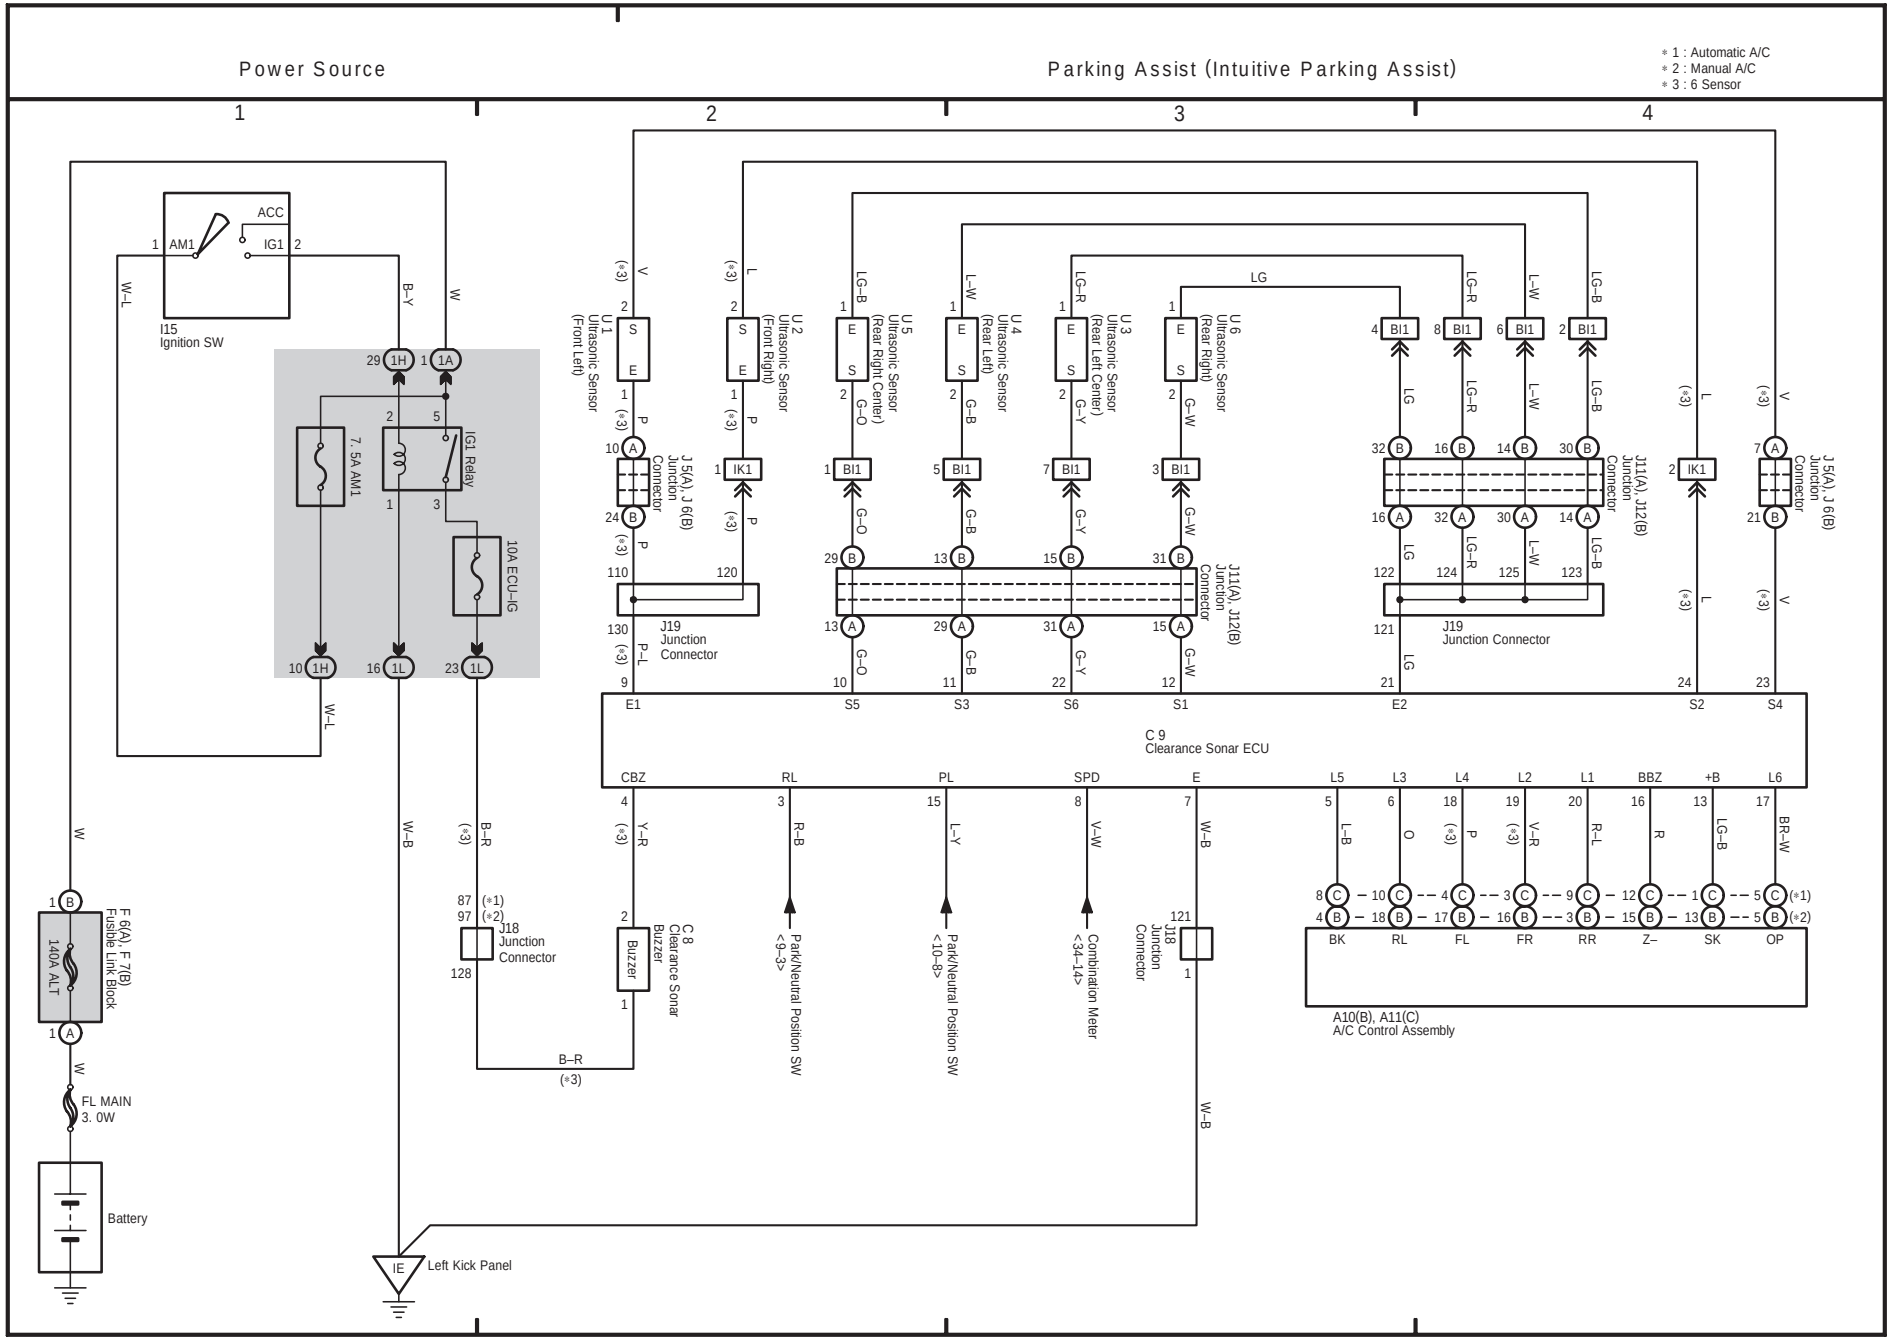

Power Source
Parking Assist (Intuitive Parking Assist)
* 1 : Automatic A/C
* 2 : Manual A/C
* 3 : 6 Sensor
I15 Ignition SW
ACC
AM1
IG1
IG1 Relay
7.5A AM1
10A ECU–IG
F 6(A) F 7(B) Fusible Link Block
140A ALT
FL MAIN 3.0W
Battery
IE Left Kick Panel
U1 Ultrasonic Sensor (Front Left)
U2 Ultrasonic Sensor (Front Right)
U5 Ultrasonic Sensor (Rear Right Center)
U4 Ultrasonic Sensor (Rear Left)
U3 Ultrasonic Sensor (Rear Left Center)
U6 Ultrasonic Sensor (Rear Right)
J5(A), J6(B) Junction Connector
J19 Junction Connector
J11(A), J12(B) Junction Connector
C9 Clearance Sonar ECU
C8 Clearance Sonar Buzzer
J18 Junction Connector
Park/Neutral Position SW <9–3>
Park/Neutral Position SW <10–8>
Combination Meter <34–14>
A10(B), A11(C) A/C Control Assembly
CBZ
RL
PL
SPD
E
L5
L3
L4
L2
L1
BBZ
+B
L6
BK
RL
FL
FR
RR
Z–
SK
OP