


(Cont. next page)

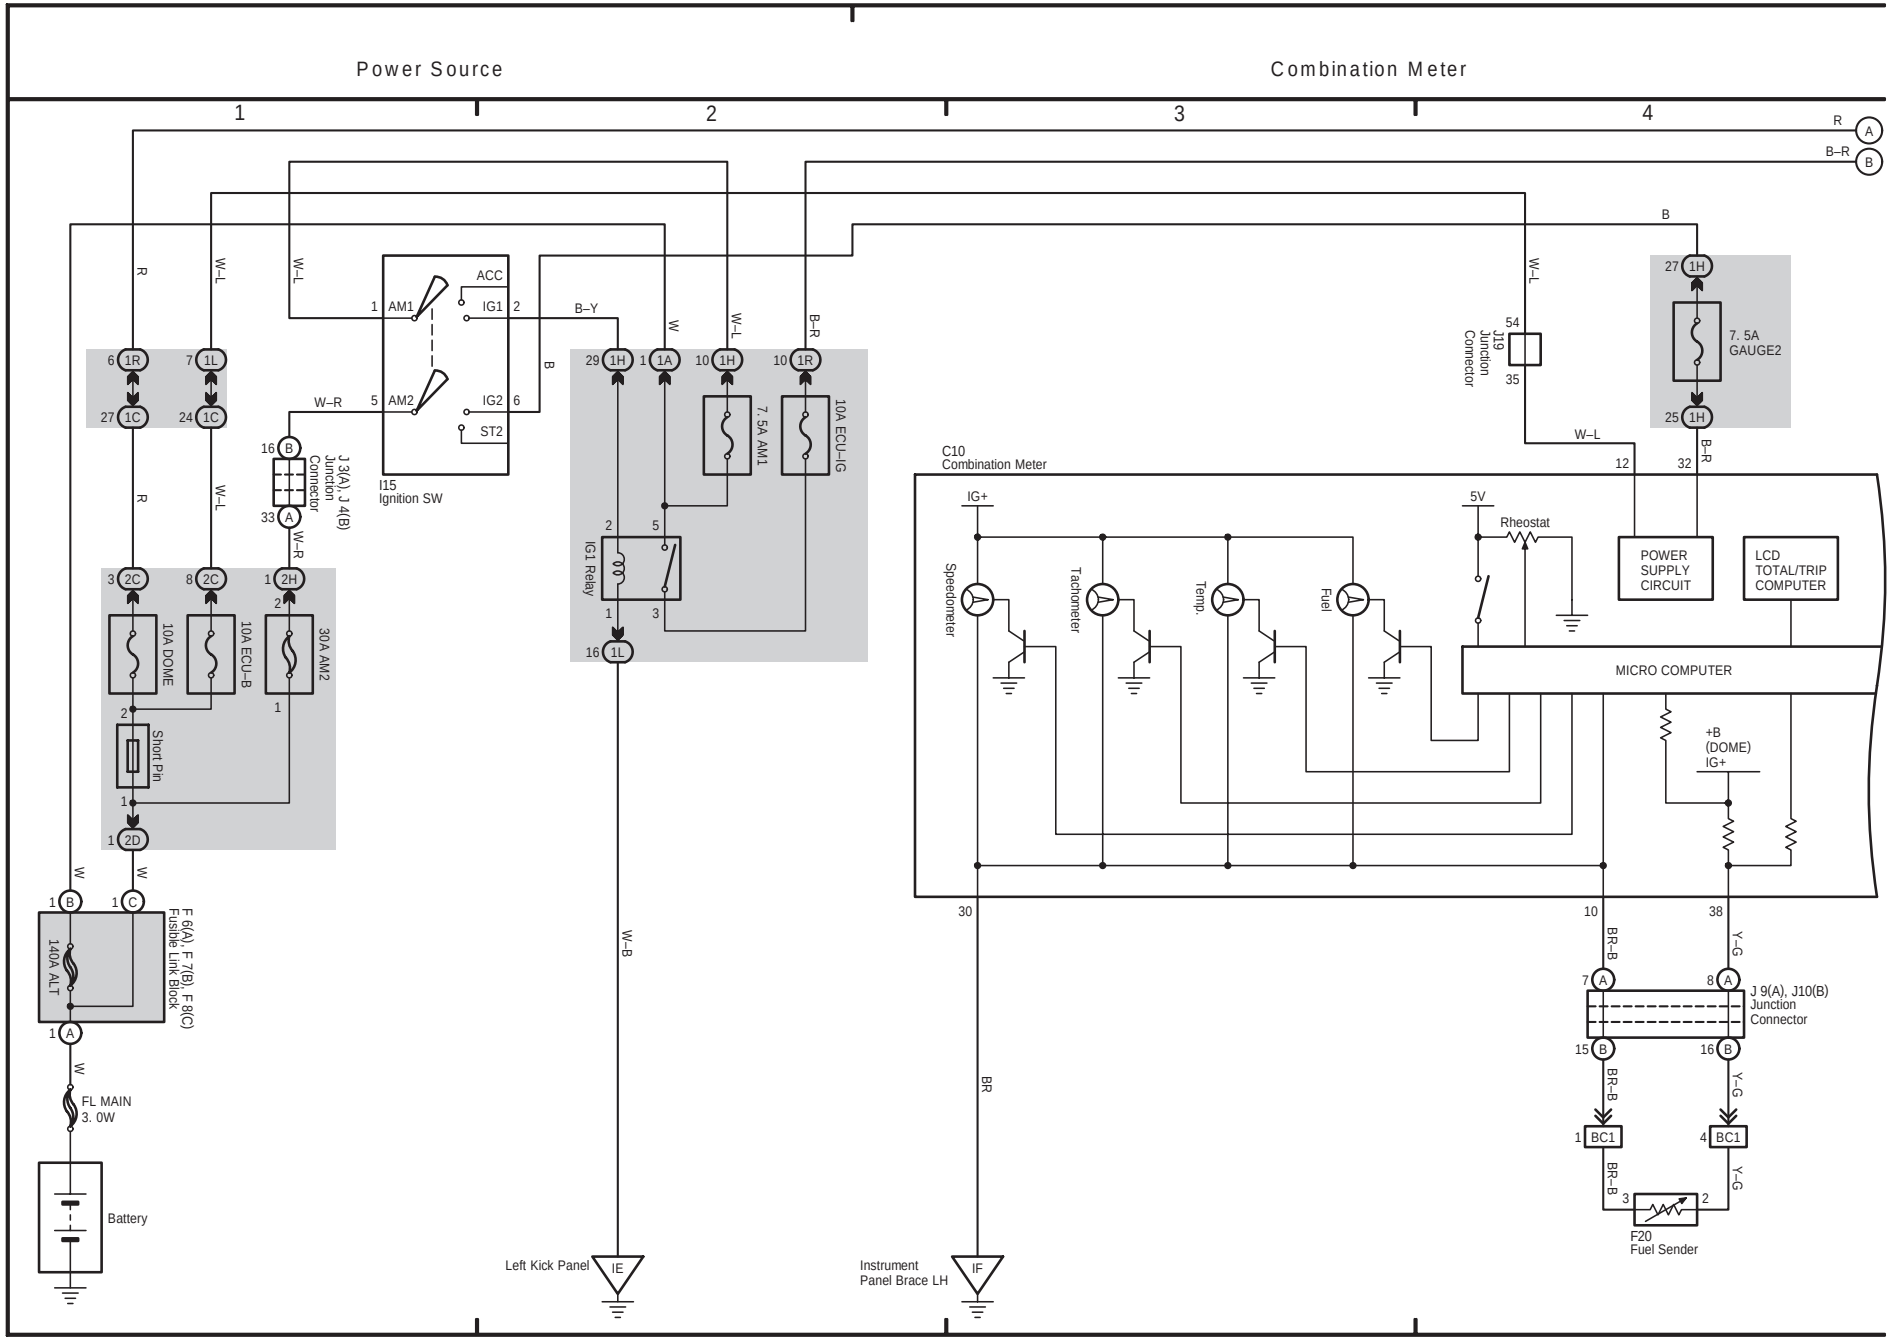


(Cont. next page)

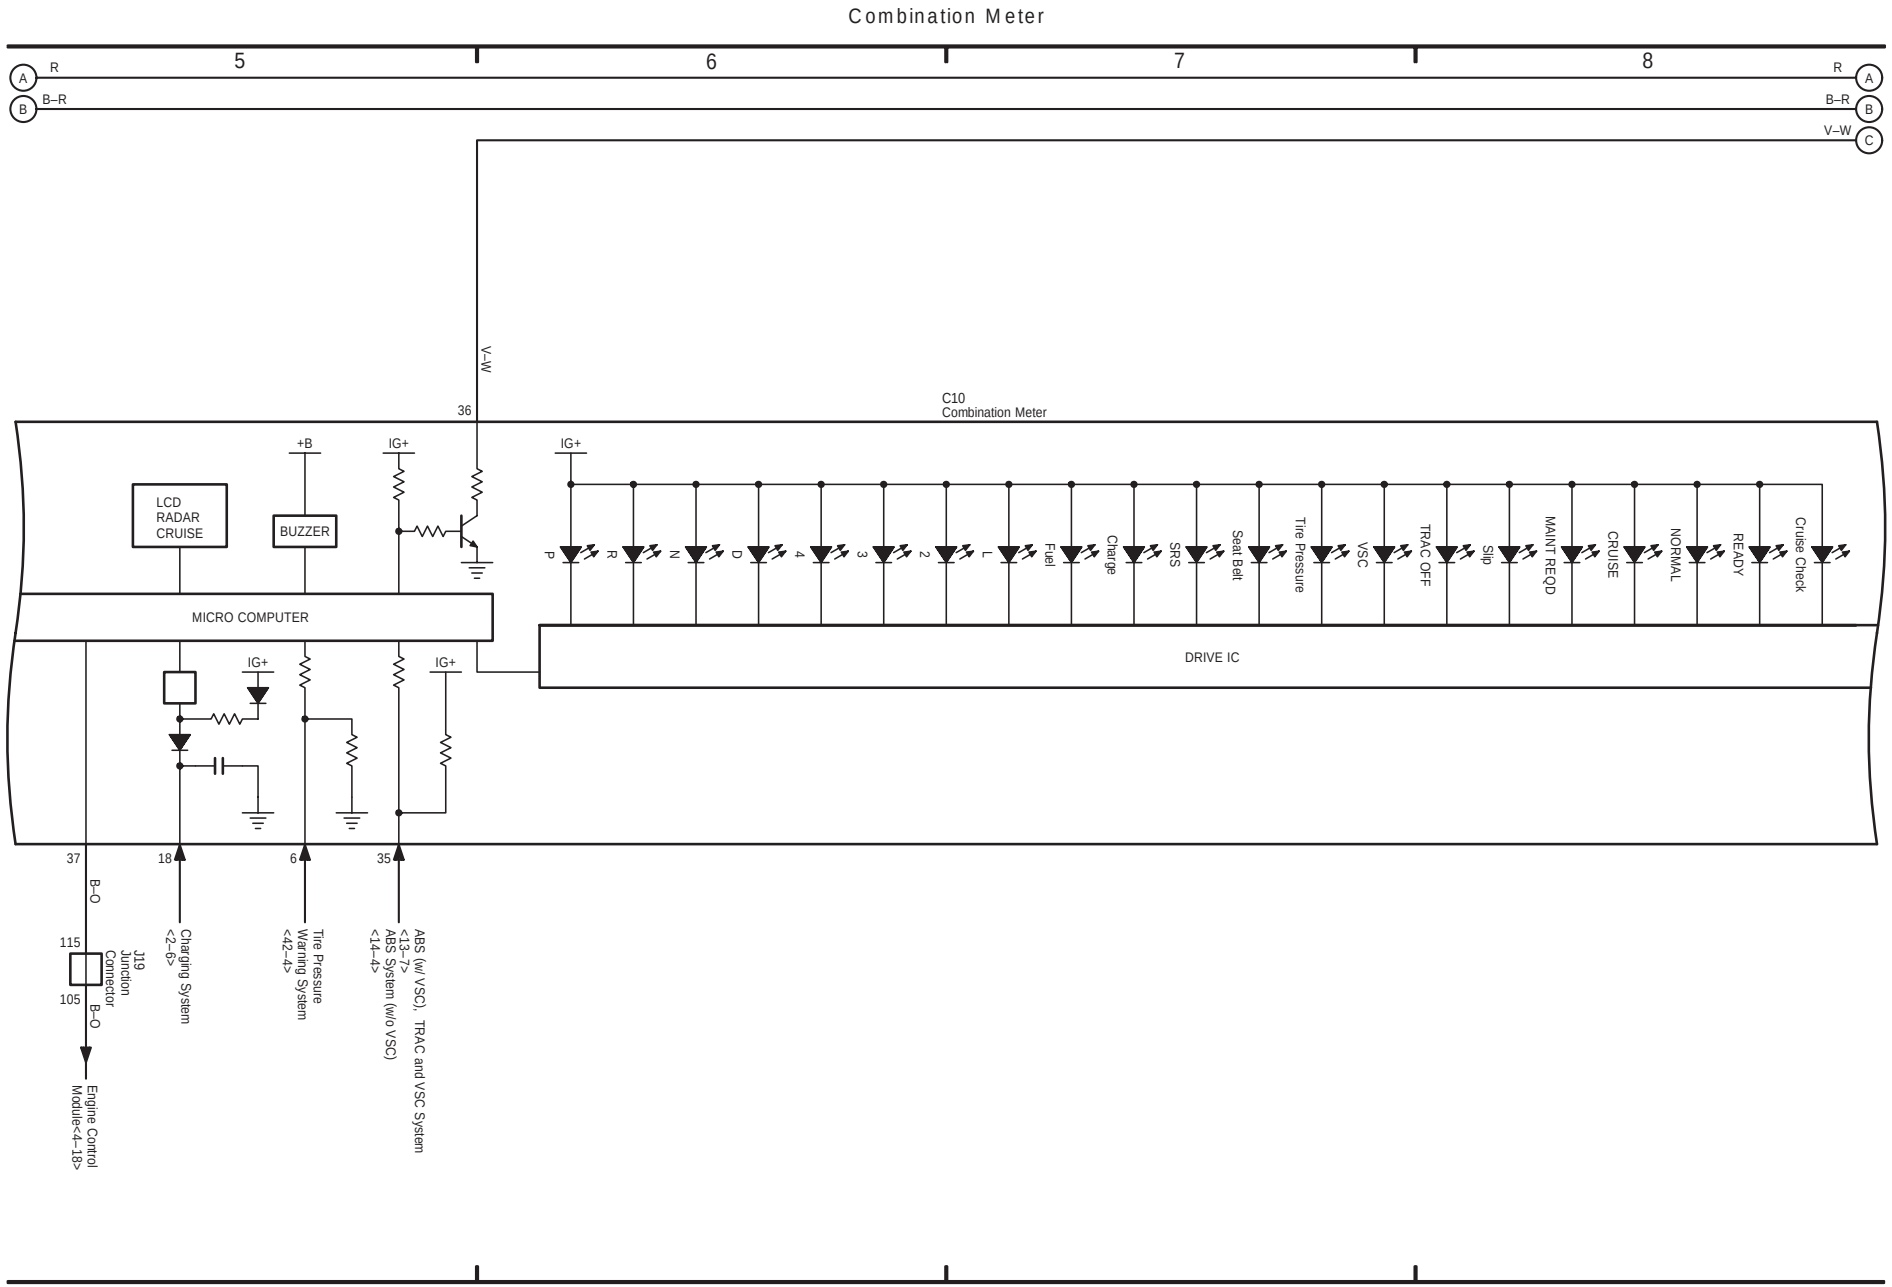

(Cont. next page)

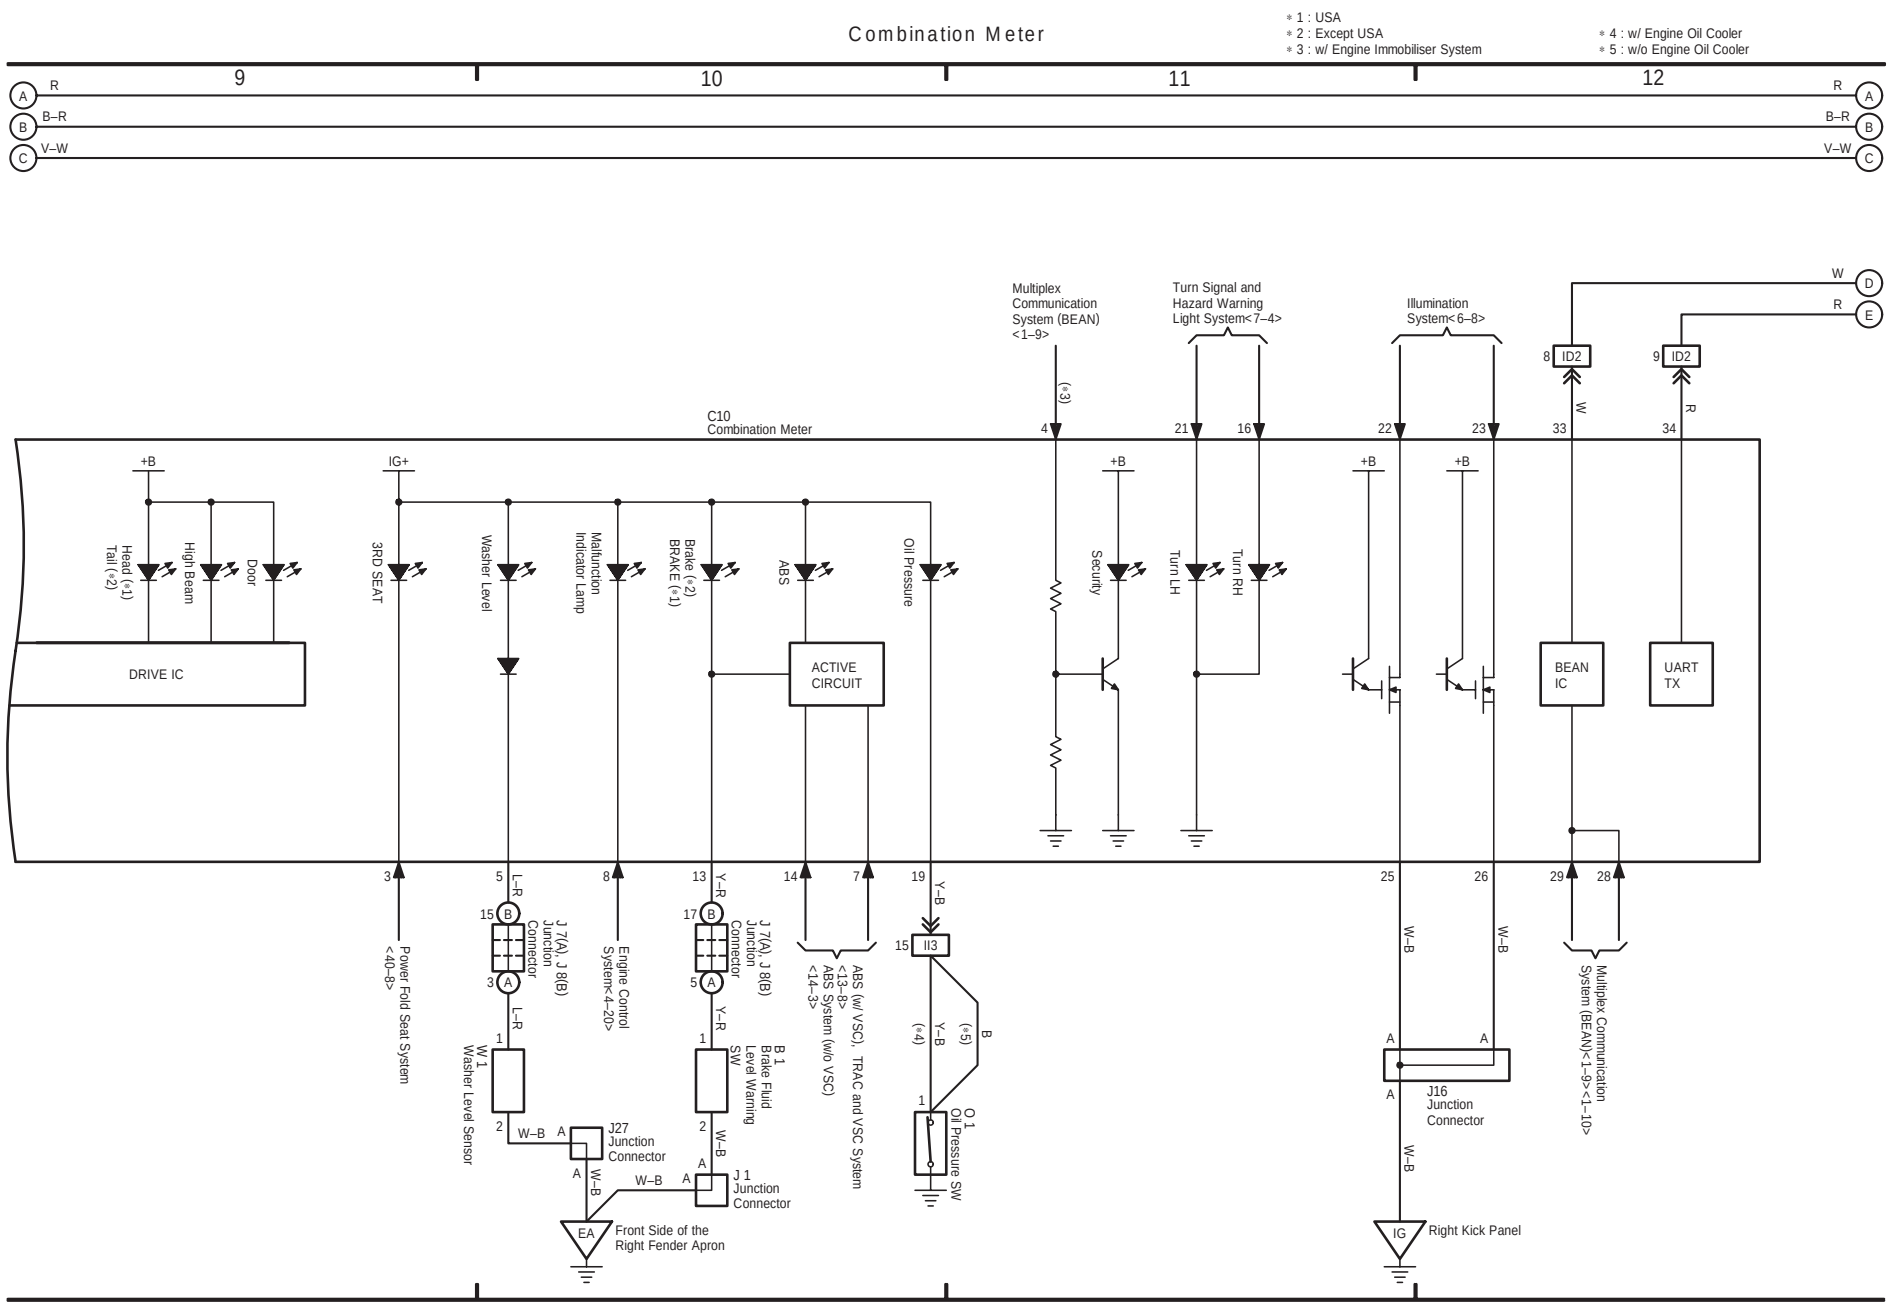

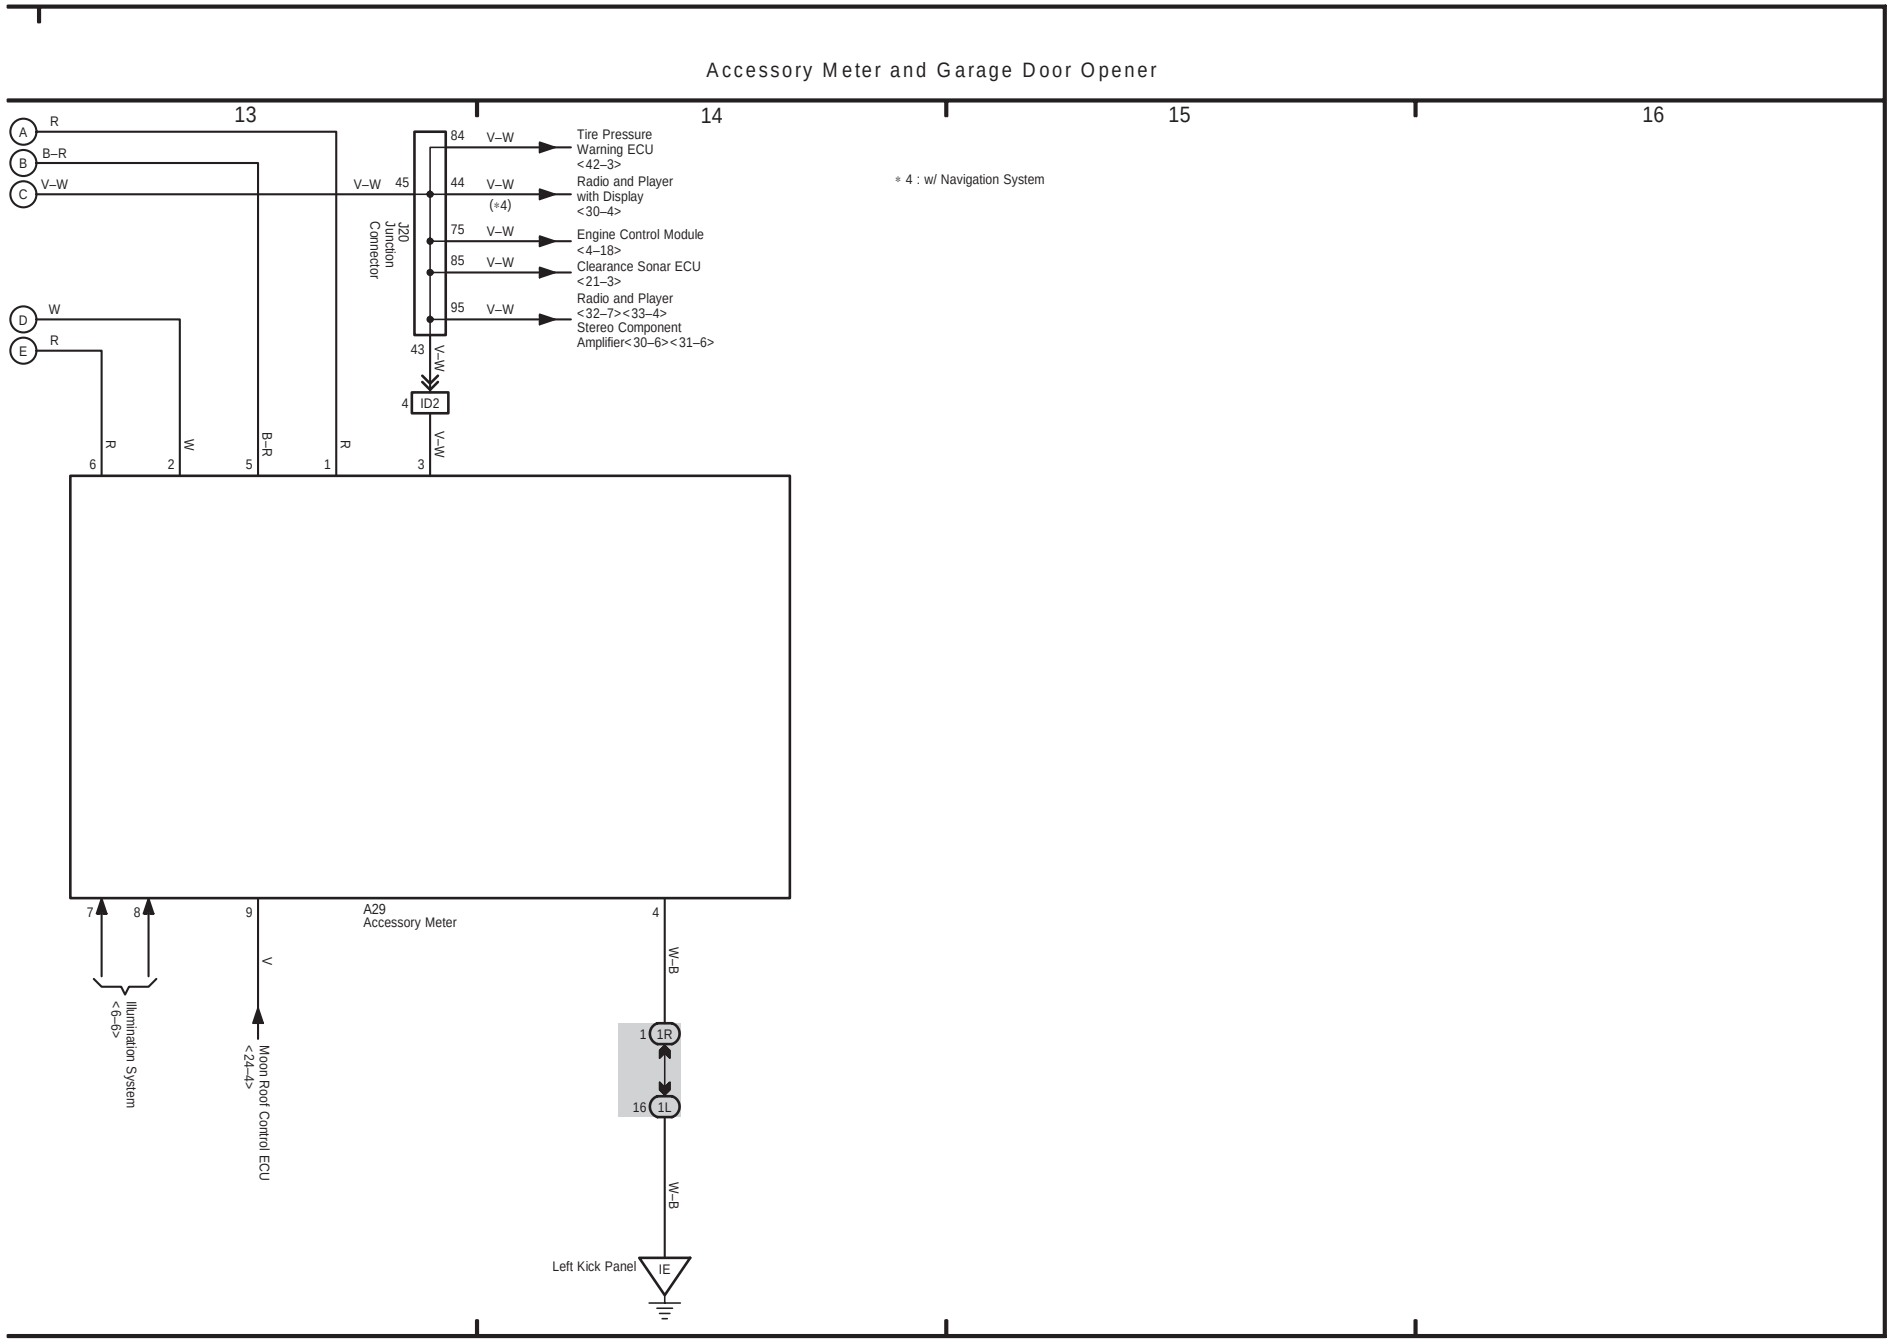
Accessory Meter and Garage Door Opener
13
14
15
16
A
B
C
R
B–R
V–W
V–W
45
J20
Junction
Connector
84
V–W
Tire Pressure
Warning ECU
<42–3>
44
V–W
(*4)
Radio and Player
with Display
<30–4>
75
V–W
Engine Control Module
<4–18>
85
V–W
Clearance Sonar ECU
<21–3>
95
V–W
Radio and Player
<32–7><33–4>
Stereo Component
Amplifier<30–6><31–6>
43
V–W
4
ID2
V–W
D
E
W
R
R
W
B–R
R
6
2
5
1
3
A29
Accessory Meter
7
8
9
4
V
W–B
Illumination System
<6–6>
Moon Roof Control ECU
<24–4>
1
1R
16
1L
W–B
Left Kick Panel
IE
* 4 : w/ Navigation System