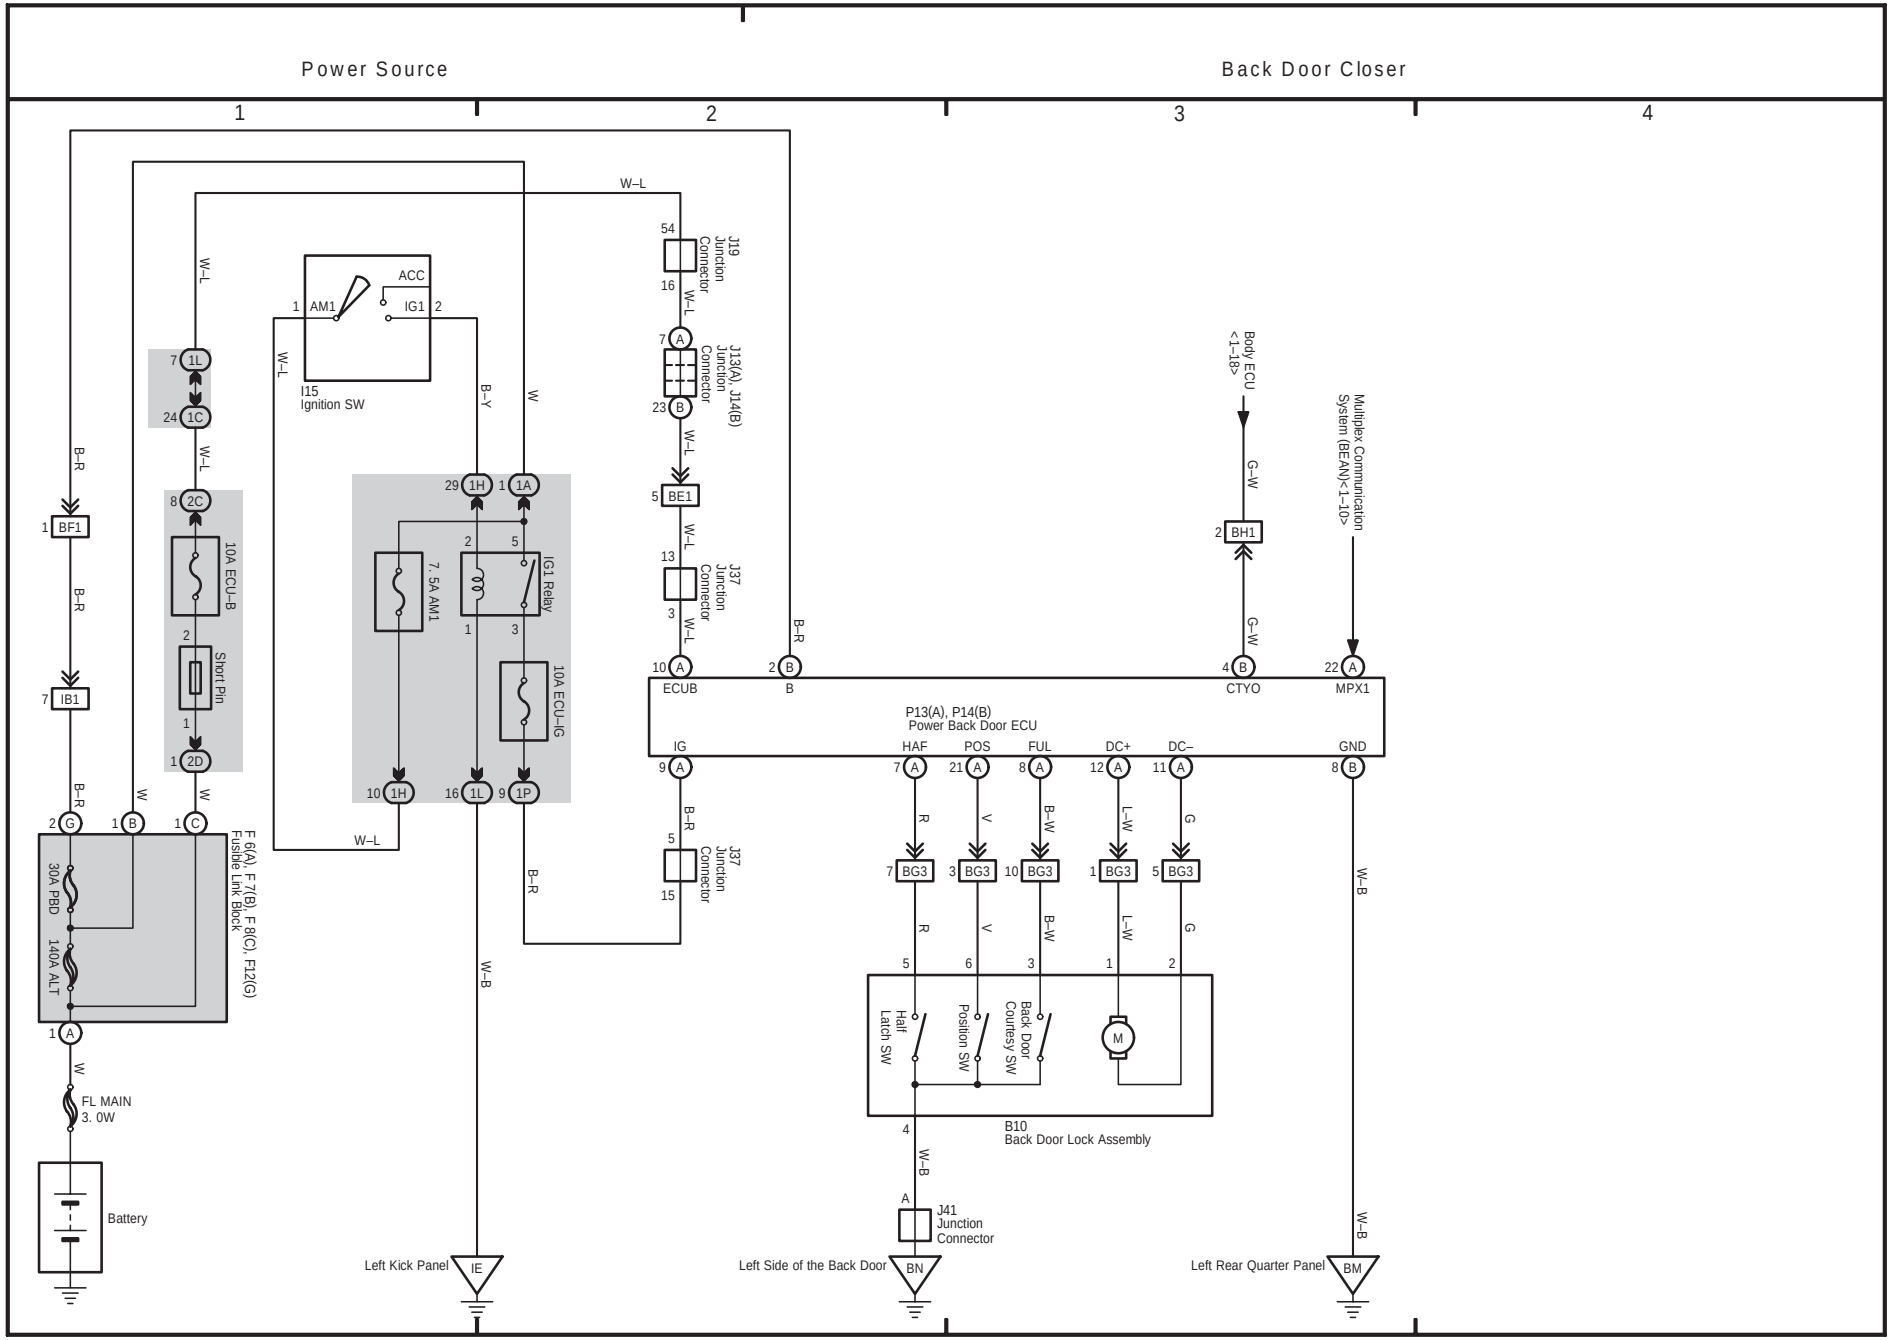

Power Source
Back Door Closer
1
2
3
4
W–L
ACC
AM1
IG1
I15
Ignition SW
J19
Junction
Connector
J13(A), J14(B)
Junction
Connector
J37
Junction
Connector
J37
Junction
Connector
BE1
BF1
IB1
1L
1C
2C
2D
1H
1A
1H
1L
1P
10A ECU–B
Short Pin
7.5A AM1
IG1 Relay
10A ECU–IG
F 6(A), F7(B), F8(C), F12(G)
Fusible Link Block
30A PBD
140A ALT
FL MAIN
3. 0W
Battery
Left Kick Panel
IE
Body ECU
<1–18>
Multiplex Communication
System (BEAN)<1–10>
BH1
ECUB
B
CTYO
MPX1
P13(A), P14(B)
Power Back Door ECU
IG
HAF
POS
FUL
DC+
DC–
GND
BG3
Half
Latch SW
Position SW
Back Door
Courtesy SW
M
B10
Back Door Lock Assembly
J41
Junction
Connector
Left Side of the Back Door
BN
Left Rear Quarter Panel
BM