




A10(B), A11(C)
A/C Control Assembly
SK
Z–
RR
FR
RL
FL
BK
OP
LG–B
R
R–L
V–R
O
P
L–B
BR–W
+B
BBZ
L1
L2
L3
L4
L5
L6
U 1
Ultrasonic Sensor
(Front Left)
U 2
Ultrasonic Sensor
(Front Right)
J 5(A), J 6(B)
Junction Connector
IK1
S4
S2
C 9
Clearance Sonar ECU
S1
S3
S5
S6
E2
E
J11(A), J12(B)
Junction
Connector
J19
Junction Connector
U 6
Ultrasonic Sensor
(Rear Right)
U 4
Ultrasonic Sensor
(Rear Left)
U 5
Ultrasonic Sensor
(Rear Right Center)
U 3
Ultrasonic Sensor
(Rear Left Center)
J18(A), (B)
Junction
Connector
W–B
LG
LG–R
L–W
IE


∗1 : Automatic A/C
∗2 : Manual A/C
∗3 : 6 Sensor
(IG)
10A
ECU–IG
(IG)
10A
GAUGE1
23 1L
26 1L
B–R (∗3)
R
87 A (∗1)
97 B (∗2)
85 A (∗1)
85 B (∗2)
J18(A), (B)
Junction
Connector
128 A (∗1)
128 B (∗2)
75 A (∗1)
75 B (∗2)
17 II3
B
J47
Junction
Connector
B
P
2
P
(∗3)
1 IK1
10 A
24 B
J 5(A), J 6(B)
Junction Connector
120
110
130
J19
Junction
Connector
P–L (∗3)
Y–R (∗3)
1
Buzzer
C 8
Clearance
Sonar Buzzer
2
9
4
E1
CBZ
C 9
Clearance Sonar ECU
SPD
PL
RL
8
15
3
V–W
L–Y
R–B
P 1
Park/Neutral
Position SW
P
R
1
6
11 II3
6 II3
87
127
72
83
J19
Junction
Connector
J20
Junction
Connector
V–W


* 4 : w/ VSC
* 5 : w/o VSC
(IG)
(BAT)
7. 5A
GAUGE2
10A
ECU–B
25 1H
8 2C
W–L
24 1C
7 1L
B–R
C10
Combination Meter
32
W–L
IG+
POWER SUPPLY
CIRCUIT
Speedometer
MICRO COMPUTER
IG+
IG+
30
35
36
12
BR
GR
V–W
W–L
4 B
J 7(A), J 8(B)
Junction
Connector
16 A
45
J20
Junction
Connector
85
35
J19
Junction
Connector
54
GR
V–W
W–L
12 A (*4)
17 B (*5)
SP1
S 3(A), (B)
Skid Control ECU
with Actuator
V–W
BR
IF


A 10
White

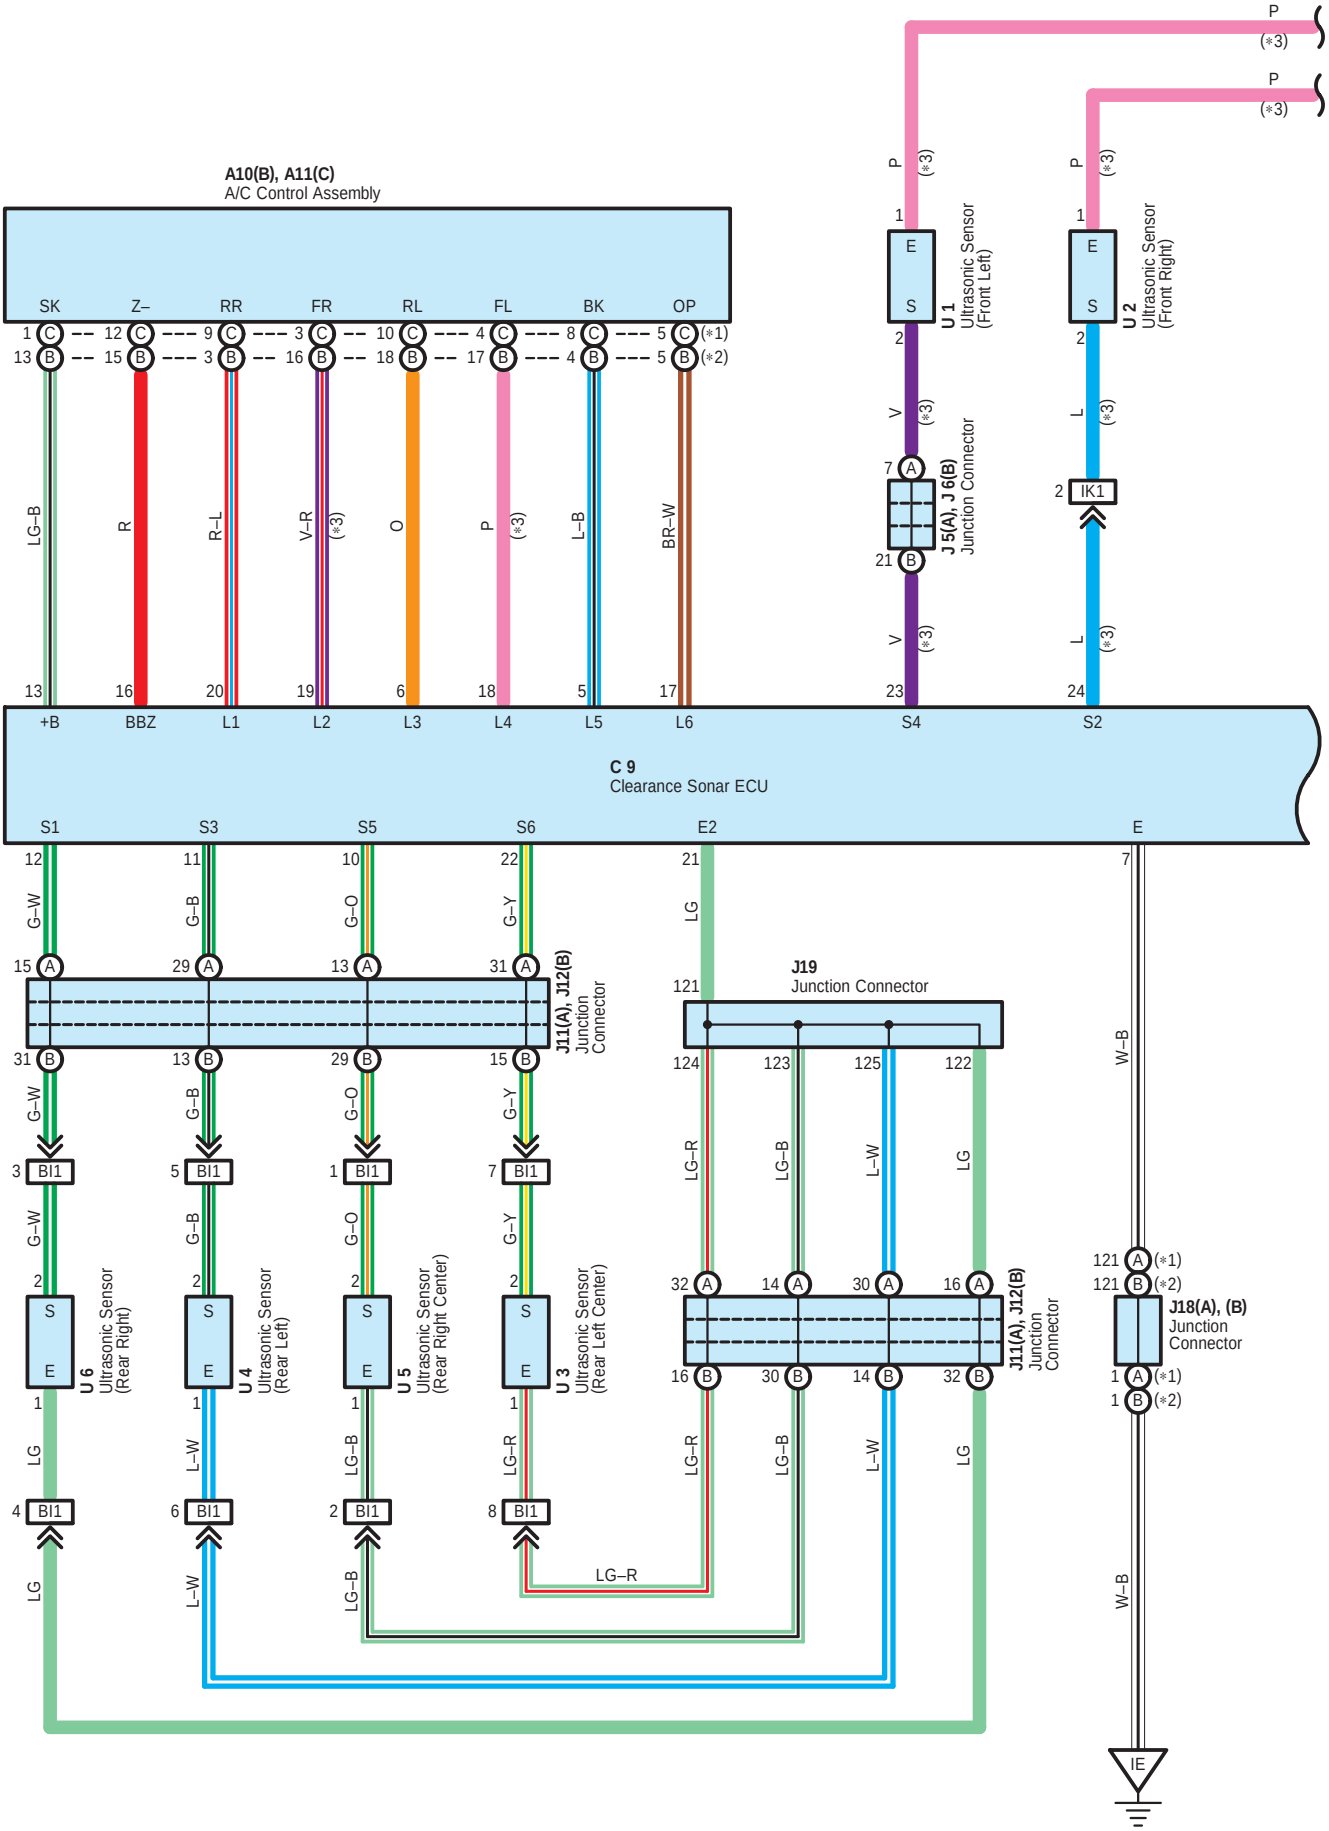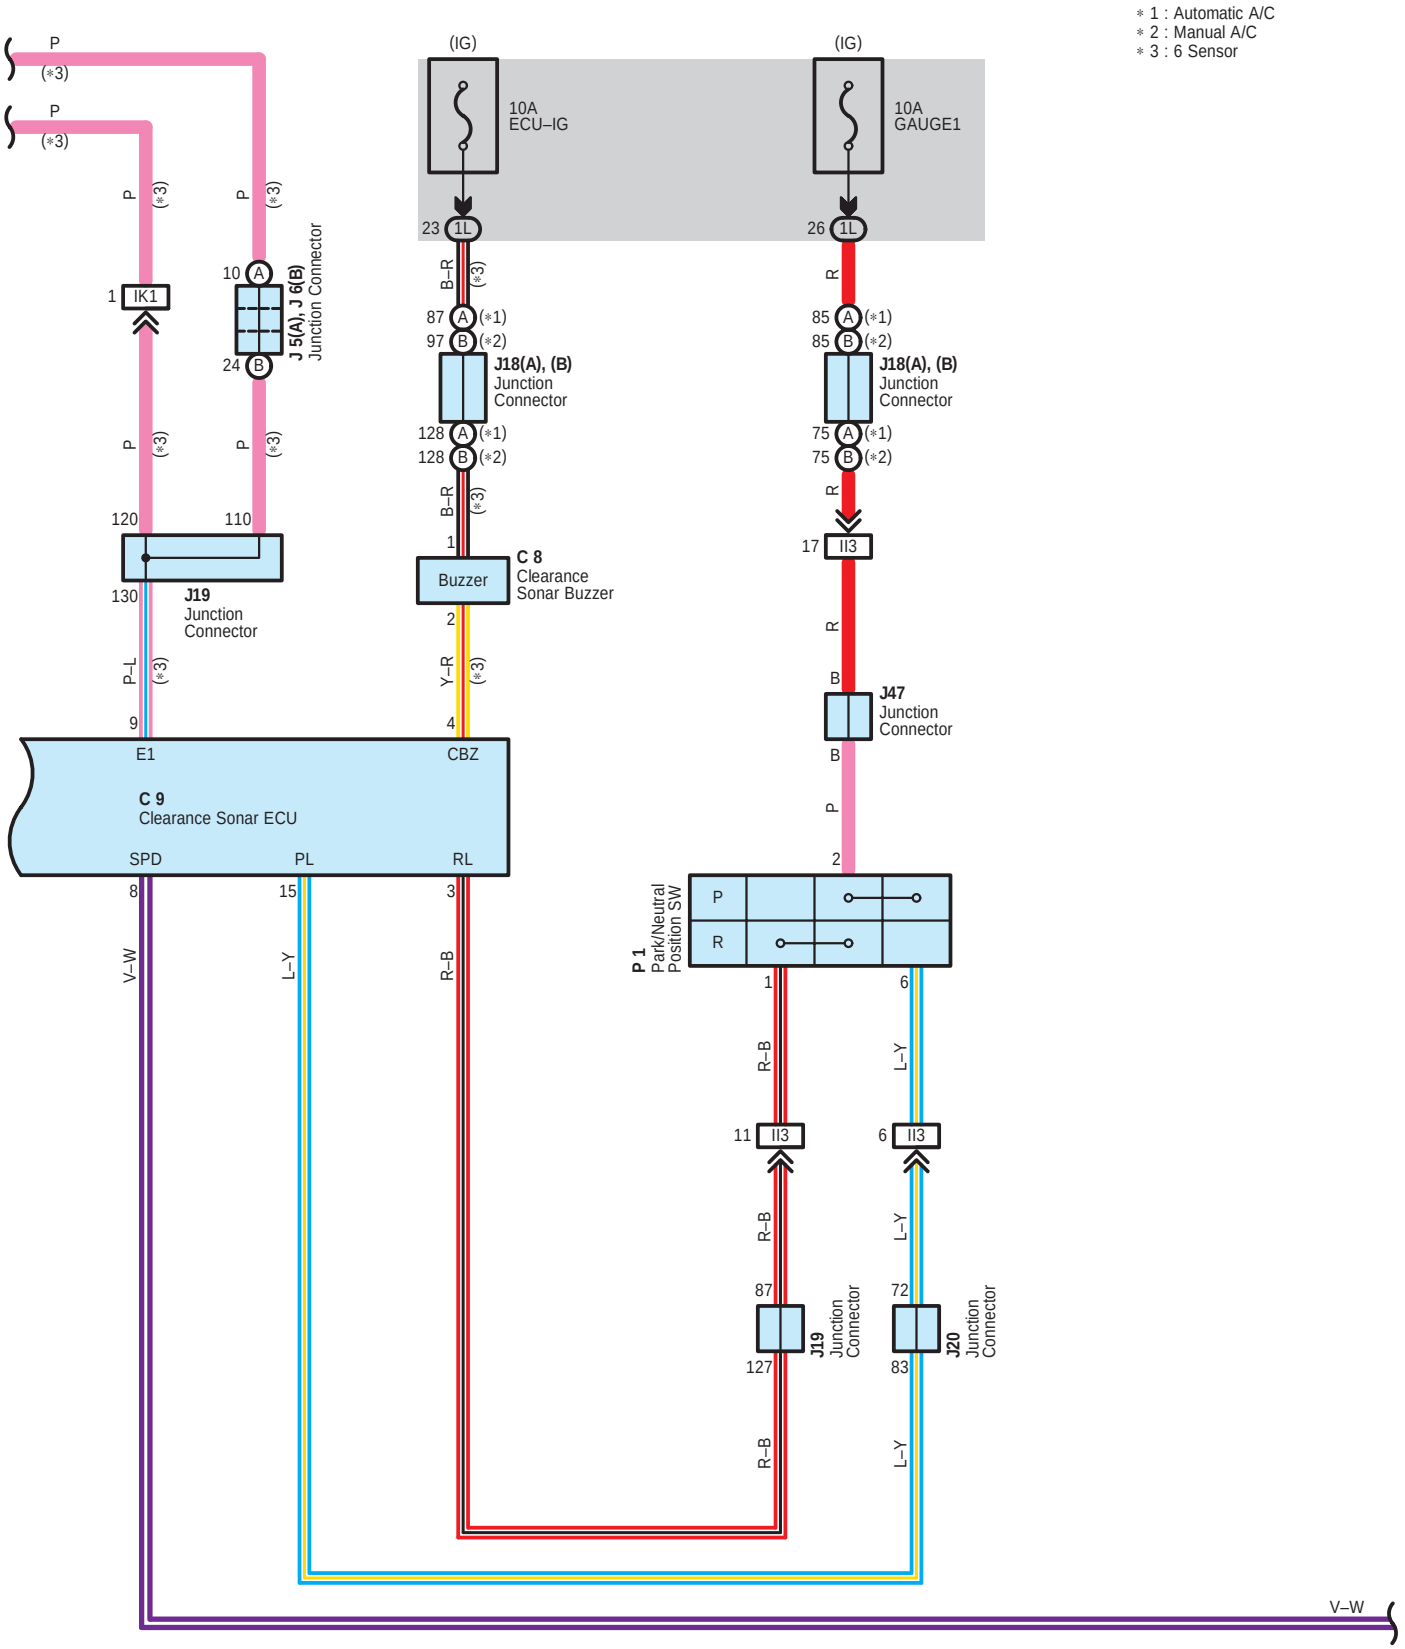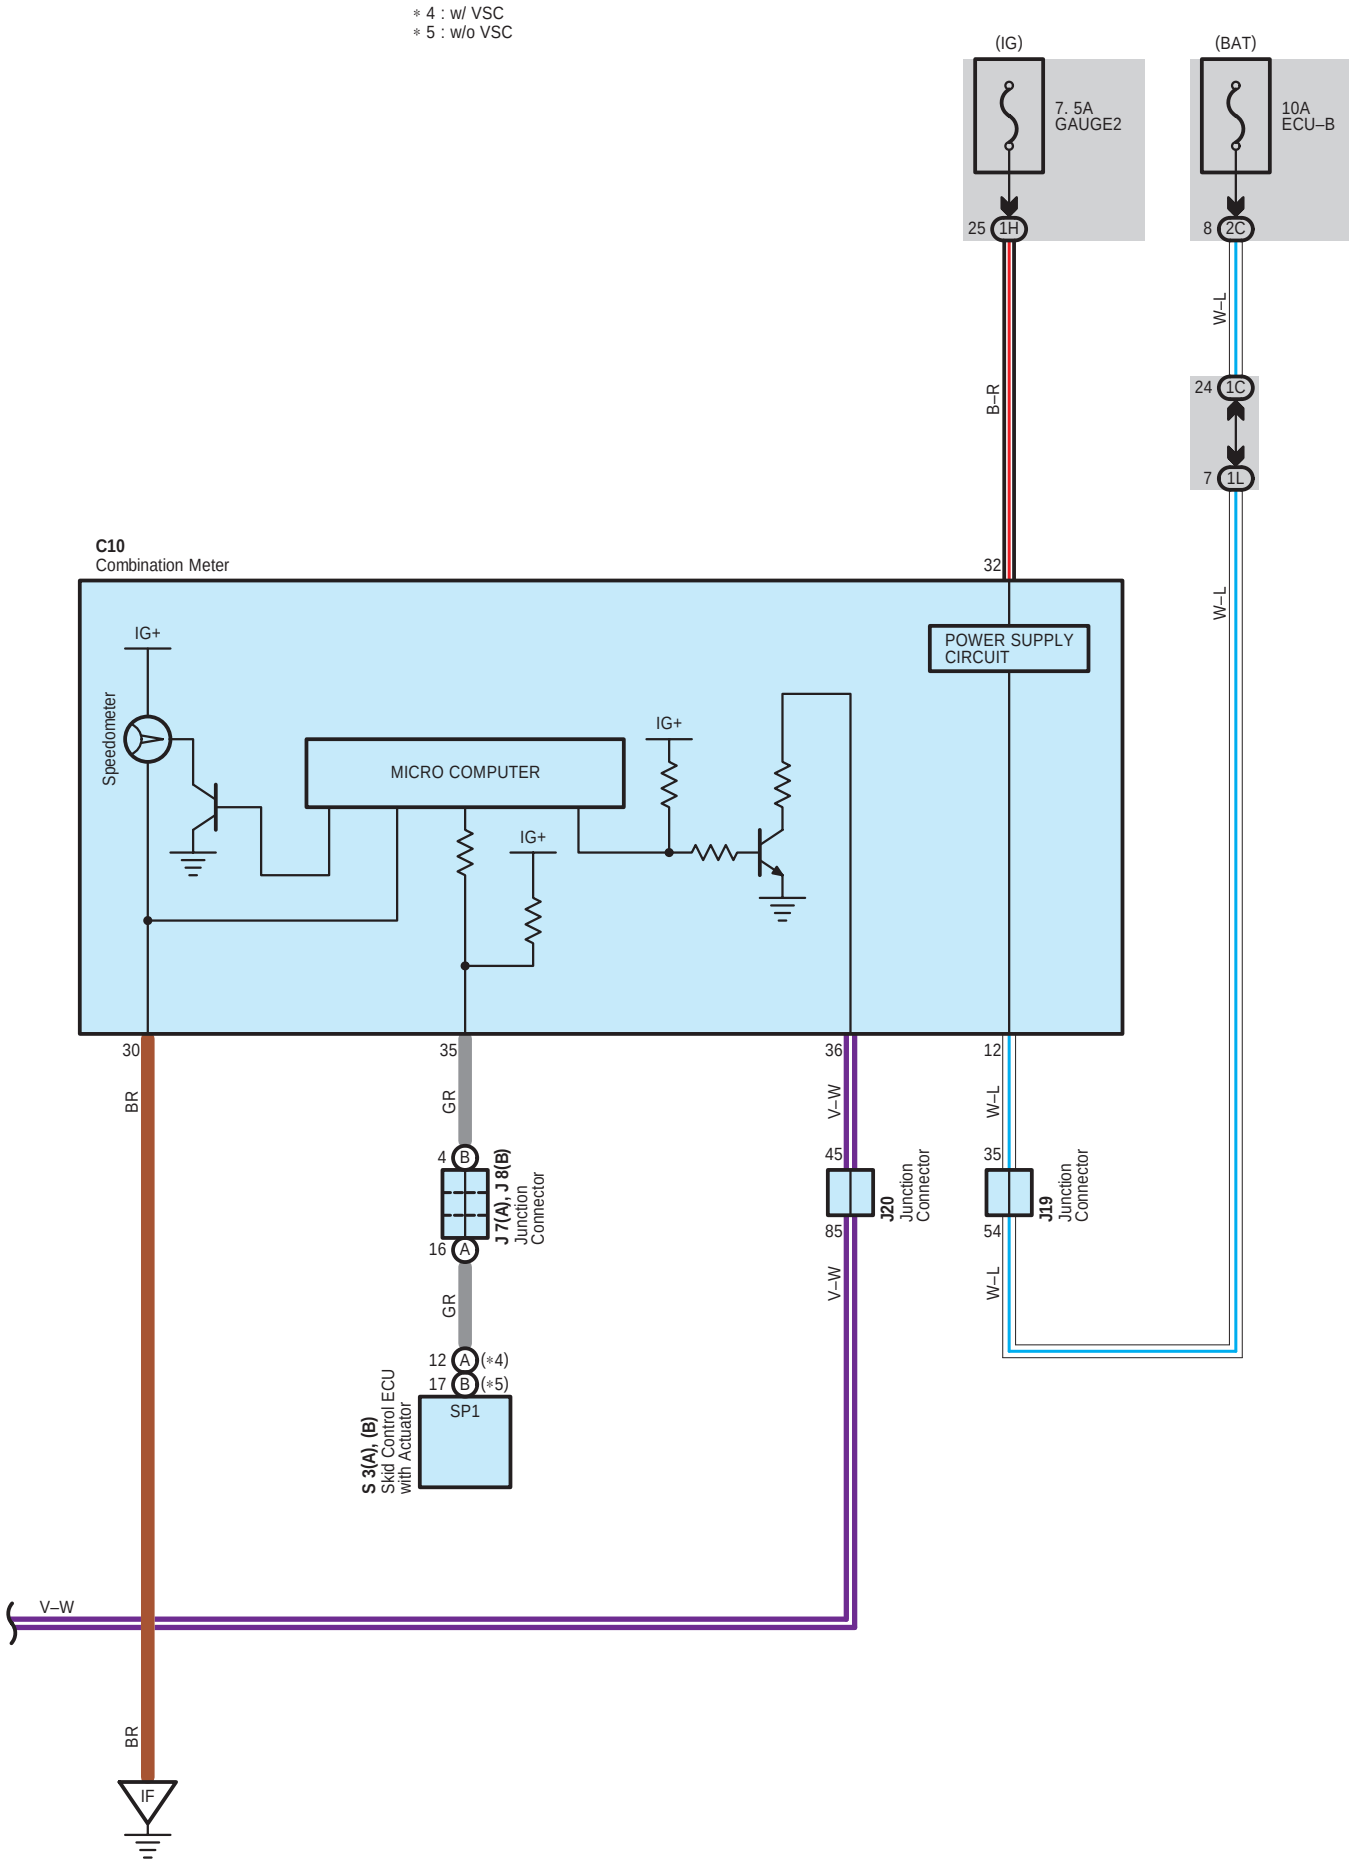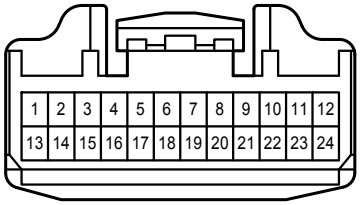


A 11
White




C 8
Black




C 9
White

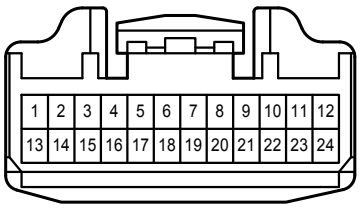


C 10
White

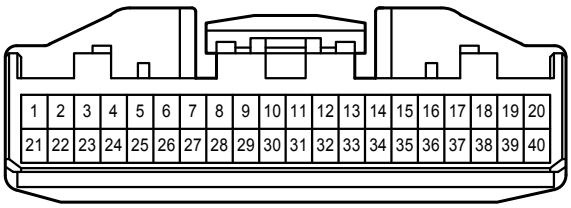


J 5
White

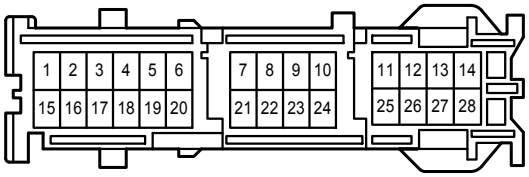


J 6
White

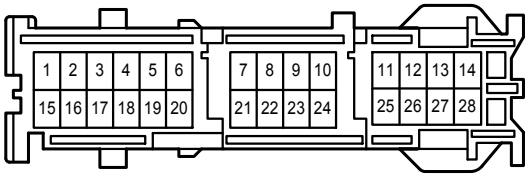


J 7
White

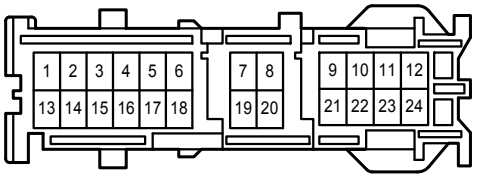


J 8
White

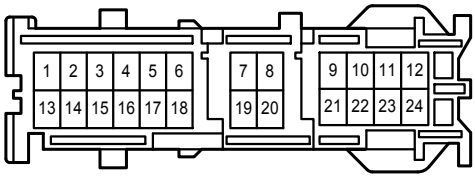


J 11
White

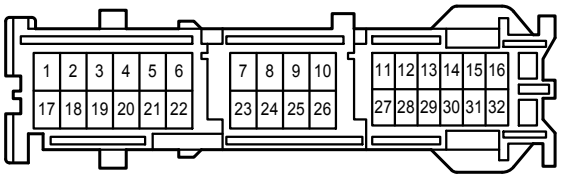


J 12
White

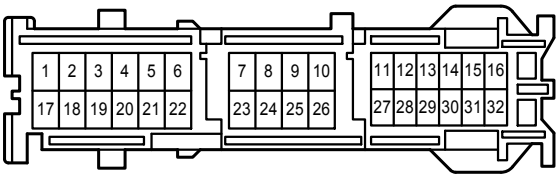


J 18
White

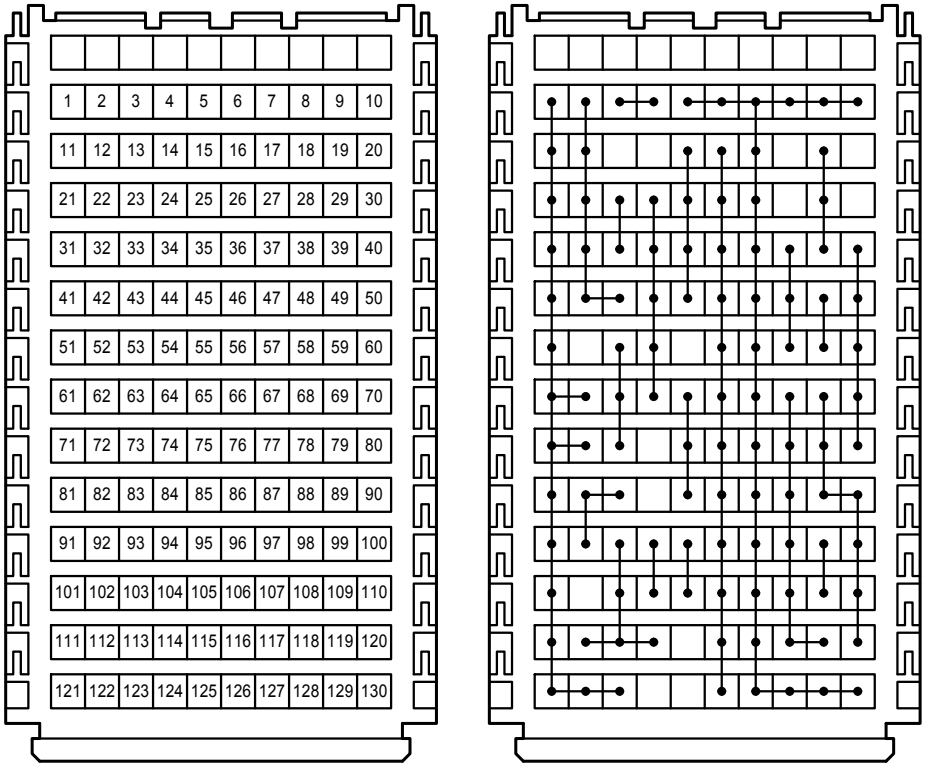


J 19
White

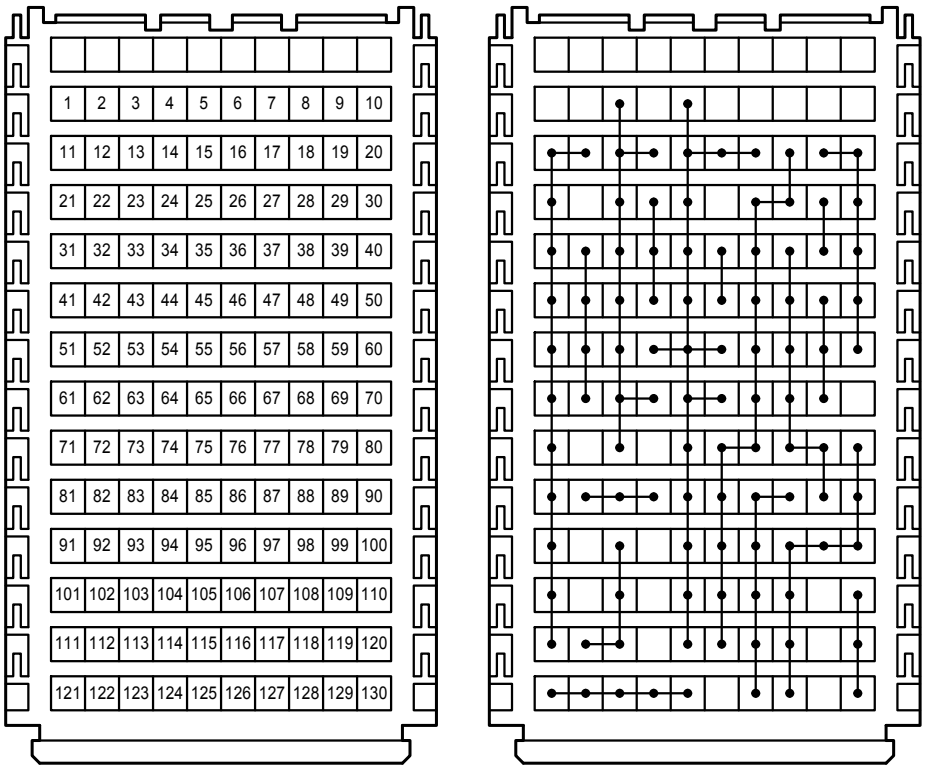


J 20
White

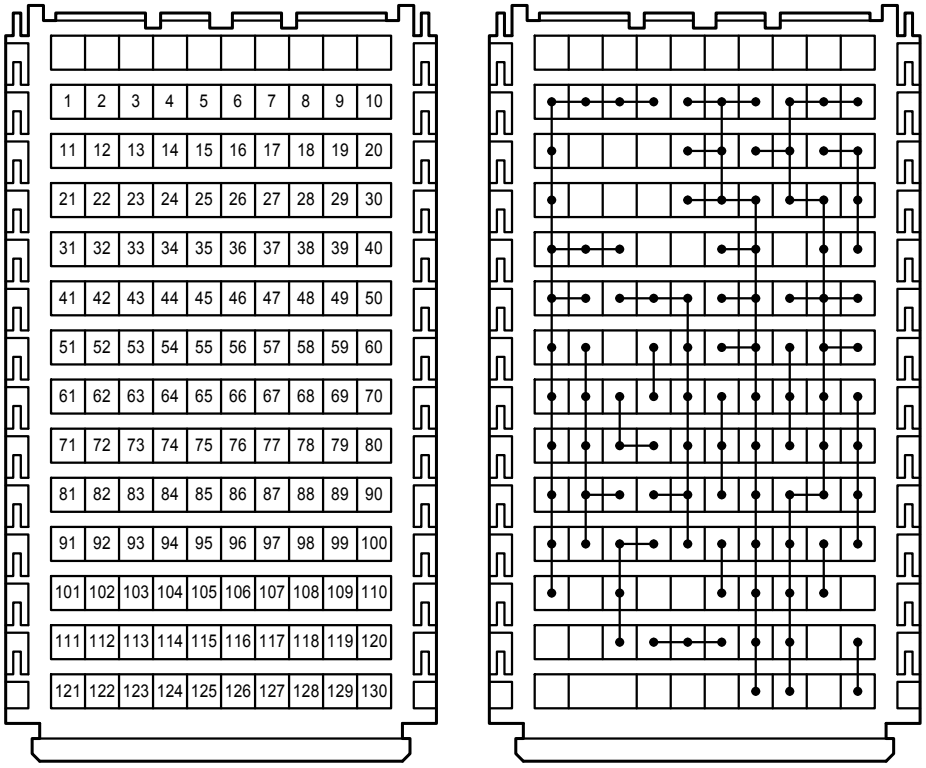


J 47
Blue

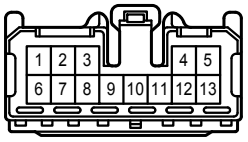

P 1
Gray

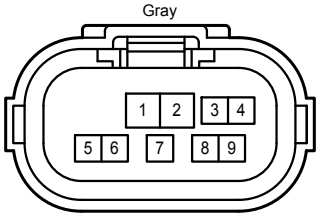


S 3
Black

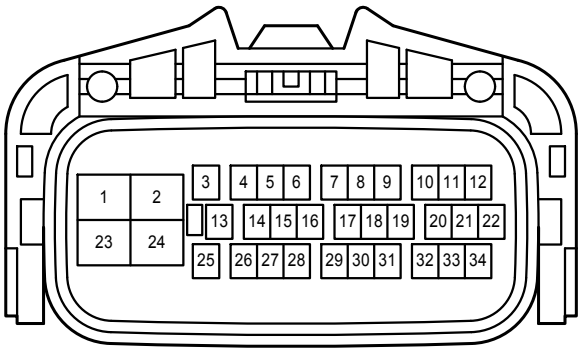


(w/o VSC)

S 3
Black

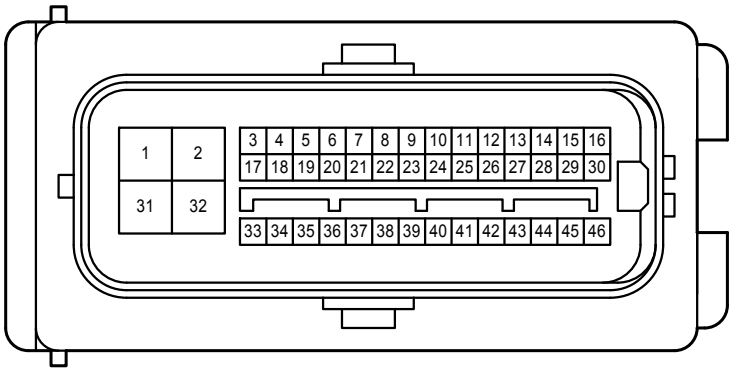


(w/ VSC)


U 1
Black




U 2
Black




U 3
Black




U 4
Black




U 5
Black




U 6
Black




1C
White

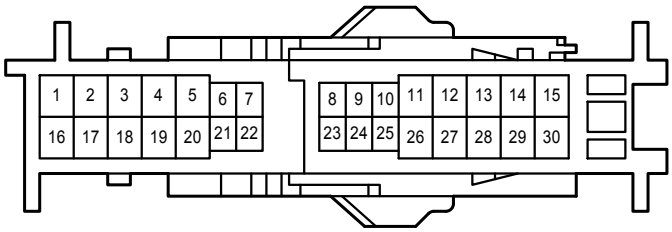


1H
White

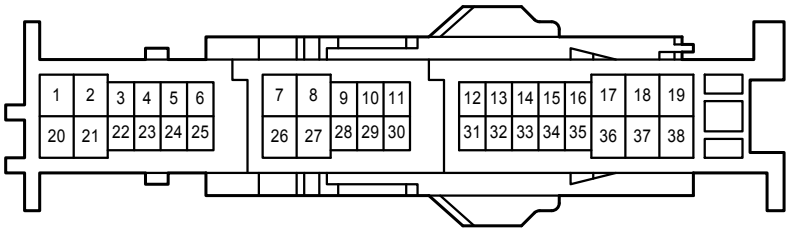


1L
White

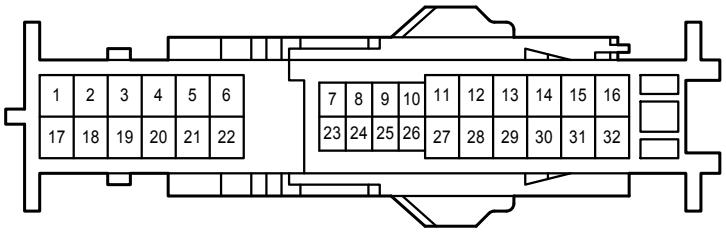


2C
White



BI1
White

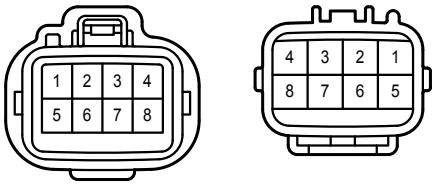

II3
White

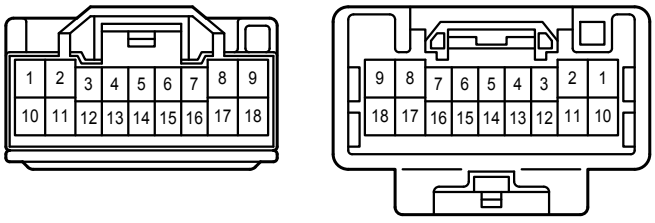

IK1
Gray

