




(BAT)
(ACC)
(IG)
(BAT)
10A ECU–B
7. 5A ECU ACC
10A ECU–IG
25A P/W
PWR Relay
30A PWR
8 2C
23 1L
21 1K
24 1C
W–L
B–R
R–L
97 A (*1)
107 B (*2)
J18(A), (B) Junction Connector
87 A (*1)
97 B (*2)
1 1A
16 1L
1 1P
7 1J
20 1K
5 GND1
18 PWS
26 BECU
22 ACC
15 IG
DCTY
PCTY
GND2
14 D
23 B
4
17 1K
B 7(B), B 9(D) Body ECU
R–Y
48 A (*1)
48 B (*2)
J18(A), (B) Junction Connector
58 A (*1)
58 B (*2)
6 A
22 B
J11(A), J12(B) Junction Connector
5 A
17 B
J33(A), J34(B) Junction Connector
1
D 7 Door Courtesy SW Front LH
D 8 Door Courtesy SW Front RH
W
W–B
L
1 B
140A ALT
1 A
F 6(A), F 7(B) Fusible Link Block
FL MAIN 3. 0W
Battery
IE
* 1 : Automatic A/C
* 2 : Manual A/C



D 9
Power Window Master SW
BW
IG
B
PD
PU
DD
DU
PLS2
VC
PLS1
SGND
7
11
6
15
13
9
4
17
3
14
2
R–L
B–R
L
B–W
R–L
G
R
LG–R
L–B
L–R
LG–B
12 IA2
4 IA1
10 IA2
10 IA1
11 IA1
1
2
3
4
5
6
DOWN
UP
PLS2
SSRB
PLS
E
P40
Power Window Motor Front LH
R–L
B–R
G–W
R–L
10 IM2
11 IM2
B–W
R–L
2
5
SD
SU
B
D
U
P37
Power Window Control SW
Front RH
4
1
3
L
G
R
1
2
M
P41
Power Window Motor
Front RH
8 IM1
L
E
A
E
B
L
25
8
L
J25(A), J26(B)
Junction Connector
J35(A), J36(B)
Junction Connector
L
L
E
A
L
L
L
L


D 9
Power Window Master SW
RRU
RRD
RLU
RLD
E
J33(A), J34(B)
Junction Connector
J13(A), J14(B)
Junction Connector
P39
Power Window Control SW Rear RH
P38
Power Window Control SW Rear LH
P43
Power Window Motor
Rear RH
P42
Power Window Motor Rear LH
IA1
BJ1
BD1
IE
SU
SD
M
R–B
B
R–Y
L–R
G–Y
W–B
L
R
G
P

B 7
White

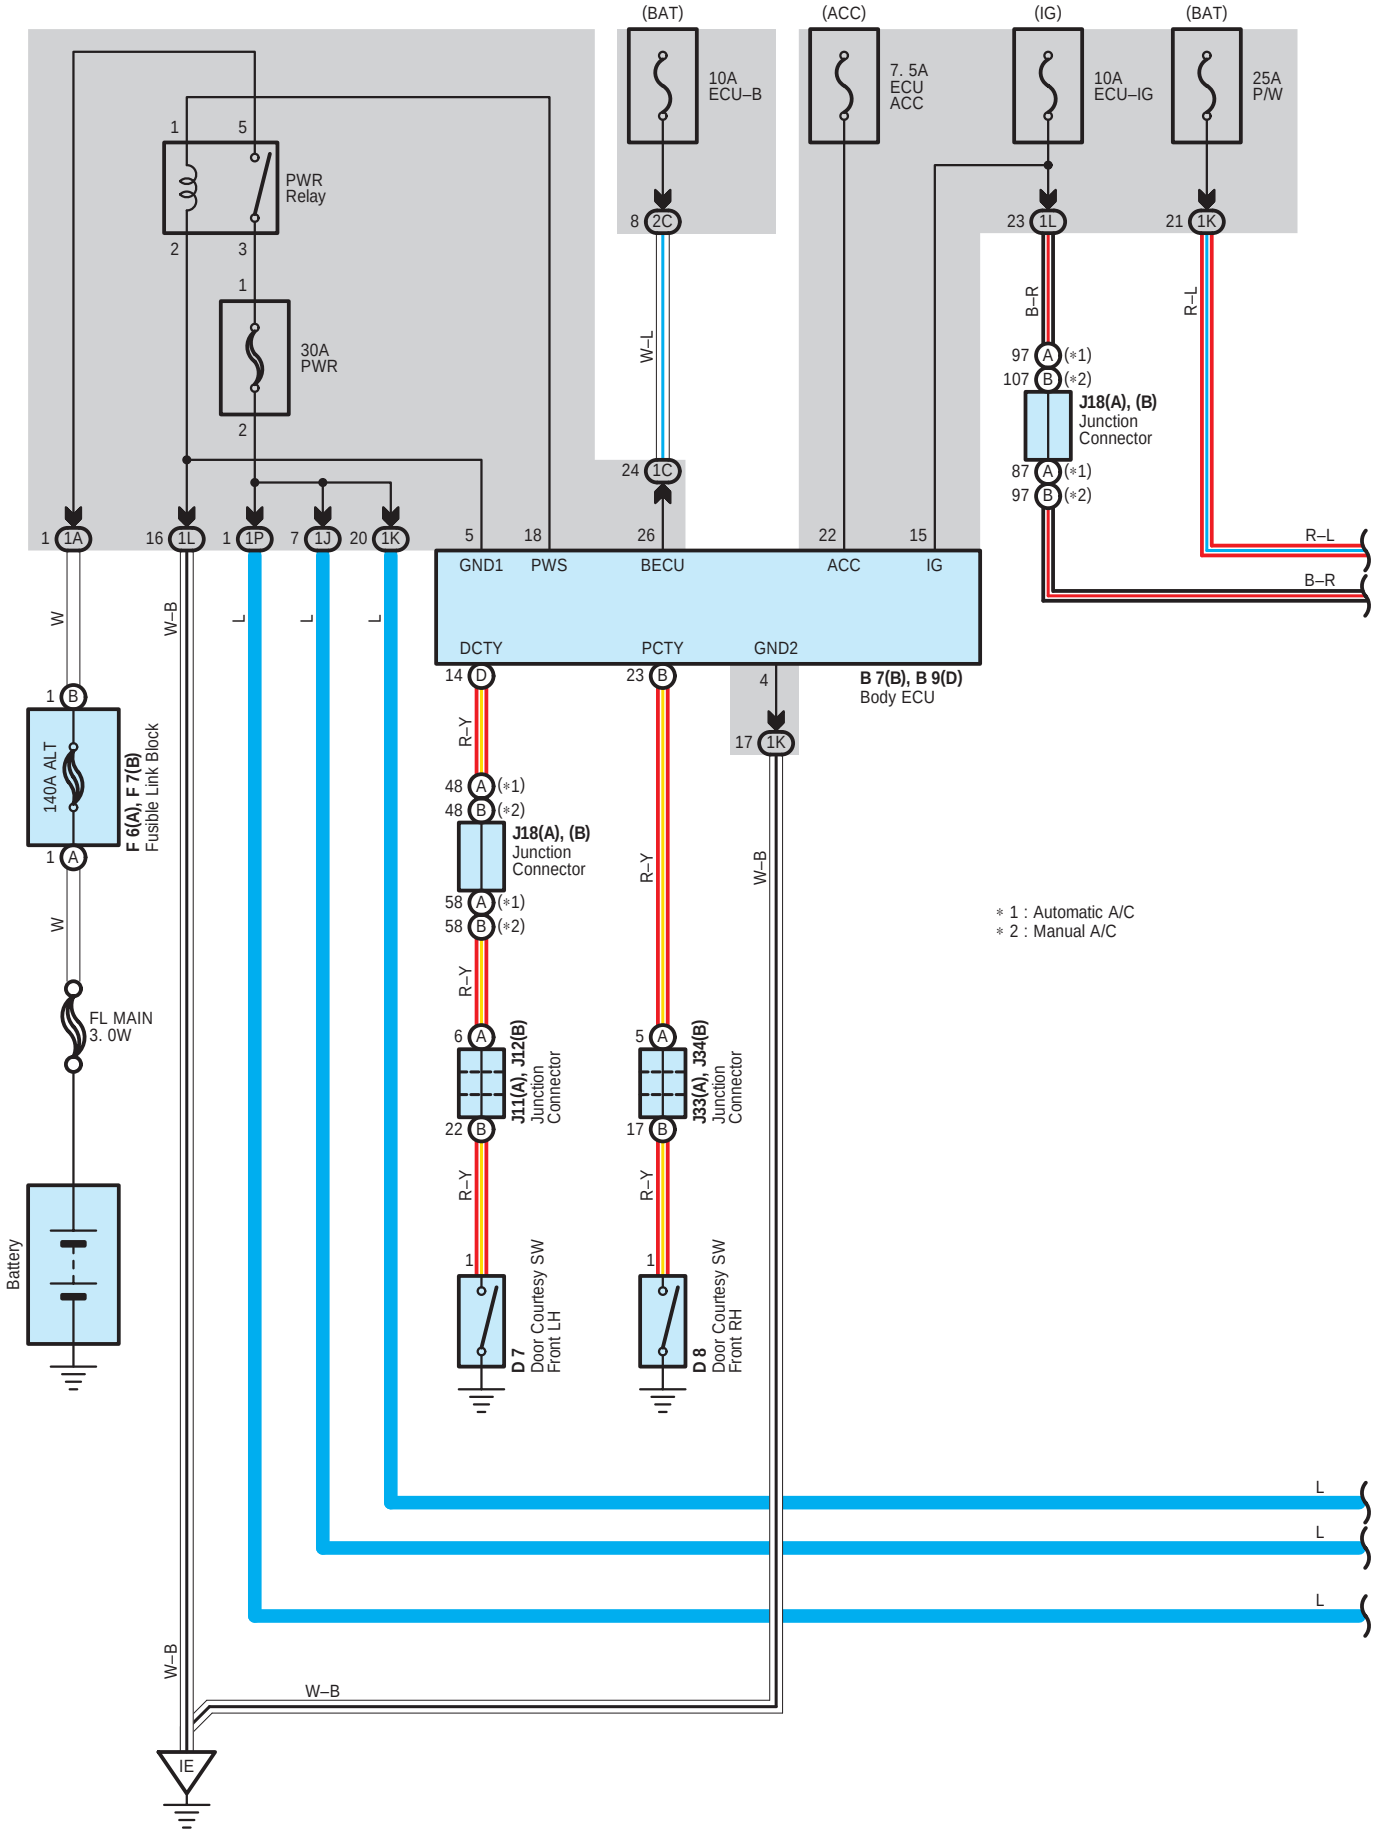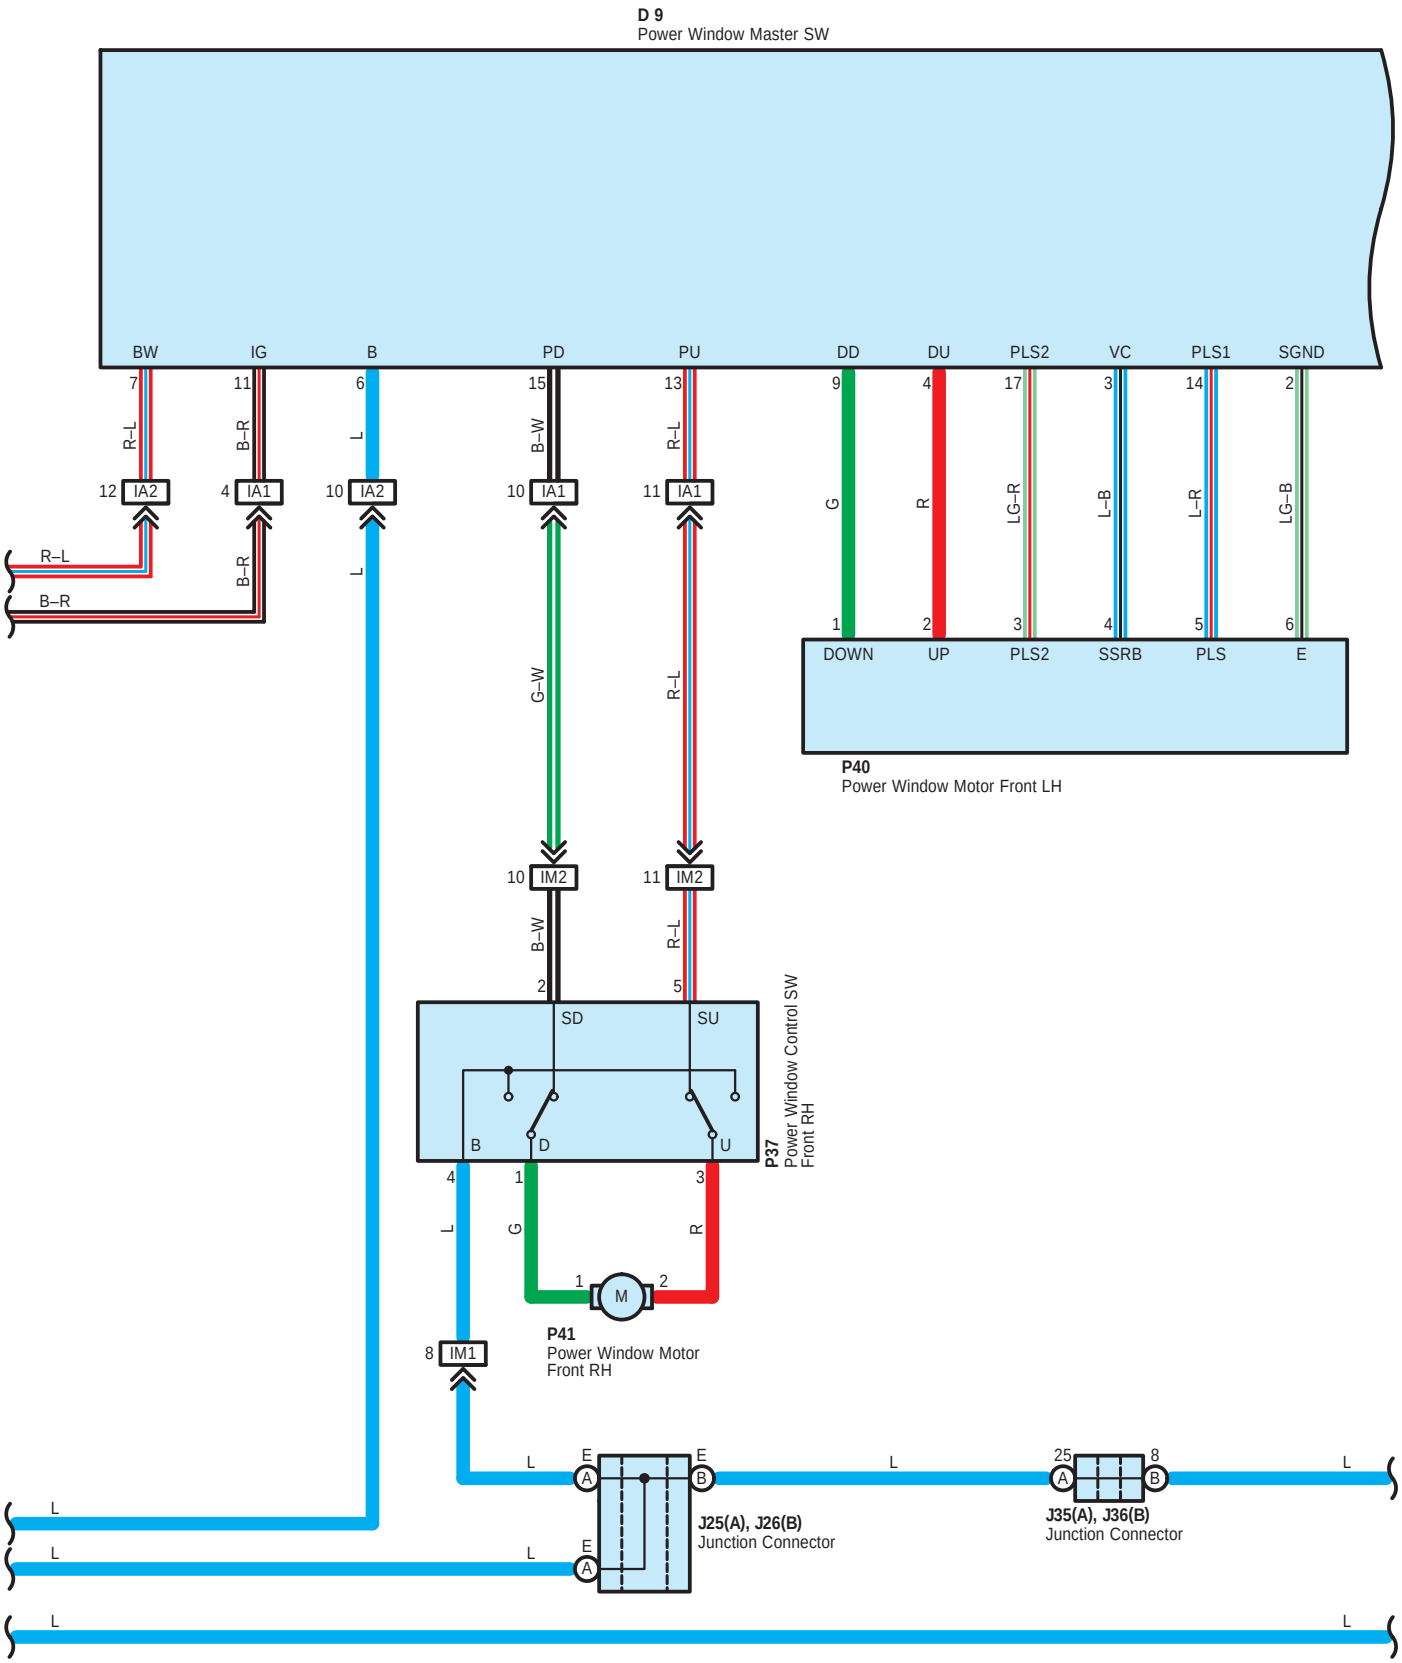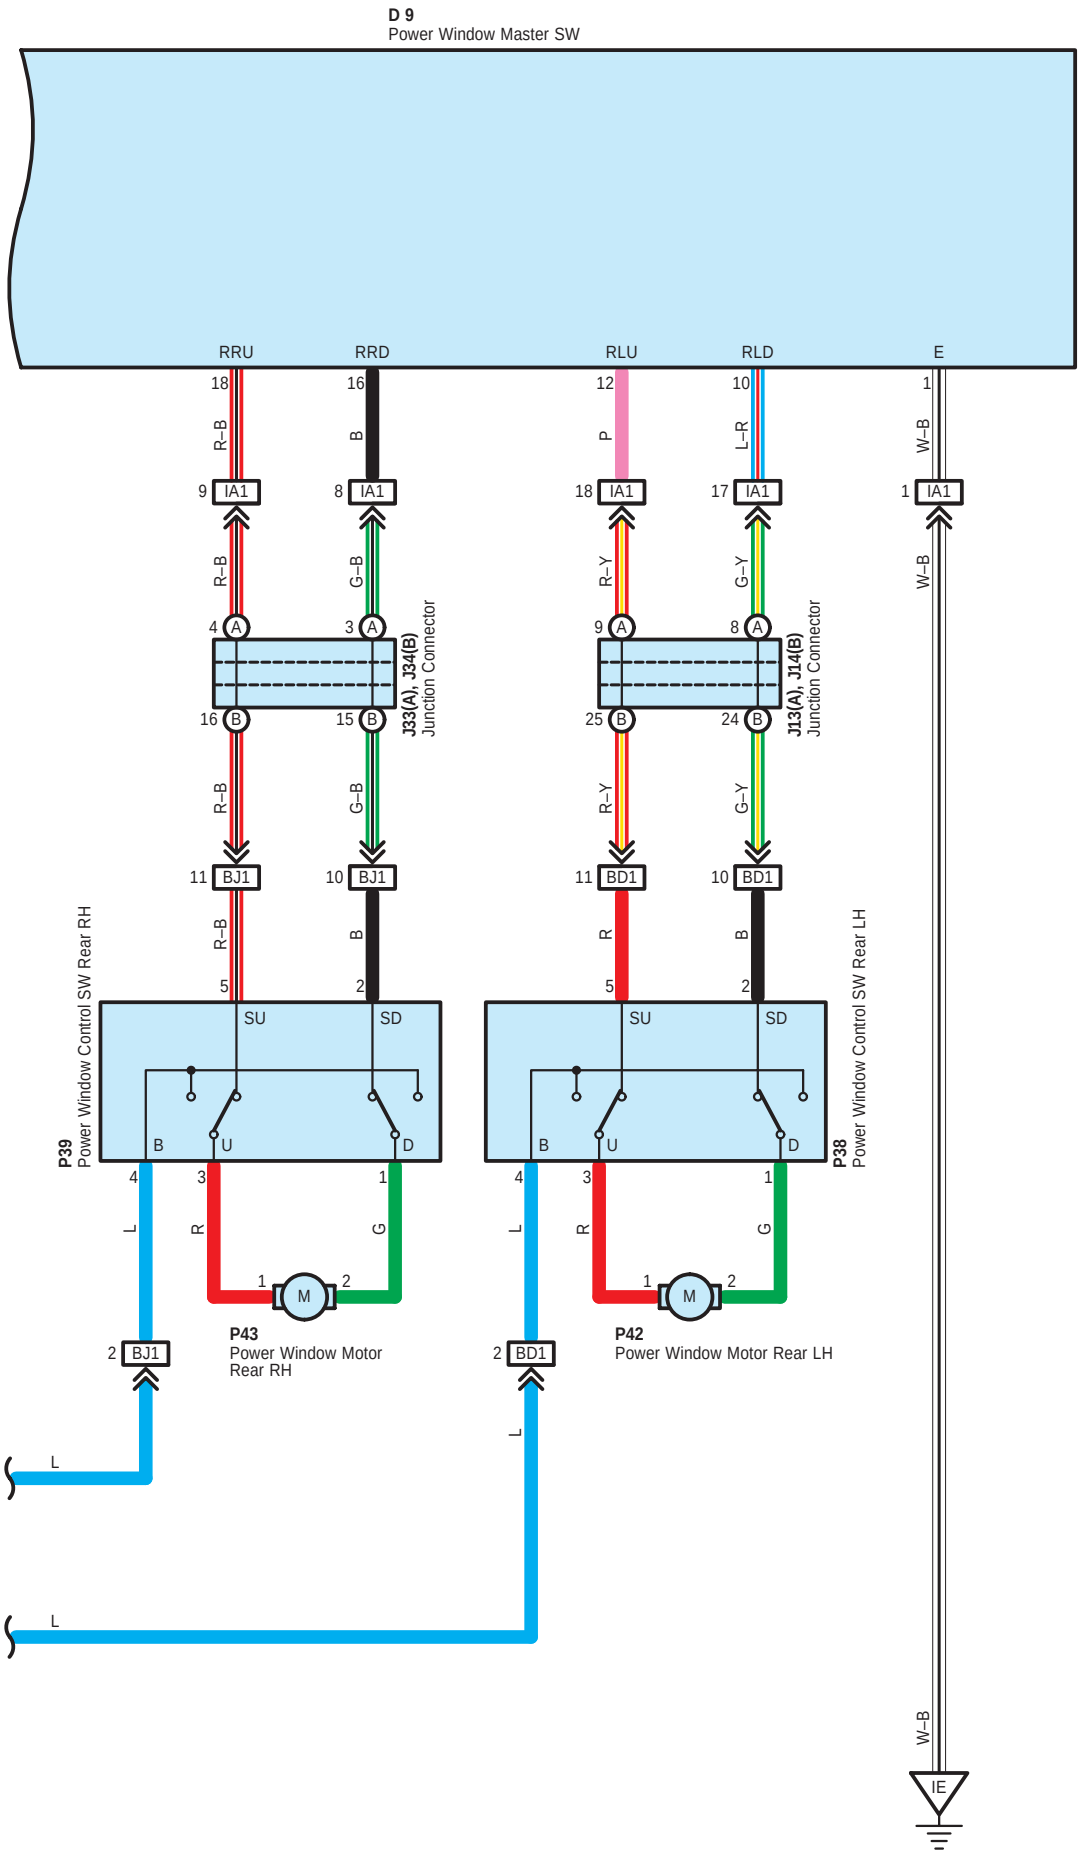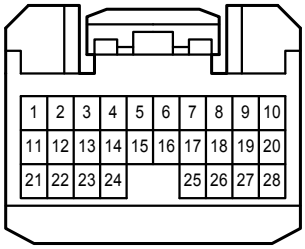

B 9
White

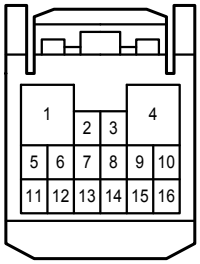


D 7
Black




D 8
Black




D 9
White

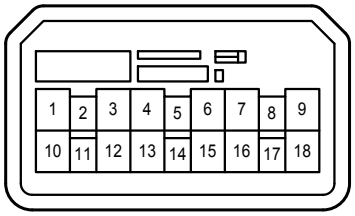


F 6




F 7




J 11
White

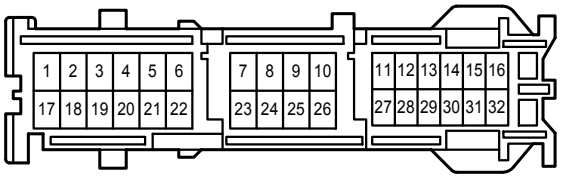


J 12
White

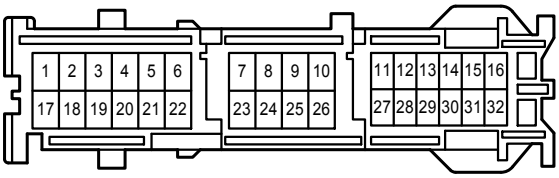


J 13
White

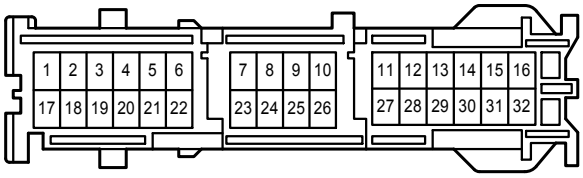


J 14
White

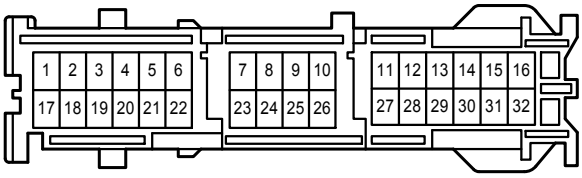


J 18
White

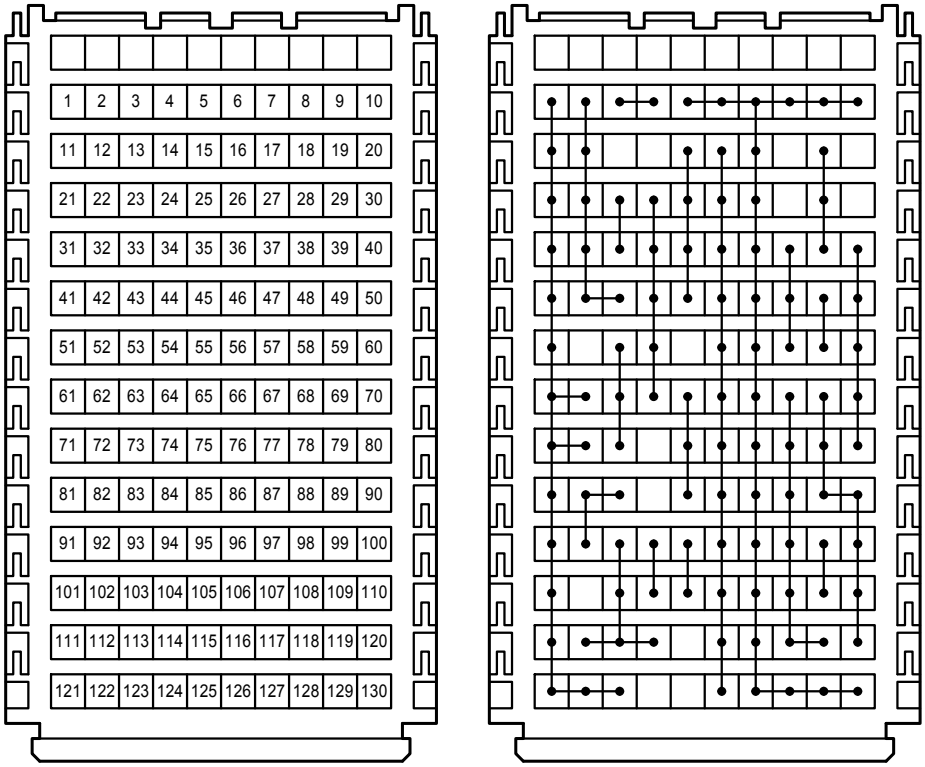


J 25
White

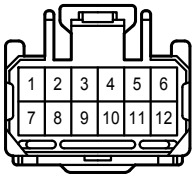


J 26
White

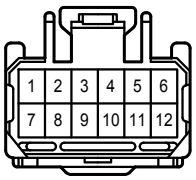


J 33
White

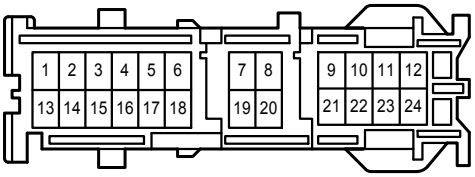


J 34
White

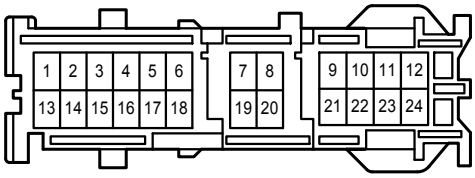


J 35
White

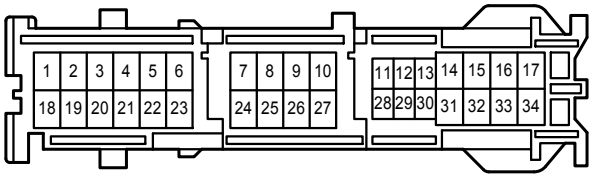


J 36
White

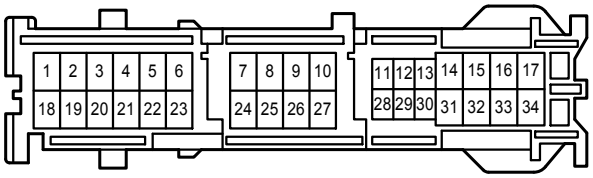


P 37
White

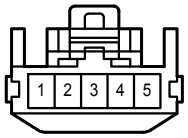

P 38
White

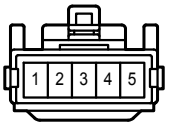

P 39
White

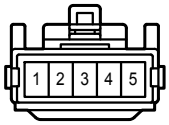

P 40
Black



P 41
Black




P 42
Black




P 43
Black




1A
White




1C
White

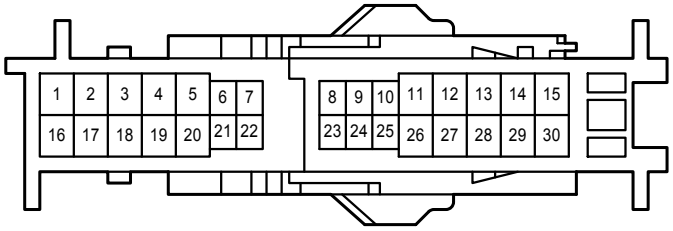


1J
White

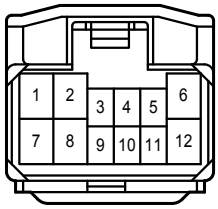


1K
White

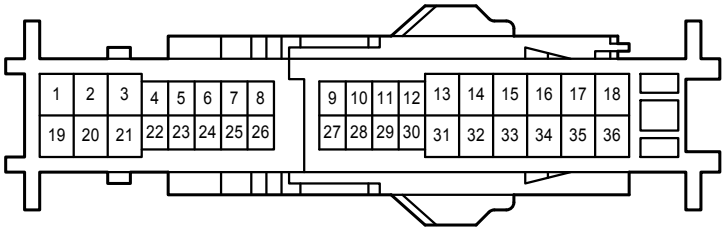


1L
White

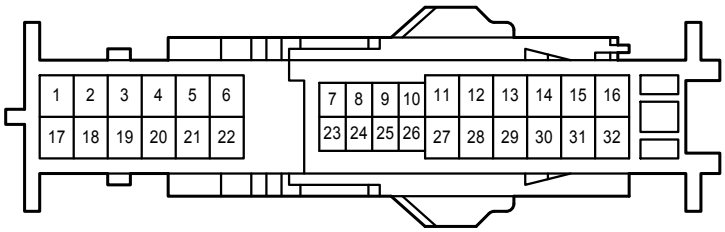


1P
White

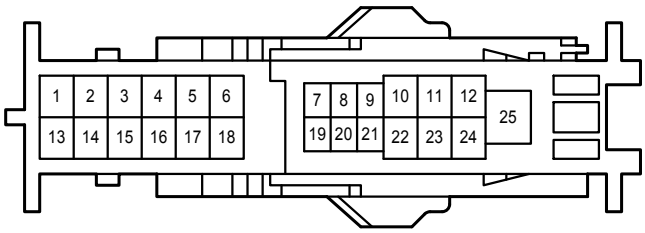


2C
White




BD1
White

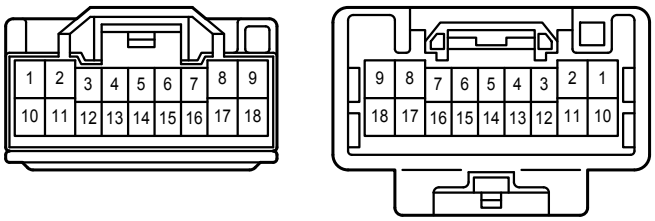


BJ1
White

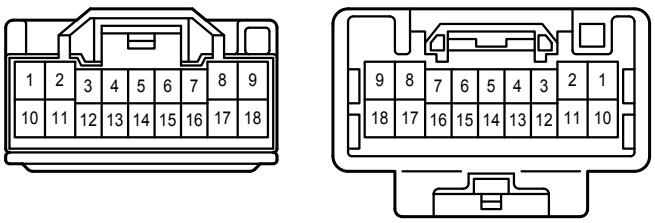


IA1
White

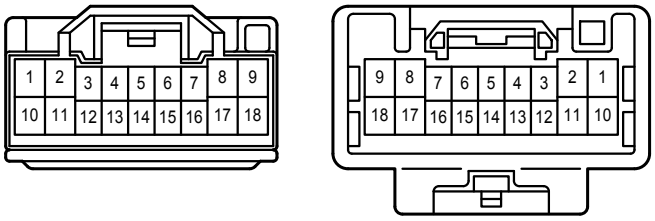

IA2
White

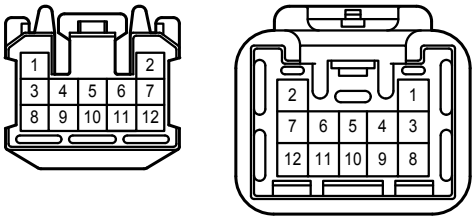

IM1
White

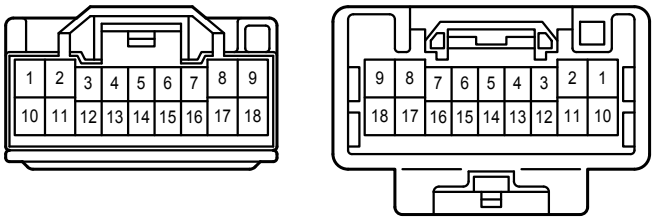

IM2
White

