



* 1 : Automatic A/C
* 2 : Manual A/C
(IG)
(IG)
15A
S–HTR
10A
ECU–IG
35 1K
36 1K
23 1L
J18(A), (B)
Junction
Connector
7 A (*1)
7 B (*2)
87 A
97 B
9 A (*1)
9 B (*2)
B–R
W–B
J20
Junction
Connector
3
41
2
1
S 6
Seat Heater SW
(Driver's Seat)
S 7
Seat Heater SW
(Front Passenger's Seat)
IG
E
RV
SW
GR
R
O
R–B
L–B
J33(A), J34(B)
Junction Connector
J11(A), J12(B)
Junction Connector
J44(A), J45(B)
Junction
Connector
BN1
S30
Seat Heater ECU LH
S31
Seat Heater ECU RH
Temp.
Sensor
Heater
Seat Cushion
Seat Back
BH
BI
IG


J 11
White

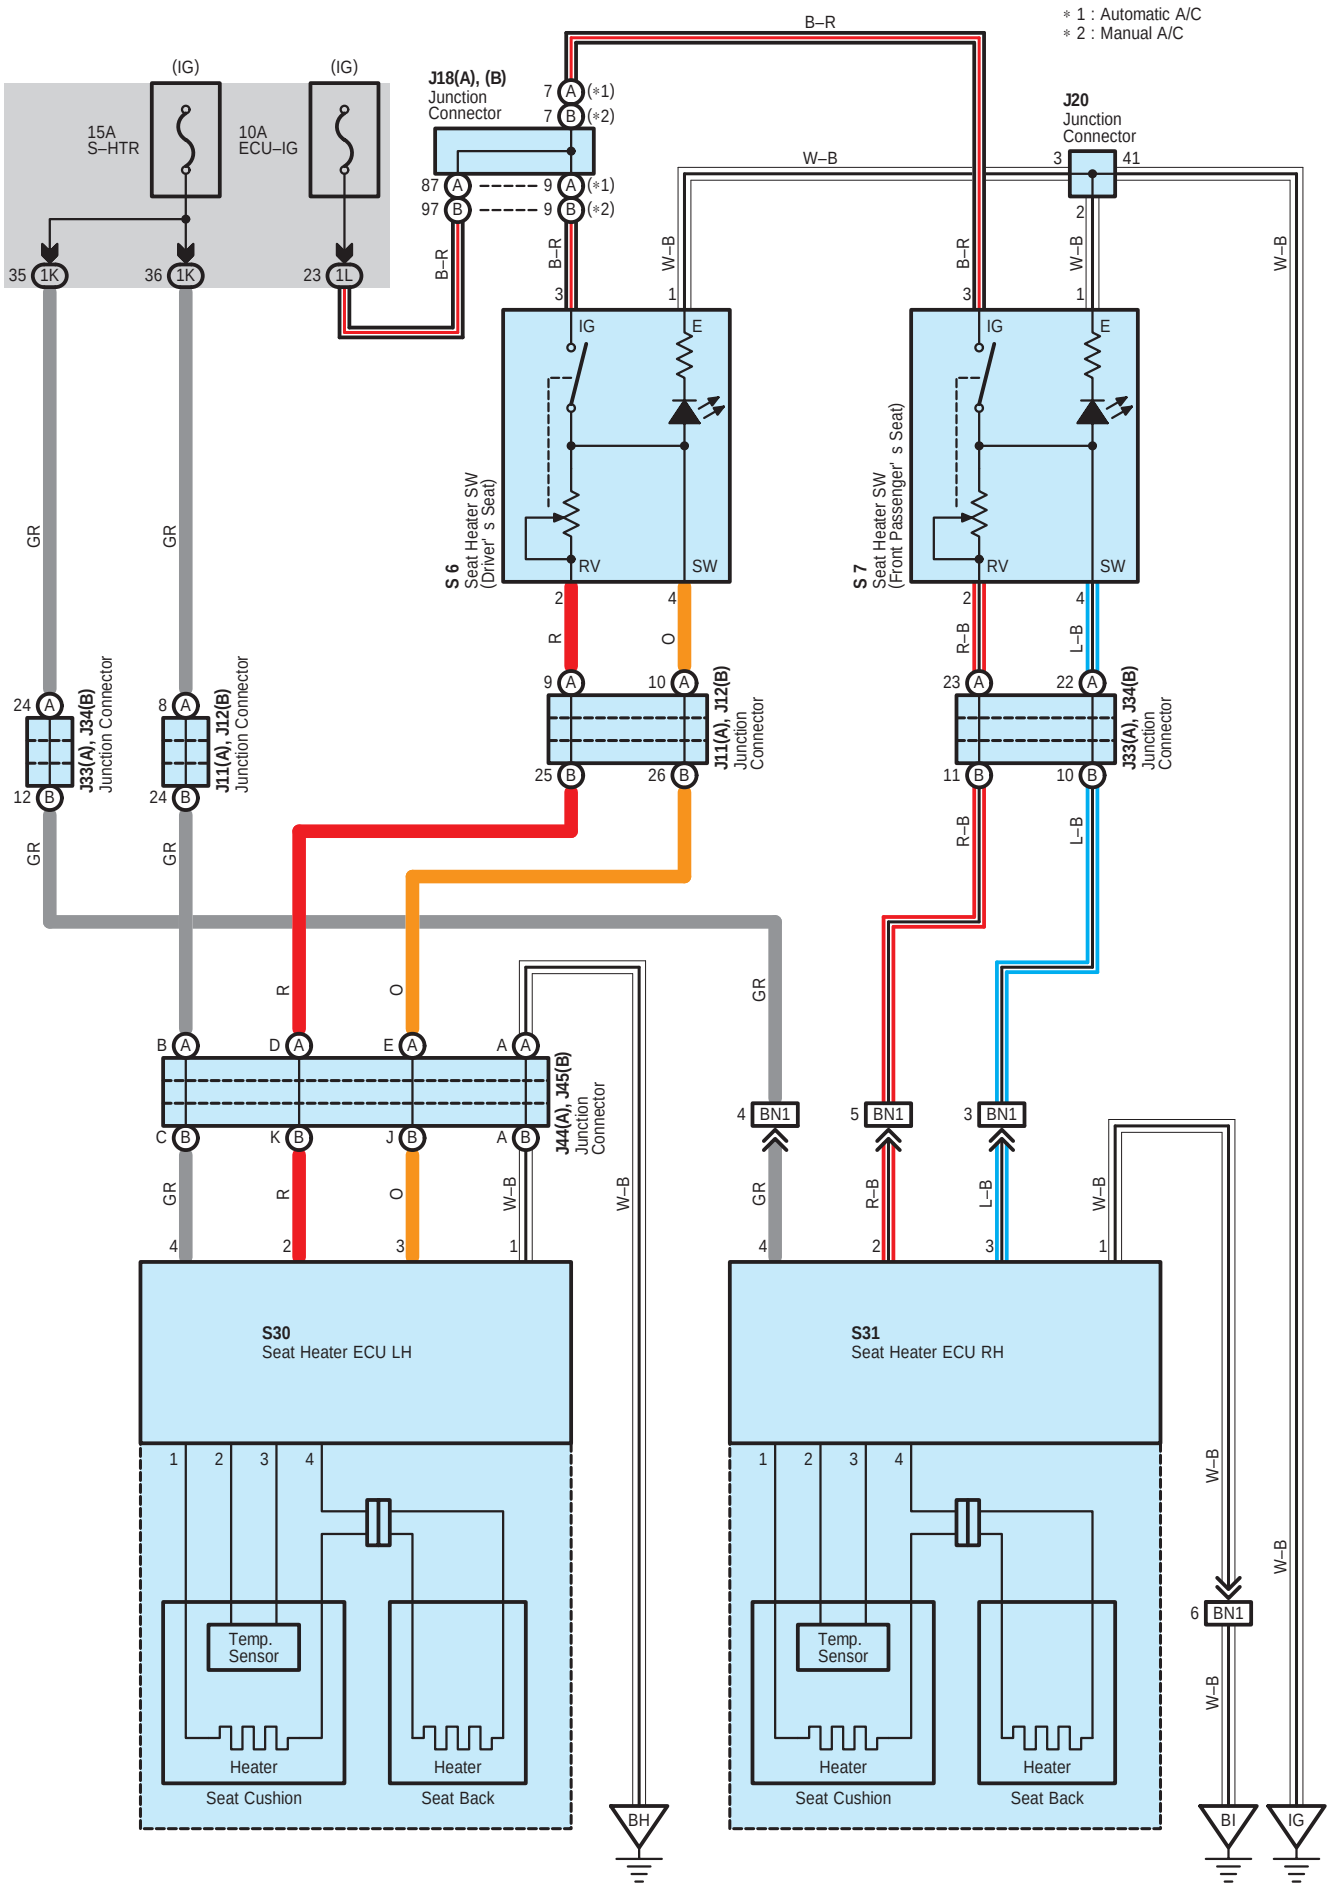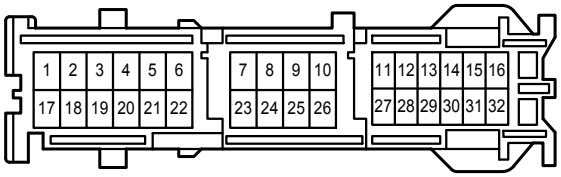


J 12
White

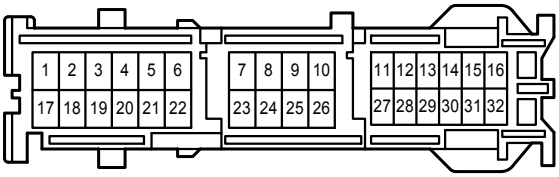


J 18
White

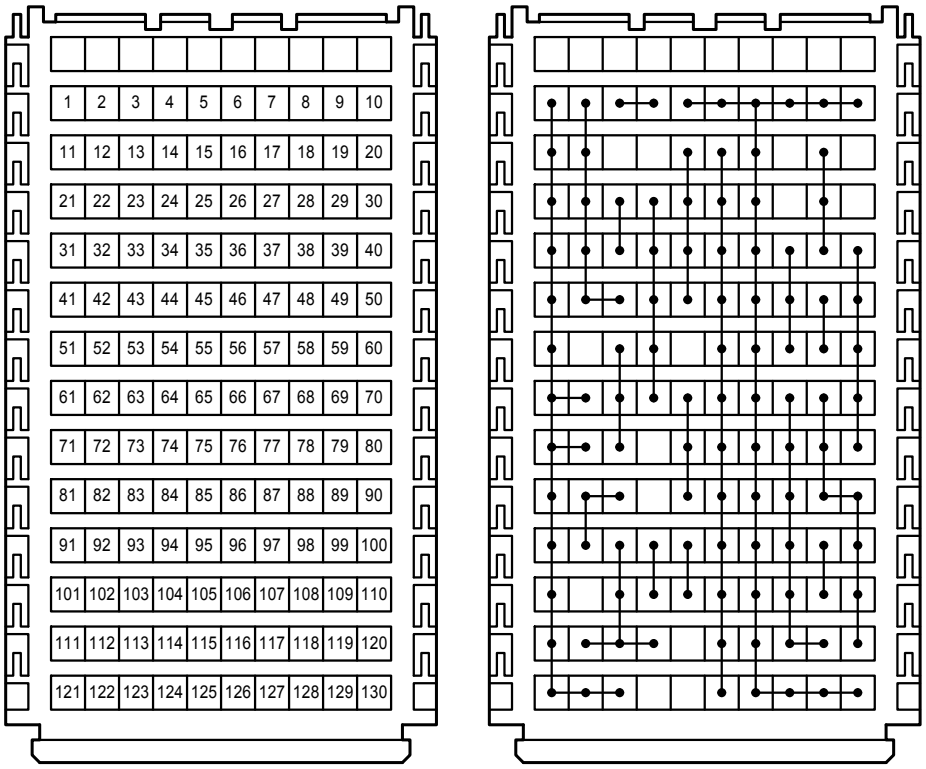


J 20
White

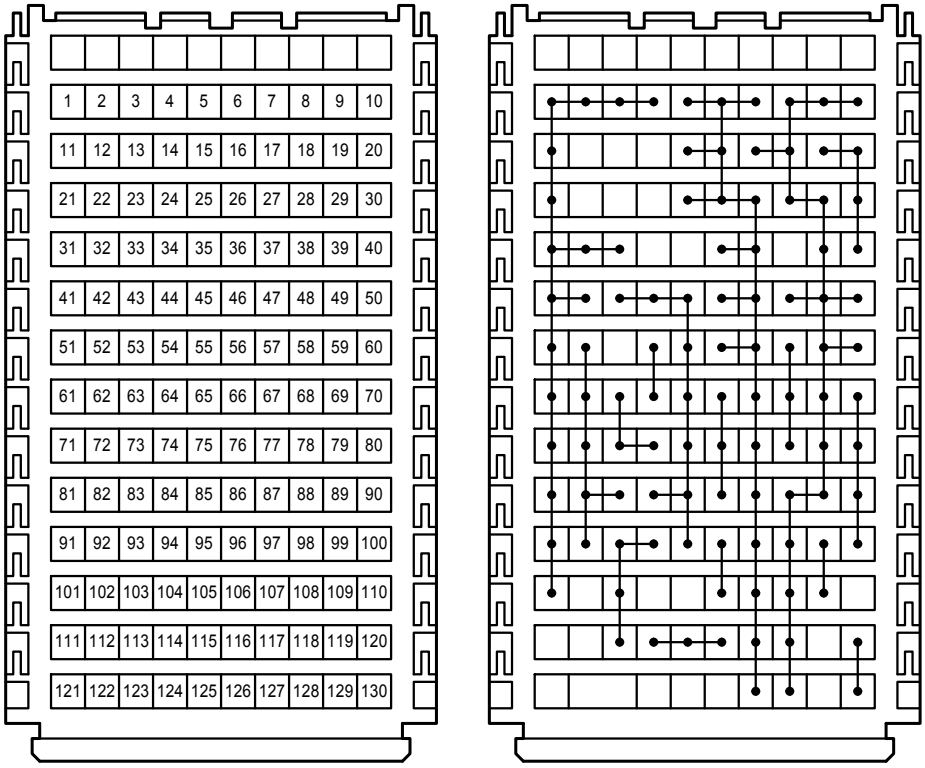


J 33
White

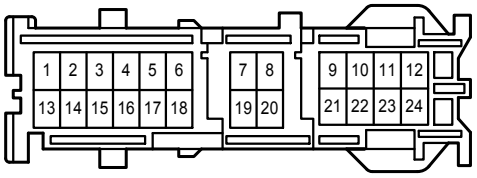


J 34
White

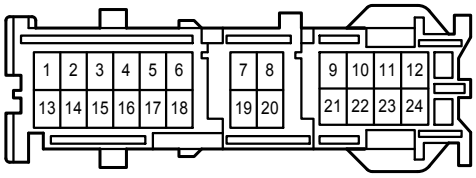


J 44
White

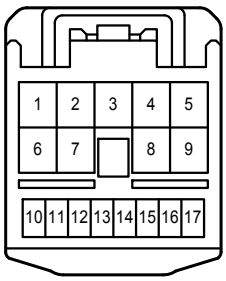


J 45
White

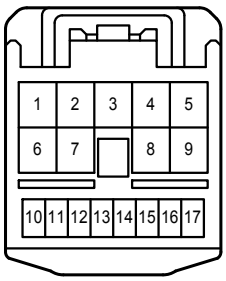


S 6
Black




S 7
White




S 30
Gray




S 31
Gray



1K
White

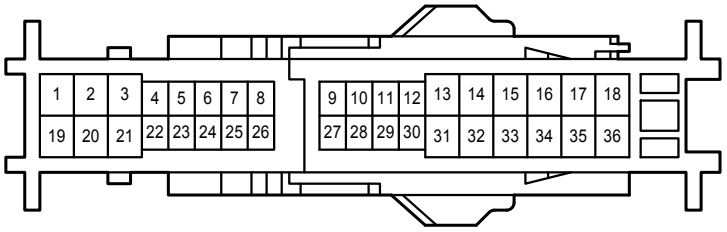

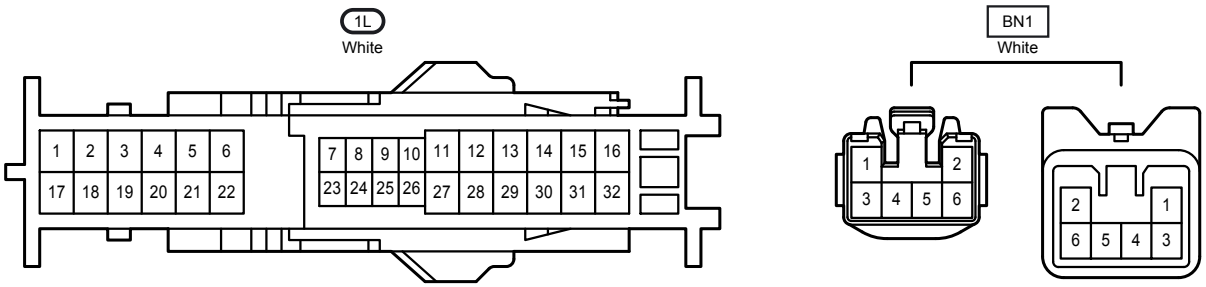
1L
White
1 2 3 4 5 6
17 18 19 20 21 22
7 8 9 10 11 12 13 14 15 16
23 24 25 26 27 28 29 30 31 32
BN1
White
1 2
3 4 5 6
2 1
6 5 4 3