
BODY PANEL SEALING AREAS

HINT:
1) Prior to applying body sealer, clean the area with a rag soaked in silicone remover.
2) If weld-through primer was used, first wipe off any excess and coat with anti-corrosion primer before applying body sealer.
3) Wipe off excess body sealer with a rag soaked in silicone remover.
4) If body sealer is damaged by peeling, cracks, etc., be sure to repair as necessary.


++++++++++	Flat Finishing	————	No Flat Finishing

1. ENGINE COMPARTMENT

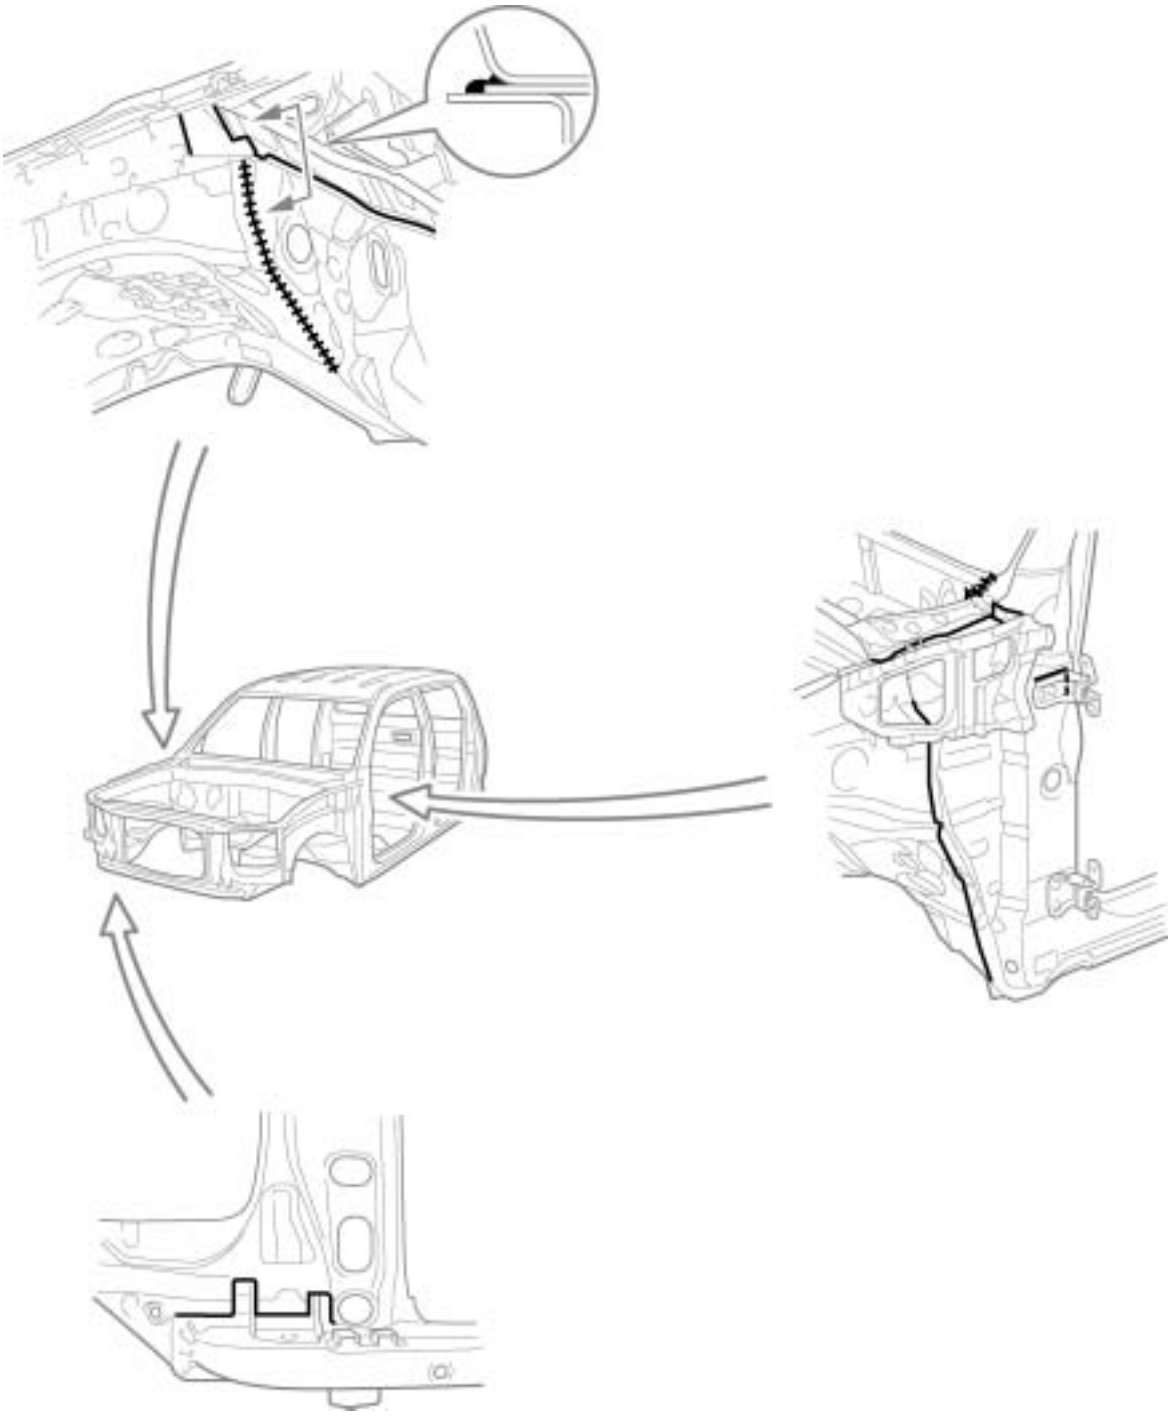


F21401

2. INSIDE

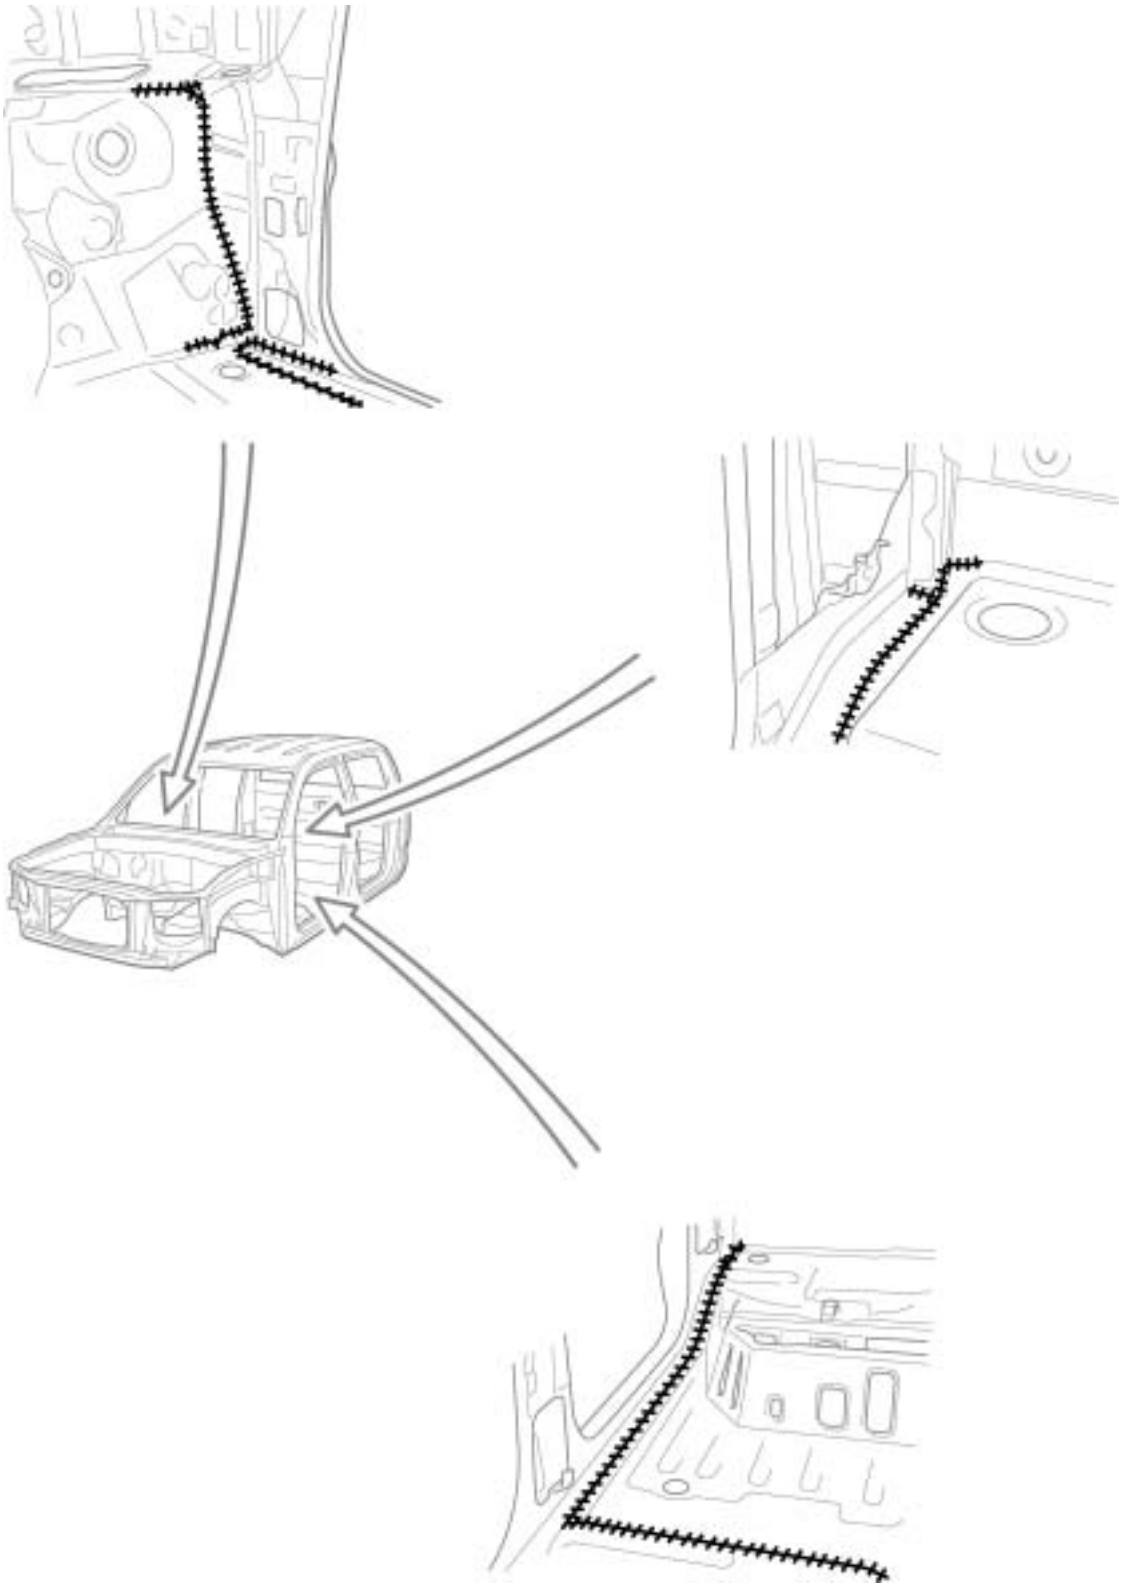


F21402

3. OUTSIDE

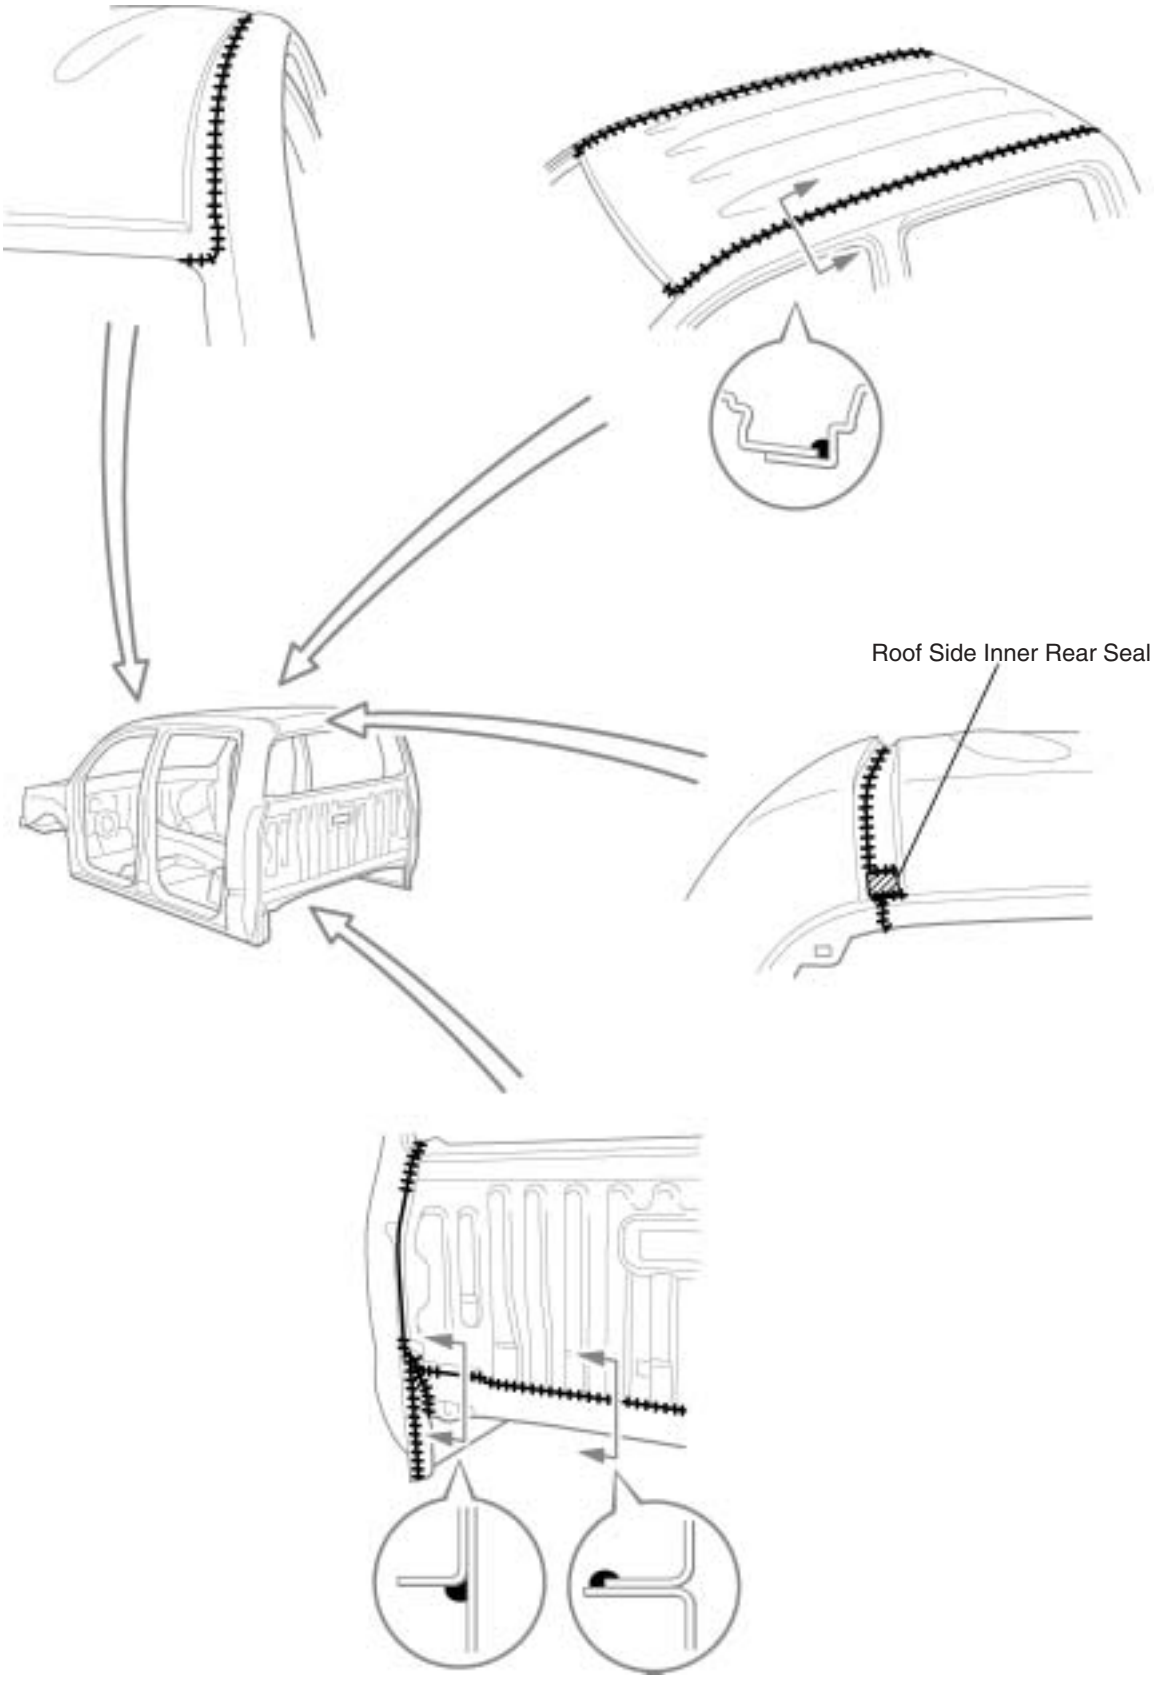


F21403

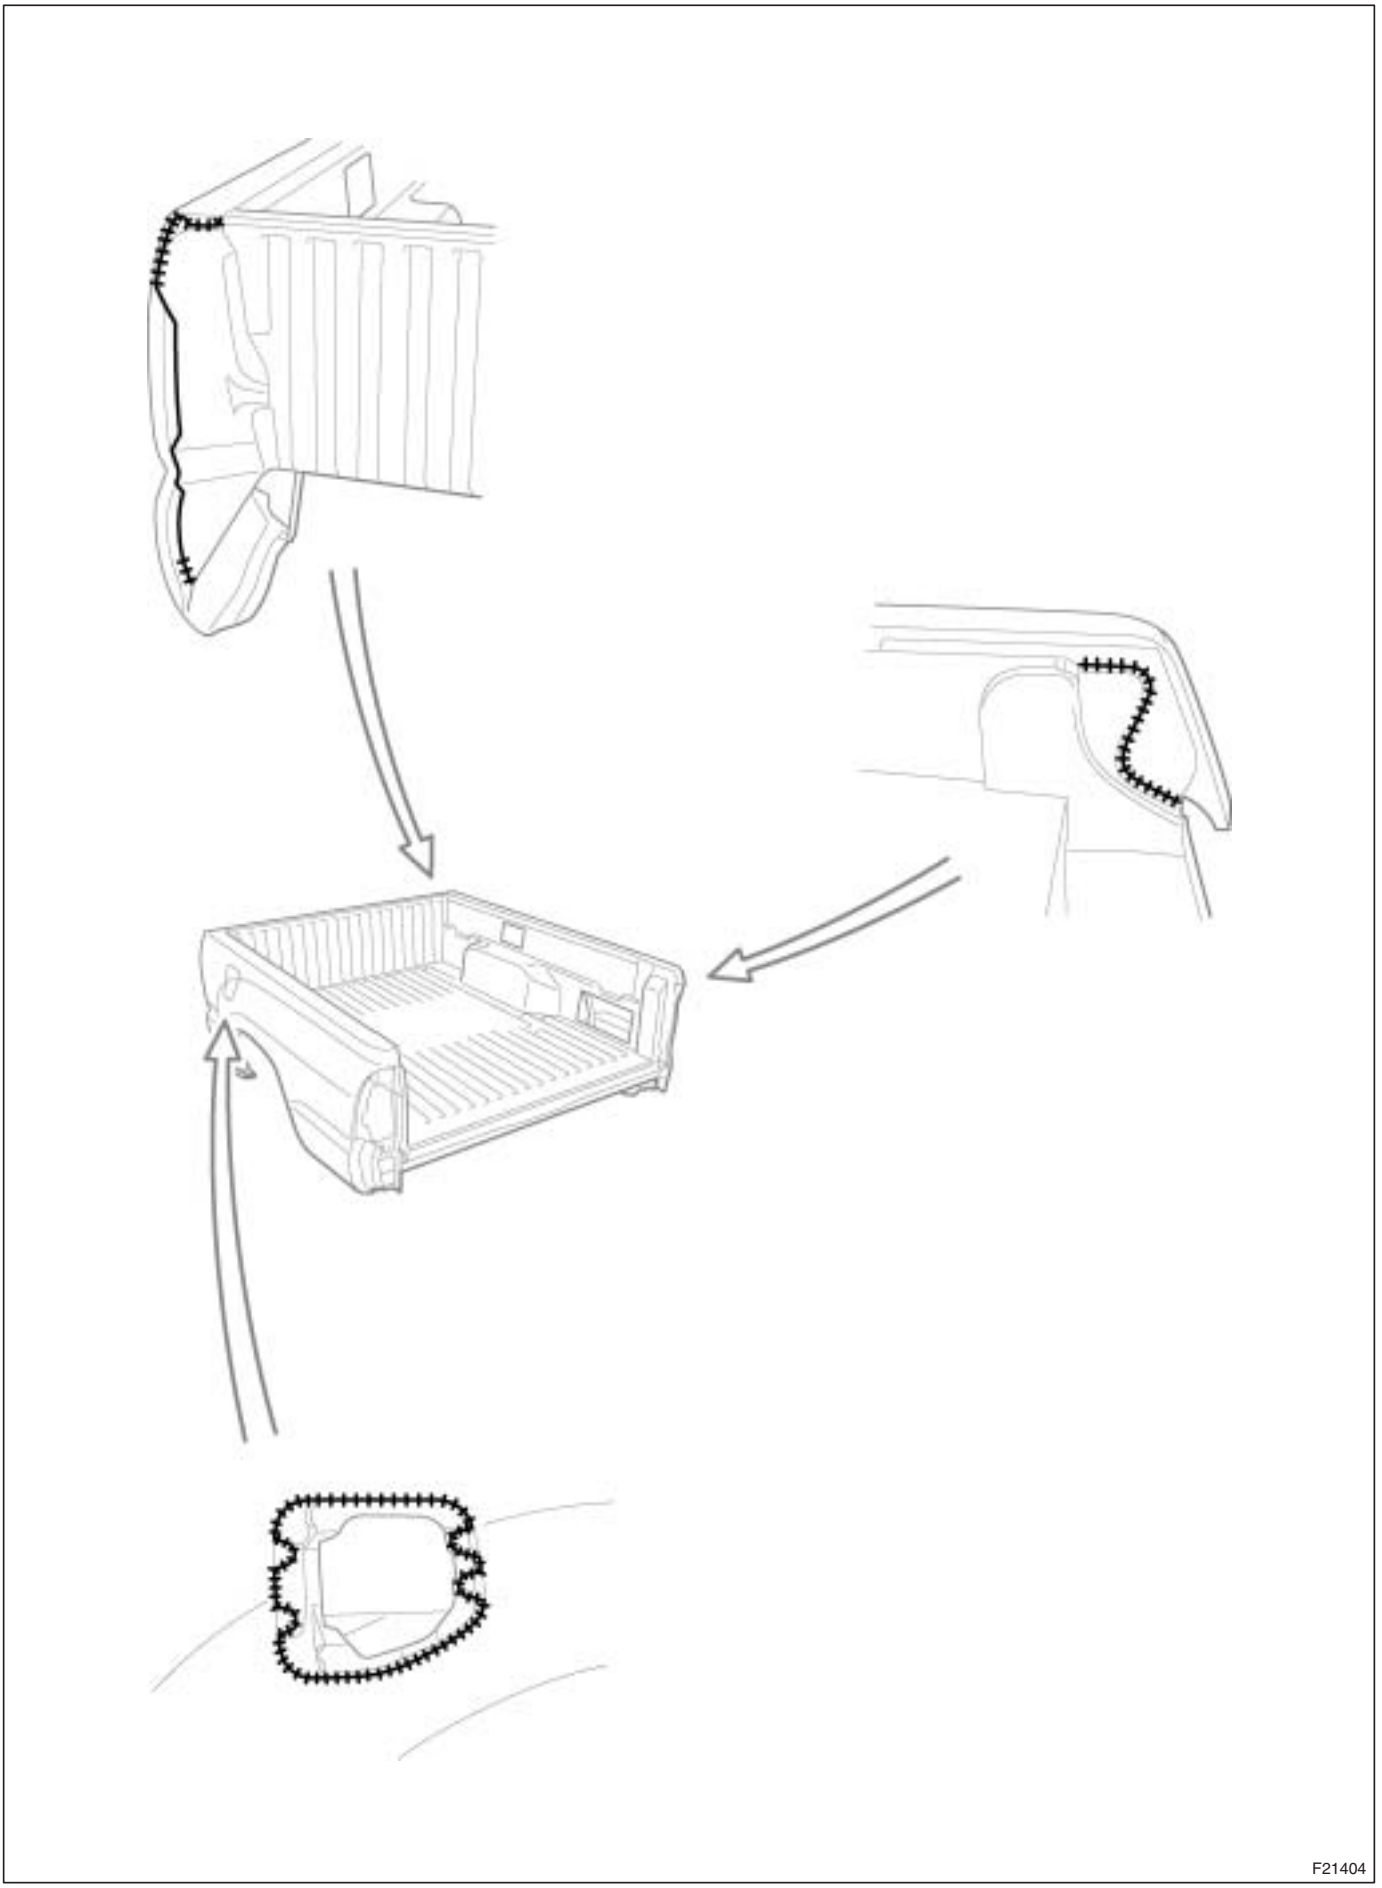


F21404

4. DOOR PARTS

[Regular Cab]

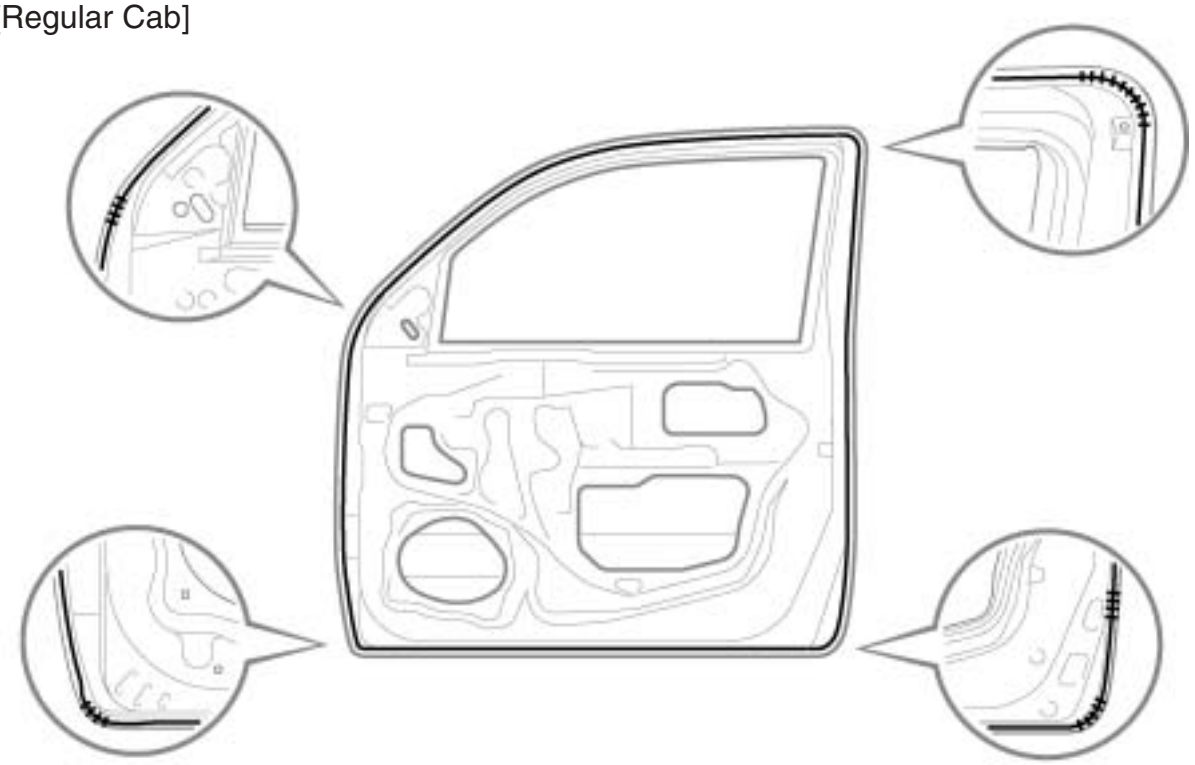


[Ex. Regular Cab]

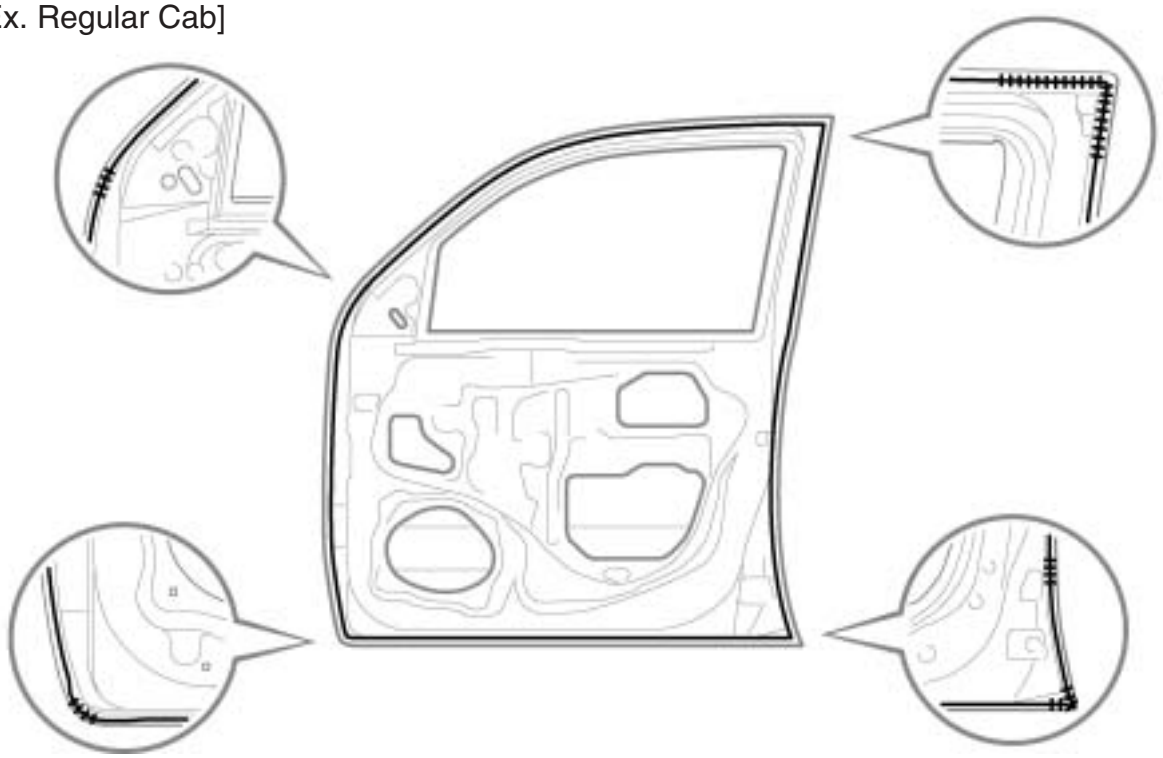


F21405


[Access Cab]

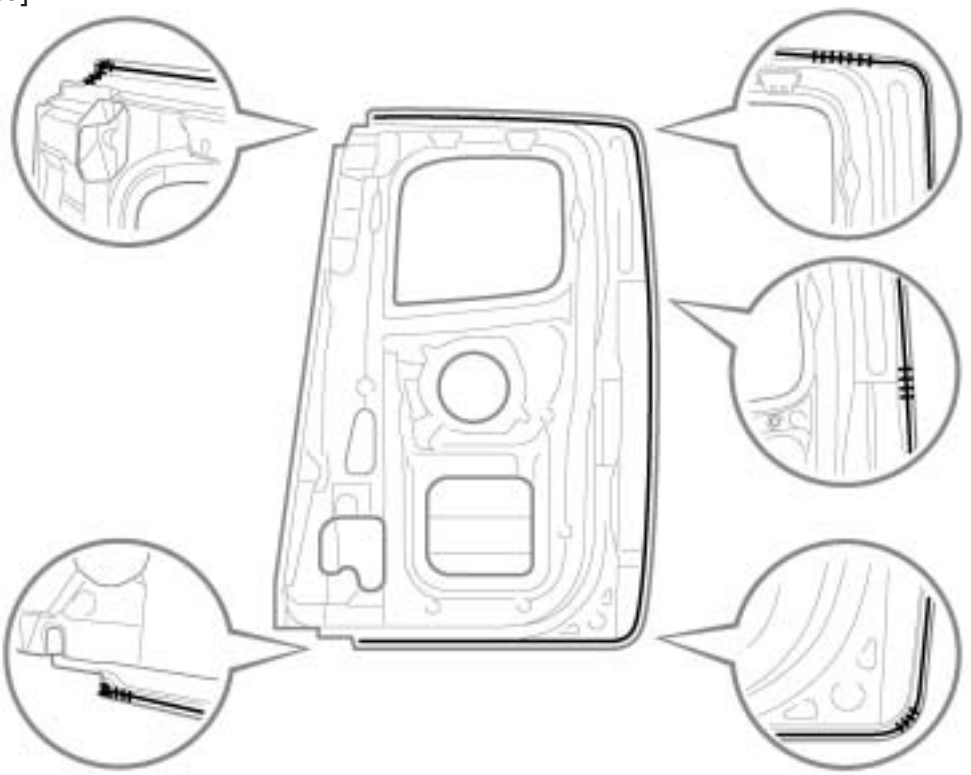


[Double Cab]

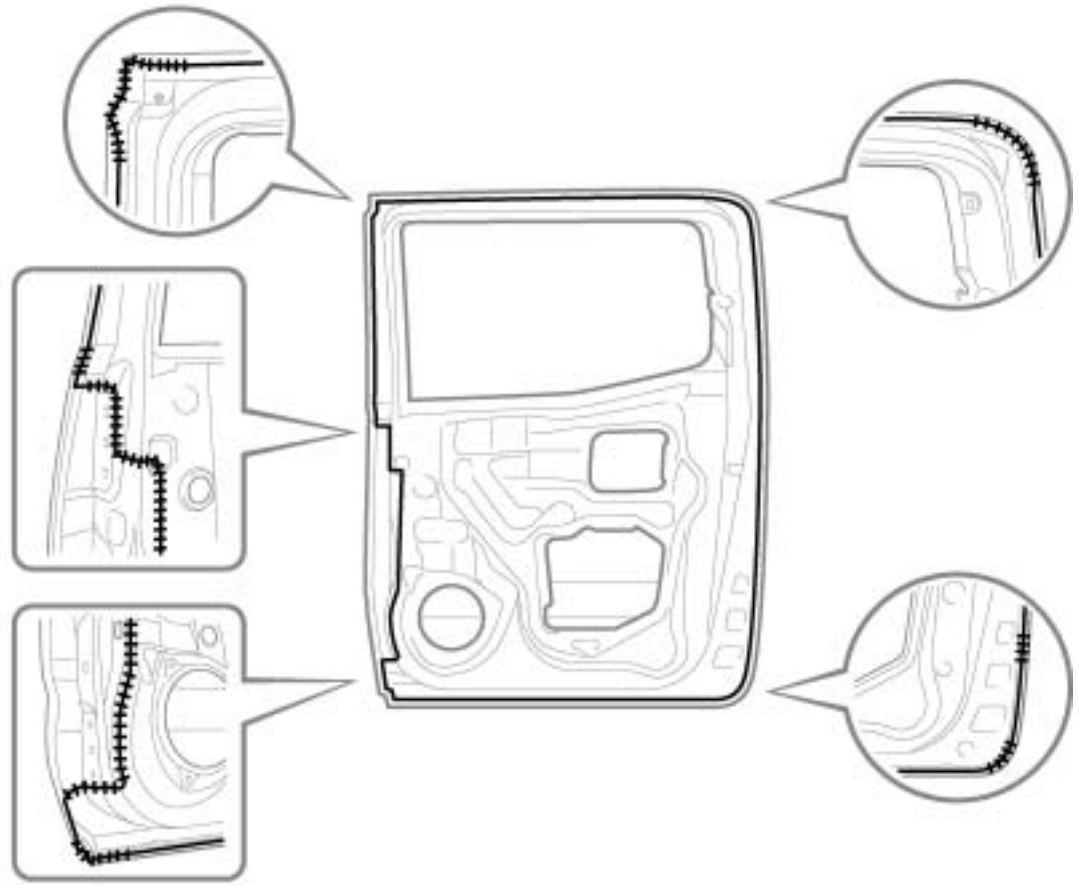

F21406

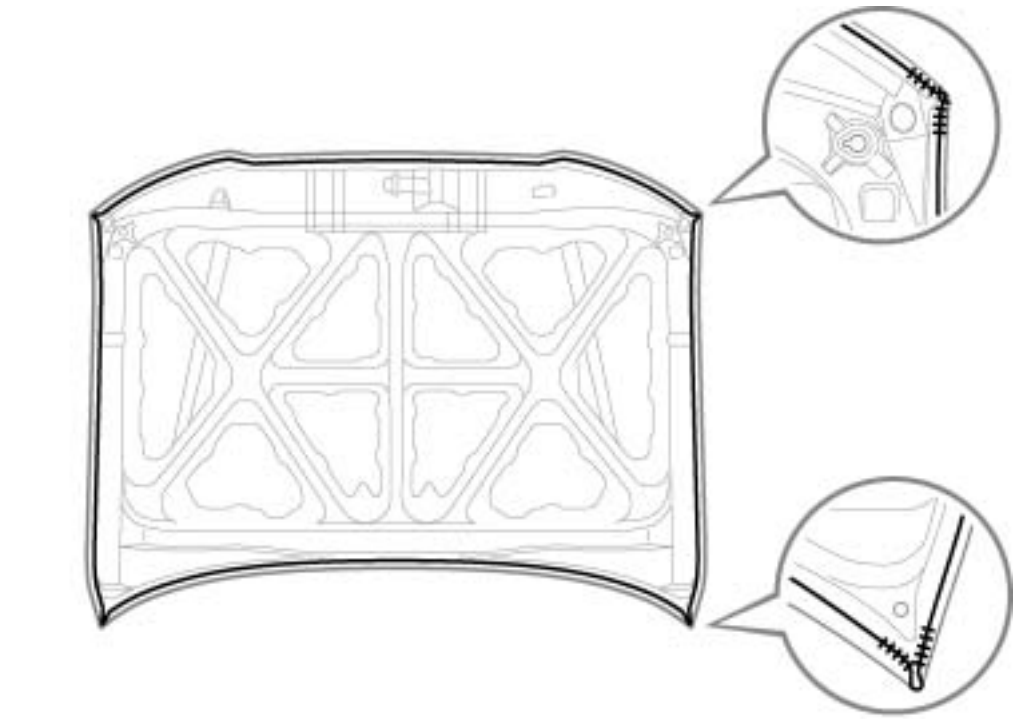

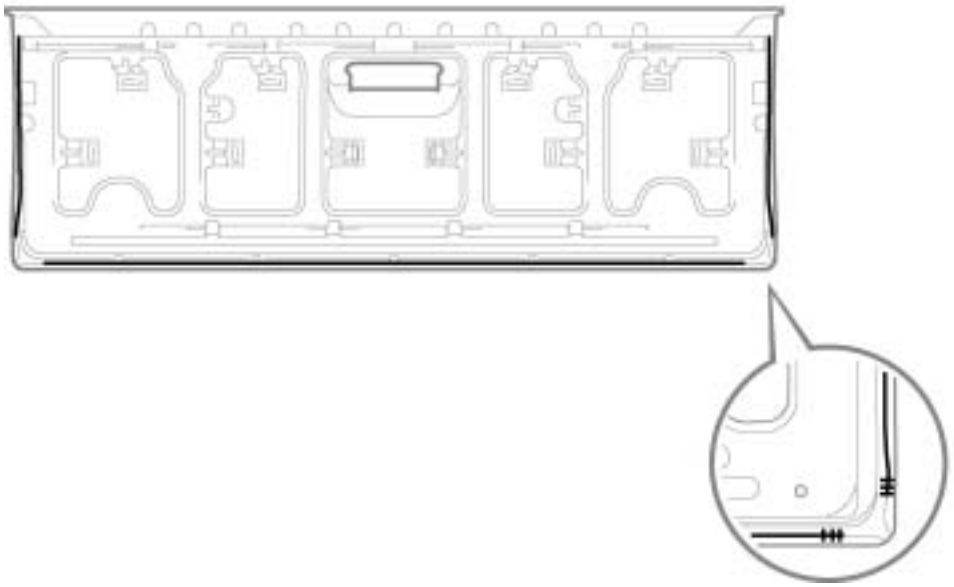

F21407