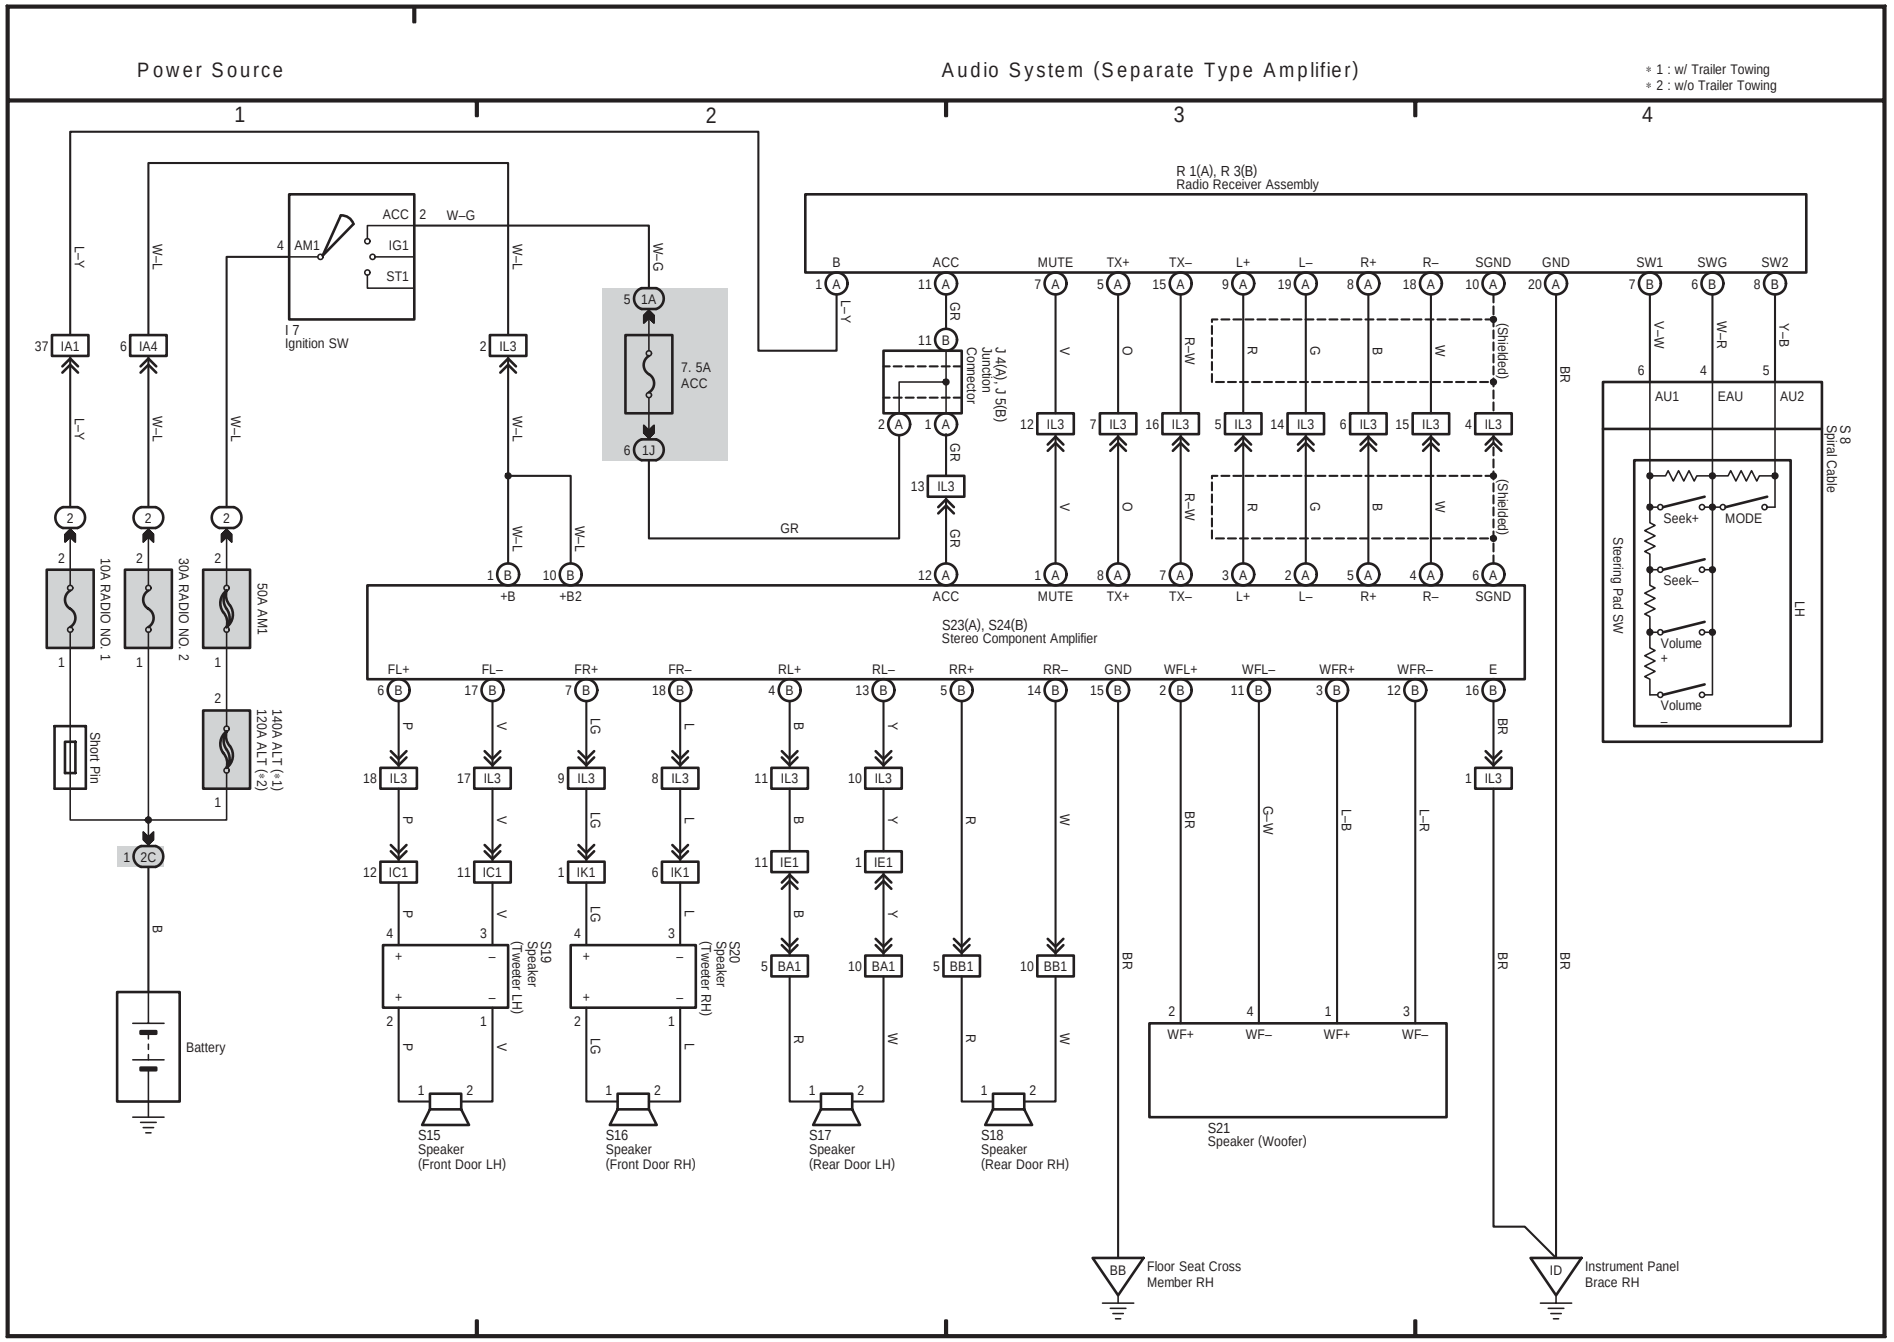

Power Source
Audio System (Separate Type Amplifier)
* 1 : w/ Trailer Towing
* 2 : w/o Trailer Towing
1
2
3
4
R 1(A), R 3(B)
Radio Receiver Assembly
B
ACC
MUTE
TX+
TX–
L+
L–
R+
R–
SGND
GND
SW1
SWG
SW2
ACC
AM1
IG1
ST1
I 7
Ignition SW
7. 5A
ACC
J 4(A), J 5(B)
Junction
Connector
+B
+B2
S23(A), S24(B)
Stereo Component Amplifier
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
GND
WFL+
WFL–
WFR+
WFR–
E
AU1
EAU
AU2
S 8
Spiral Cable
Steering Pad SW
Seek+
MODE
Seek–
Volume
+
Volume
–
LH
(Shielded)
10A RADIO NO. 1
30A RADIO NO. 2
50A AM1
140A ALT (*1)
120A ALT (*2)
Short Pin
Battery
S15
Speaker
(Front Door LH)
S16
Speaker
(Front Door RH)
S17
Speaker
(Rear Door LH)
S18
Speaker
(Rear Door RH)
S19
Speaker
(Tweeter LH)
S20
Speaker
(Tweeter RH)
S21
Speaker (Woofer)
WF+
WF–
WF+
WF–
BB
Floor Seat Cross
Member RH
ID
Instrument Panel
Brace RH