
# BODY PANEL SEALING AREAS

*HINT:*
*1) Prior to applying body sealer, clean the area with a rag soaked in silicone remover.*
*2) If weld-through primer was used, first wipe off any excess and coat with anti-corrosion primer before applying body sealer.*
*3) Wipe off excess body sealer with a rag soaked in silicone remover.*
*4) If body sealer is damaged by peeling, cracks, etc., be sure to repair as necessary.*


| | | | |
|---|---|---|---|
| ++++++++++ | Flat Finishing | ———— | No Flat Finishing |

## 1. ENGINE COMPARTMENT

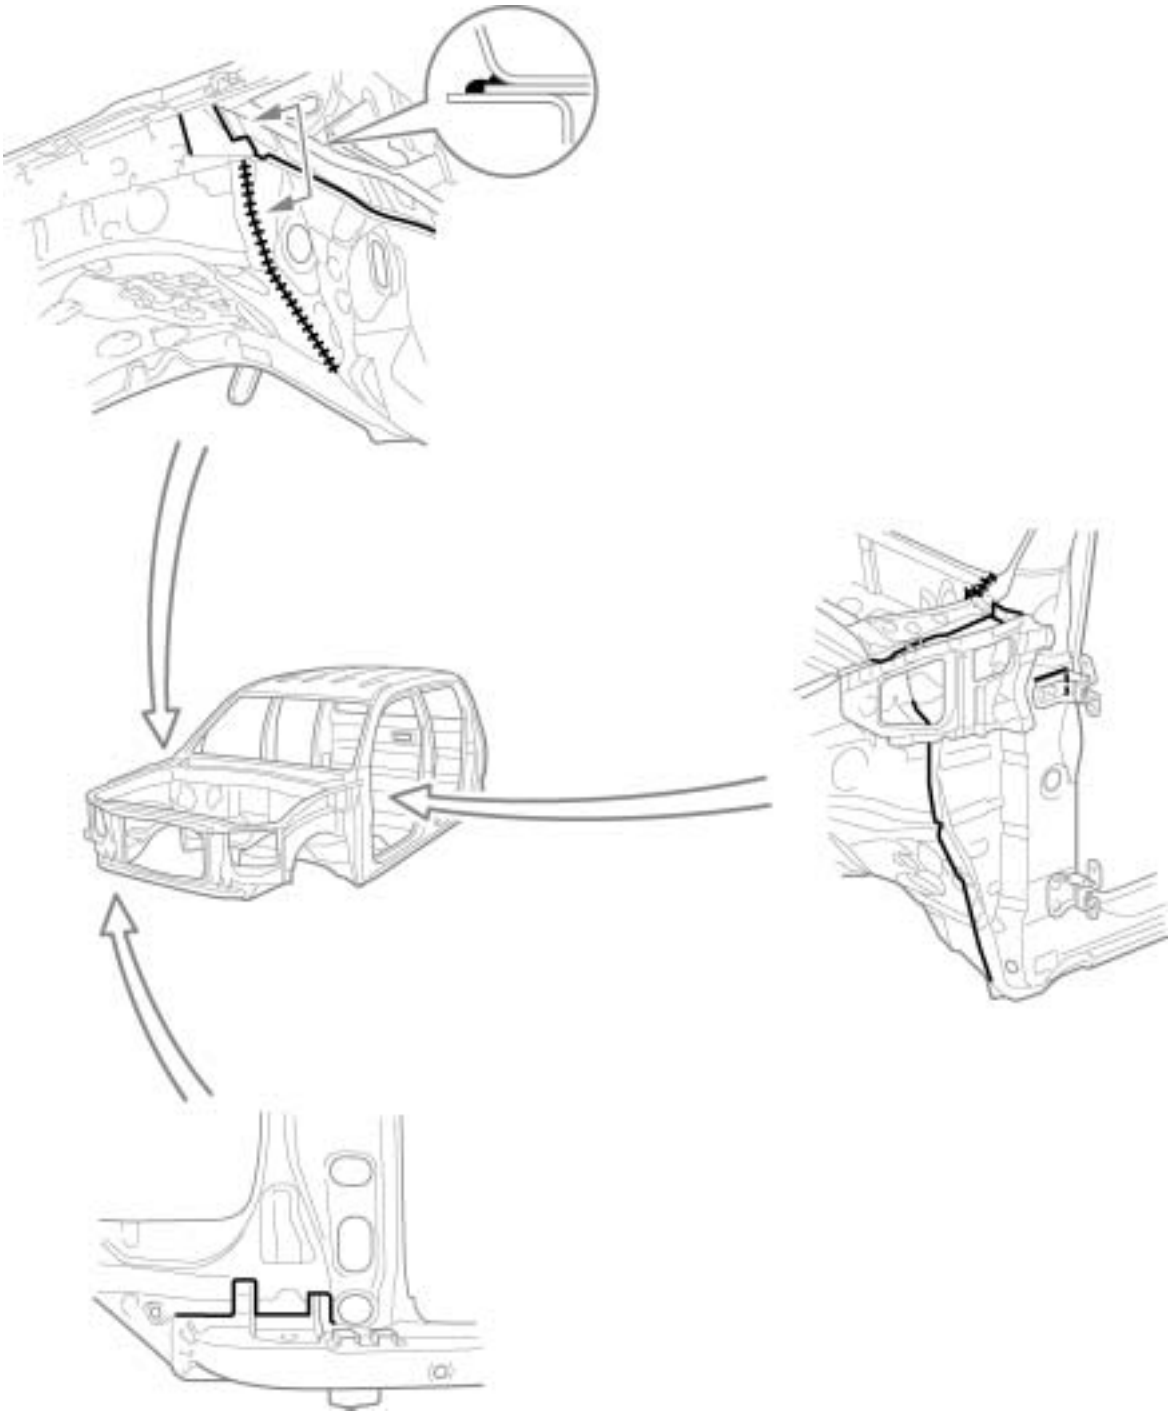


F21401

**2. INSIDE**

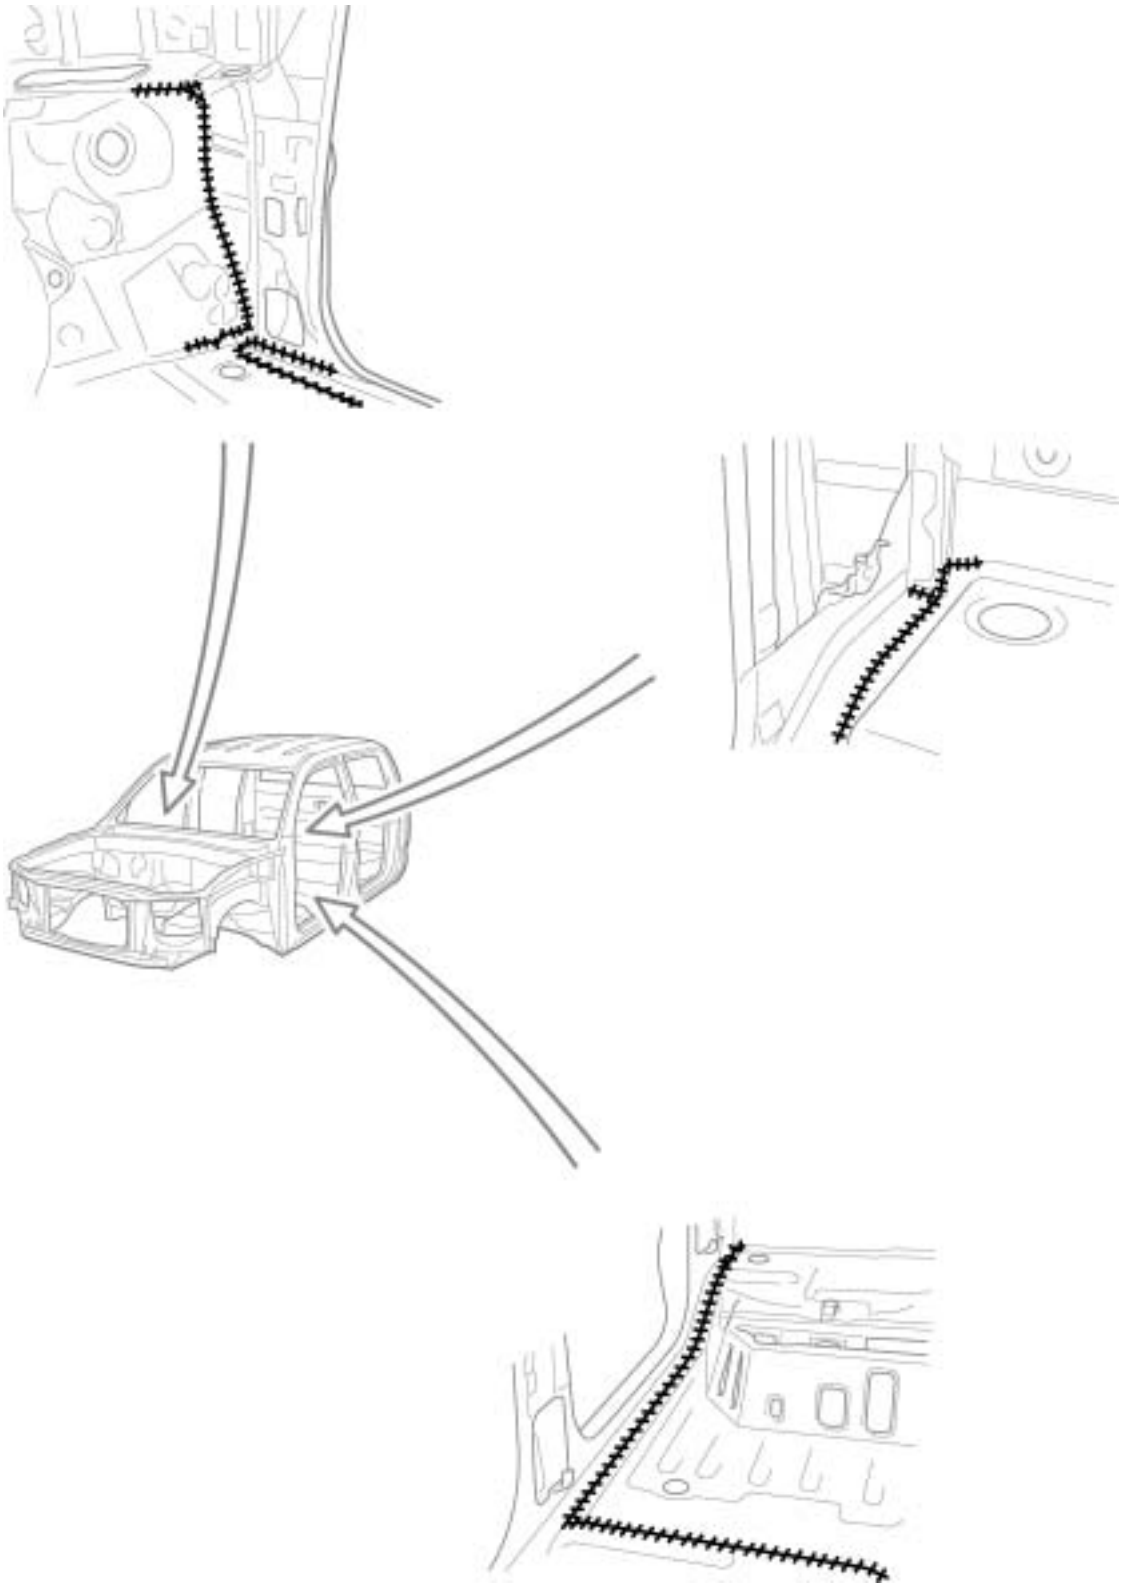


F21402

**3. OUTSIDE**

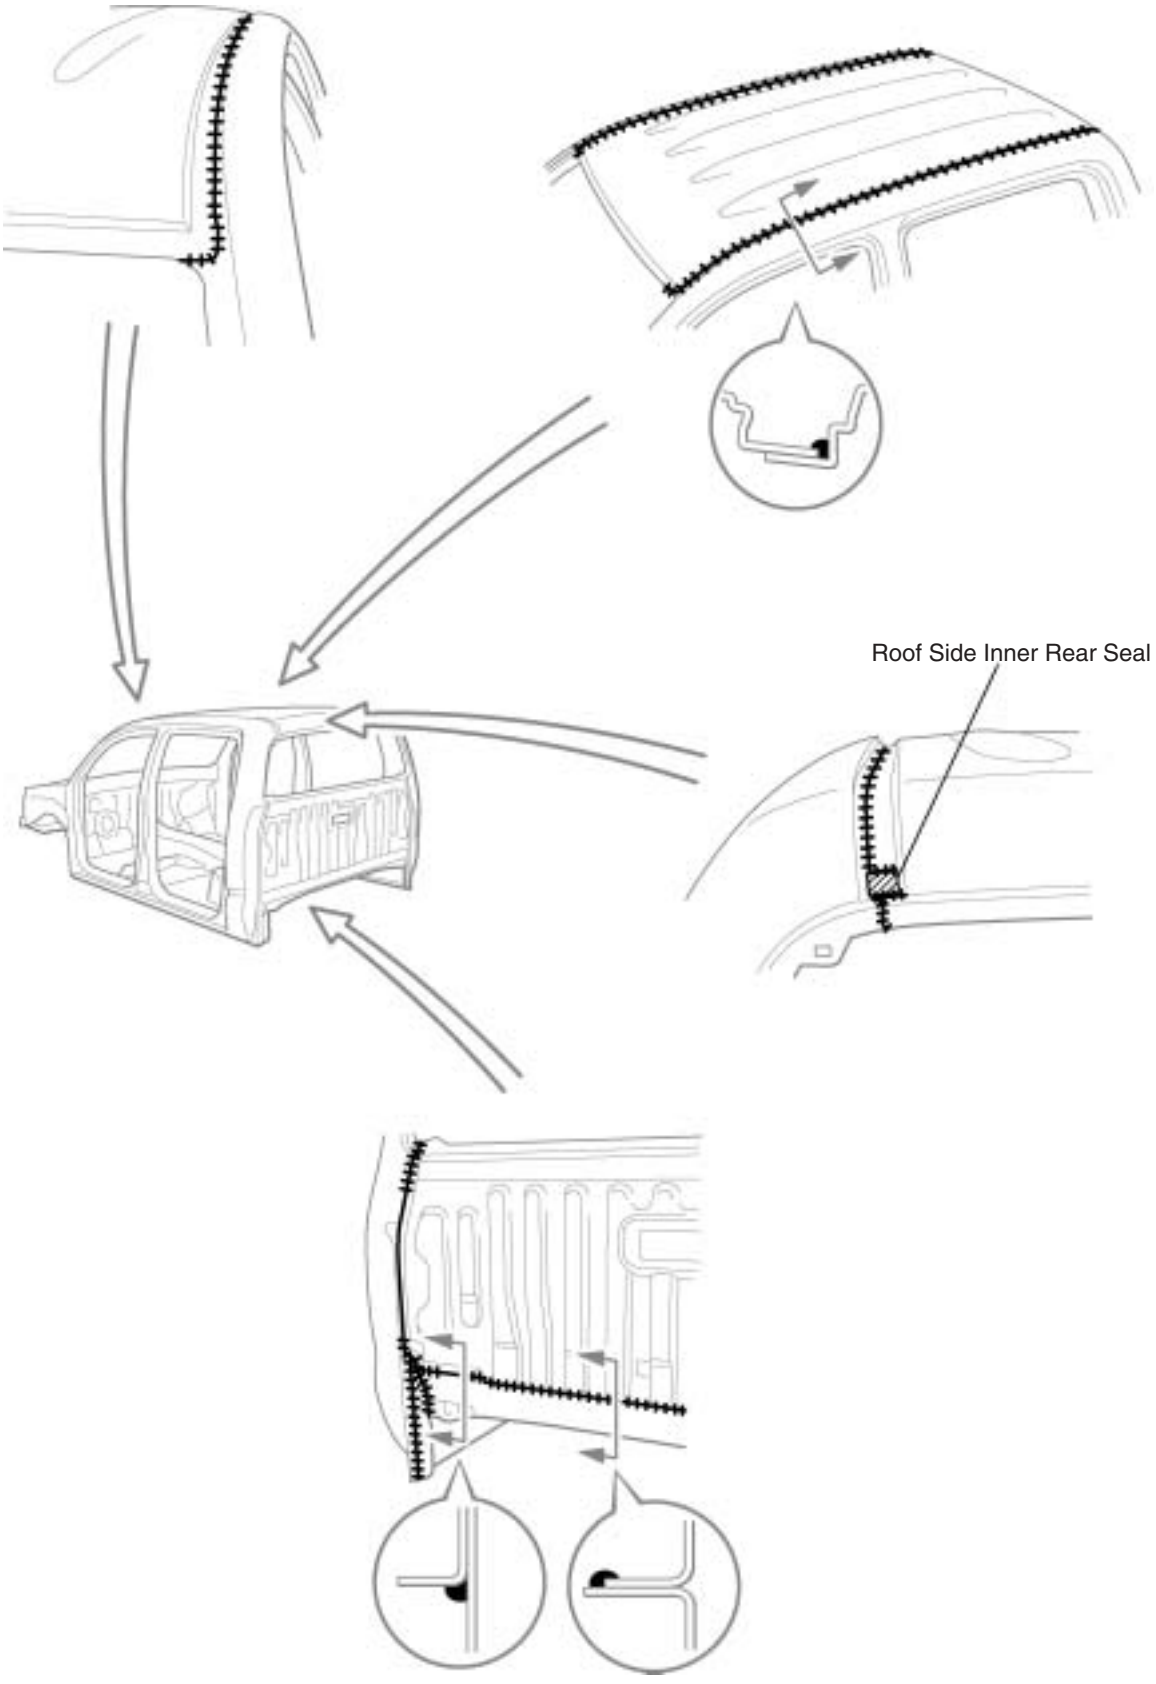



F21403

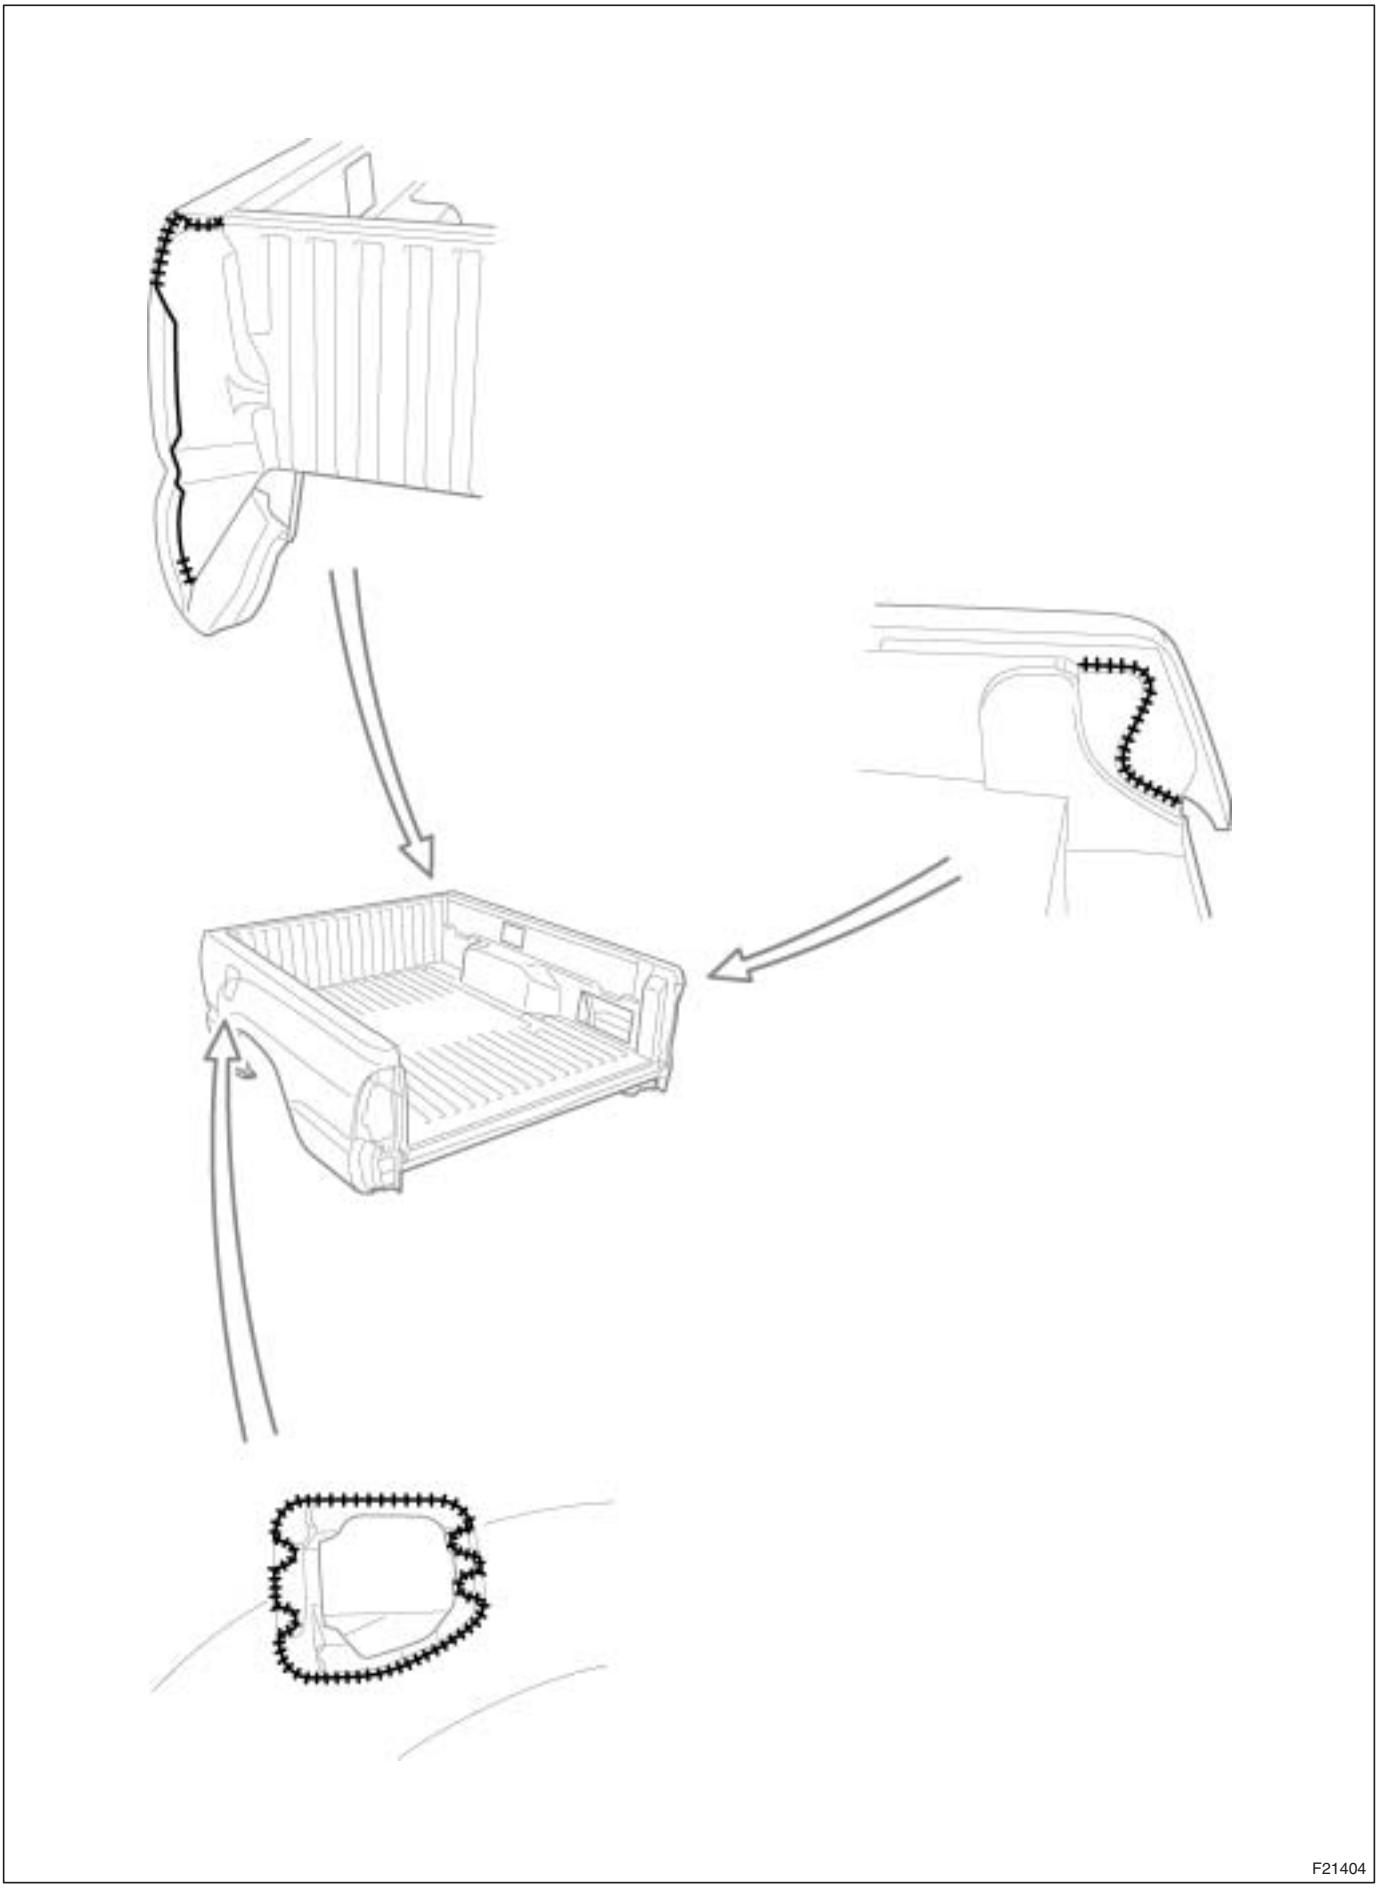


F21404

## 4. DOOR PARTS

[Regular Cab]

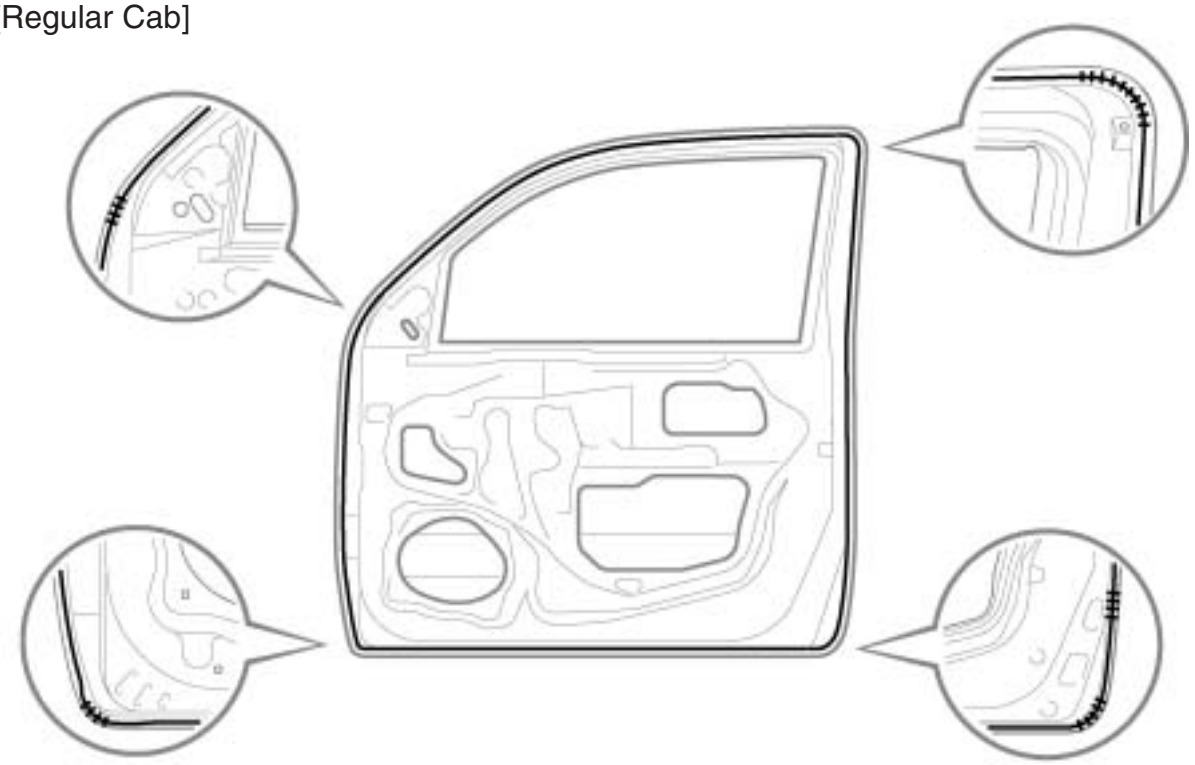


[Ex. Regular Cab]

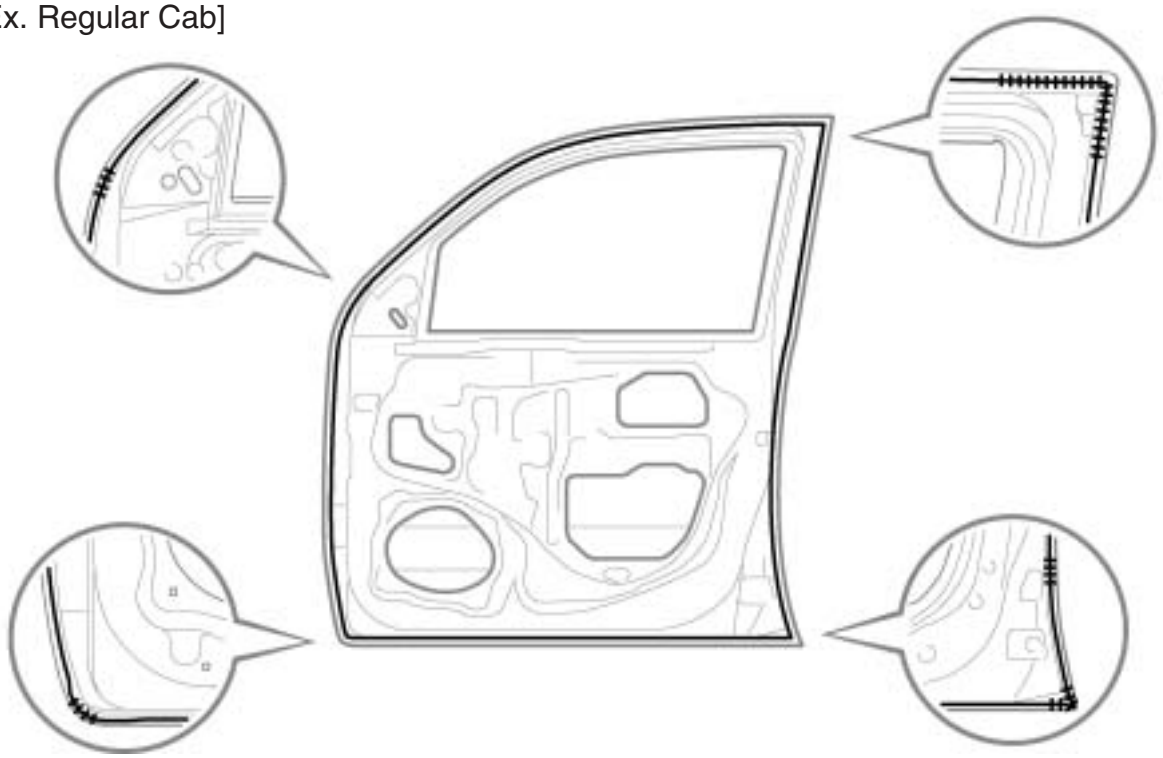


F21405


[Access Cab]

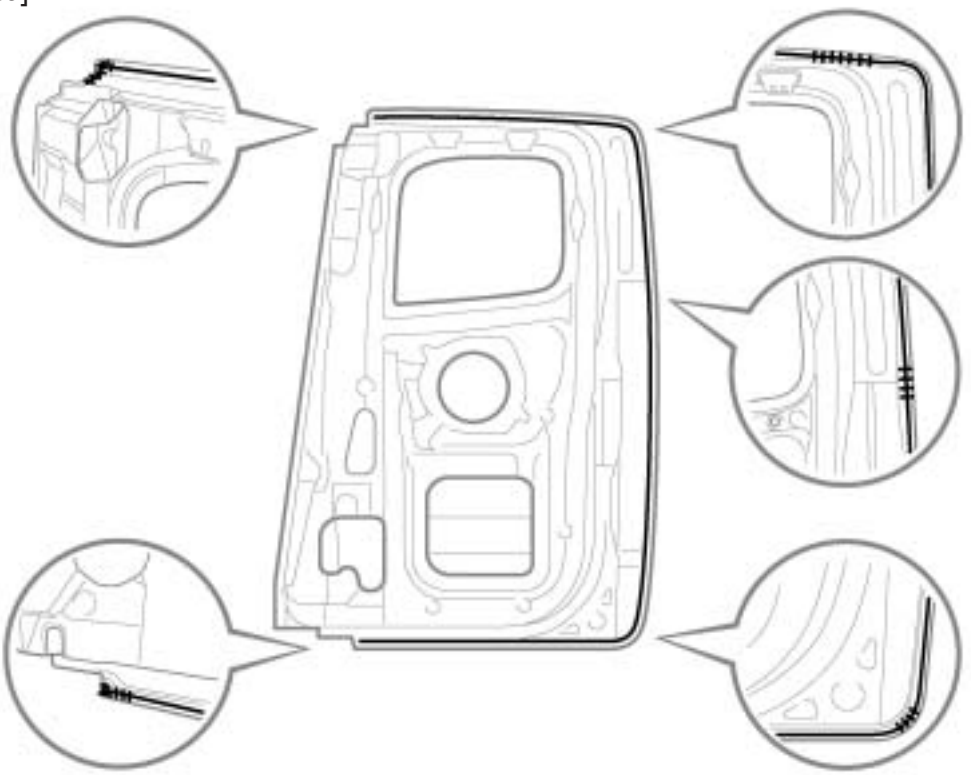


[Double Cab]

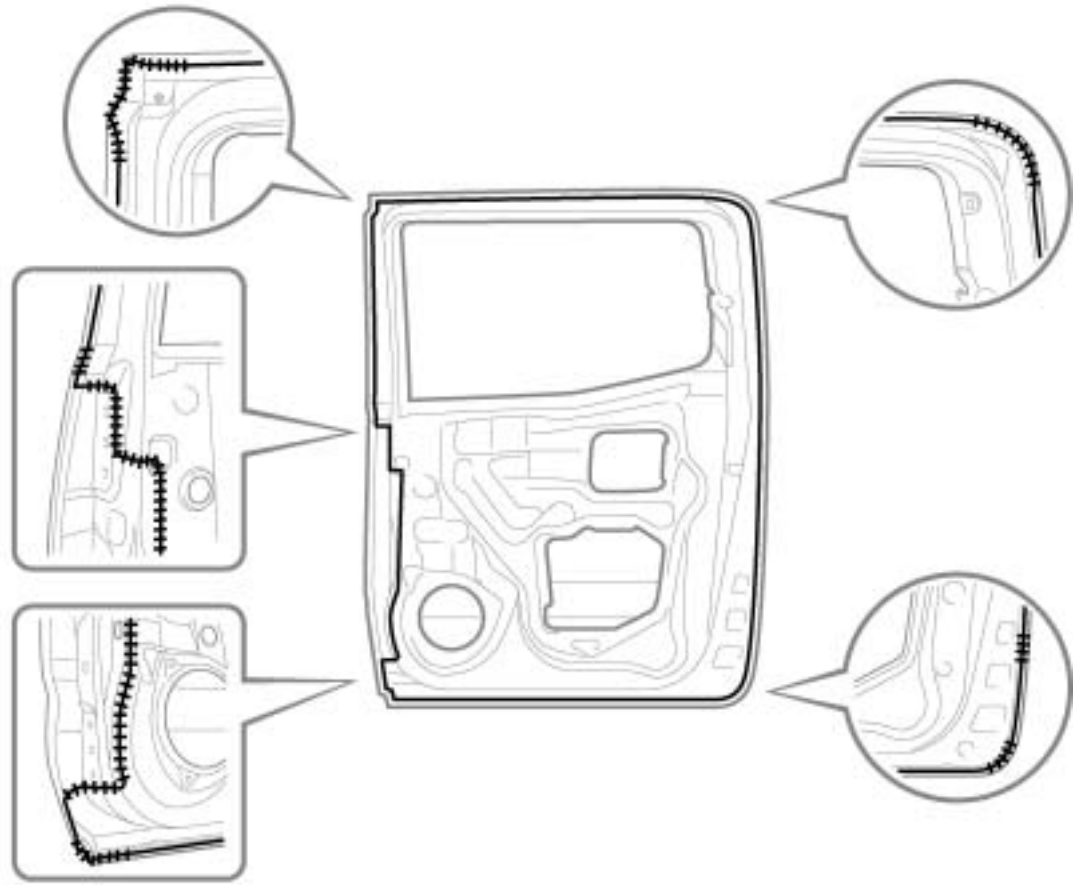

F21406

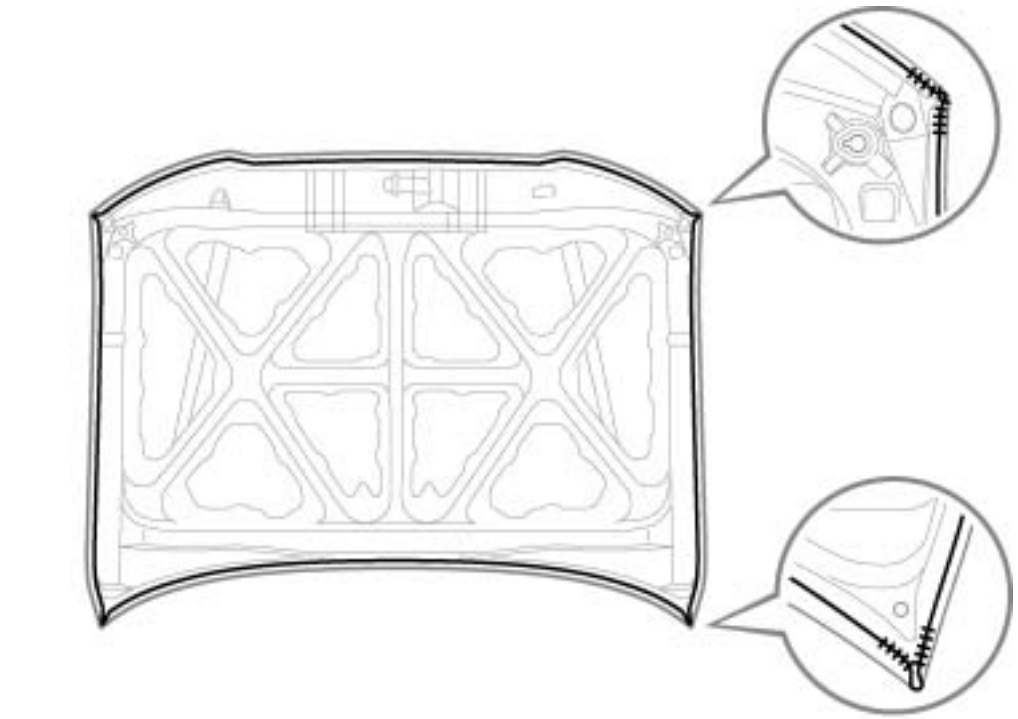

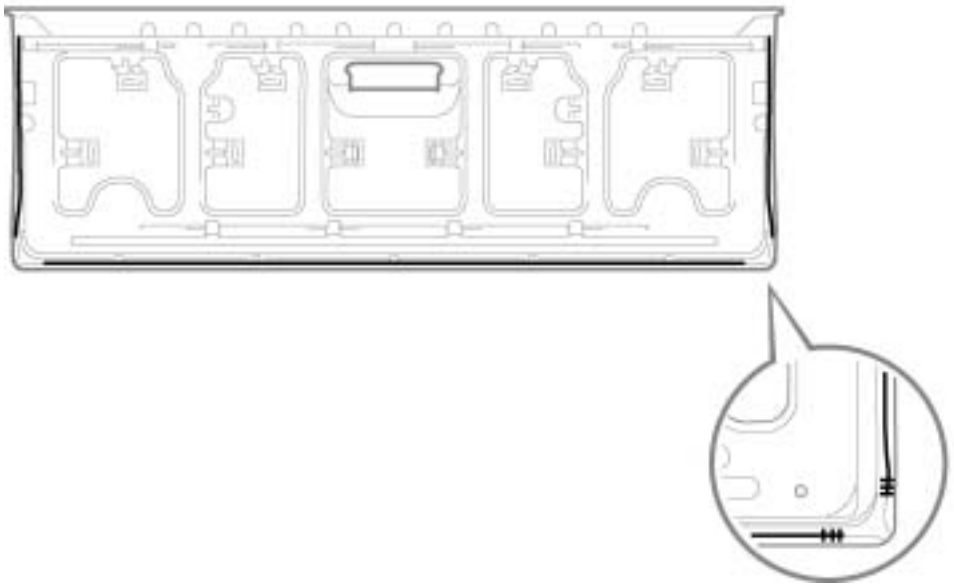

F21407