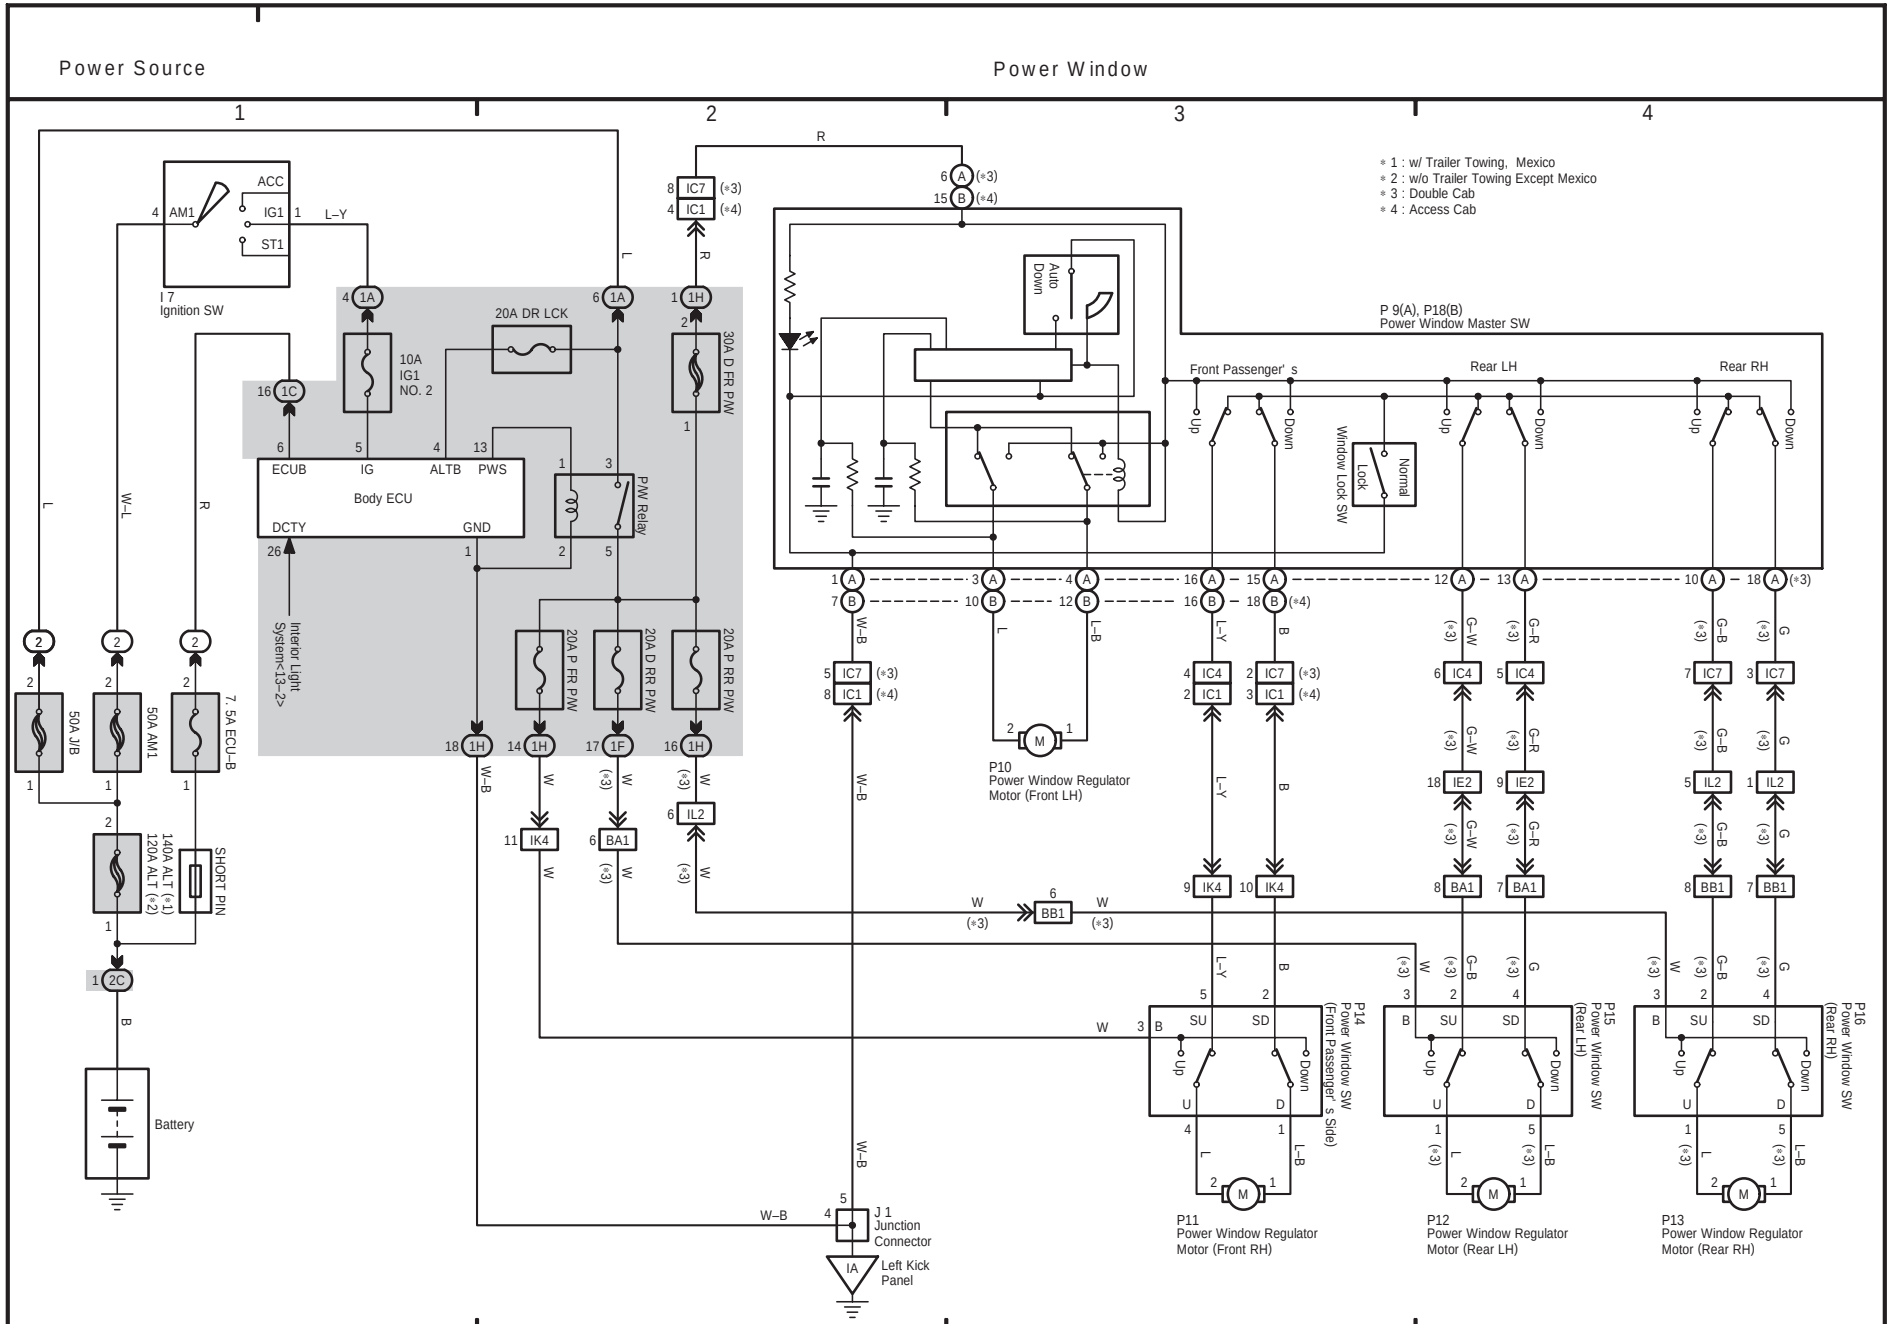

Power Source
Power Window
1
2
3
4
* 1 : w/ Trailer Towing, Mexico
* 2 : w/o Trailer Towing Except Mexico
* 3 : Double Cab
* 4 : Access Cab
I 7
Ignition SW
ACC
IG1
ST1
AM1
L–Y
10A
IG1
NO. 2
20A DR LCK
30A D FR P/W
Body ECU
ECUB
IG
ALTB
PWS
DCTY
GND
P/W Relay
Interior Light
System<13–2>
20A P FR P/W
20A D RR P/W
20A P RR P/W
50A J/B
50A AM1
7. 5A ECU–B
140A ALT (*1)
120A ALT (*2)
SHORT PIN
Battery
J 1
Junction
Connector
Left Kick
Panel
P 9(A), P18(B)
Power Window Master SW
Auto
Down
Front Passenger' s
Rear LH
Rear RH
Up
Down
Window Lock SW
Lock
Normal
P10
Power Window Regulator
Motor (Front LH)
P11
Power Window Regulator
Motor (Front RH)
P12
Power Window Regulator
Motor (Rear LH)
P13
Power Window Regulator
Motor (Rear RH)
P14
Power Window SW
(Front Passenger' s Side)
P15
Power Window SW
(Rear LH)
P16
Power Window SW
(Rear RH)