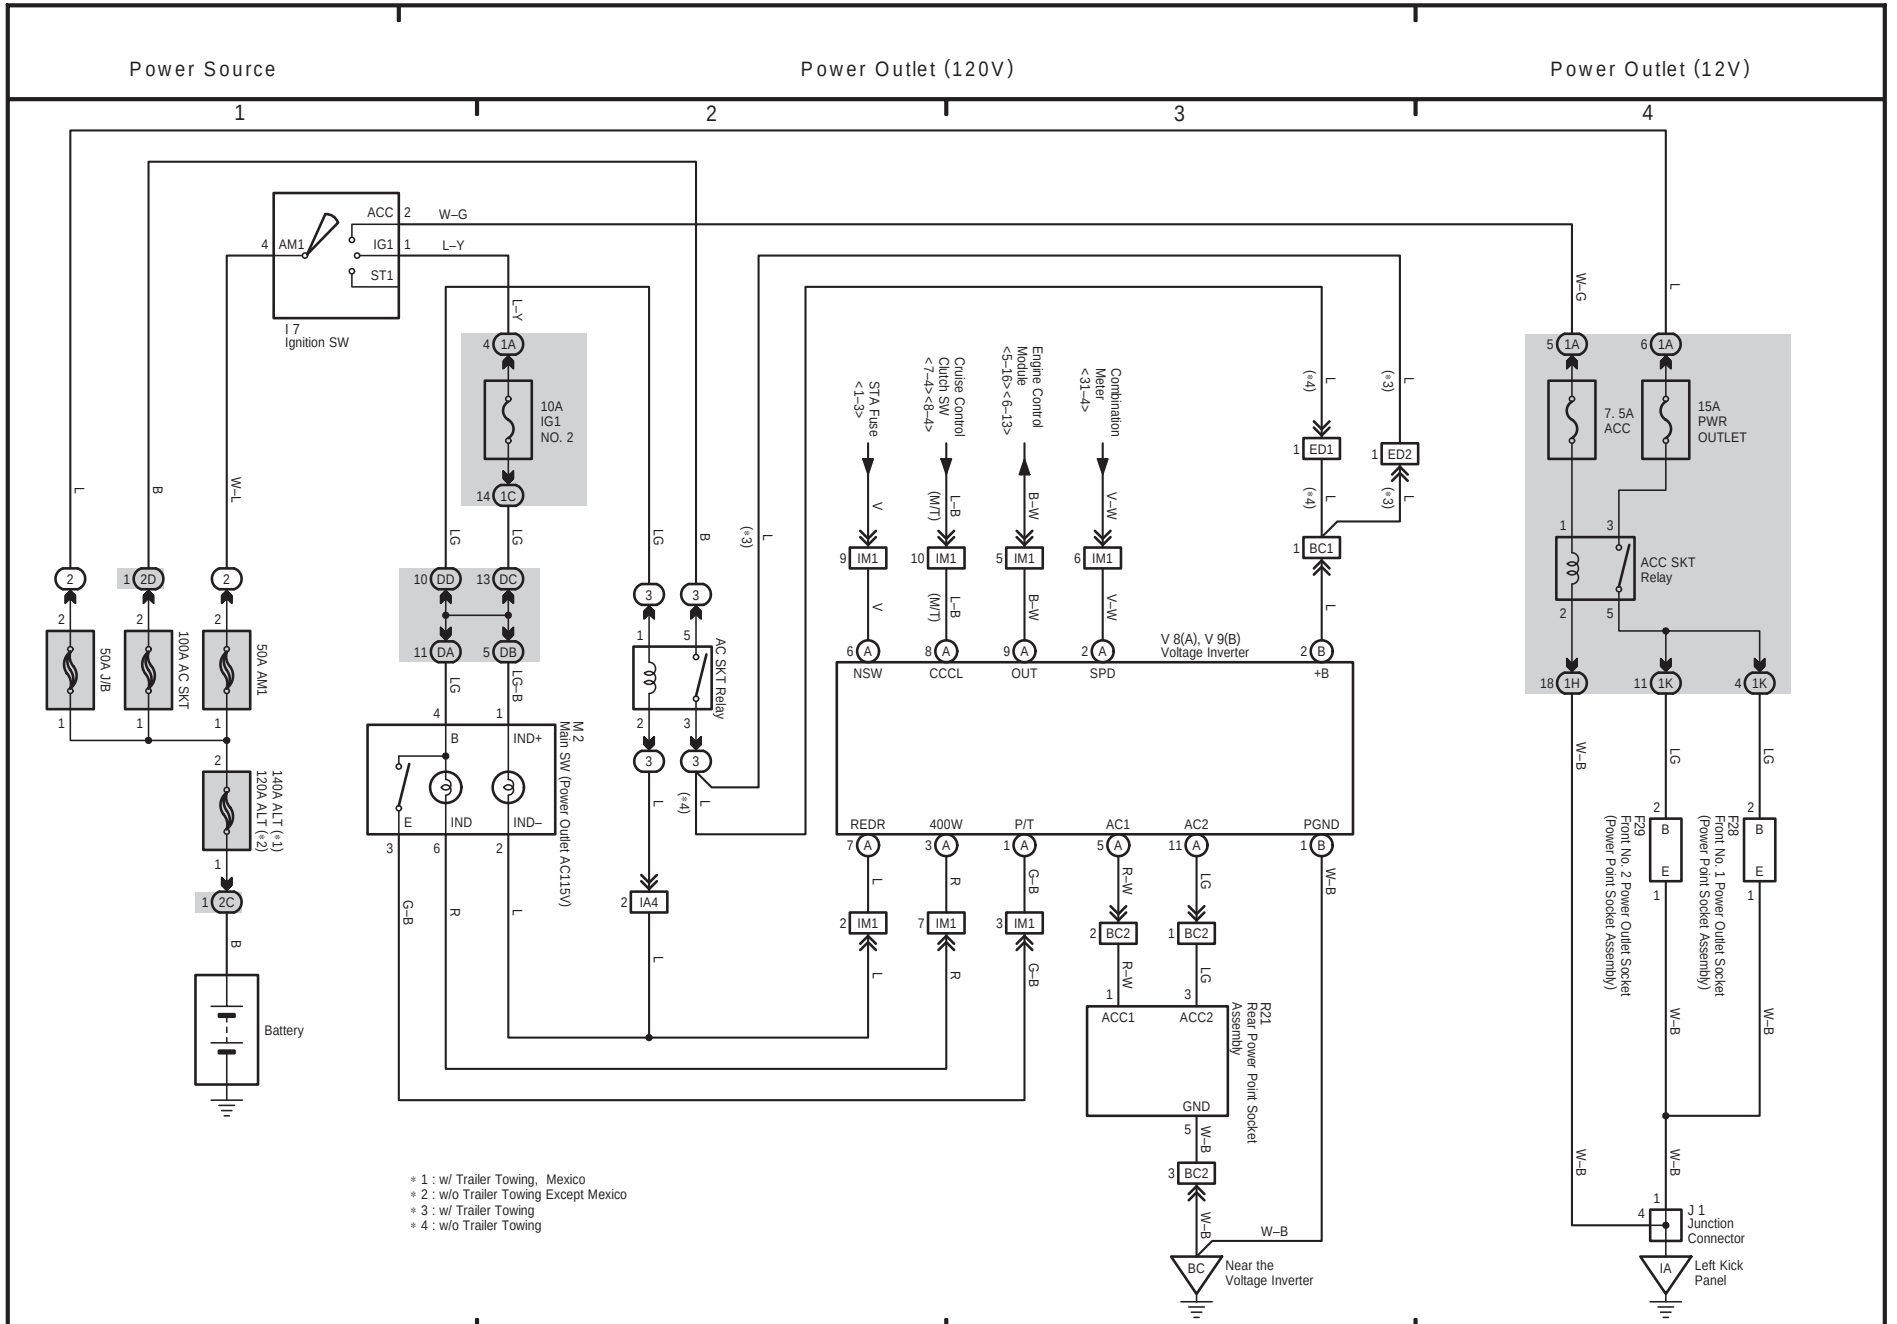

Power Source
Power Outlet (120V)
Power Outlet (12V)
1
2
3
4
ACC
IG1
ST1
AM1
I 7
Ignition SW
10A
IG1
NO. 2
50A J/B
100A AC SKT
50A AM1
140A ALT (*1)
120A ALT (*2)
Battery
M 2
Main SW (Power Outlet AC115V)
AC SKT Relay
IA4
STA Fuse
<1–3>
Cruise Control
Clutch SW
<7–4><8–4>
Engine Control
Module
<5–16><6–13>
Combination
Meter
<31–4>
V 8(A), V 9(B)
Voltage Inverter
NSW
CCCL
OUT
SPD
+B
REDR
400W
P/T
AC1
AC2
PGND
R21
Rear Power Point Socket
Assembly
ACC1
ACC2
GND
BC
Near the
Voltage Inverter
7. 5A
ACC
15A
PWR
OUTLET
ACC SKT
Relay
F29
Front No. 2 Power Outlet Socket
(Power Point Socket Assembly)
F28
Front No. 1 Power Outlet Socket
(Power Point Socket Assembly)
J 1
Junction
Connector
IA
Left Kick
Panel
* 1 : w/ Trailer Towing, Mexico
* 2 : w/o Trailer Towing Except Mexico
* 3 : w/ Trailer Towing
* 4 : w/o Trailer Towing