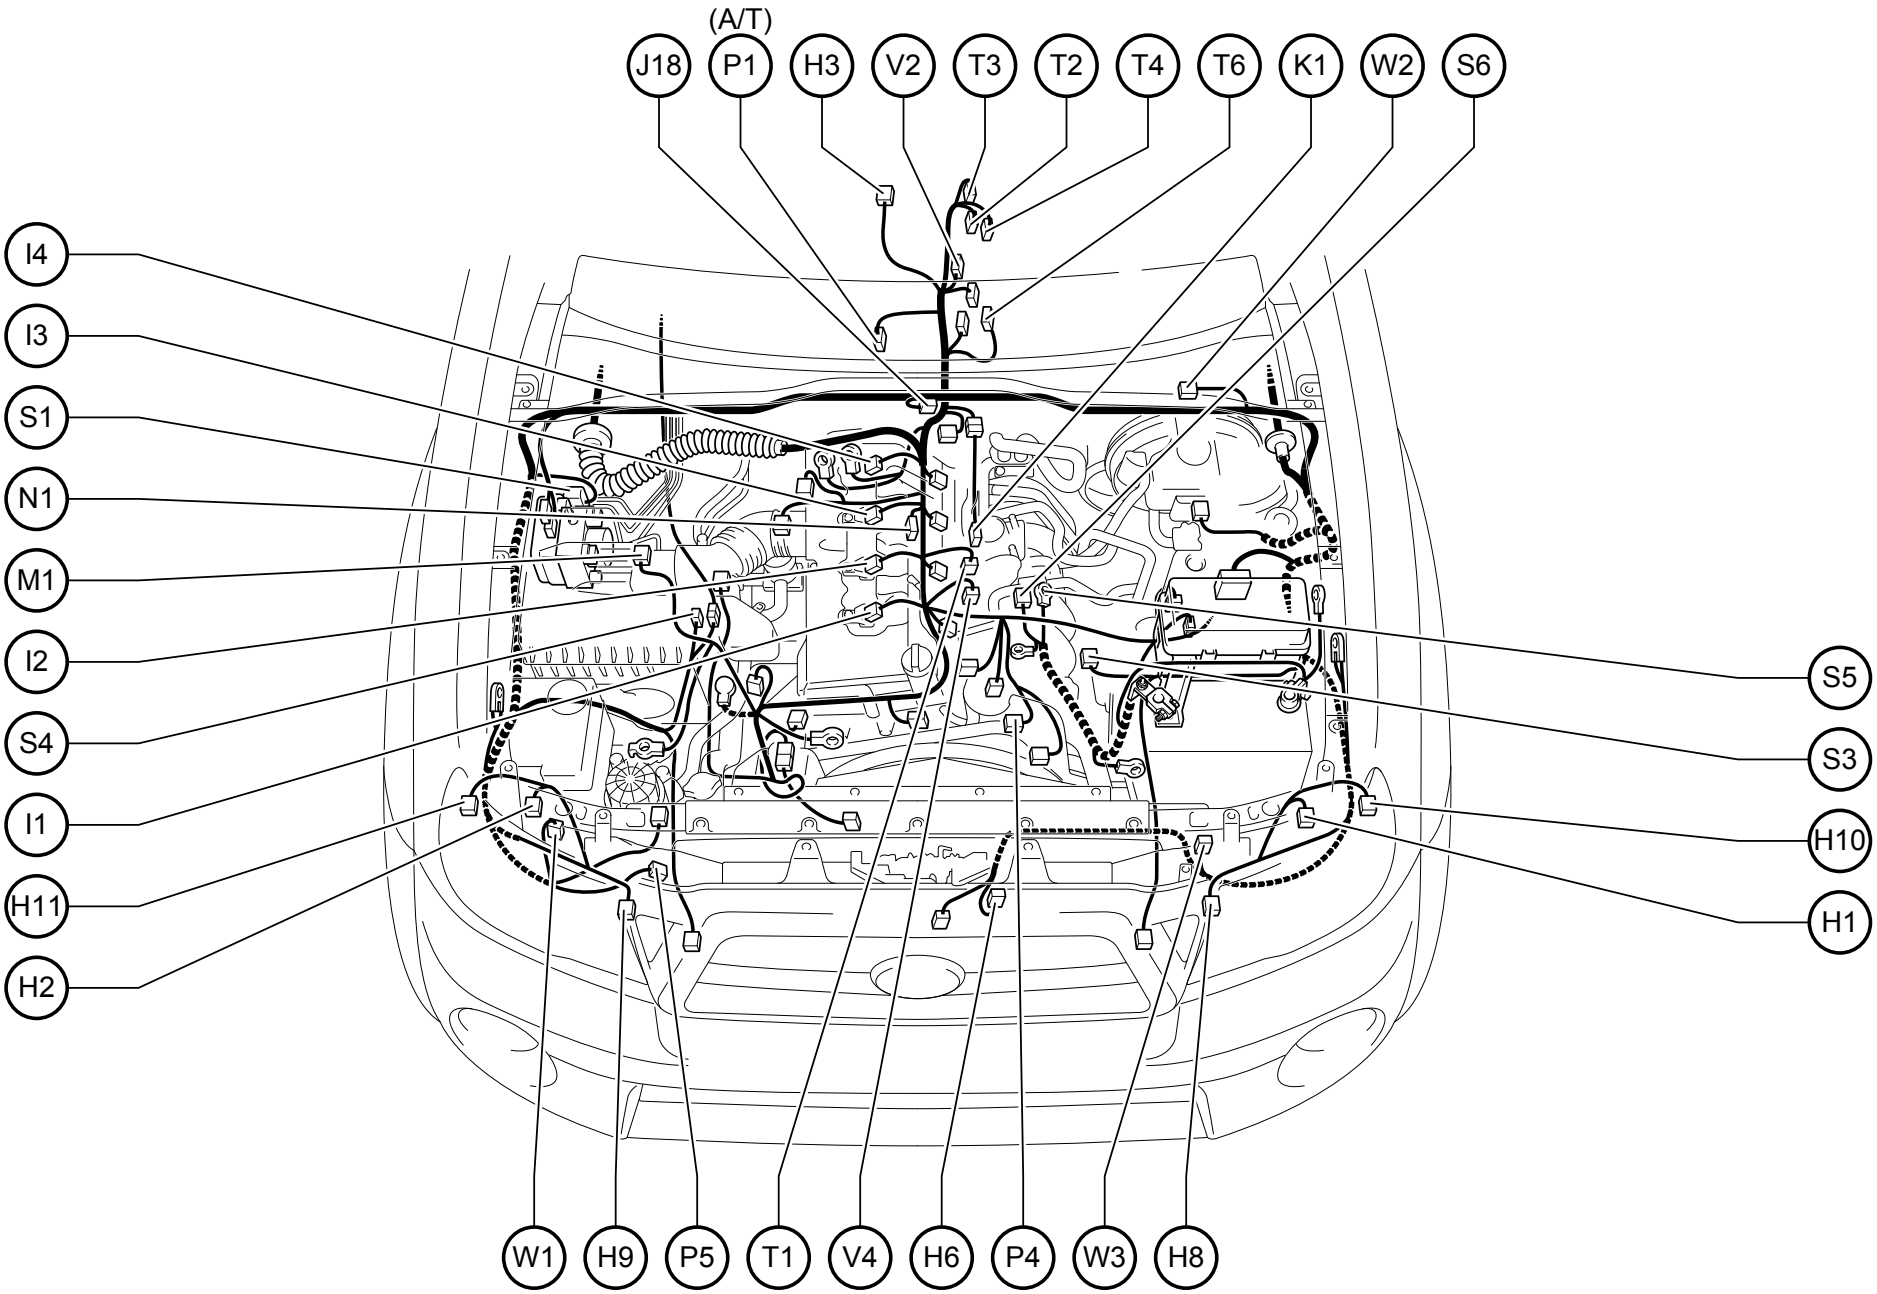

(A/T)
J18
P1
H3
V2
T3
T2
T4
T6
K1
W2
S6
I4
I3
S1
N1
M1
I2
S4
I1
H11
H2
S5
S3
H10
H1
W1
H9
P5
T1
V4
H6
P4
W3
H8

H 1 Headlight Assembly LH
H 2 Headlight Assembly RH
H 3 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 6 Horn (Low)
H 8 Headlight Assembly LH
H 9 Headlight Assembly RH
H 10 Headlight Assembly LH
H 11 Headlight Assembly RH

I 1 Ignition Coil (No.1)
I 2 Ignition Coil (No.2)
I 3 Ignition Coil (No.3)
I 4 Ignition Coil (No.4)

J 18 Junction Connector

K 1 Knock Control Sensor (Bank 1)

M 1 Mass Air Flow Meter

N 1 Noise Filter (Ignition)

P 1 Park/Neutral Position SW
P 4 Power Steering Oil Pressure SW
P 5 Pressure SW


S 1 Skid Control ECU with Actuator
S 3 Speed Sensor (Front LH)
S 4 Speed Sensor (Front RH)
S 5 Starter
S 6 Starter

T 1 Throttle Body Assembly
T 2 Transfer Indicator SW (4WD Position)
T 3 Transfer Indicator SW (L4 Position)
T 4 Transfer Shift Actuator Assembly
T 6 Transmission Revolution Sensor (Turbine)


V 2 Vehicle Speed Sensor (Electronically Controlled Transmission)
V 4 VSV (Purge)

W 1 Windshield Washer Motor
W 2 Windshield Wiper Motor
W 3 Wireless Door Lock Buzzer

H 1
Brown

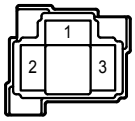


H 2
Brown

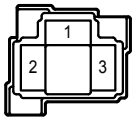

H 3
Dark Gray




H 6
Black




H 8
Gray




H 9
Gray

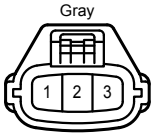


H 10
Gray

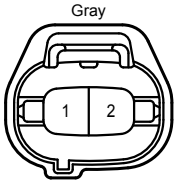


H 11
Gray

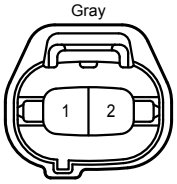


I 1
Black




I 2
Black




I 3
Black




I 4
Black



J 18
Gray

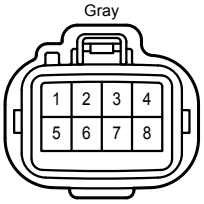

K 1
Black



M 1
Black




(2TR-FE)

N 1
Gray




P 1
Gray

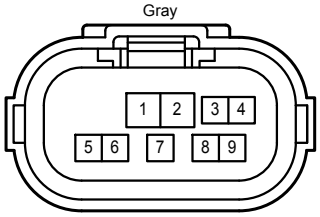


P 4
Black



P 5
Gray

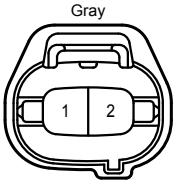

S 1
Black

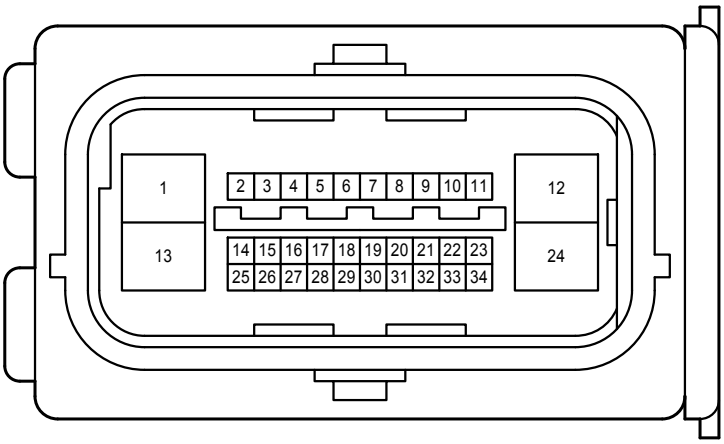

(Vacuum Booster Type)


S 3
Gray



S 4
Gray



S 5




(2TR-FE)


S 6
Black




T 1
Black

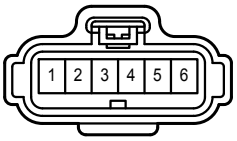


T 2
Gray

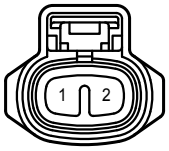


T 3
Gray

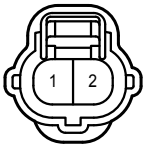


T 4
Black

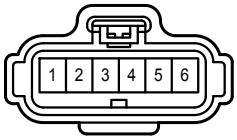


T 6
Black

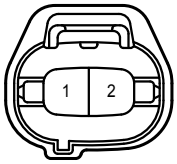

V 2
Black

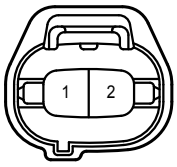


V 4
Black

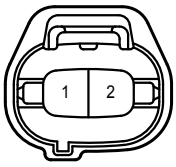

(2TR-FE)

W 1
Black

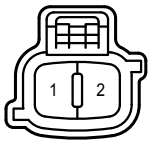

W 2
Black



W 3
Black

