■ BRAKE

1. General


- The VSC warning buzzer has been discontinued, and the warning buzzer function has been merged into the multi buzzer built into the combination meter. In addition, the buzzer warning due to activation of the VSC has been discontinued, and the buzzer pattern, which was used if a brake actuator temperature abnormally increases while the TRAC or Auto LSD is active and which was used on models with hydraulic brake booster to warn that an accumulator pressure is below a predetermined level, has been changed from a continuous one to an intermittent one.
- Trailer sway control is additionally provided for the brake control system, thus ensuring driving stability when pulling a trailer.

2. Trailer Sway Control

Outline of Trailer Sway Control


If the vehicle is towing a trailer with an inappropriate hitch load, trailer sway could be caused by crosswinds, an imbalance caused by load or the driver's steering. Trailer sway control reduces trailer sway by controlling the engine output and the braking of each wheel.

▶ Models without Trailer Sway Control ◀

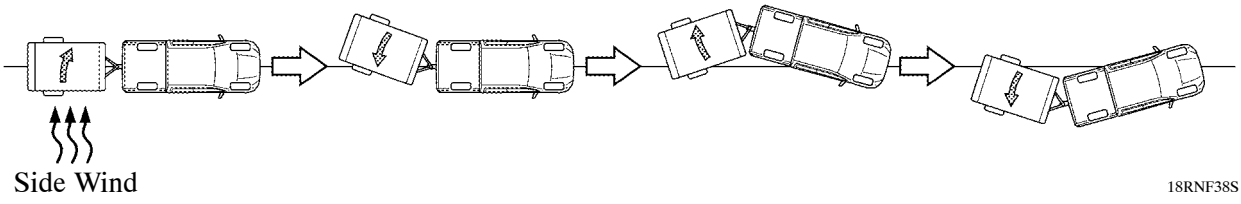

18RNF38S

▶ Models with Trailer Sway Control ◀

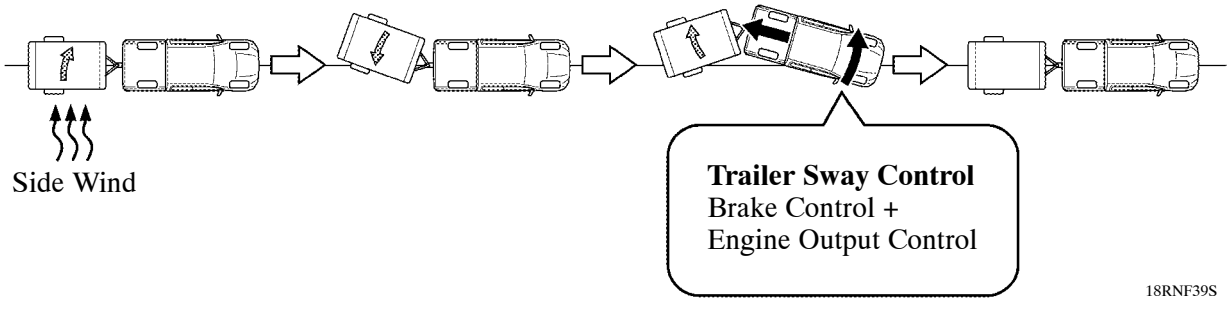


18RNF39S

NOTICE


- Trailer sway control is a part of the VSC function. Accordingly, if the VSC OFF Mode or VSC is not functioning normally, trailer sway control will not operate.
- Trailer sway control will be unable to stabilize the vehicle if a trailer is being towed which cannot be physically controlled due to the influence of the vehicle, road surface, driving conditions and so on.

Trailer Sway Control Operation

- The skid control ECU detects the occurrence of trailer sway based on signals from the yaw rate and deceleration sensor and the steering angle sensor.
- Trailer sway can be reduced by decelerating the vehicle. When the skid control ECU detects trailer sway, it controls the brakes of each wheel while simultaneously requesting engine output control from the ECM and reducing vehicle speed.
- Moreover, by using brake control to reduce the yaw moment caused by trailer sway, trailer sway can be reduced more quickly than by simply decelerating the vehicle.
- The slip indicator light on the combination meter flashes when trailer sway control is in operation. Also, the stop light illuminates to inform vehicles behind that the vehicle is decelerating.

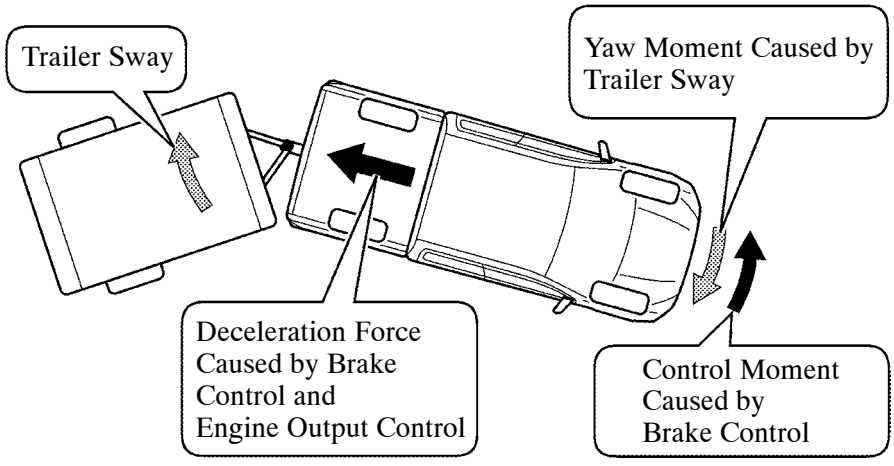

18RNF40S

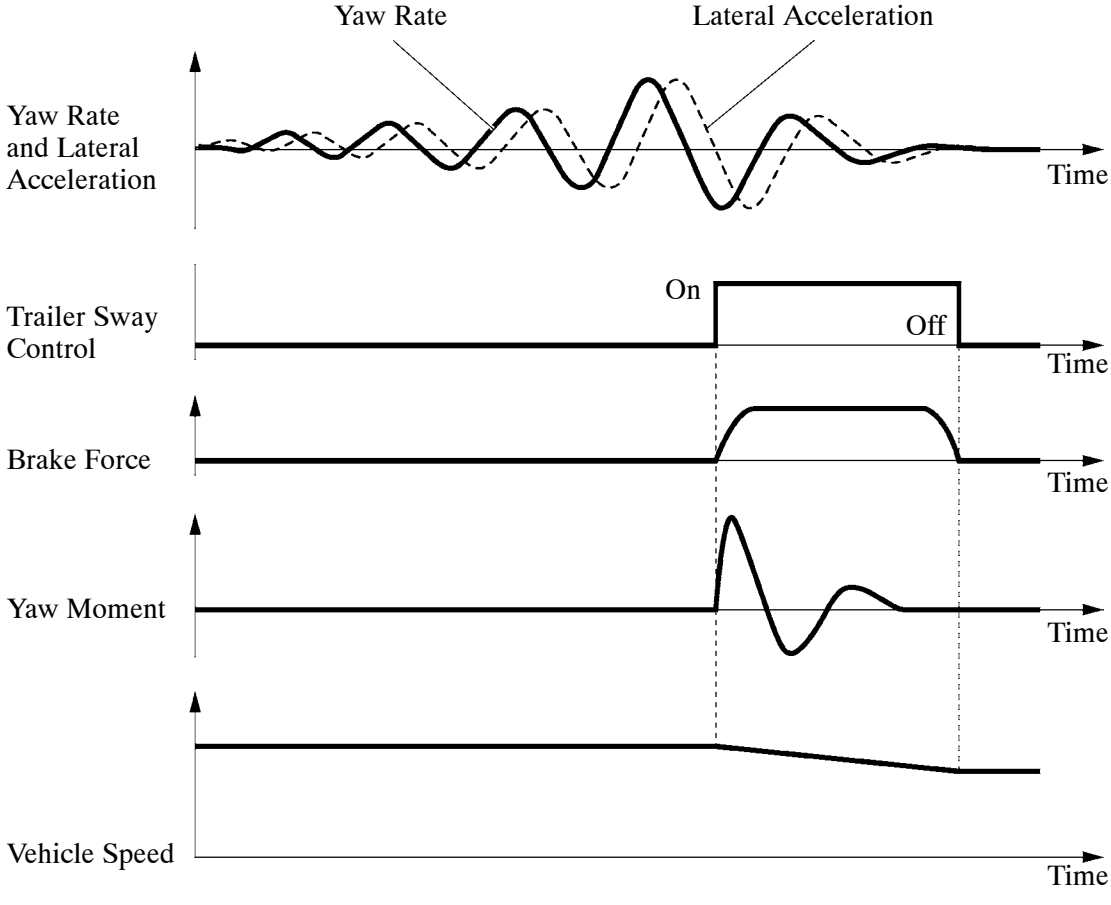

16GCH004Y