
FRONT BODY PILLAR LOWER GUSSET (ASSY)

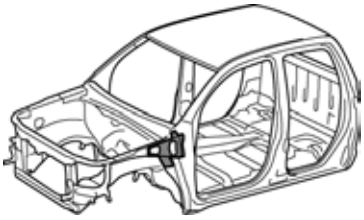


F26959A

Symbol meaning

REMOVAL	▲ : Remove Weld Points
INSTALLATION	■ : MIG Plug Weld

F26959B

REMOVAL·INSTALLATION

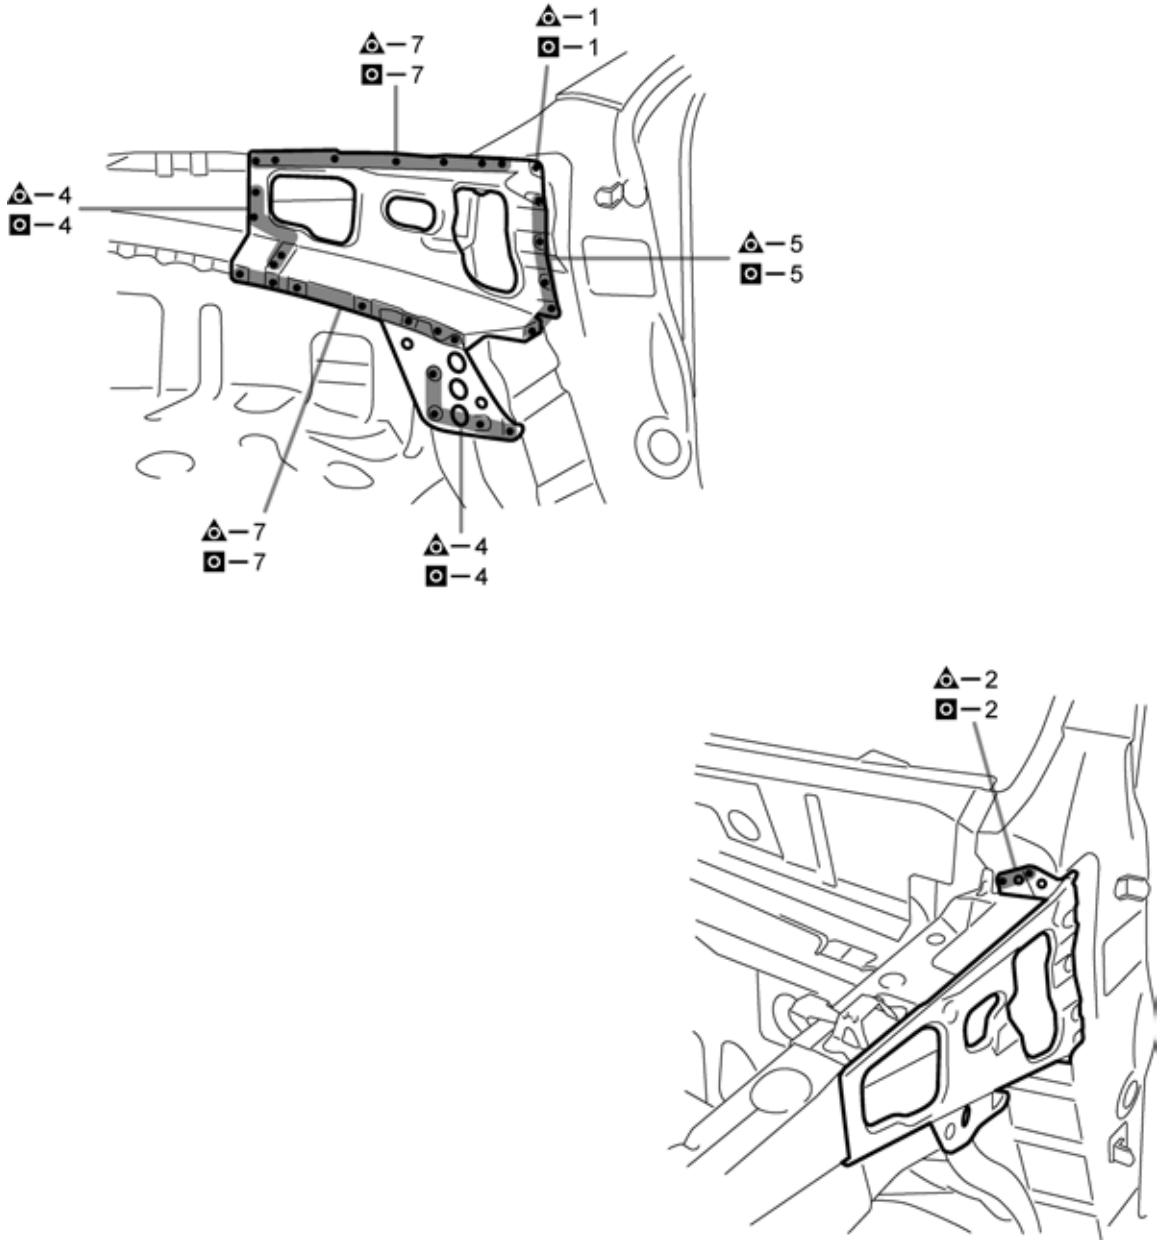

F26959

INSTALLATION POINT

1 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.