
# ROCKER OUTER PANEL (CUT): Regular Cab

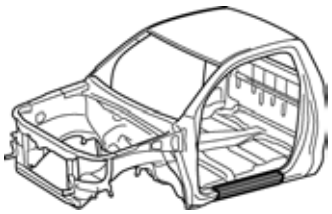


F26991A

Symbol meaning

| | |
|---|---|
| | : Remove Weld Points |
| REMOVAL | : Cut Location for Supply Parts |
| INSTALLATION | : MIG Plug Weld : Butt Weld |

F26991B

**REMOVAL·INSTALLATION**

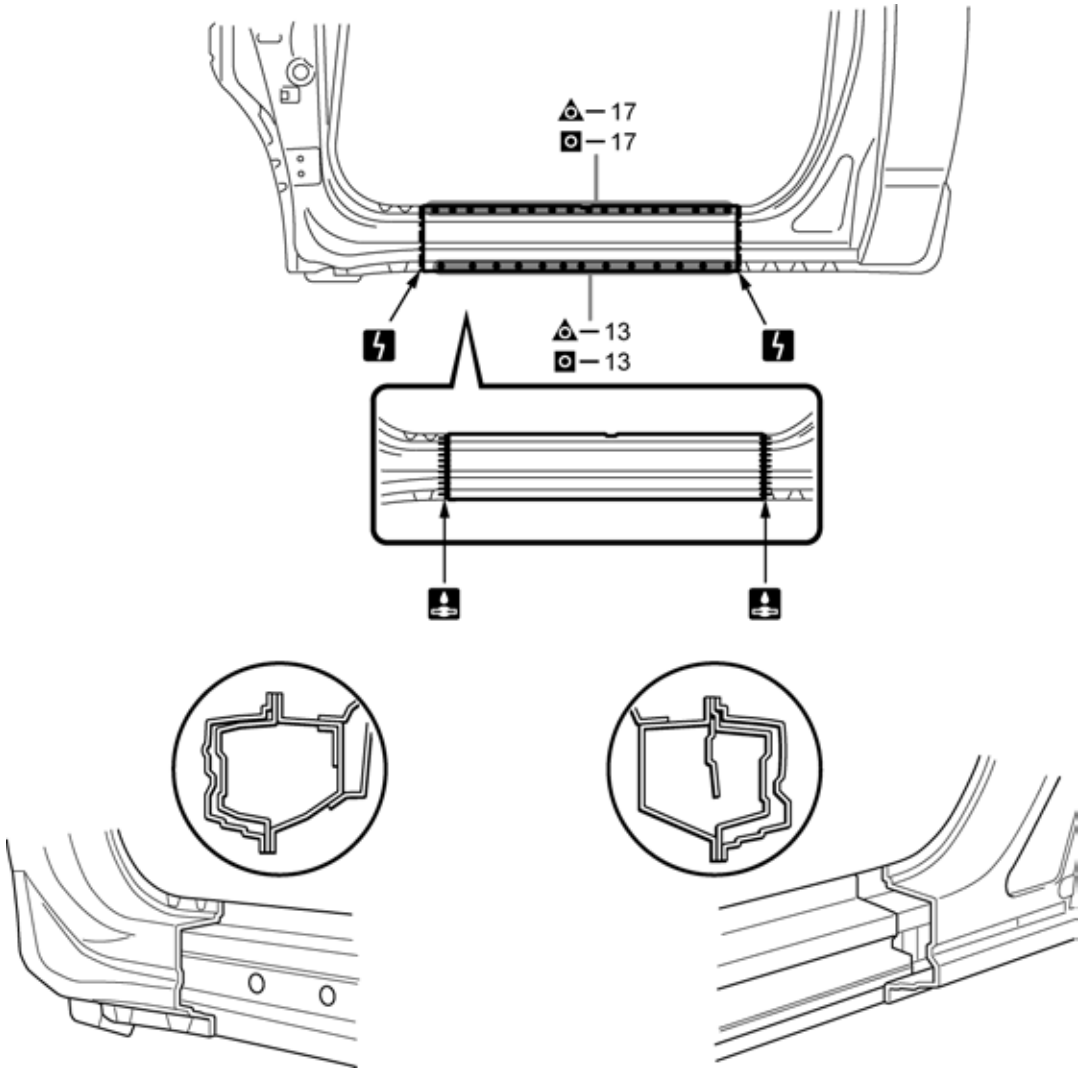



F26991

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROCKER OUTER PANEL (CUT): Double Cab

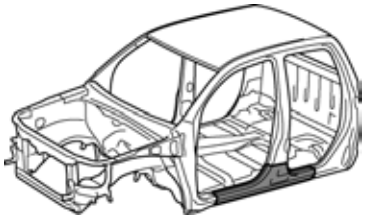


F26992A

Symbol meaning

| | | |
|---|---|---|
| | : Remove Weld Points | : Cut and Join Location |
| REMOVAL | : Cut Location for Supply Parts | |
| INSTALLATION | : MIG Plug Weld | : Butt Weld |

F26992B

**REMOVAL·INSTALLATION**

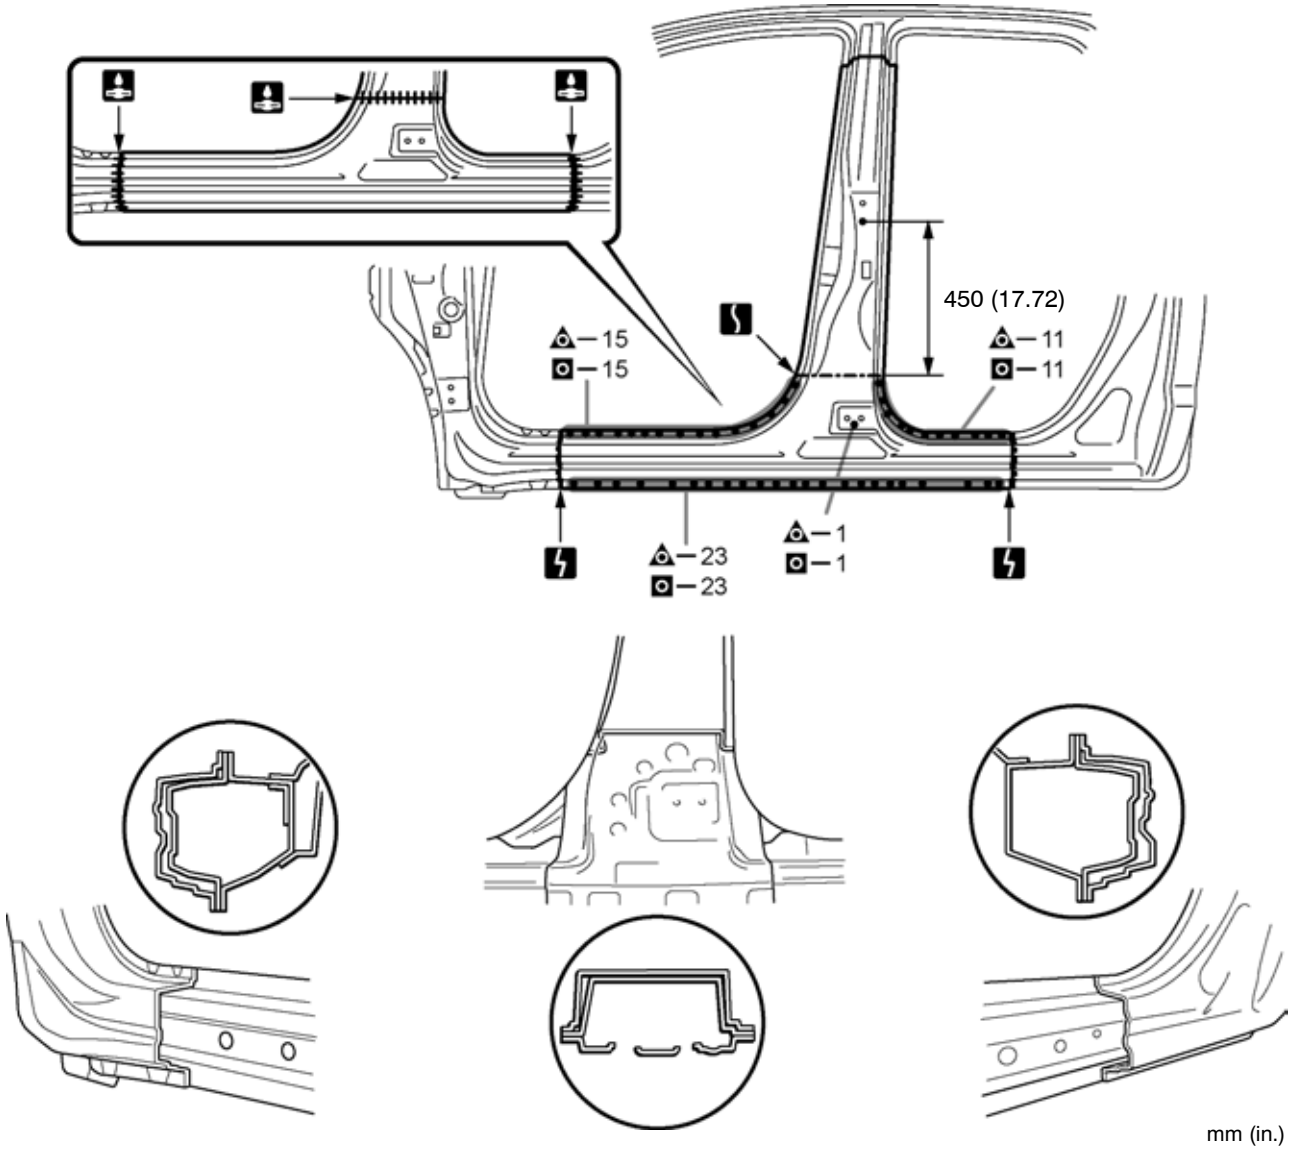



F26992

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROCKER OUTER PANEL (CUT): CrewMax

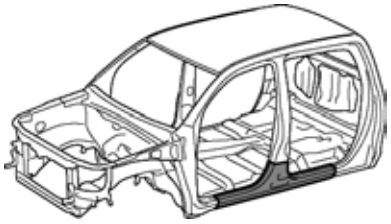


F26993A

Symbol meaning

| | |
|---|---|
| | : Remove Weld Points : Cut and Join Location |
| REMOVAL | : Cut Location for Supply Parts |
| INSTALLATION | : MIG Plug Weld : Butt Weld |

F26993B

**REMOVAL·INSTALLATION**

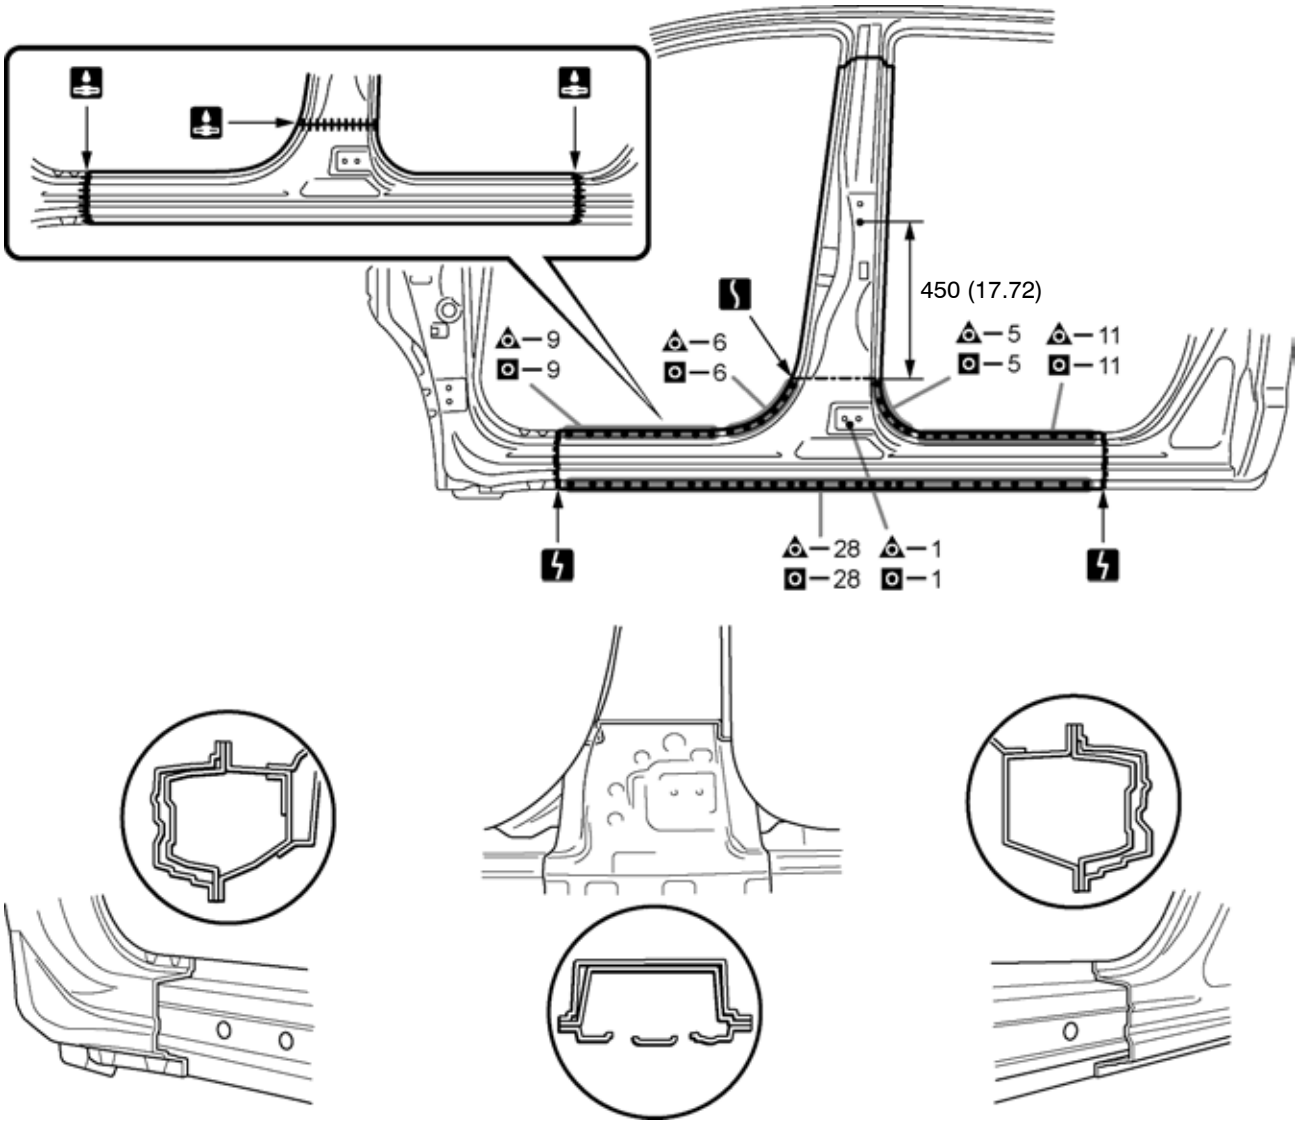


mm (in.)

F26993

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.