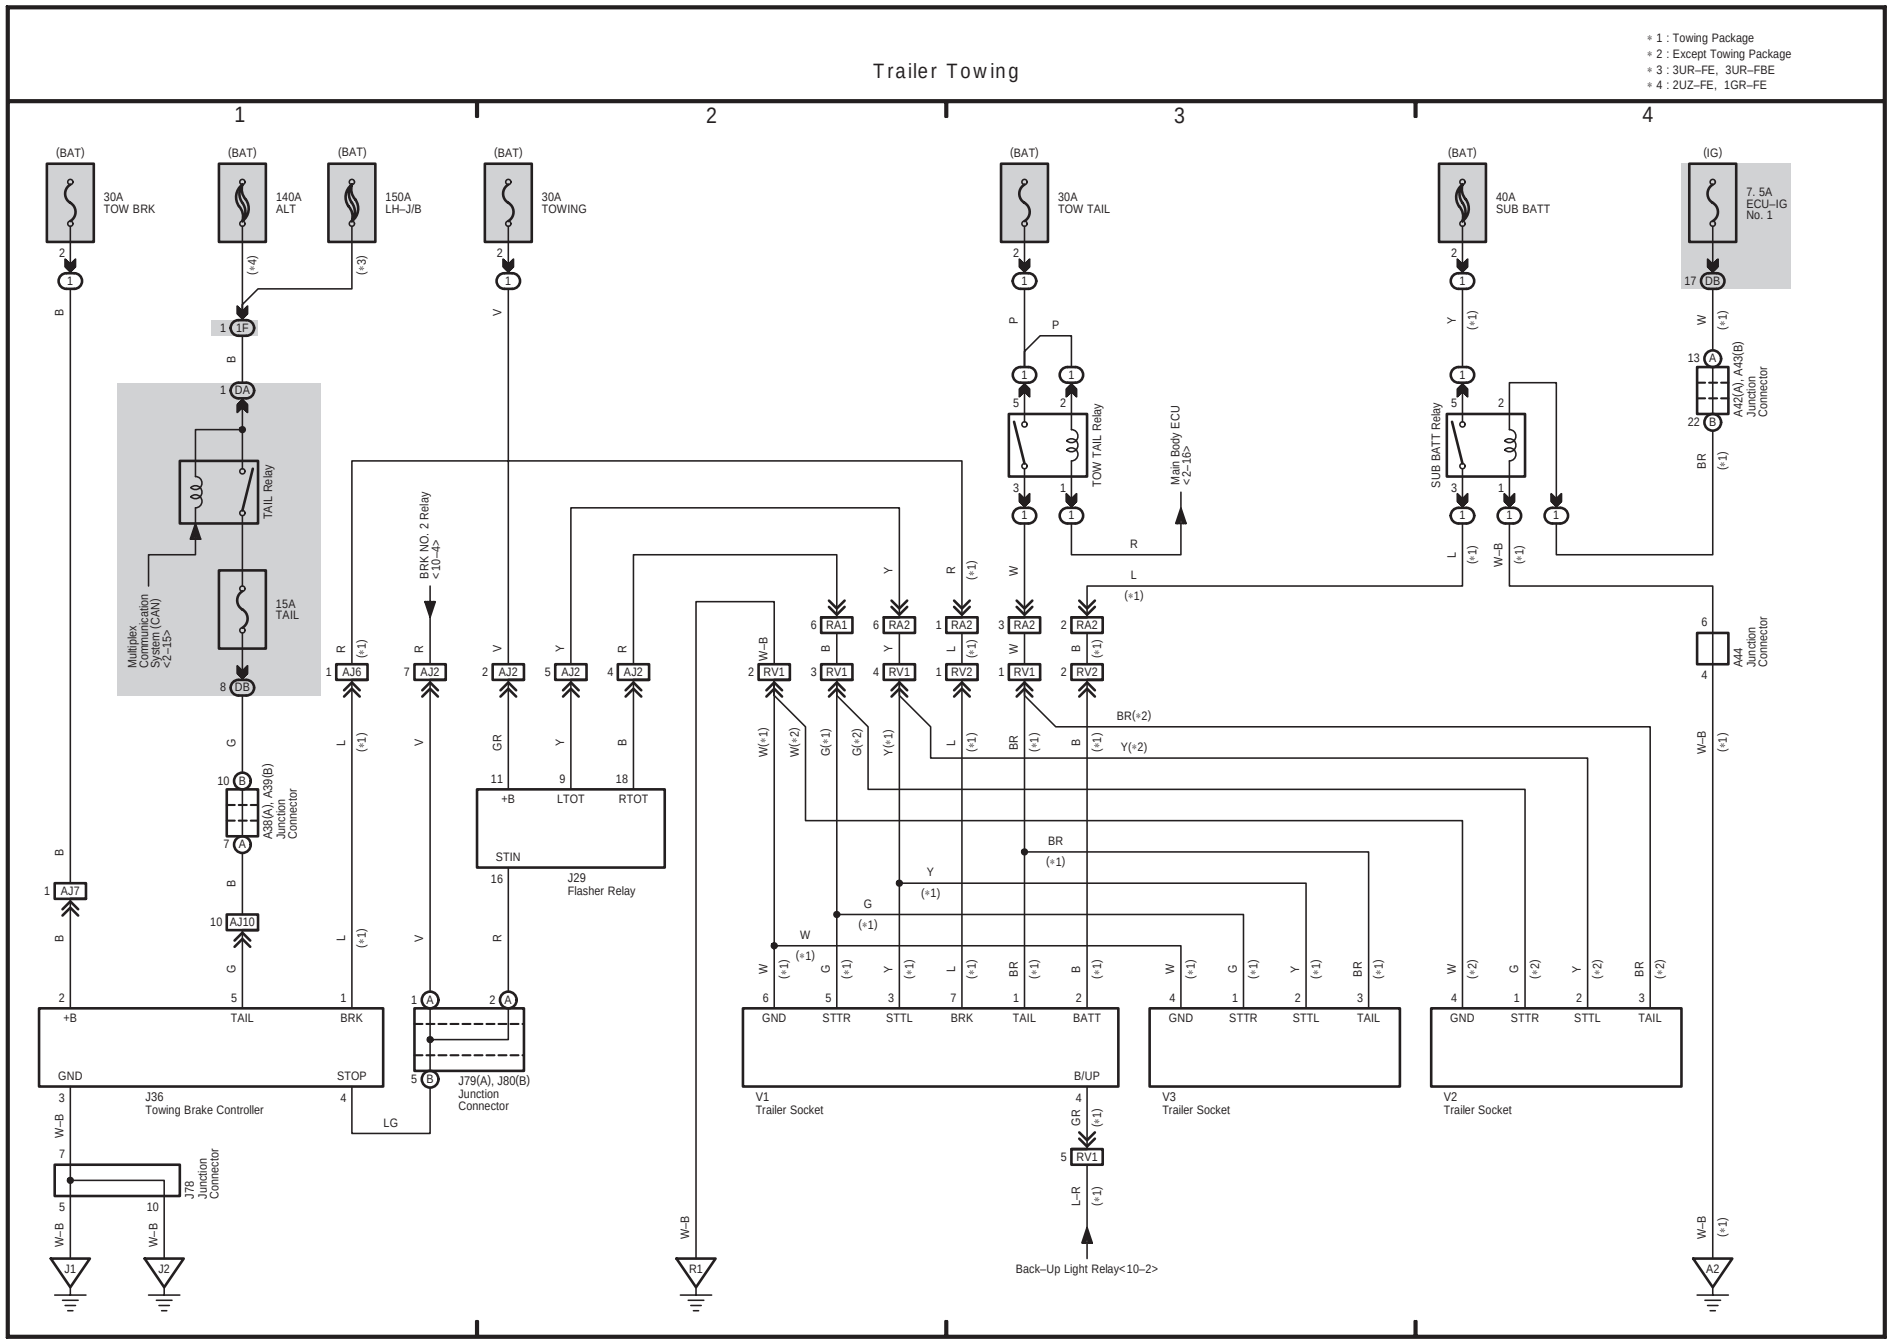

Trailer Towing
* 1 : Towing Package
* 2 : Except Towing Package
* 3 : 3UR–FE, 3UR–FBE
* 4 : 2UZ–FE, 1GR–FE
1
2
3
4
(BAT)
30A
TOW BRK
140A
ALT
150A
LH–J/B
30A
TOWING
30A
TOW TAIL
40A
SUB BATT
(IG)
7. 5A
ECU–IG
No. 1
TAIL Relay
15A
TAIL
Multiplex
Communication
System (CAN)
<2–15>
BRK NO. 2 Relay
<10–4>
TOW TAIL Relay
Main Body ECU
<2–16>
SUB BATT Relay
A42(A), A43(B)
Junction
Connector
A44
Junction
Connector
A38(A), A39(B)
Junction
Connector
J29
Flasher Relay
+B
LTOT
RTOT
STIN
J36
Towing Brake Controller
GND
STOP
+B
TAIL
BRK
J79(A), J80(B)
Junction
Connector
J78
Junction
Connector
V1
Trailer Socket
V3
Trailer Socket
V2
Trailer Socket
GND
STTR
STTL
BRK
TAIL
BATT
B/UP
Back–Up Light Relay<10–2>
J1
J2
R1
A2