

(*1)
(*2)
D21
D27
D19
D22
D20
D32
D15
D17
D31
D31
D29
D18
D16
D14
D24
D23
D7
D25
D13
D12
D26
D28
D9
D2
D5
D11
D10
* 1:4WD
* 2:2WD

D 2 Crankshaft Position Sensor
D 5 Camshaft Position Sensor
D 7 Mass Air Flow Meter
D 9 Throttle Position Sensor
D 10 Ignition Coil (No.1)
D 11 Fuel Injector (No.1)
D 12 Ignition Coil (No.3)
D 13 Fuel Injector (No.3)
D 14 Ignition Coil (No.5)
D 15 Fuel Injector (No.5)
D 16 Ignition Coil (No.7)
D 17 Fuel Injector (No.7)
D 18 Noise Filter (Ignition Bank 1)
D 19 Ignition Coil (No.8)
D 20 Fuel Injector (No.8)
D 21 Ignition Coil (No.6)
D 22 Fuel Injector (No.6)
D 23 Ignition Coil (No.4)
D 24 Fuel Injector (No.4)
D 25 Ignition Coil (No.2)
D 26 Fuel Injector (No.2)
D 27 Noise Filter (Ignition Bank 2)
D 28 Engine Coolant Temperature Sensor
D 29 Purge VSV
D 31 Heated Oxygen Sensor (Bank 1 Sensor 2)
D 32 Heated Oxygen Sensor (Bank 2 Sensor 2)

D 2
Dark Gray

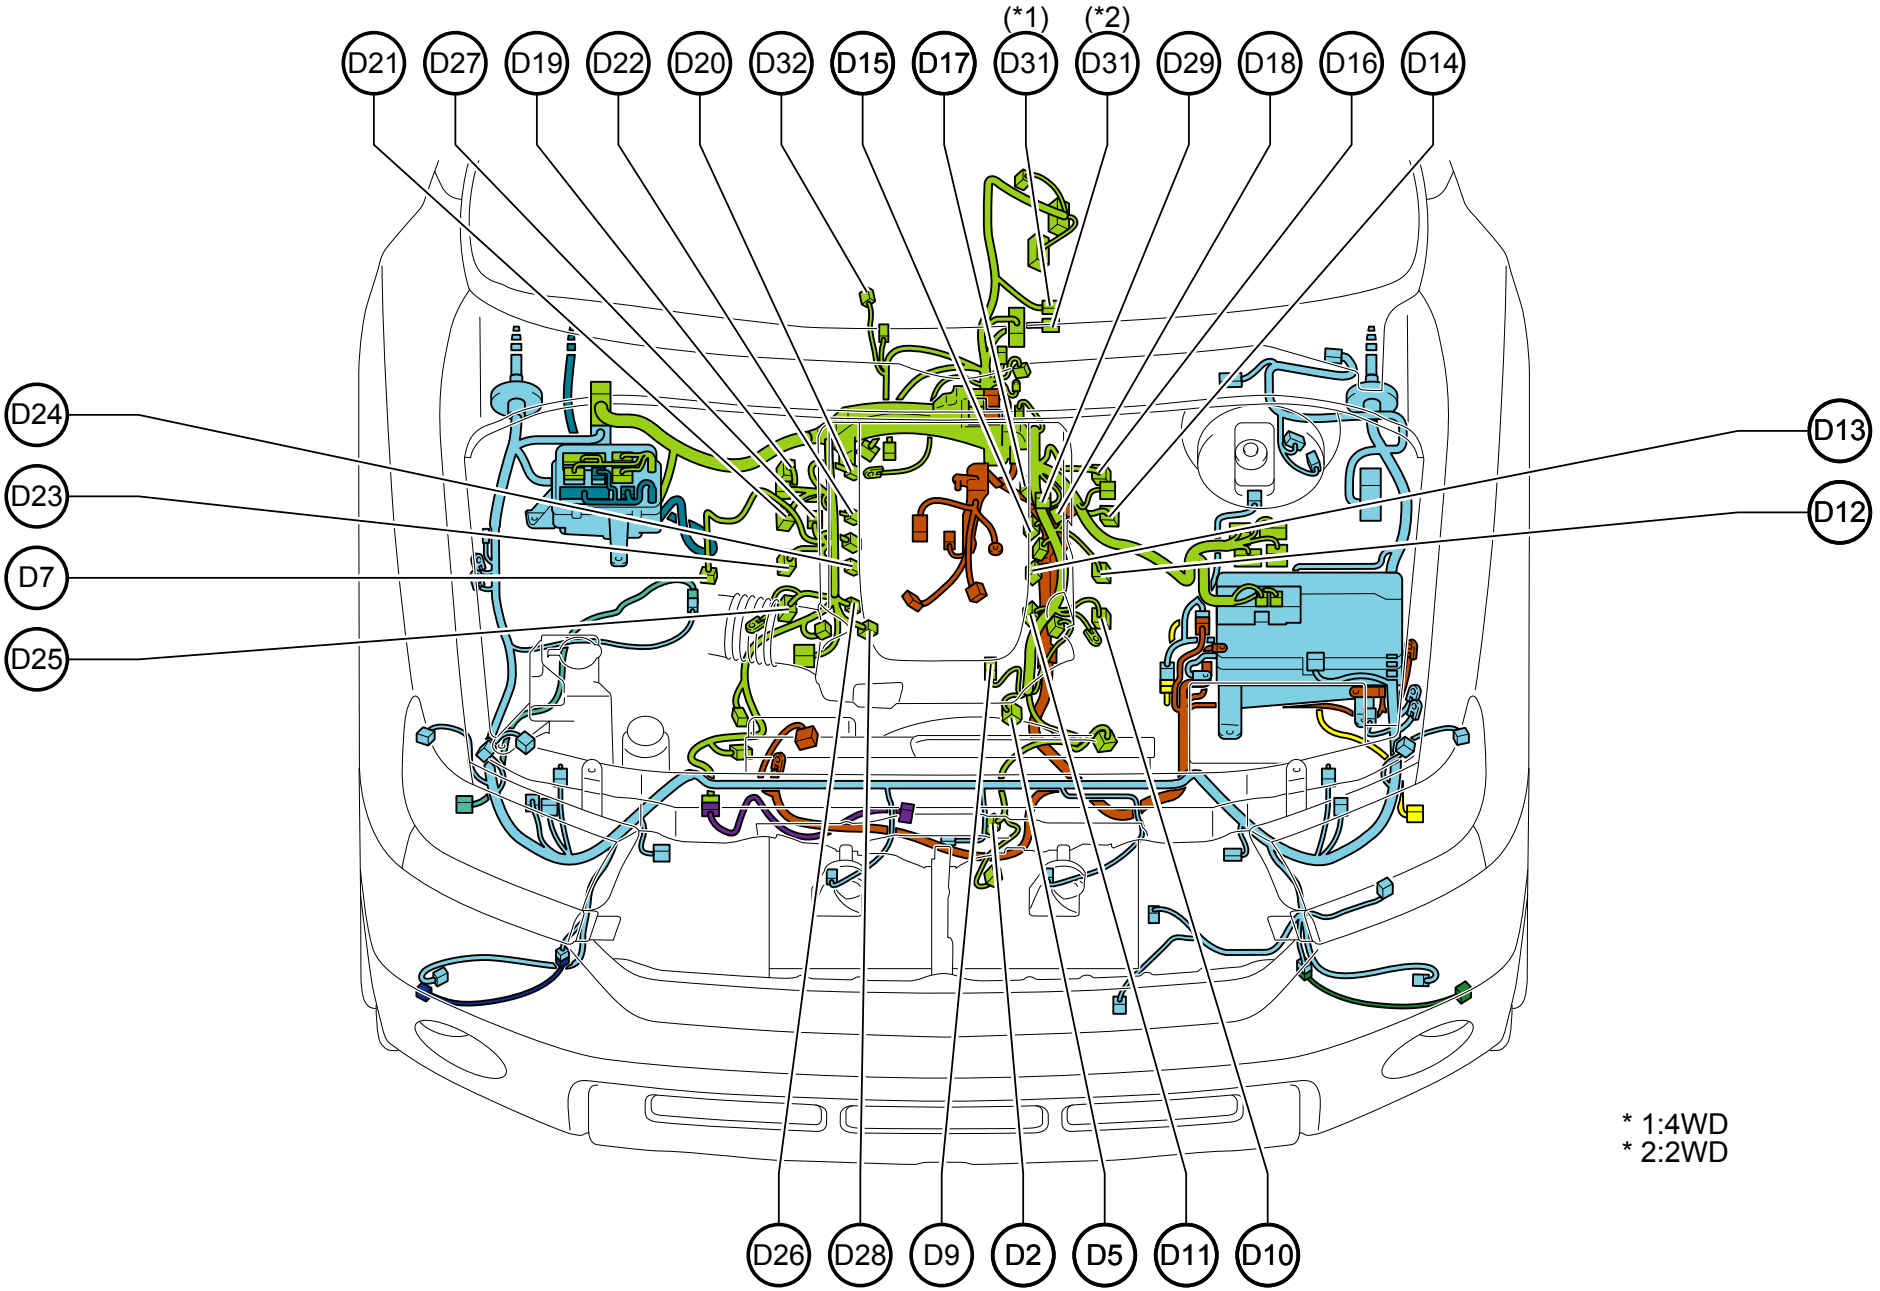


D 5
Gray




D 7
Black




D 9
Black

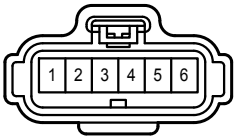


D 10
Black




D 11
Gray

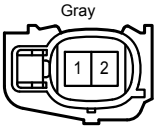


D 12
Black




D 13
Gray

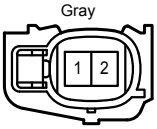


D 14
Black




D 15
Gray

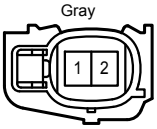

D 16
Black




D 17
Gray

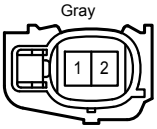


D 18
Gray




D 19
Black




D 20
Gray

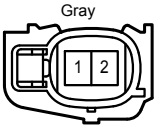


D 21
Black




D 22
Gray

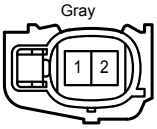


D 23
Black




D 24
Gray



D 25
Black



D 26
Gray




D 27
Gray



D 28
Dark Gray



D 29
Black

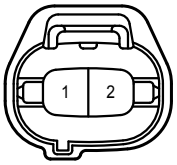

D 31
Dark Gray



D 32
Dark Gray

