


I2
I1
A35
A36
A25
A26
A40
A41
A37
A5
A38
A39
A42
A43
A46
A4
A14

A 4 Stop Light Switch
A 5 Parking Brake Switch
A 14 Accelerator Position Sensor
A 25 4WD Control ECU
A 26 4WD Control ECU
A 35 Diode (Starting)
A 36 Junction Connector
A 37 Junction Connector
A 38 Junction Connector
A 39 Junction Connector
A 40 Junction Connector
A 41 Junction Connector
A 42 Junction Connector
A 43 Junction Connector
A 46 Junction Connector

I 1 Front Passenger Side Squib Circuit
I 2 Front Passenger Side Squib 2nd Step Circuit


A 4
Blue

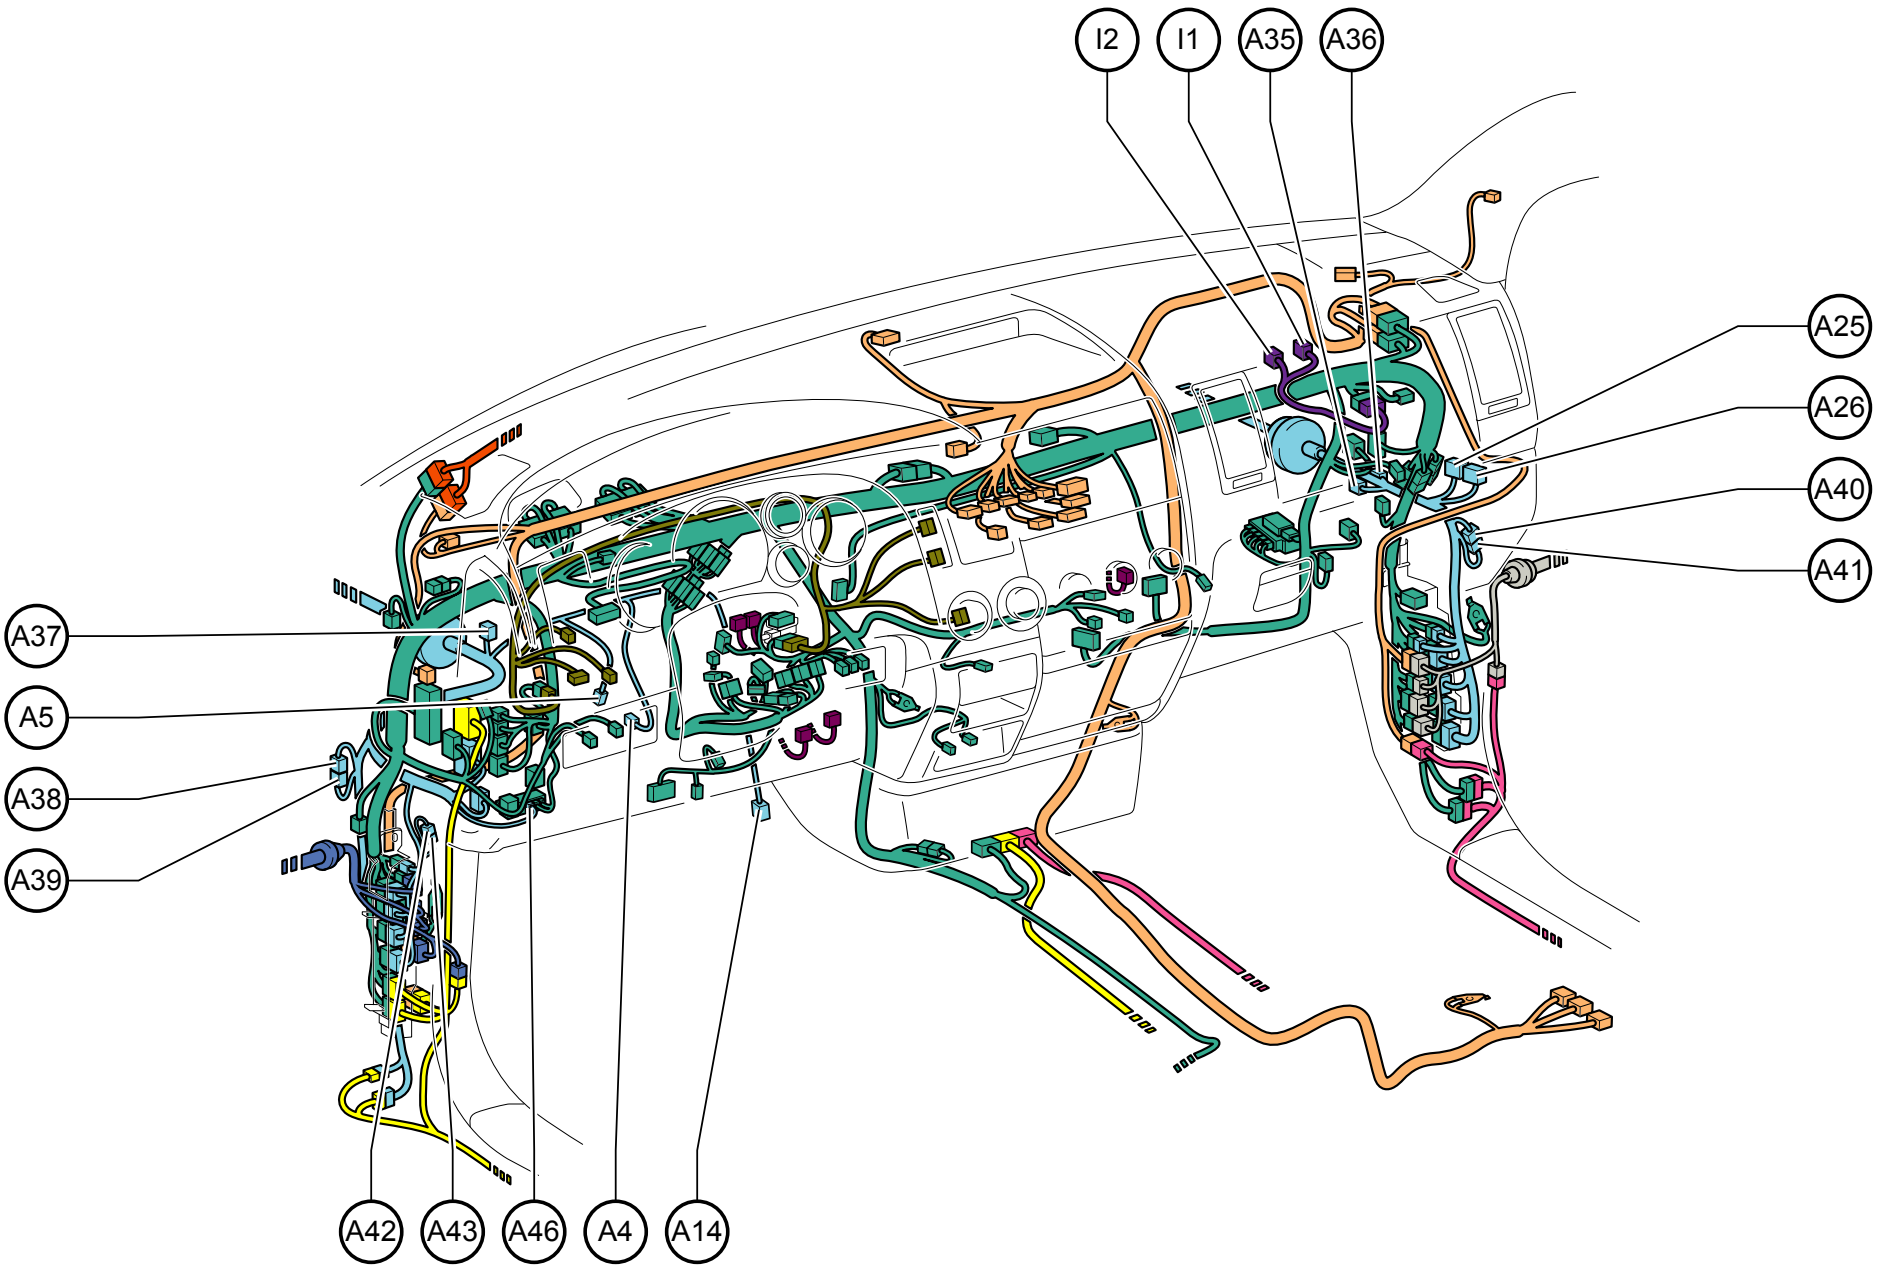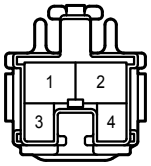


A 5
White




A 14
Black

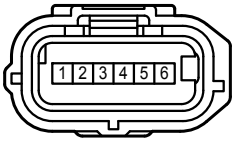

A 25
Black

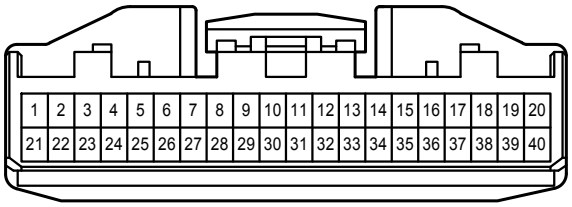


A 26
Black

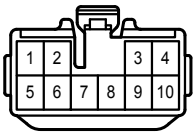


A 35
Black




A 36
Gray

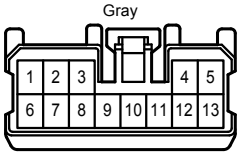


A 37
White

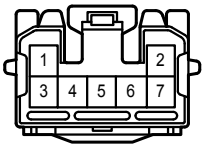


A 38
Black

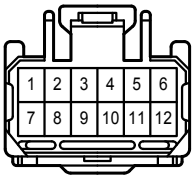


A 39
Black

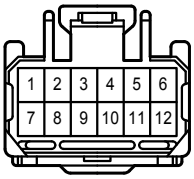


A 40
Black

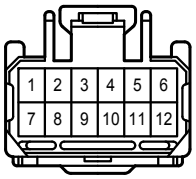


A 41
Black

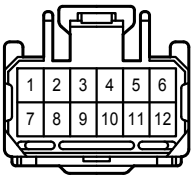


A 42
Black

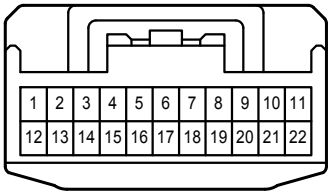


A 43
Black

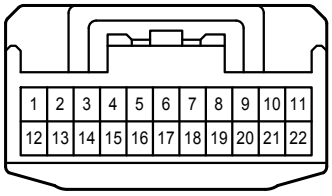

A 46
White



I 1
Black



I 2
Orange

