
■DAYTIME RUNNING LIGHT SYSTEM

1. General


The daytime running light system is designed to automatically illuminate the front turn signal lights, during the daytime to keep the vehicle highly visible to other vehicles.

- This system is controlled by the Main Body ECU (Driver Side Junction Block) and FLASHER relay.
- This system is enabled when the conditions given below are met.
  - Ignition switch is ON.
  - Parking brake switch is OFF.
  - Light control switch is not in the AUTO position (The DRL will operate until the automatic light control system illuminates the headlights.).
  - Engine speed signal is input (Engine Running Condition).
  - Lo beam is not ON.

2. System Diagram

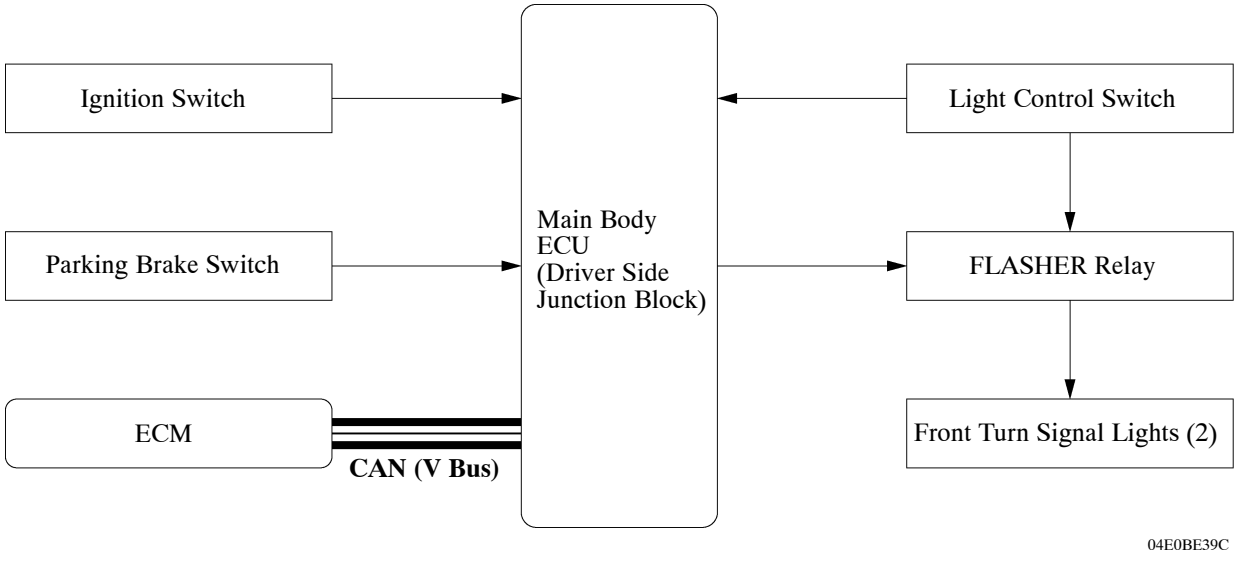

3. Layout of Main Components

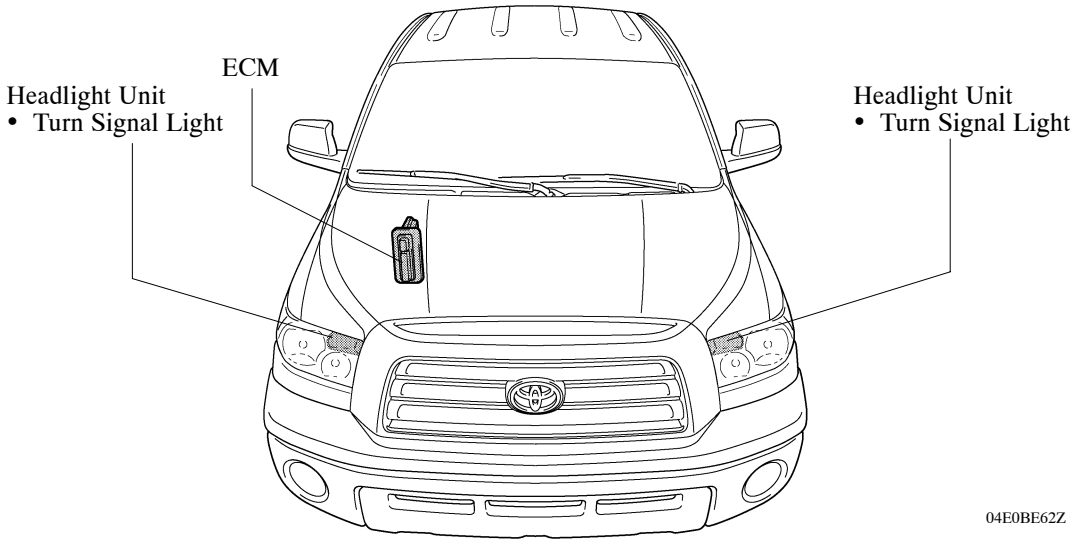

Light Control Switch with Automatic Light Control System

