
■TORQUE CONVERTER

A compact, lightweight and high-capacity torque converter is used. The torque converter supports flex lock-up clutch control, thus allowing for improved fuel economy.

▶ Specifications ◀

Engine Type	3UR-FE
Transmission Type	**AB60E, AB60F**
Stall Torque Ratio	1.80
Type	3-Element, 1-Step, 2-Phase

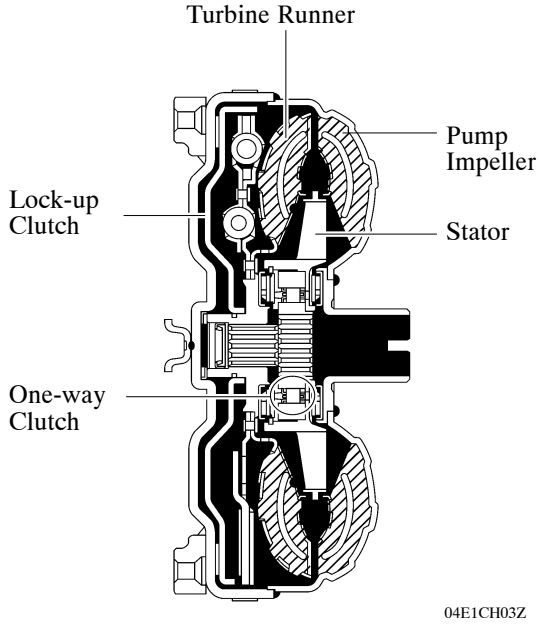

■OIL PUMP

The oil pump is driven by the torque converter. It lubricates the planetary gear units and supplies operating fluid pressure for hydraulic control.

