

■FUEL SYSTEM

1. General

- A fuel cut control is used to stop the fuel pump when SRS airbags deploy in a frontal or side collision. For details, see page EG-138.
- Compact 4-hole type fuel injectors are used to improve the atomization of fuel.
- Fuel delivery pipes made of aluminum alloy are used to realize weight savings.
- Quick connectors are used to connect the fuel lines for ease of serviceability.
- A multi-layer plastic fuel tank is used to address environmental concerns.
- A fuel drain mark is provided on the fuel tank.
- An ORVR (Onboard Refueling Vapor Recovery) system is used. For details, see page EG-151.

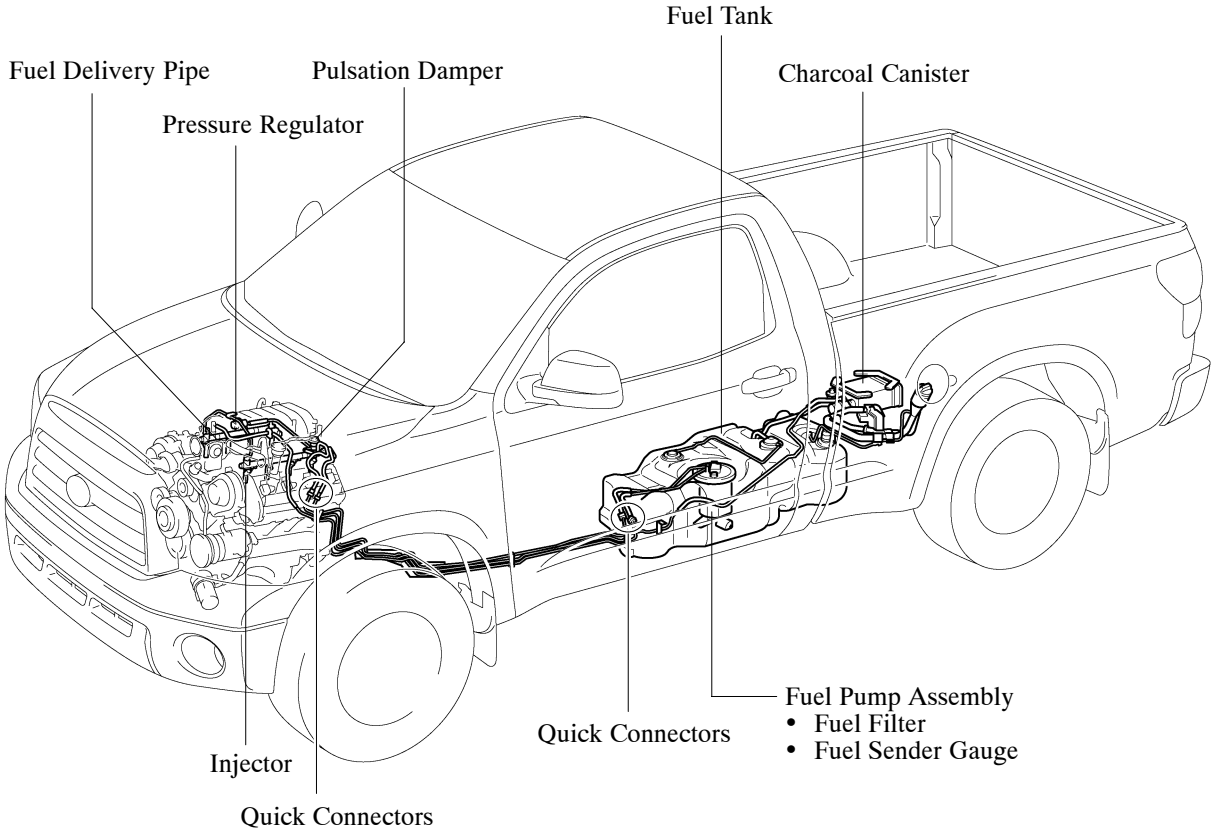

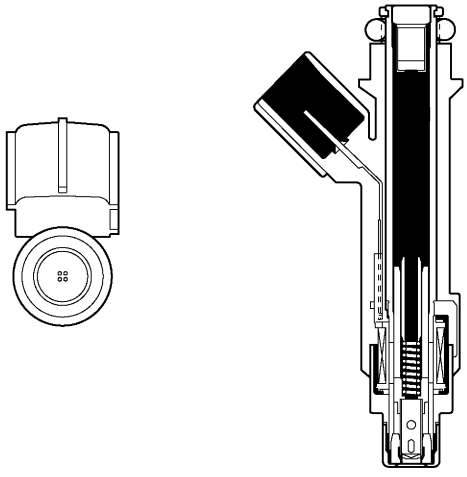


Injector

04E0EG52Z

Service Tip


A fuel drain mark has been provided at the fuel tank. When dismantling (scrapping) the vehicle, drain the fuel by making a hole at this mark.

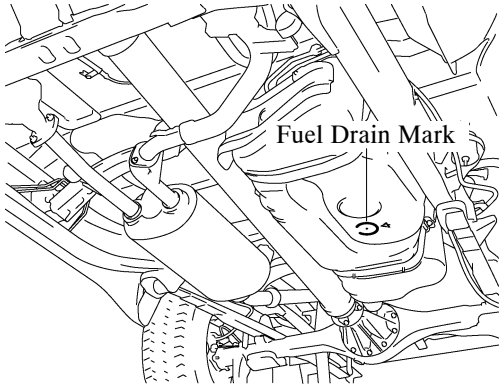

04E0EG10C

2. Fuel Tank

The multi-layer plastic fuel tank consists of six layers of four types of materials, and one of those is a recyclable material to address environmental concerns.

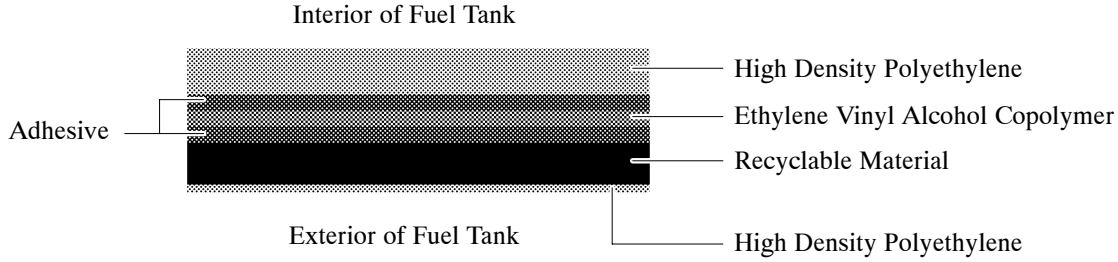

Cross Section of Fuel Tank

D13N27