
SAFETY


SRS Airbag System

- The SRS (Supplemental Restraint System) driver and front passenger airbags are used to help reduce shocks to the head and chest of the front passenger (separate seat)/front outer passenger (bench seat) in the event of frontal impact collision and as supplements to the seat belts.
- The SRS side and curtain shield airbags are used to help reduce shocks to the head and chest of the front passenger (separate seat)/front outer passenger (bench seat), or rear outer passenger (double cab) in the event of side impact collision.
- The airbag manual AUTO-OFF switch is used to disable the deployment of the front and side airbags for the regular cab in case that a child seat is installed on the front passenger seat.

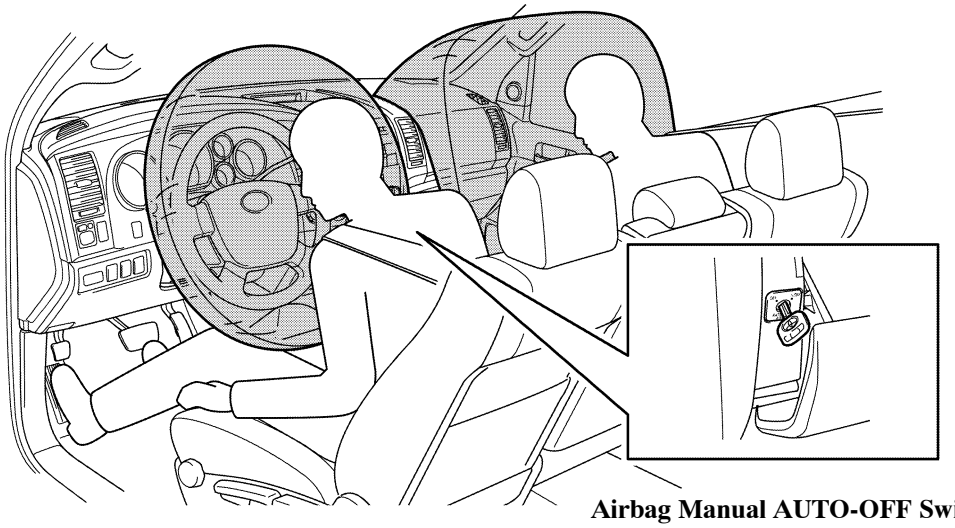

Airbag Manual AUTO-OFF Switch

04E0MO62Z

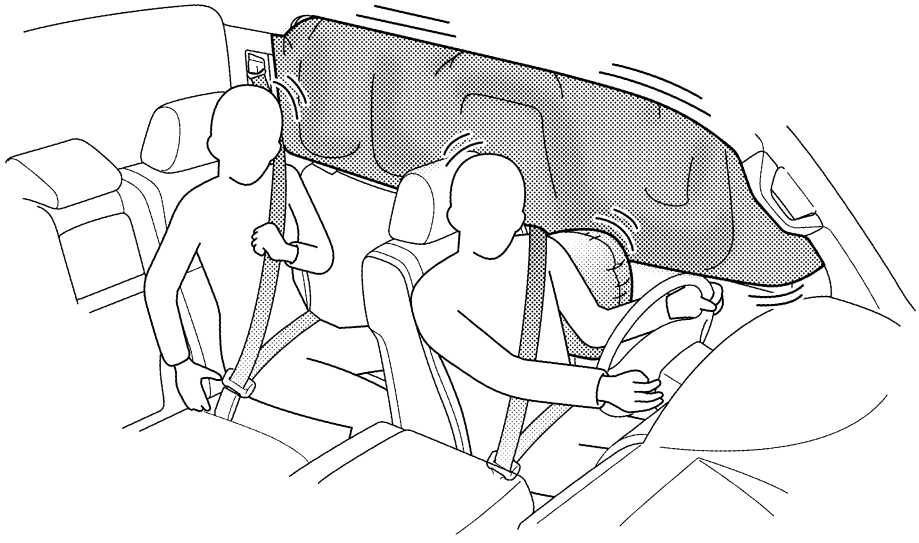

04E0MO67Z