
ROCKER OUTER PANEL (CUT): Regular Cab

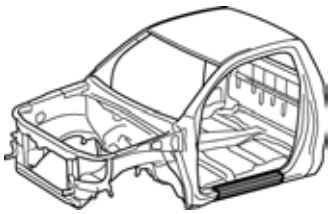


F26991A

Symbol meaning

	: Remove Weld Points
REMOVAL	: Cut Location for Supply Parts
INSTALLATION	: MIG Plug Weld : Butt Weld

F26991B

REMOVAL·INSTALLATION

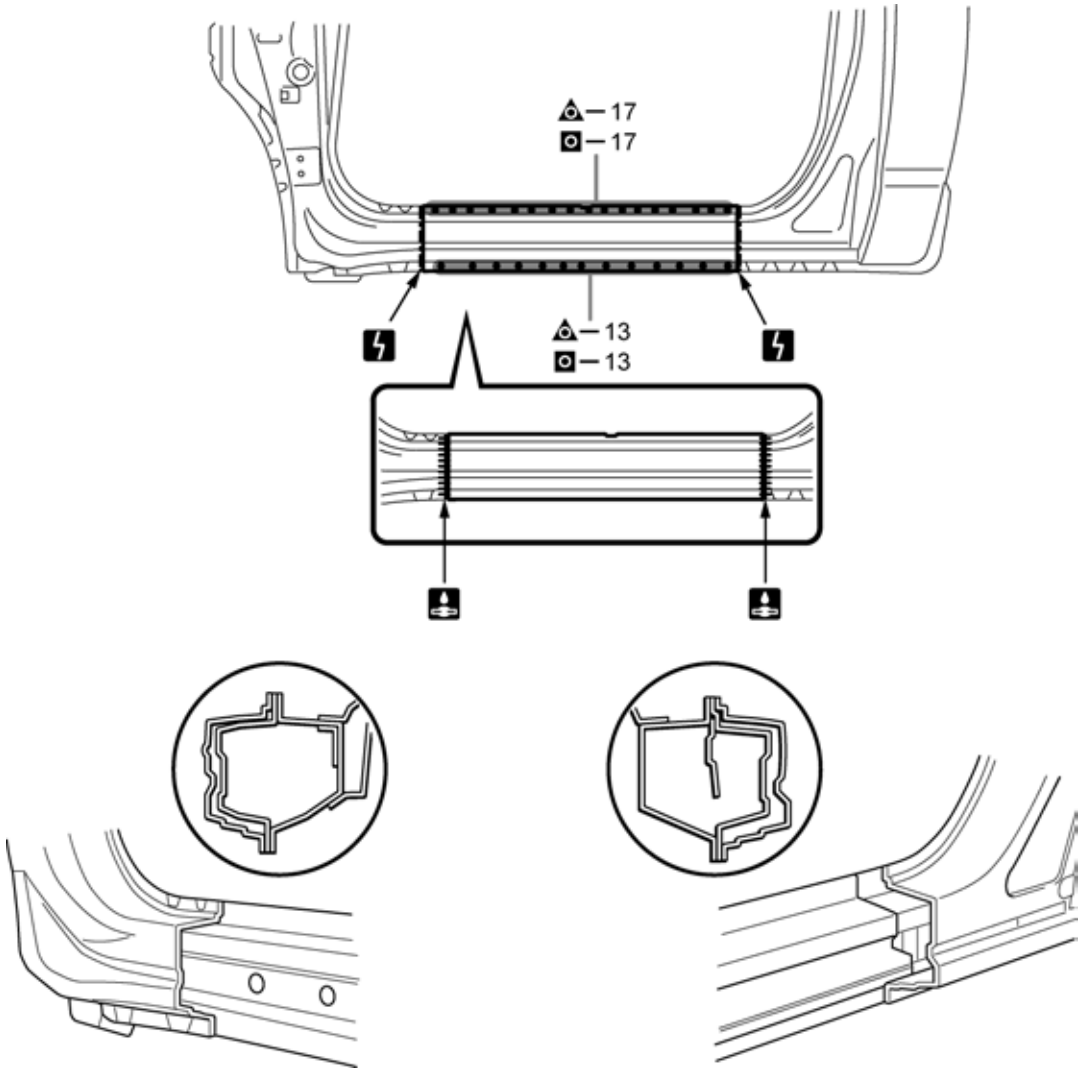


F26991

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

ROCKER OUTER PANEL (CUT): Double Cab

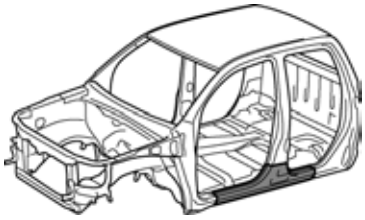


F26992A

Symbol meaning

	: Remove Weld Points	: Cut and Join Location
REMOVAL	: Cut Location for Supply Parts	
INSTALLATION	: MIG Plug Weld	: Butt Weld

F26992B

REMOVAL·INSTALLATION

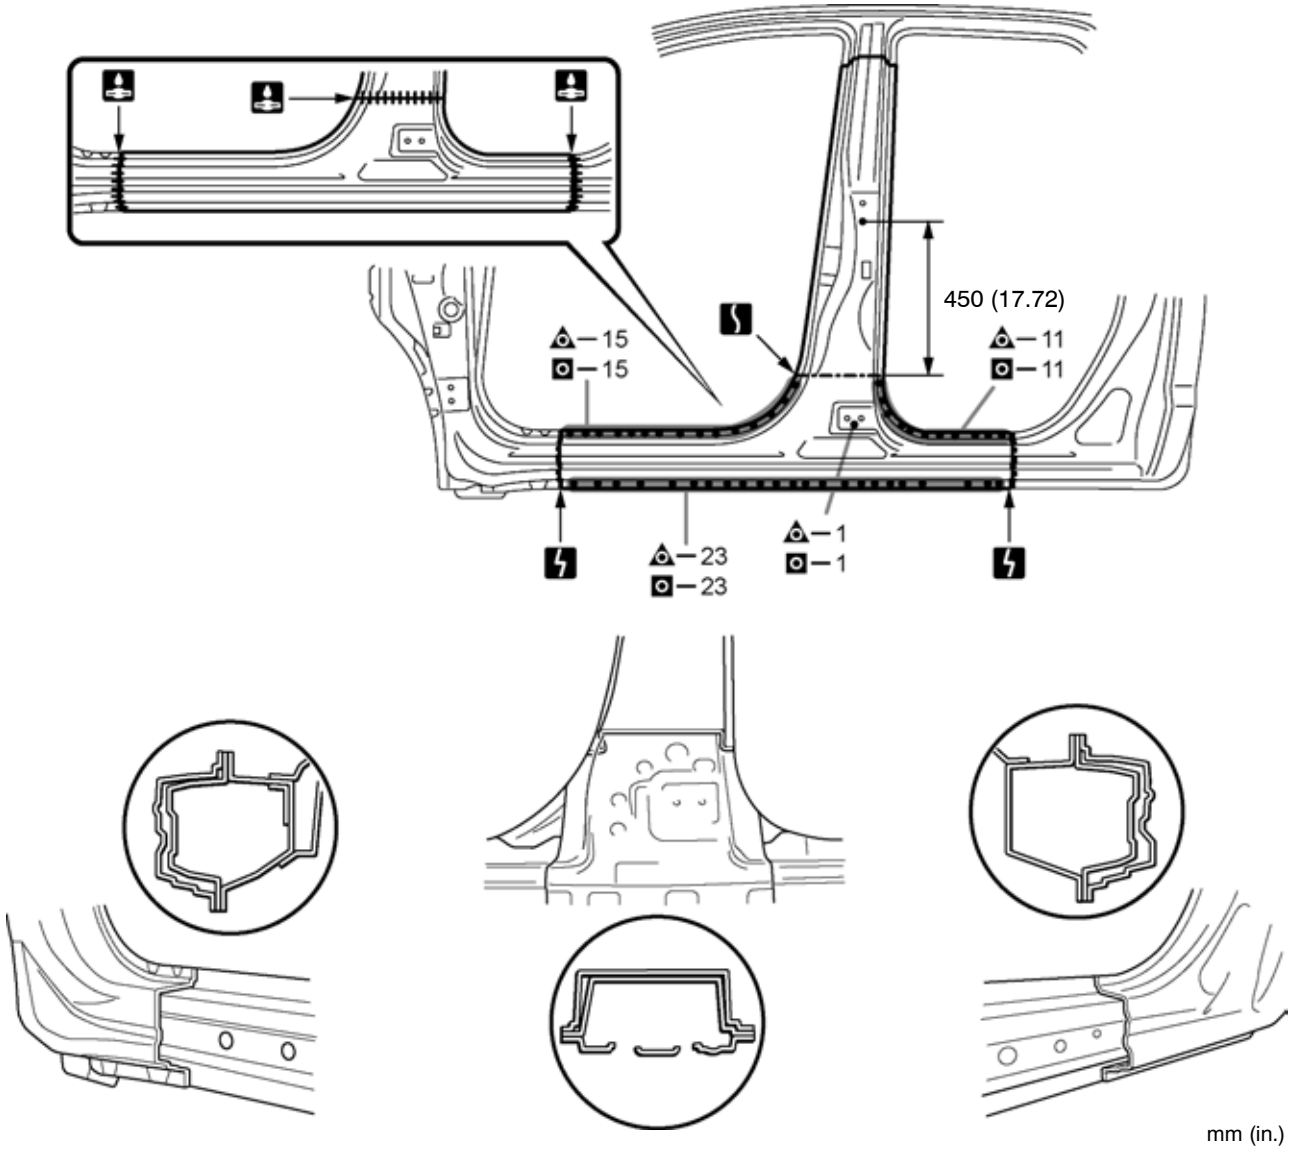


F26992

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

ROCKER OUTER PANEL (CUT): CrewMax

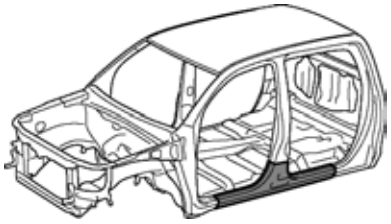


F26993A

Symbol meaning

	: Remove Weld Points : Cut and Join Location
REMOVAL	: Cut Location for Supply Parts
INSTALLATION	: MIG Plug Weld : Butt Weld

F26993B

REMOVAL·INSTALLATION

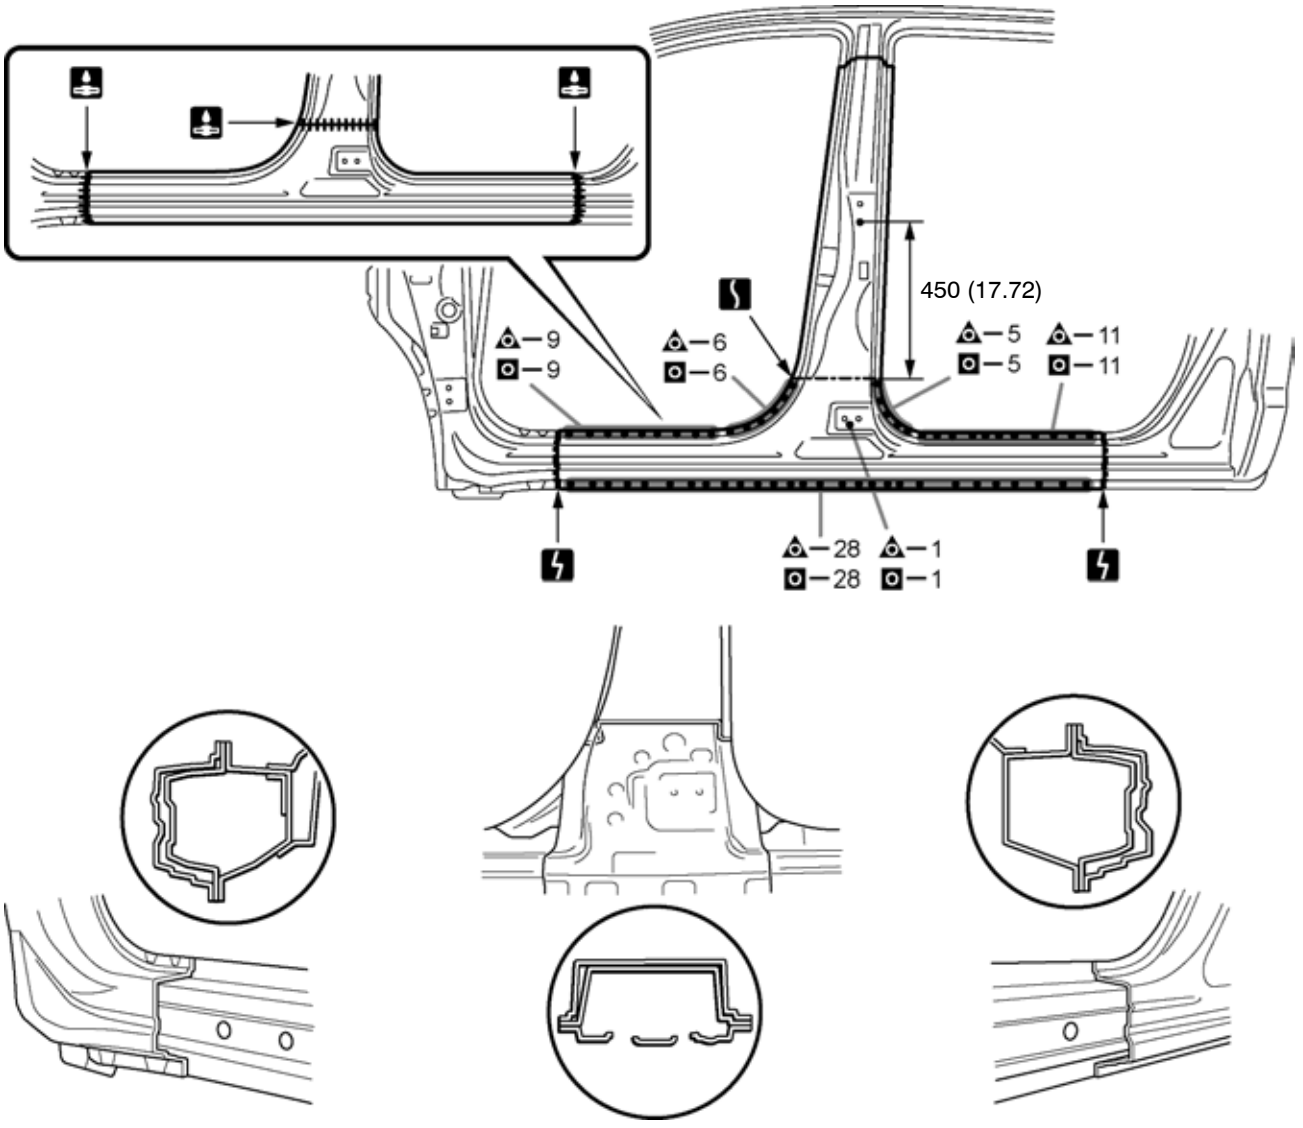

mm (in.)

F26993

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.