



(IG)
10A
IGN
(BAT)
7. 5A
IMB
J20
Transponder Key Amplifier
Transponder Key Coil
VC5
CODE
TXCT
AGND
J17
DLC3
SIL
A24(A)
Engine Control Module
IMO
IMI
A43(B)
Junction
Connector
AJ2
J117
Junction
Connector
AJ5
J76(B)
Junction
Connector
+B
VC5
CODE
TXCT
AGND
D
EFII
EFIO
J26
Transponder Key ECU
IG
GND
KSW
IND
CTY
J71(A), J72(B)
Junction
Connector
JK1
LP
Security
Indicator
E
K20
Accessory Meter Assembly
J18
Unlock Warning
Switch
PJ1
P5
Front Door Courtesy
Switch LH
J77
Junction
Connector
J78
Junction
Connector
J1
J2
J3
W–B


A 24
Black

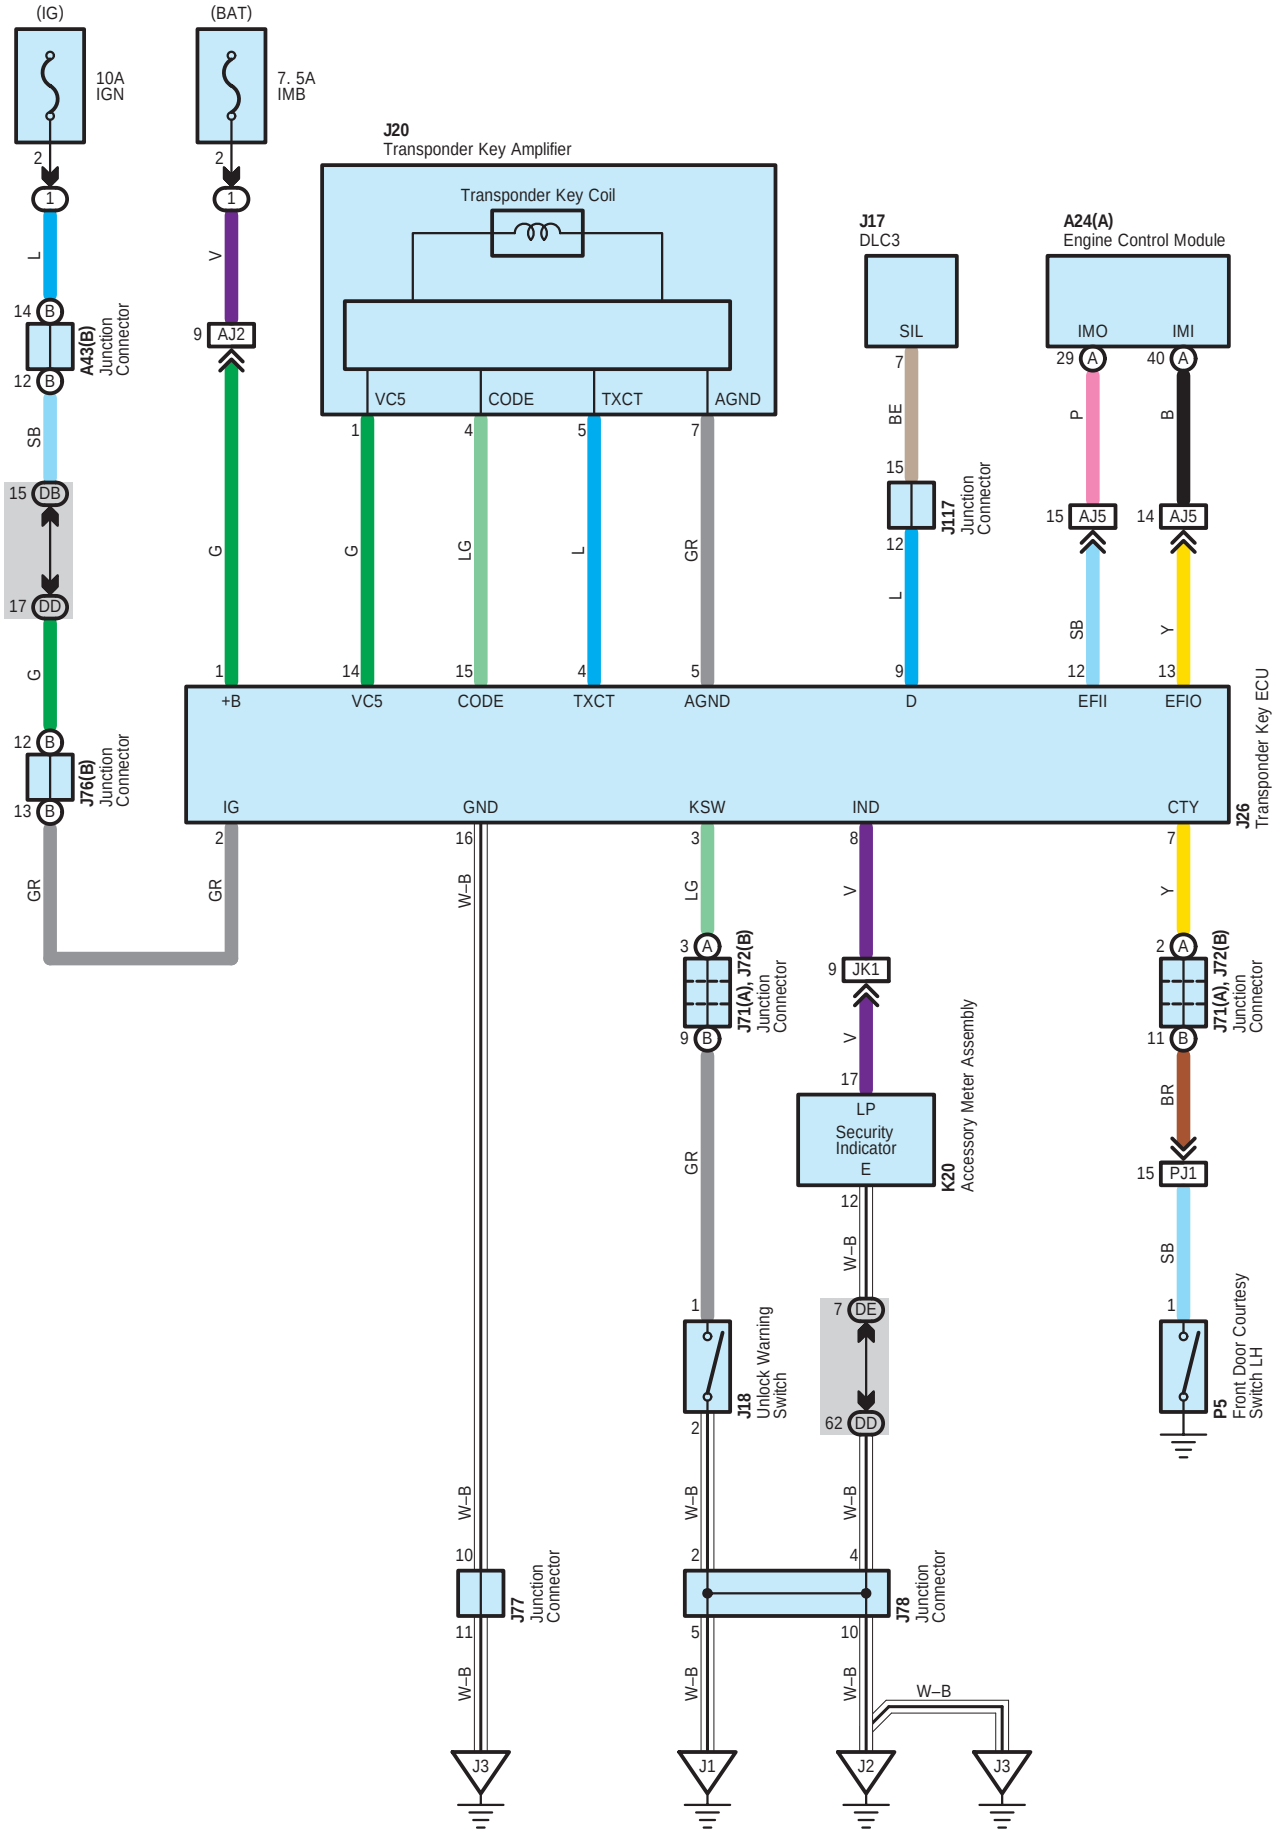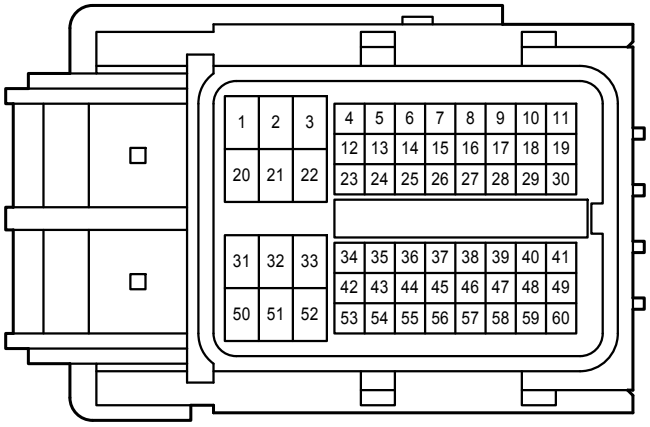


A 43
White

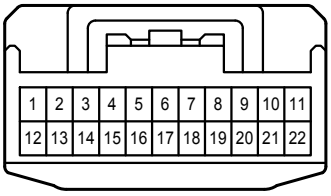


J 17
White

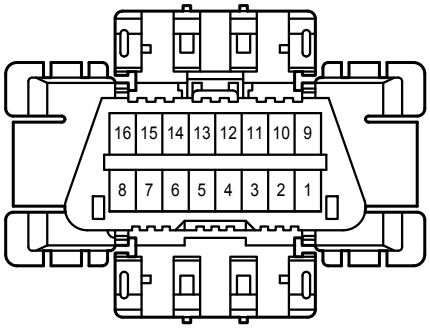


J 18
White




J 20
Black

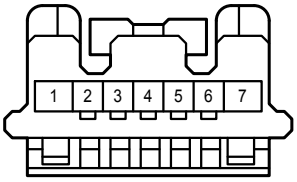


J 26
White

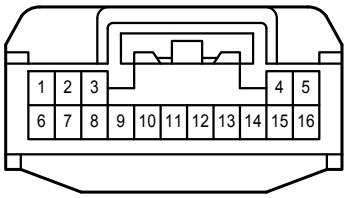


J 71
Black

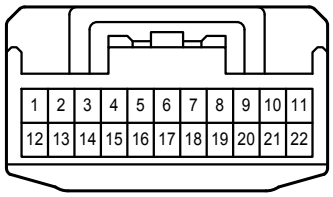


J 72
Black

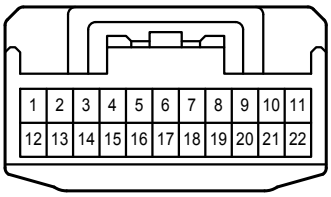


J 76
White

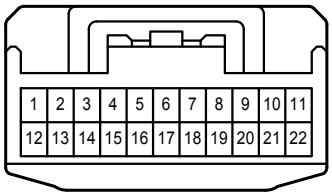


J 77
Gray

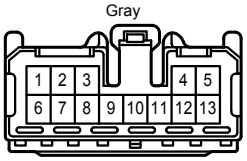


J 78
White

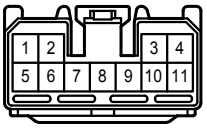

J117
Black

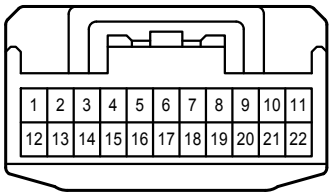


K 20
White

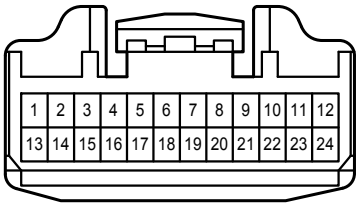


P 5
White




DB
White

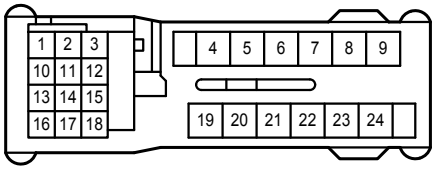


DD
White

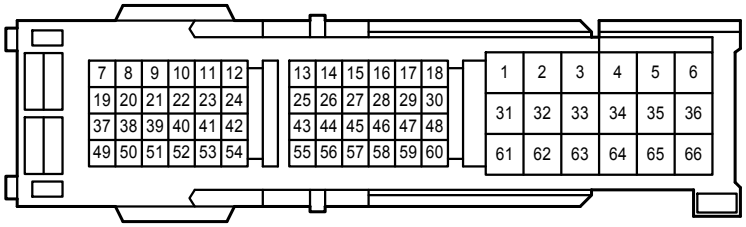


DE
White

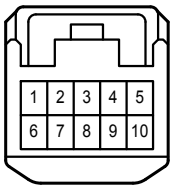


AJ2
White

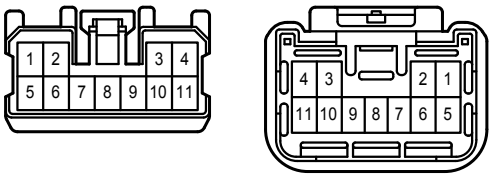

AJ5
White

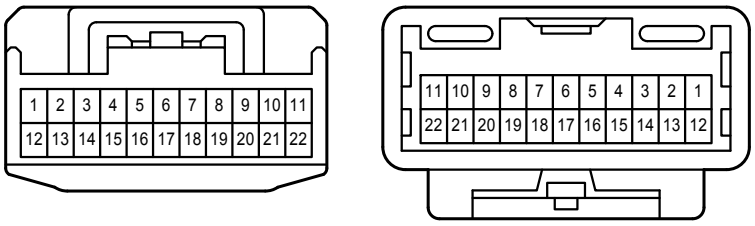

JK1
White

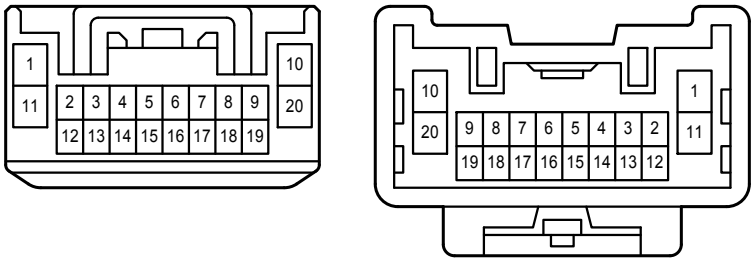

PJ1
Black

