



(IG)
(BAT)
7. 5A
LH–IG
15A
MIR
MIR HTR Relay
55 DD
11 DD
19 DD
50 DD
38 DD
SB
L
L
Y
LG
10 A
11 A
12 A
21 B
J71(A)
Junction
Connector
J73(A), J74(B)
Junction
Connector
B
17 NJ2
7 MJ3
BE
G
1
2
Mirror
Heater
+
–
N5
Outer Rear
View Mirror LH
M6
Outer Rear
View Mirror RH
W–B
4 NJ1
5 MJ1
2
5
10
J78
Junction
Connector
J1
J2
J3
R
W
1
12
8
19
J118
Junction
Connector
B
W
3 AJ11
14 AJ11
12
13
CANH
CANL
A17
Skid Control ECU
with Actuator
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
45
46
34
33
36
37
43
42
V
LG
BE
G
L
P
B
W
Front
Speed Sensors
Rear
Speed Sensors
L


(IG)
7. 5A
ECU–IG
No. 1
56 DD
R
W
P
15
4
J113
Junction
Connector
12
1
16
IG+
Mirror Heater Switch
STX
GND
J37
Integration Control and
Panel Assembly
3
1
W
B
SB
W–B
12 A
11 A
37 A
CANL
CANH
LIN1
MHTR
SG–2
TAM
J19(A)
A/C Amplifier
18 A
13 A
5 A
L
G
V
4 AJ10
11 AJ3
Y
V
W–B
7
1
10
A37
Junction
Connector
A15
Ambient Temperature
Sensor
J77
Junction
Connector
5
2
11
R
R
W–B
W–B
L
J3


A 15
Black

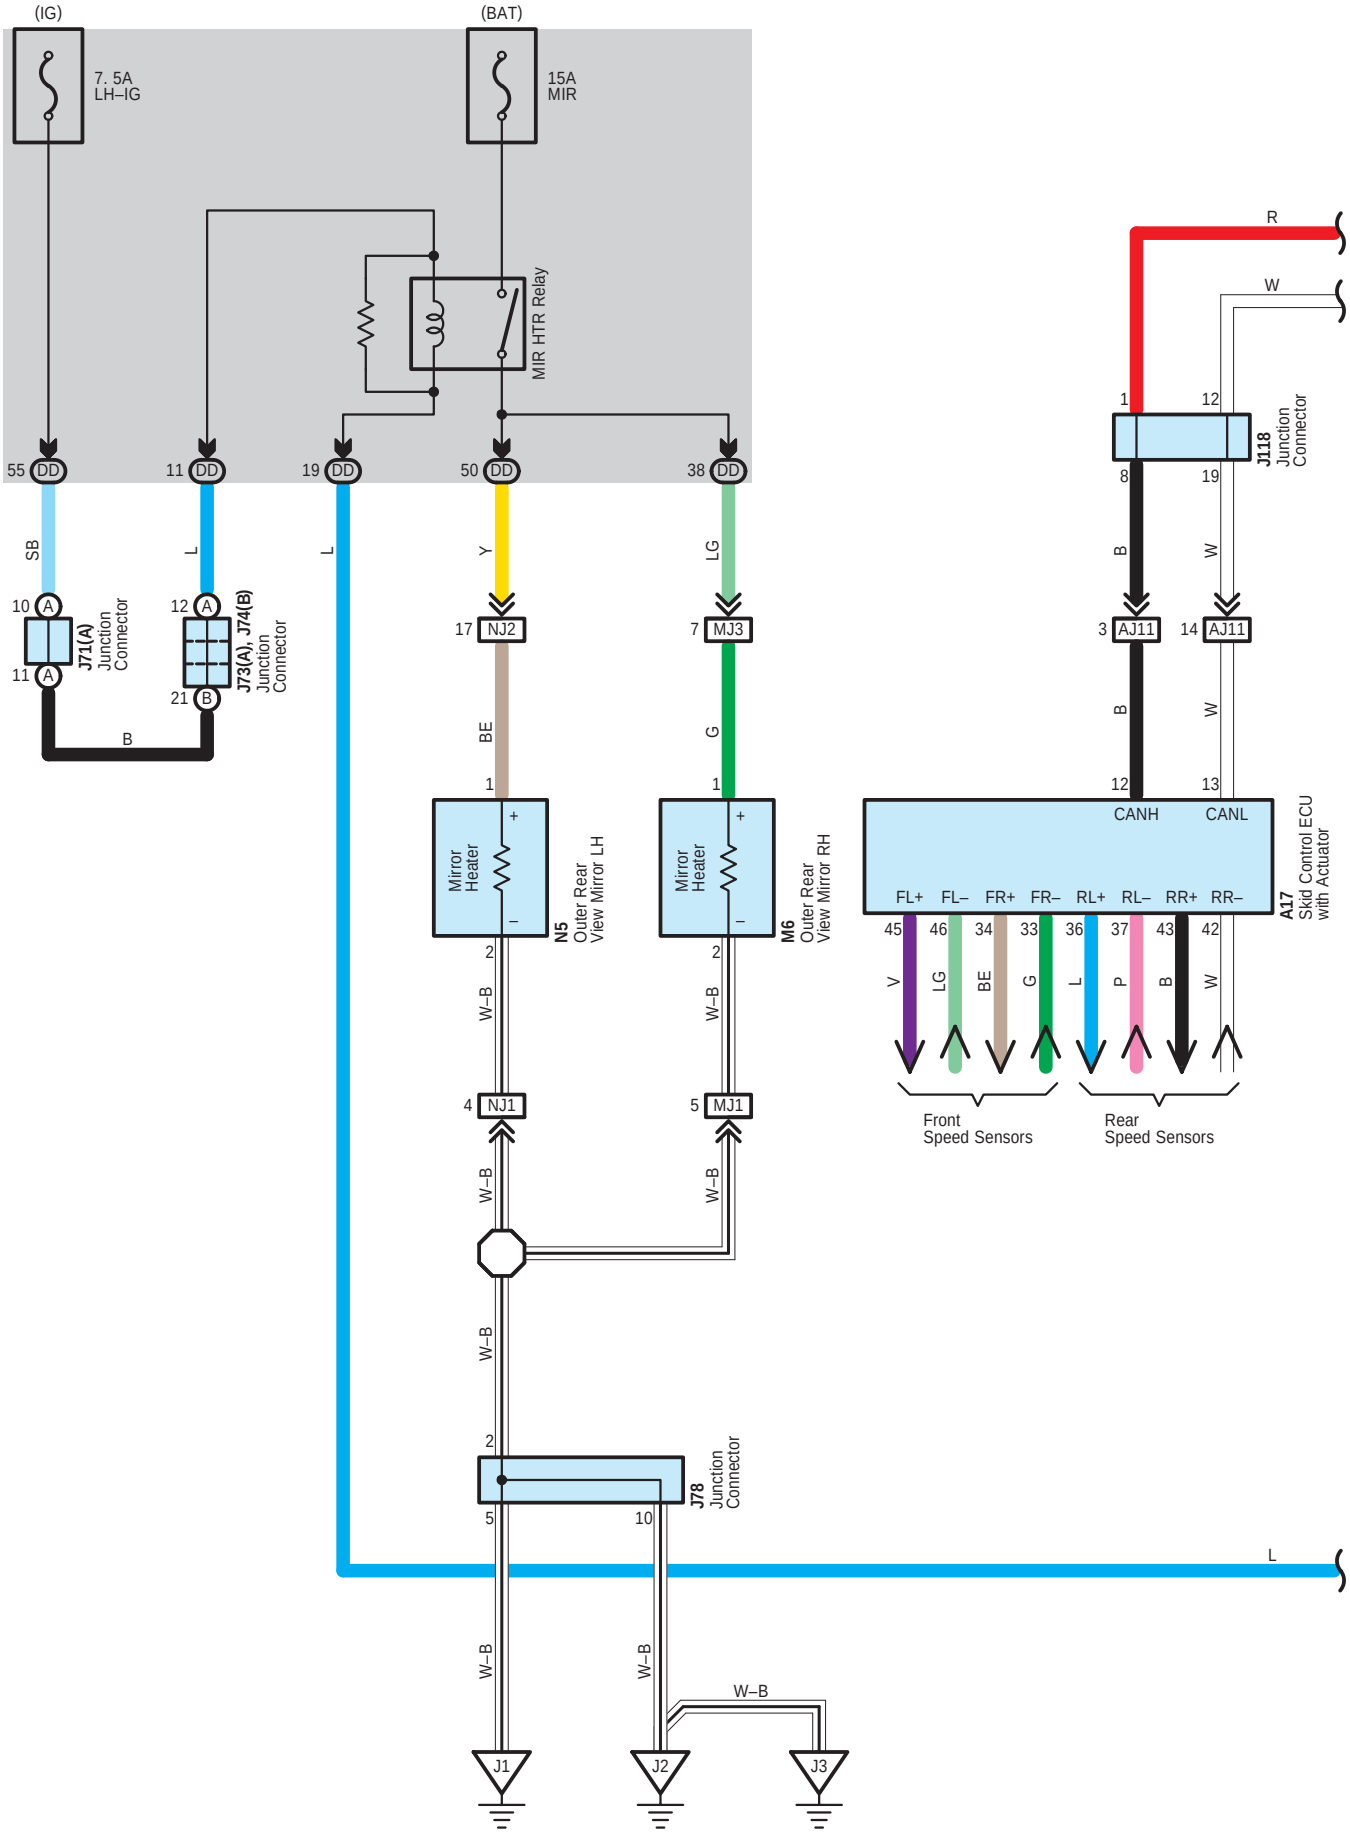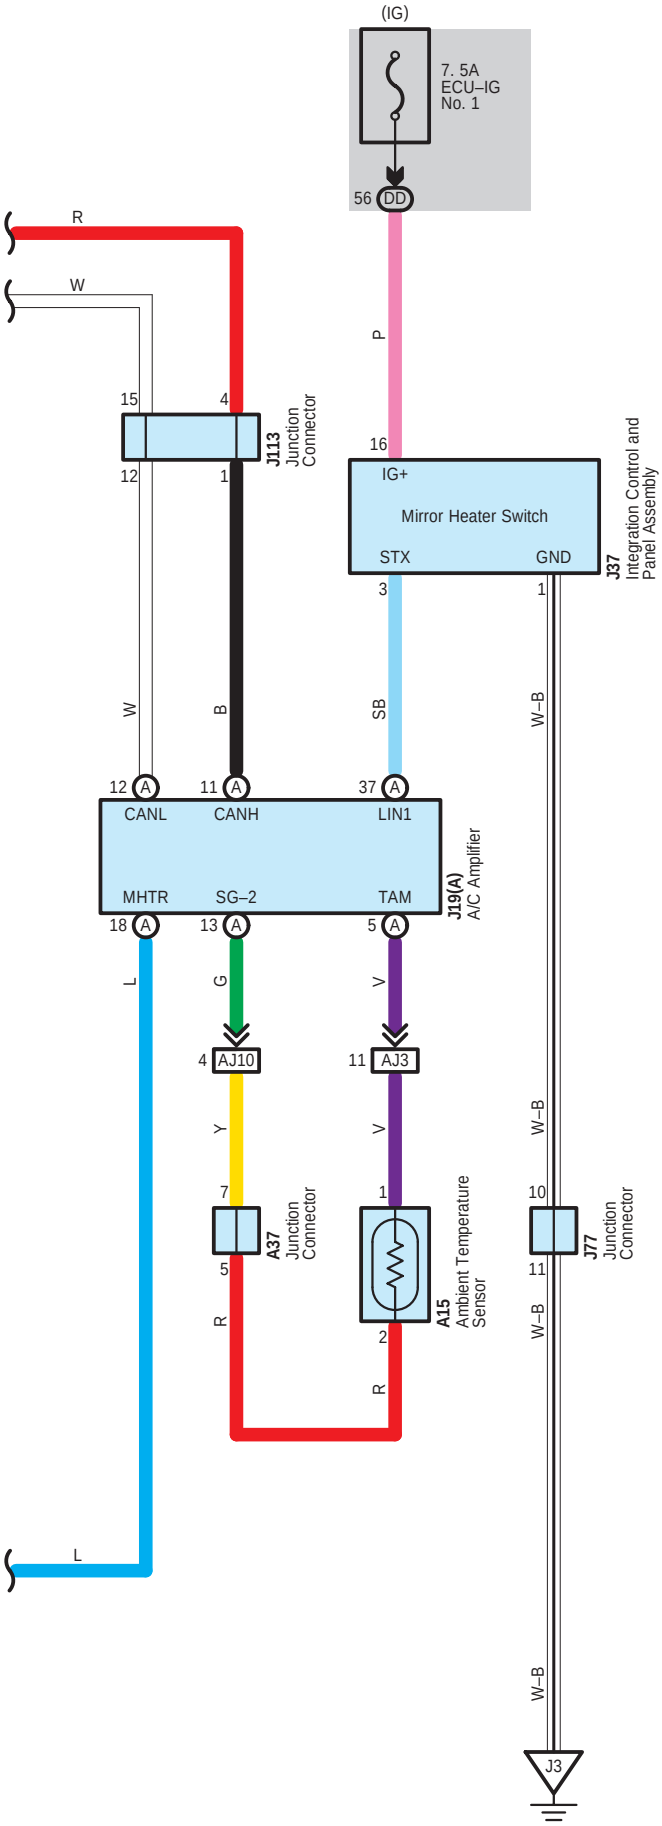


A 17
Black

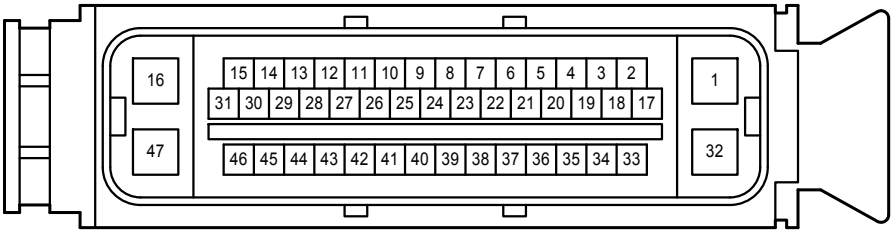


A 37
White

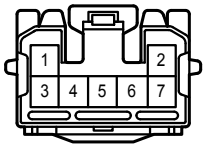


J 19
White

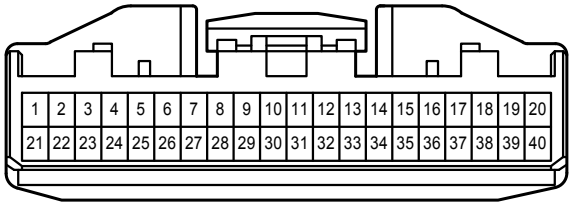


J 37
White

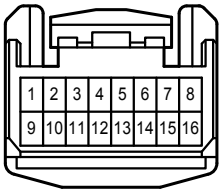


J 71
Black

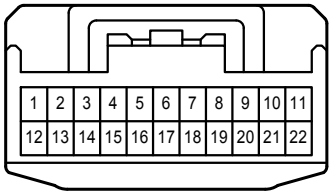


J 73
Black

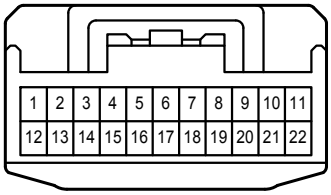


J 74
Black

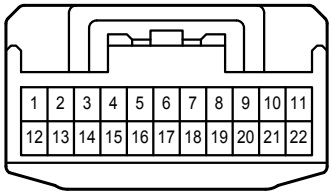


J 77
Gray

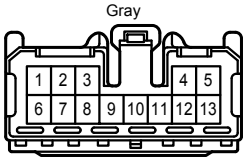


J 78
White

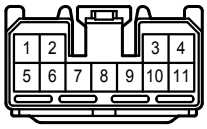


J113
Gray

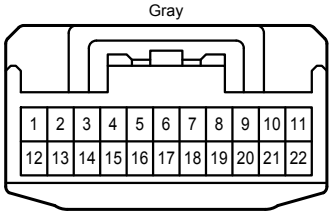


J118
Gray

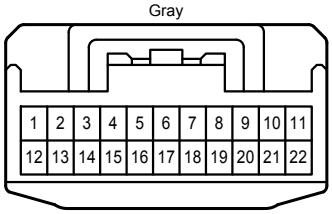


M 6
White

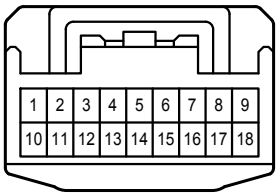


N 5
White

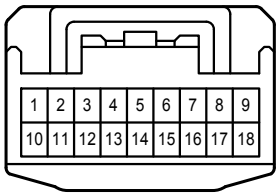


DD
White

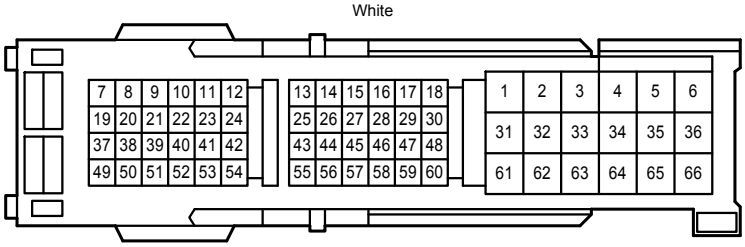


AJ3
White

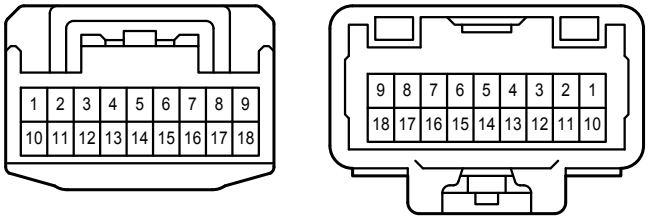


AJ10
Gray

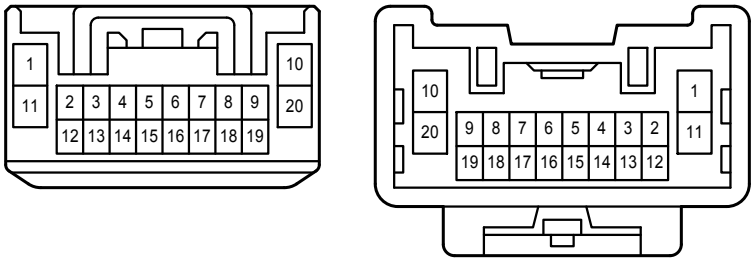


AJ11
Gray

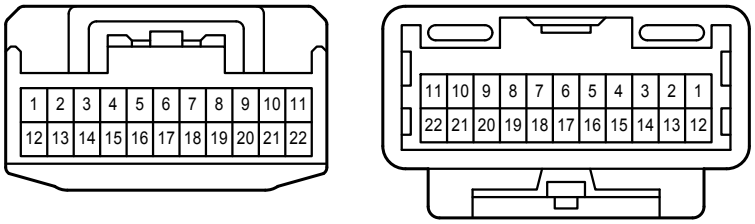


MJ1
Blue

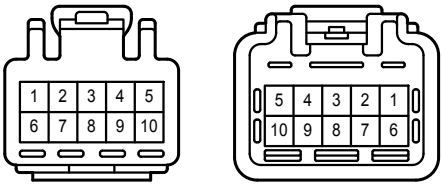

MJ3
Blue

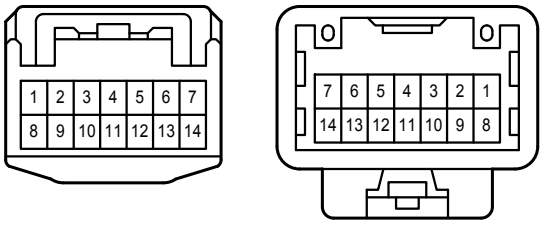

NJ1
Blue

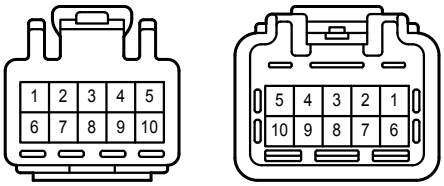

NJ2
Blue

