





(IG)
7. 5A
ECU–IG
No. 2
7 DD
9 DA1
P
2
SOF+
SOF–
1
D84
Vane Pump Assembly
V
V
8 DA1
SB
BR
17 AJ3
18 AJ3
W
GR
Y
LG
W
GR
5
8
7
2
1
IG
SOF–
SOF+
CANL
CANH
J119
Power Steering ECU Assembly
GND
3
W–B
12
J77
Junction Connector
11
W–B
J3


GR
W
22 AJ5
21 AJ5
W
GR
3
14
4
15
J113
Junction Connector
11 A
10 A
CANL
CANH
A24(A), D74(B)
Engine Control Module
NE+
NE–
VCV2
110 B
111 B
66 B
W
Y
L
1
2
3
NE+
NE–
VC
D3
Crankshaft Position Sensor
W
GR
GR
W
R
W
7
18
1
12
4
15
8
19
6
17
J118
Junction Connector
SB
W
B
W
G
W
3 AJ11
14 AJ11
B
W
W
G
W
B
W
SB



(BAT)
(IG)
7. 5A
ECU–B1
7. 5A
ECU–IG
No. 1
2
1
GR
13 DB
14 DD
BE
5 A
6 B
J73(A), J74(B)
Junction
Connector
R
3
BAT
56 DD
P
21 A
13 B
J71(A), J72(B)
Junction
Connector
SB
18 A
17 B
J73(A), J74(B)
Junction
Connector
LG
1
IG
J6
Steering Angle Sensor
CANL
CANH
ESS
9
10
2
W
G
W–B
J78
Junction
Connector
4
5
10
W–B
W–B
W
G
A17
Skid Control ECU with Actuator
FL+ FL– FR+ FR– RL+ RL– RR+ RR–
45 46 34 33 36 37 43 42
V LG BE G L P B W
Front Speed
Sensor
Rear Speed
Sensor
GYAW SS2 SS1 VYS
29 19 18 22
P W B R
5 AP1
3 AP1
4 AP1
2 AP1
G W B R
5 A --- 1 A --- 2 A --- 3 A (2WD)
5 B --- 1 B --- 2 B --- 3 B (4WD)
GYAW YAW2 YAW1 VYS
P15(A), P16(B)
Yaw Rate Sensor
W
B
W
SB
W–B
J1
J2
J3


(BAT)
5A
MET–B
2
1
G
9 AJ10
LG
18
(IG)
7. 5A
MET
2
1
BE
15 AJ10
P
20
B
IG+
Power Circuit
Power Steering
+B
IG
CANL
CANH
E1
34
33
40
J28
Combination Meter
A17
Skid Control ECU with Actuator
CANL
CANH
13
12
W
B
W
SB
W–B
8
J78
Junction
Connector
5
10
W–B
W–B
W–B
J1
J2
J3


A 17
Black

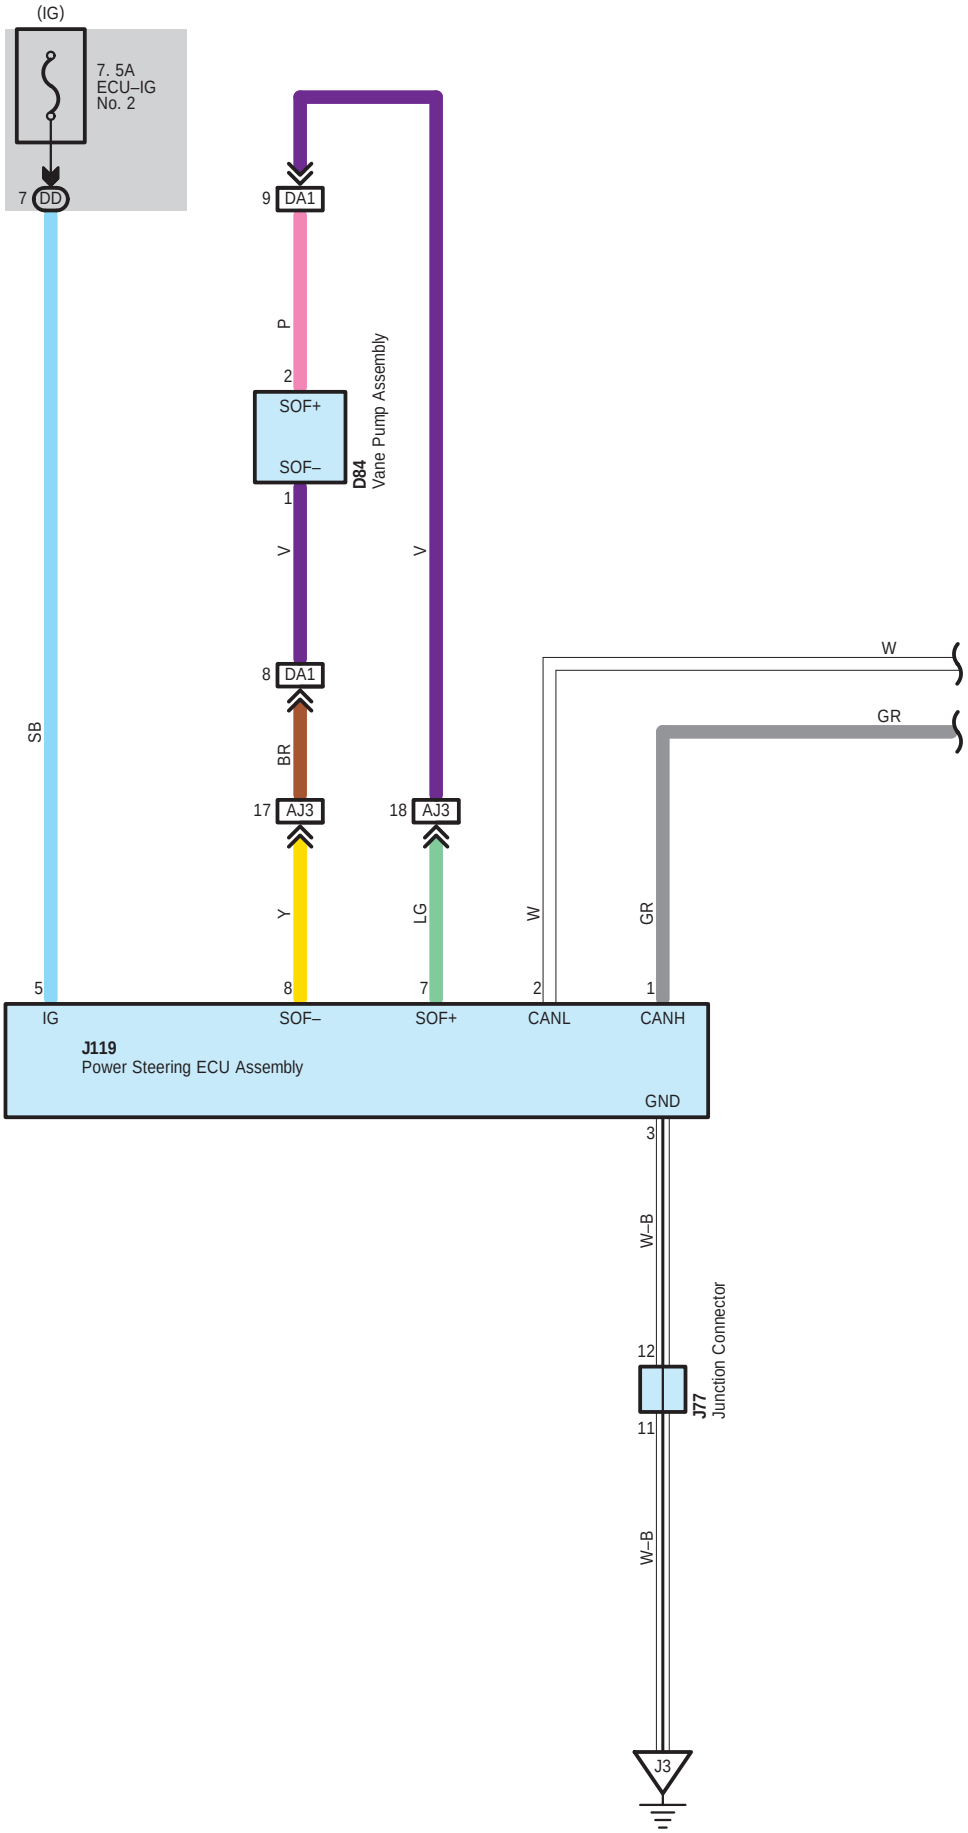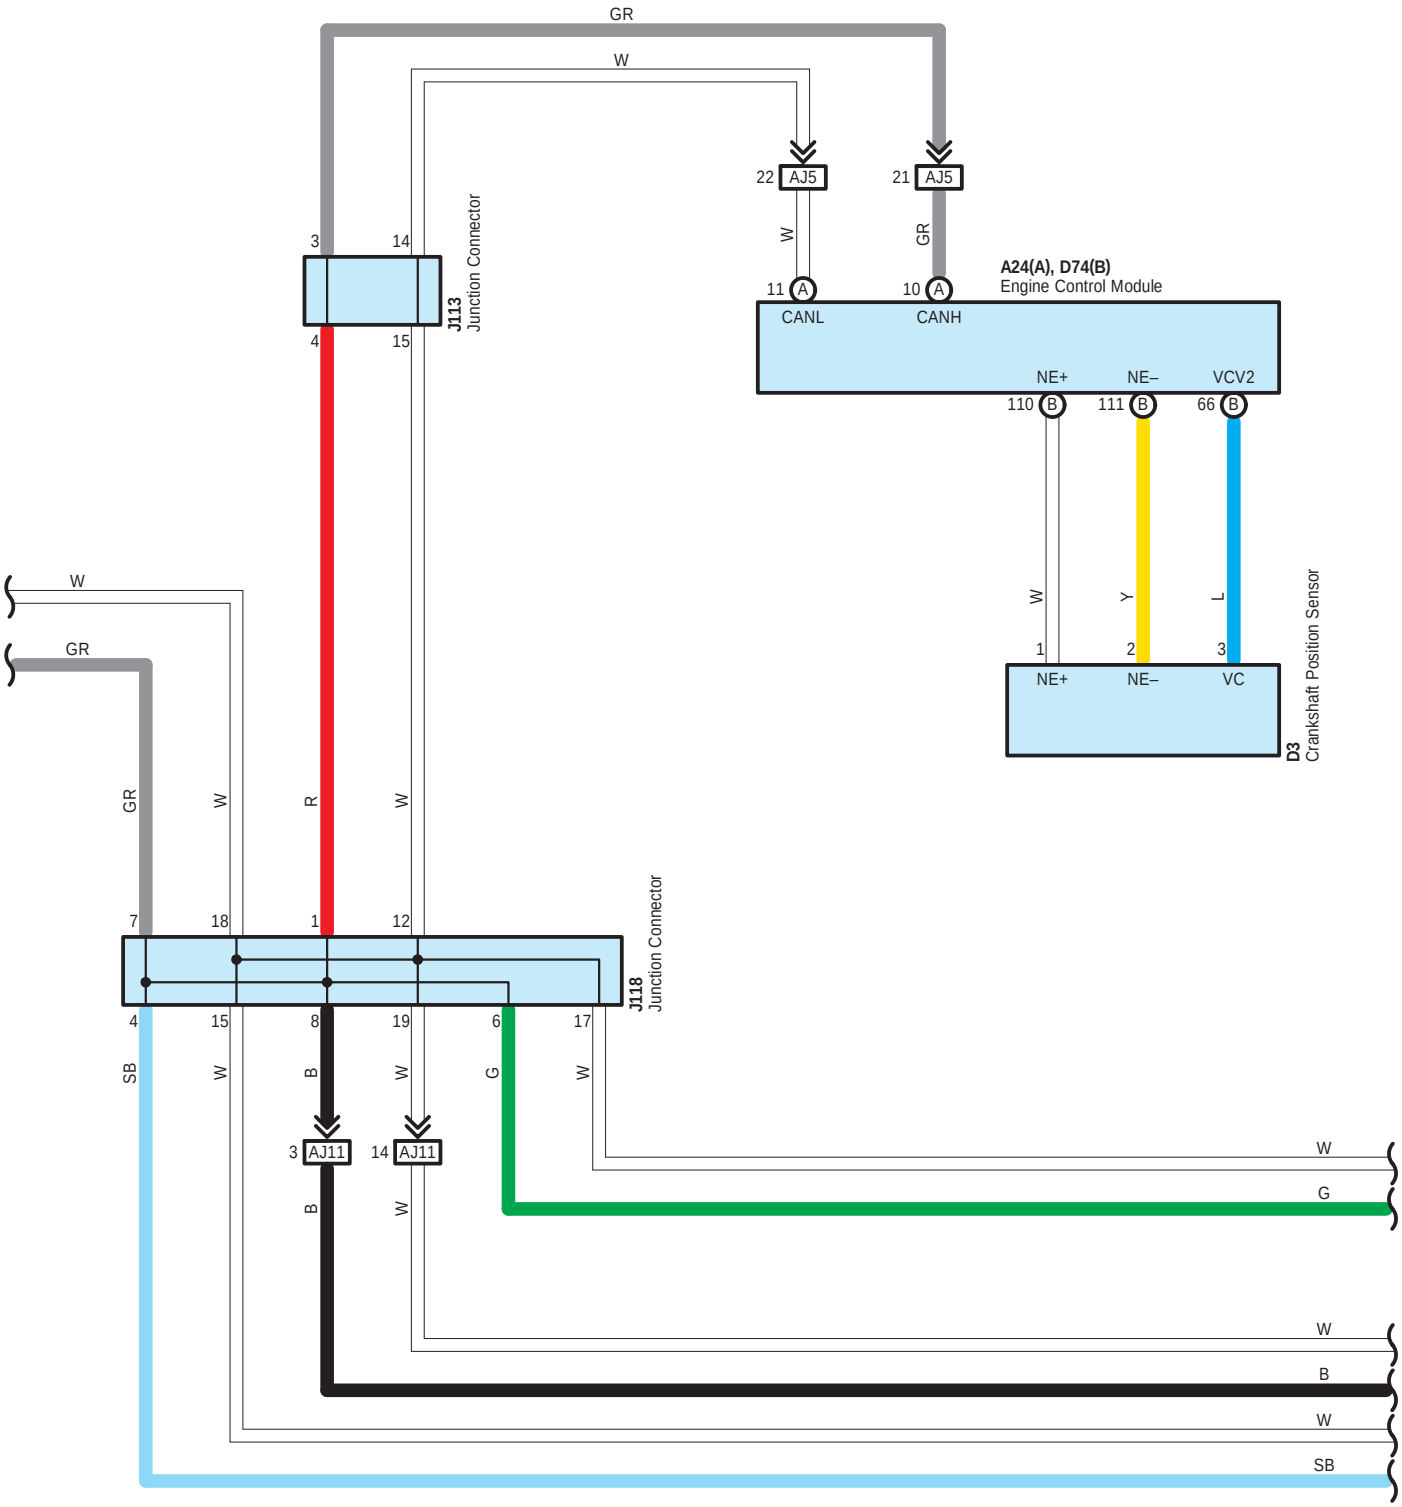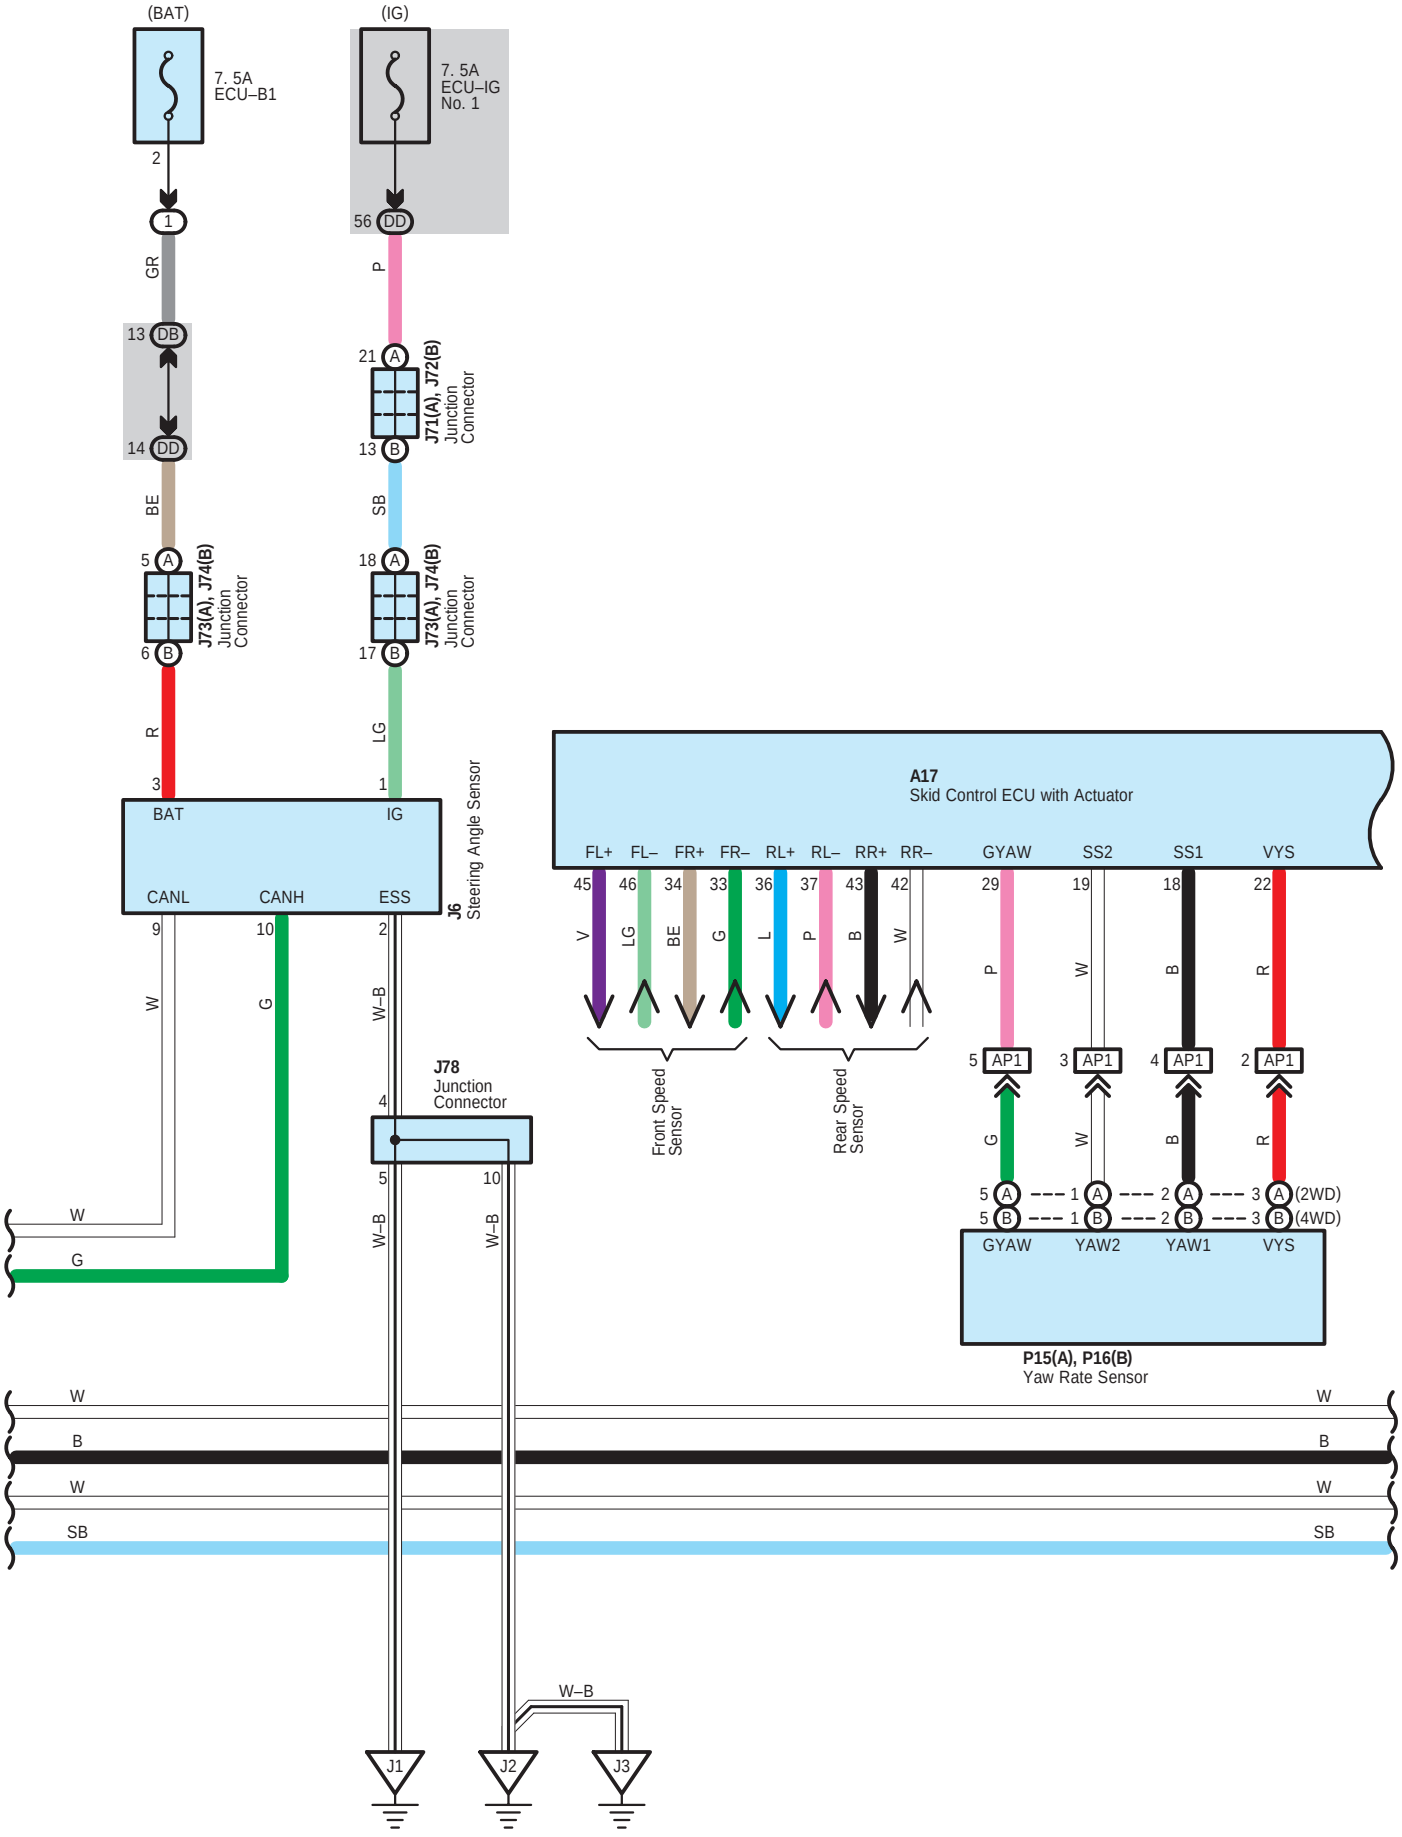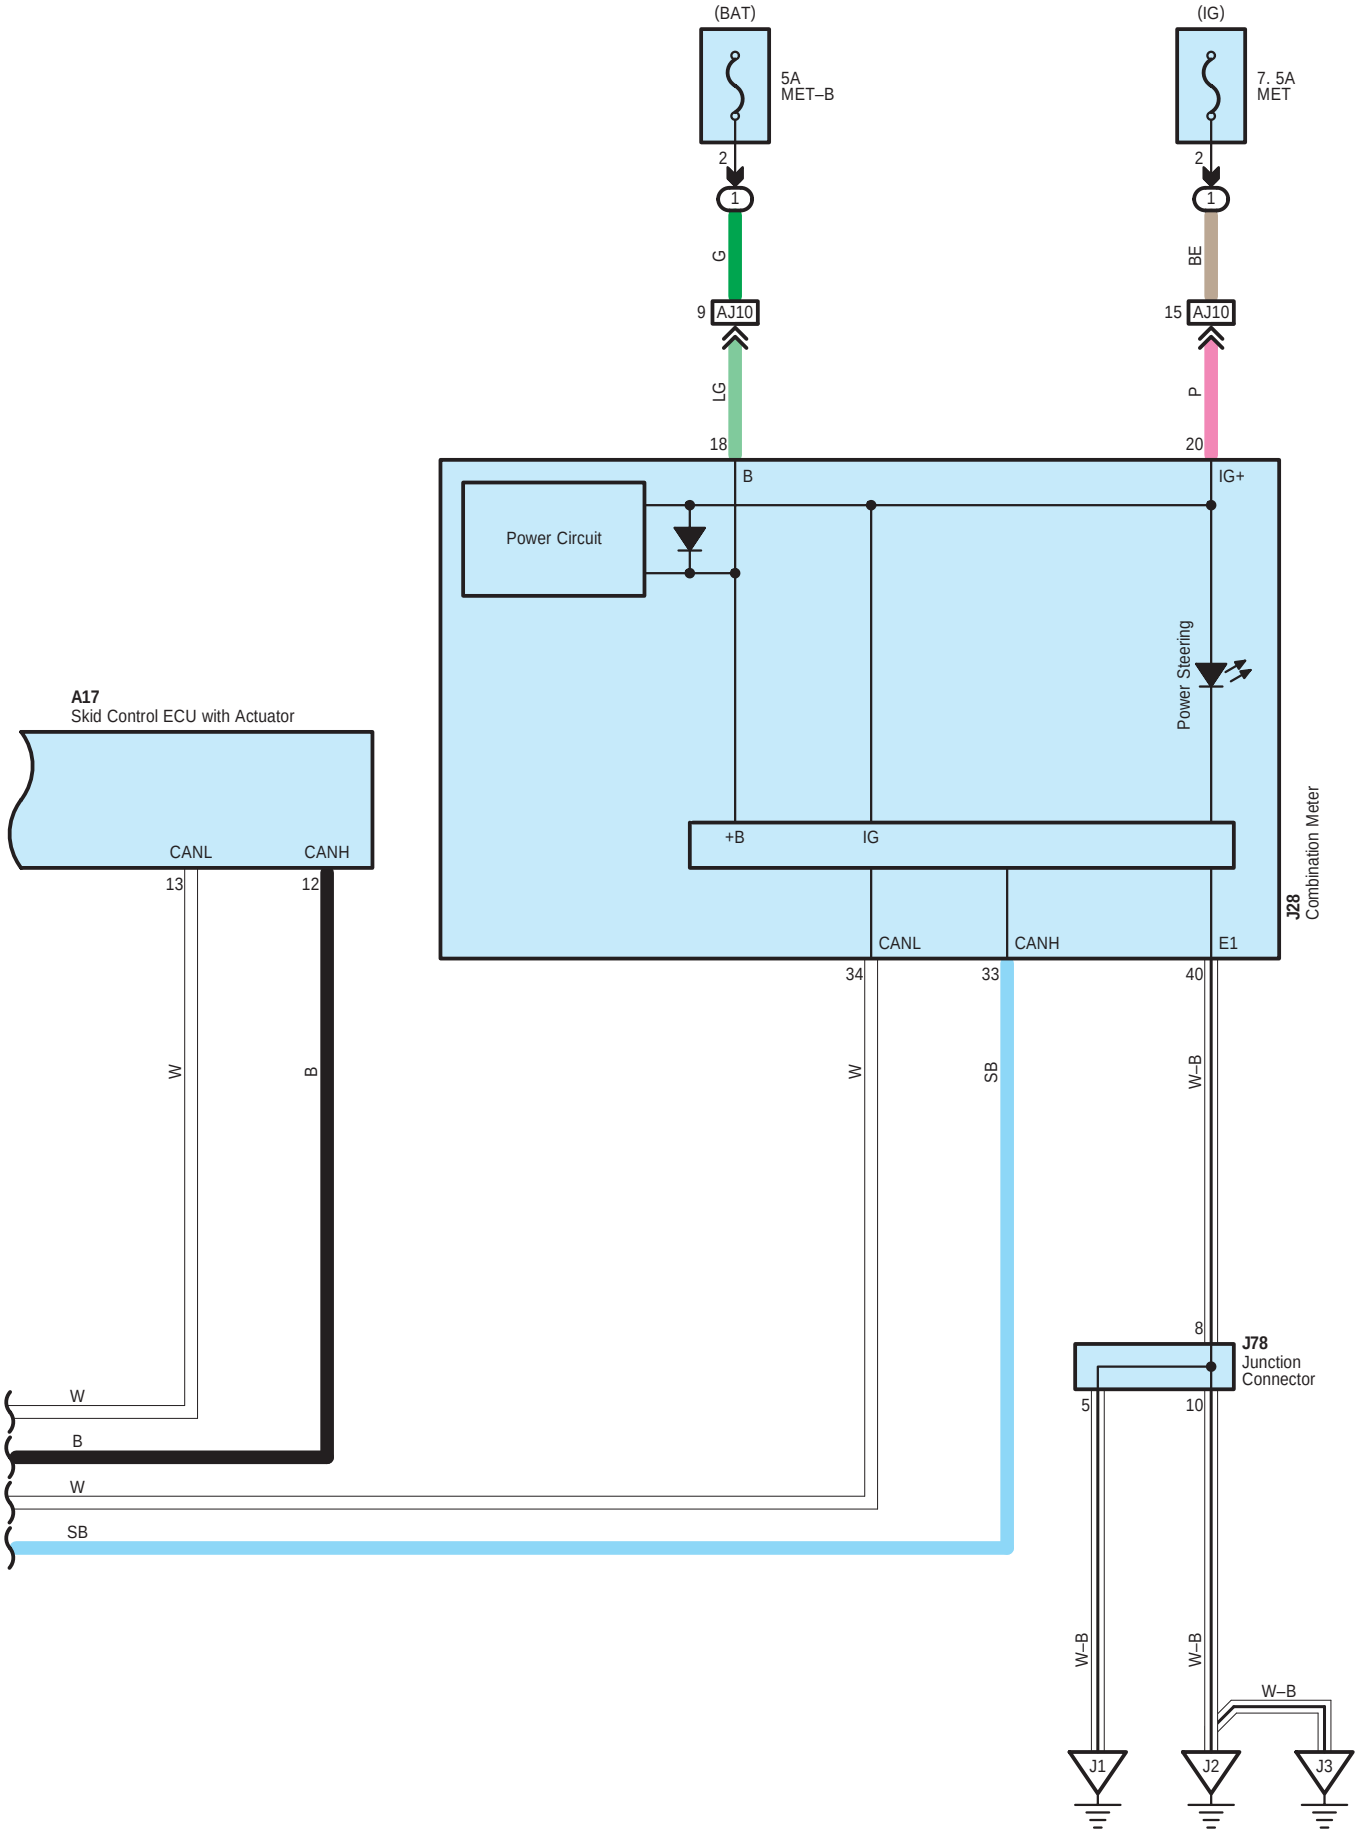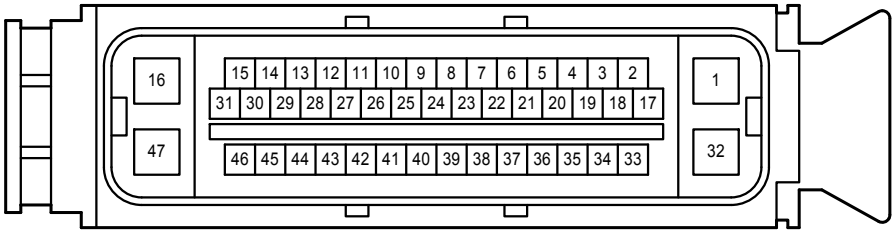


A 24
Black

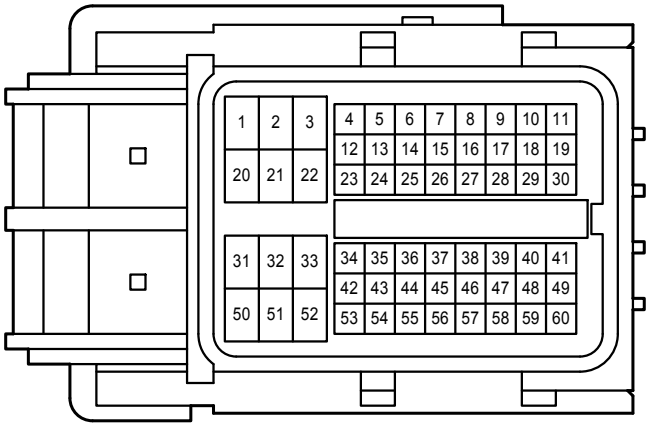


D 3
Black

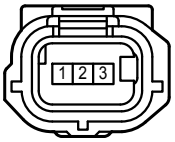


D 74
Black

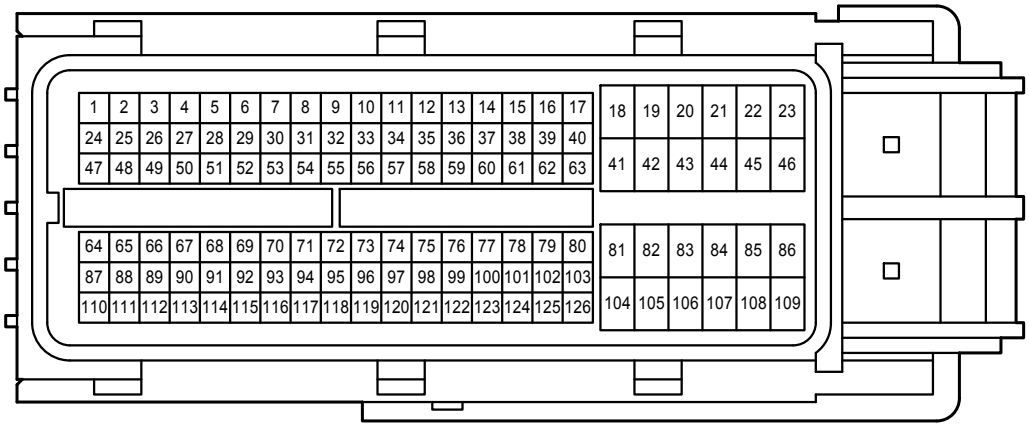


D 84
Black

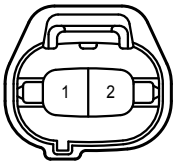


J 6
Gray

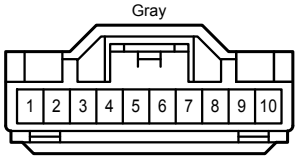


J 28
White

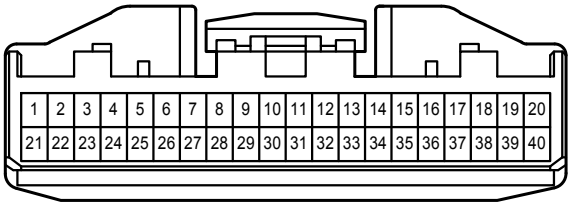


J 71
Black

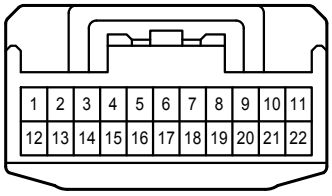


J 72
Black

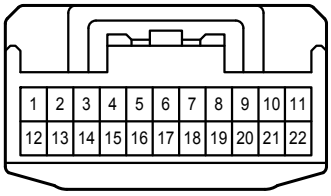


J 73
Black

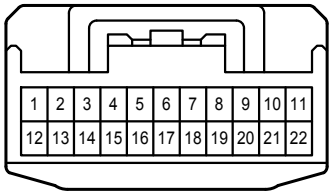


J 74
Black

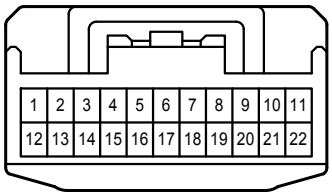


J 77
Gray

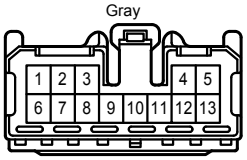


J 78
White

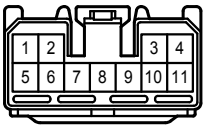


J113
Gray

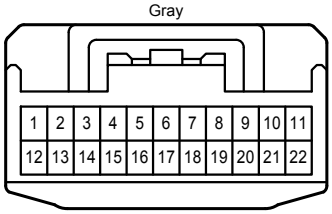


J118
Gray

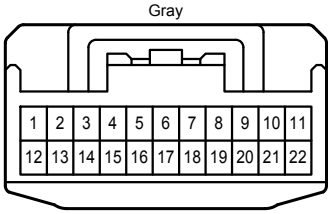


J119
White

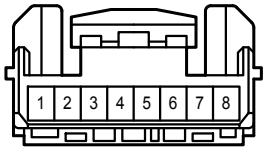


P 15
Black

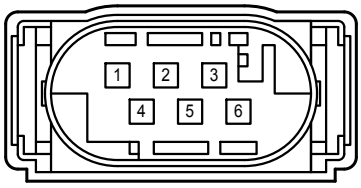


P 16
Black

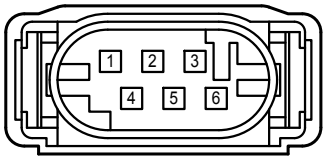


DB
White

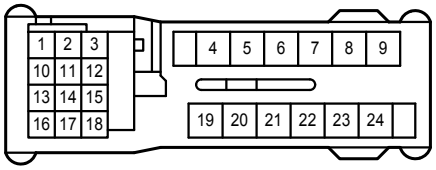


DD
White

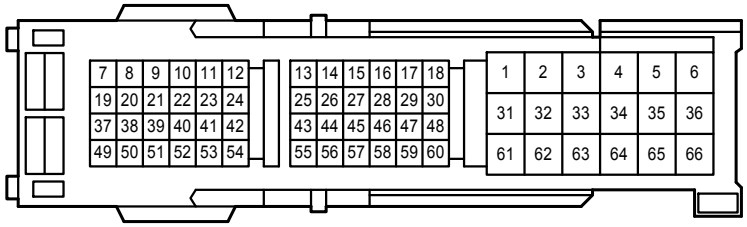


AJ3
White

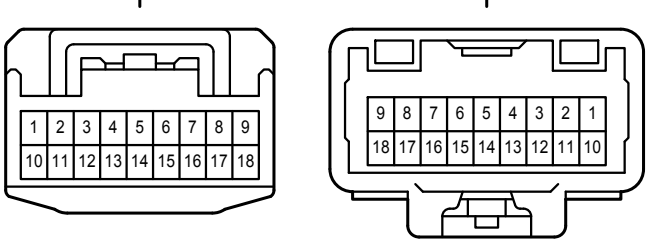


AJ5
White

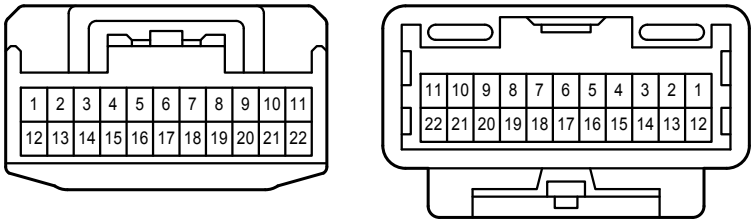


AJ10
Gray

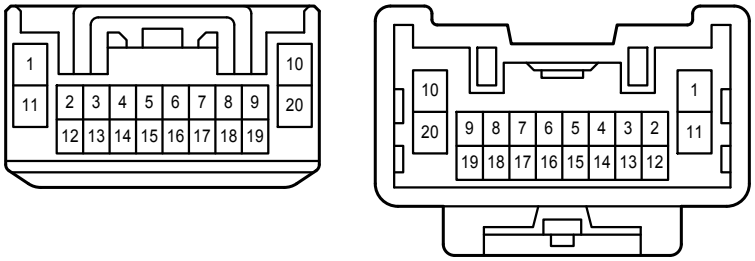

AJ11
Gray

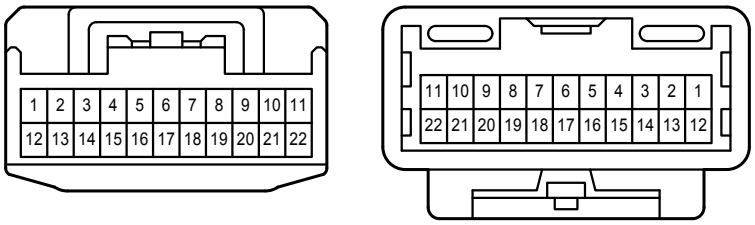

AP1
White

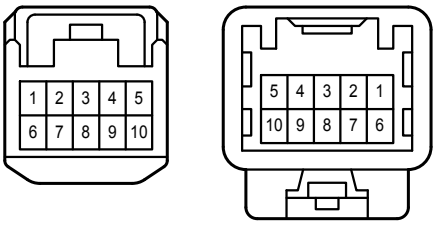

DA1
White

