




(BAT)
15A
MIR
54 DD
(ACC)
7. 5A
ACC
8 DD
R
9 A
J73(A)
Junction
Connector
8 A
GR
GR
9 A
J71(A), J72(B)
Junction
Connector
3 B
N6
Seat Memory Switch
SET
1
2
MRY
M1
M2
E
1
2
3
4
BE
L
12 NJ2
13 NJ2
R
Y
3 A
4 A
B
ACC
L
P
BE
V
9 B
8 B
7 B
10 B
MM
M1
M2
MSWE
N7(A), N8(B)
Outer Mirror Control ECU
E1
VSR
HSRL
VC
MHL
M+L
MVL
MR+
MR–
3 B
4 B
5 B
2 B
19 B
18 B
20 B
1 A
2 A
BR
L
W
LG
B
P
Y
P
V
BR
L
W
LG
B
P
Y
P
V
18
17
16
15
12
11
10
7
8
E1
VSRL
HSRL
VC
MH
M+
MV
MR
MF
M
M
M
N5
Outer Rear View Mirror LH



J2(B), J3(C), J4(D)
Main Body ECU
CANN
CANP
RET
MIRE
MIRS
MIRB
J114
Junction Connector
LJ1
MF
E
MSW
M+
E2
L6
Outer Mirror Switch
PJ1
PZ1
CANL
CANH
J47
Multiplex Tilt and Telescopic ECU
Z10(B)
Front Power Seat Control ECU and Switch LH
NJ3
CGND
CAN
JL1
N7(A), N8(B)
Outer Mirror Control ECU
E1
VSSR
HSRR
VC
MHR
M+R
MVR
MR+
MR–
GND
NJ2
NJ1
MJ3
MJ2
MJ1
HSSR
MH
M+
MV
MR
MF
M6
Outer Rear View Mirror RH
J78
Junction Connector
J1
J2
J3
W–B


J2(B), J3(C), J4(D)
Main Body ECU
DCTY
CANH
CANL
24 D
5 B
6 B
BR
L
W
1 A
J73(A), J74(B)
Junction Connector
10 B
W
1 A
J71(A), J72(B)
Junction Connector
11 B
BR
15 PJ1
SB
1
P5
Front Door Courtesy Switch LH
5
16
J118
Junction Connector
1
12
R
W
4
15
J113
Junction Connector
3
14
GR
W
(IG)
10A
BK/UP LP
65 DD
G
25 DA1
G
G
2
PL
RB
P
D35
Park/Neutral Position Switch
6
G–B
2 B
D73(B)
Junction Connector
1 B
G–B
2 B
P
CANL
CANH
A24(A), D74(B)
Engine Control Module
11 A
10 A
W
GR
22 AJ5
21 AJ5
W
GR
9 AJ4
G


A 24
Black

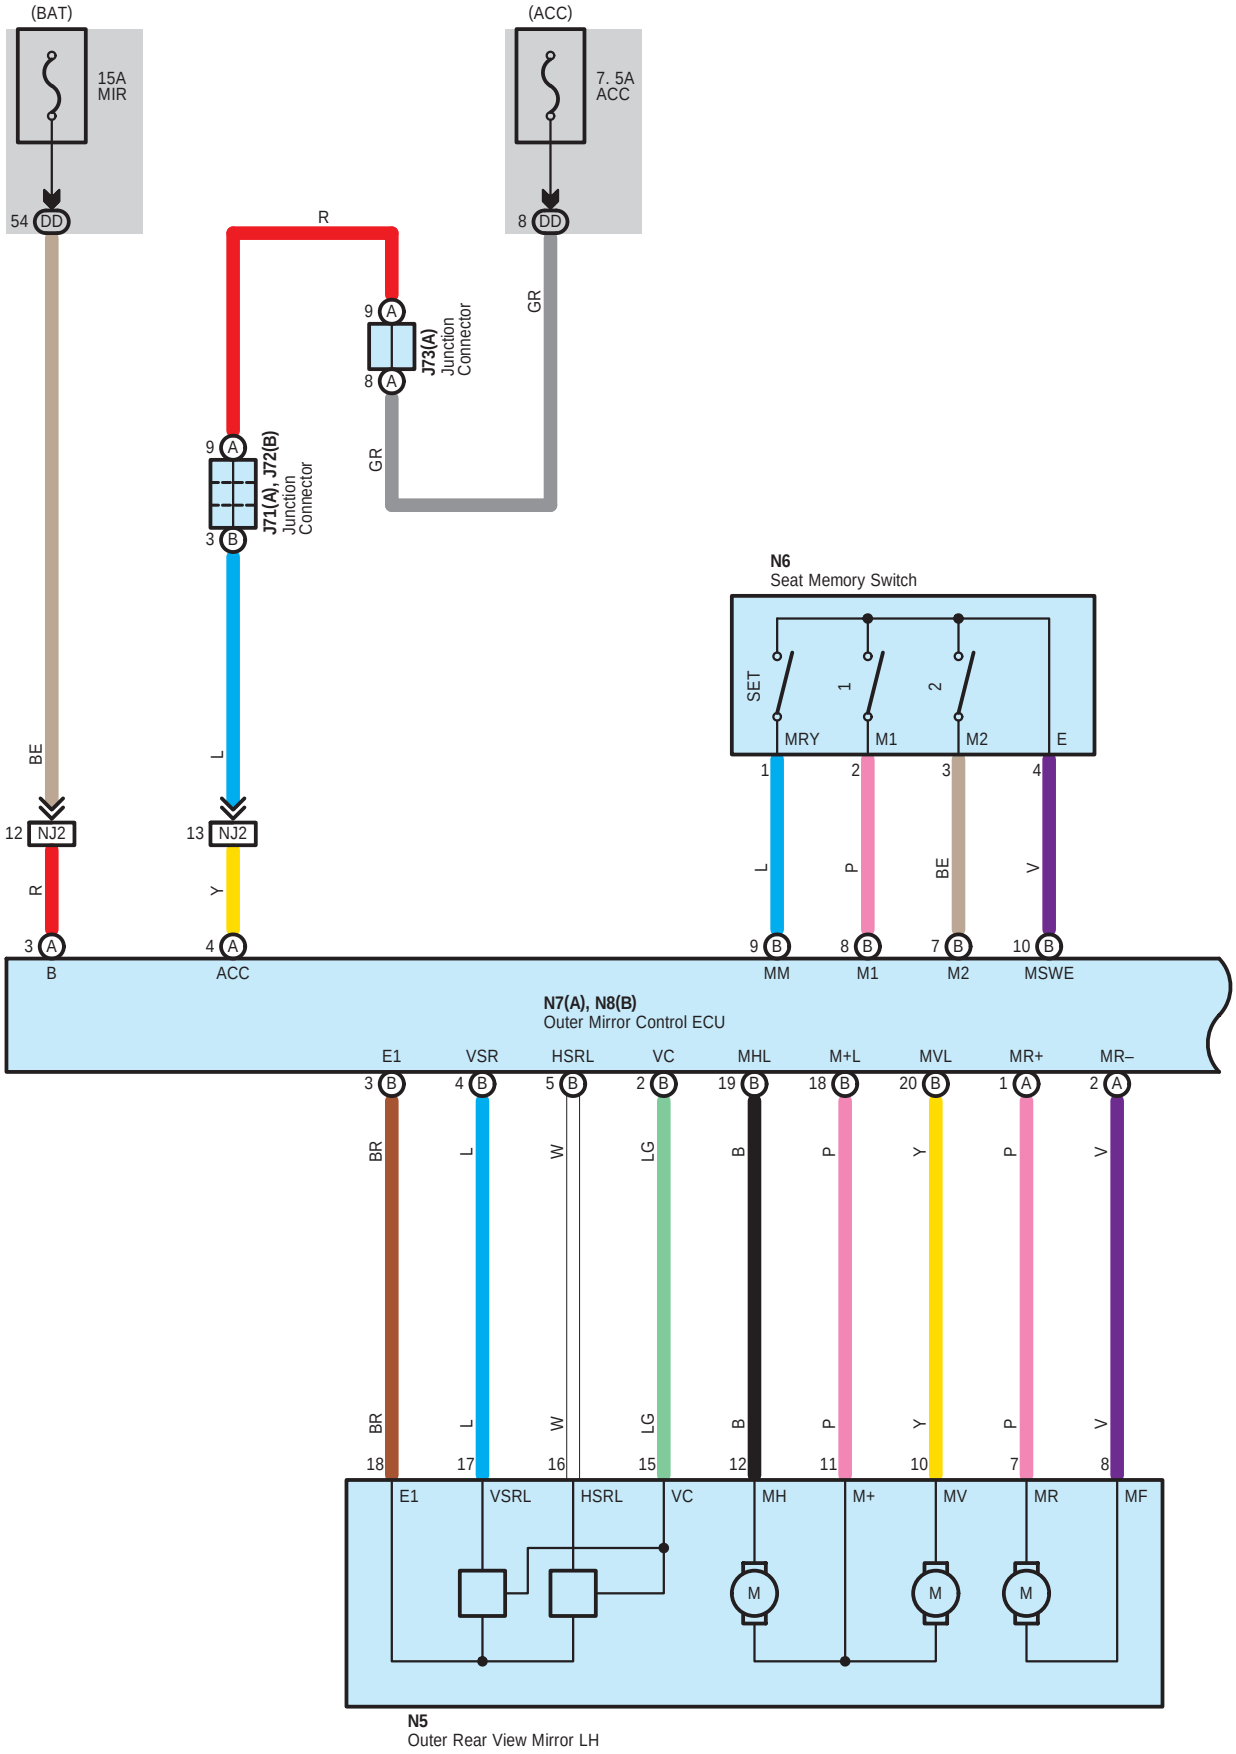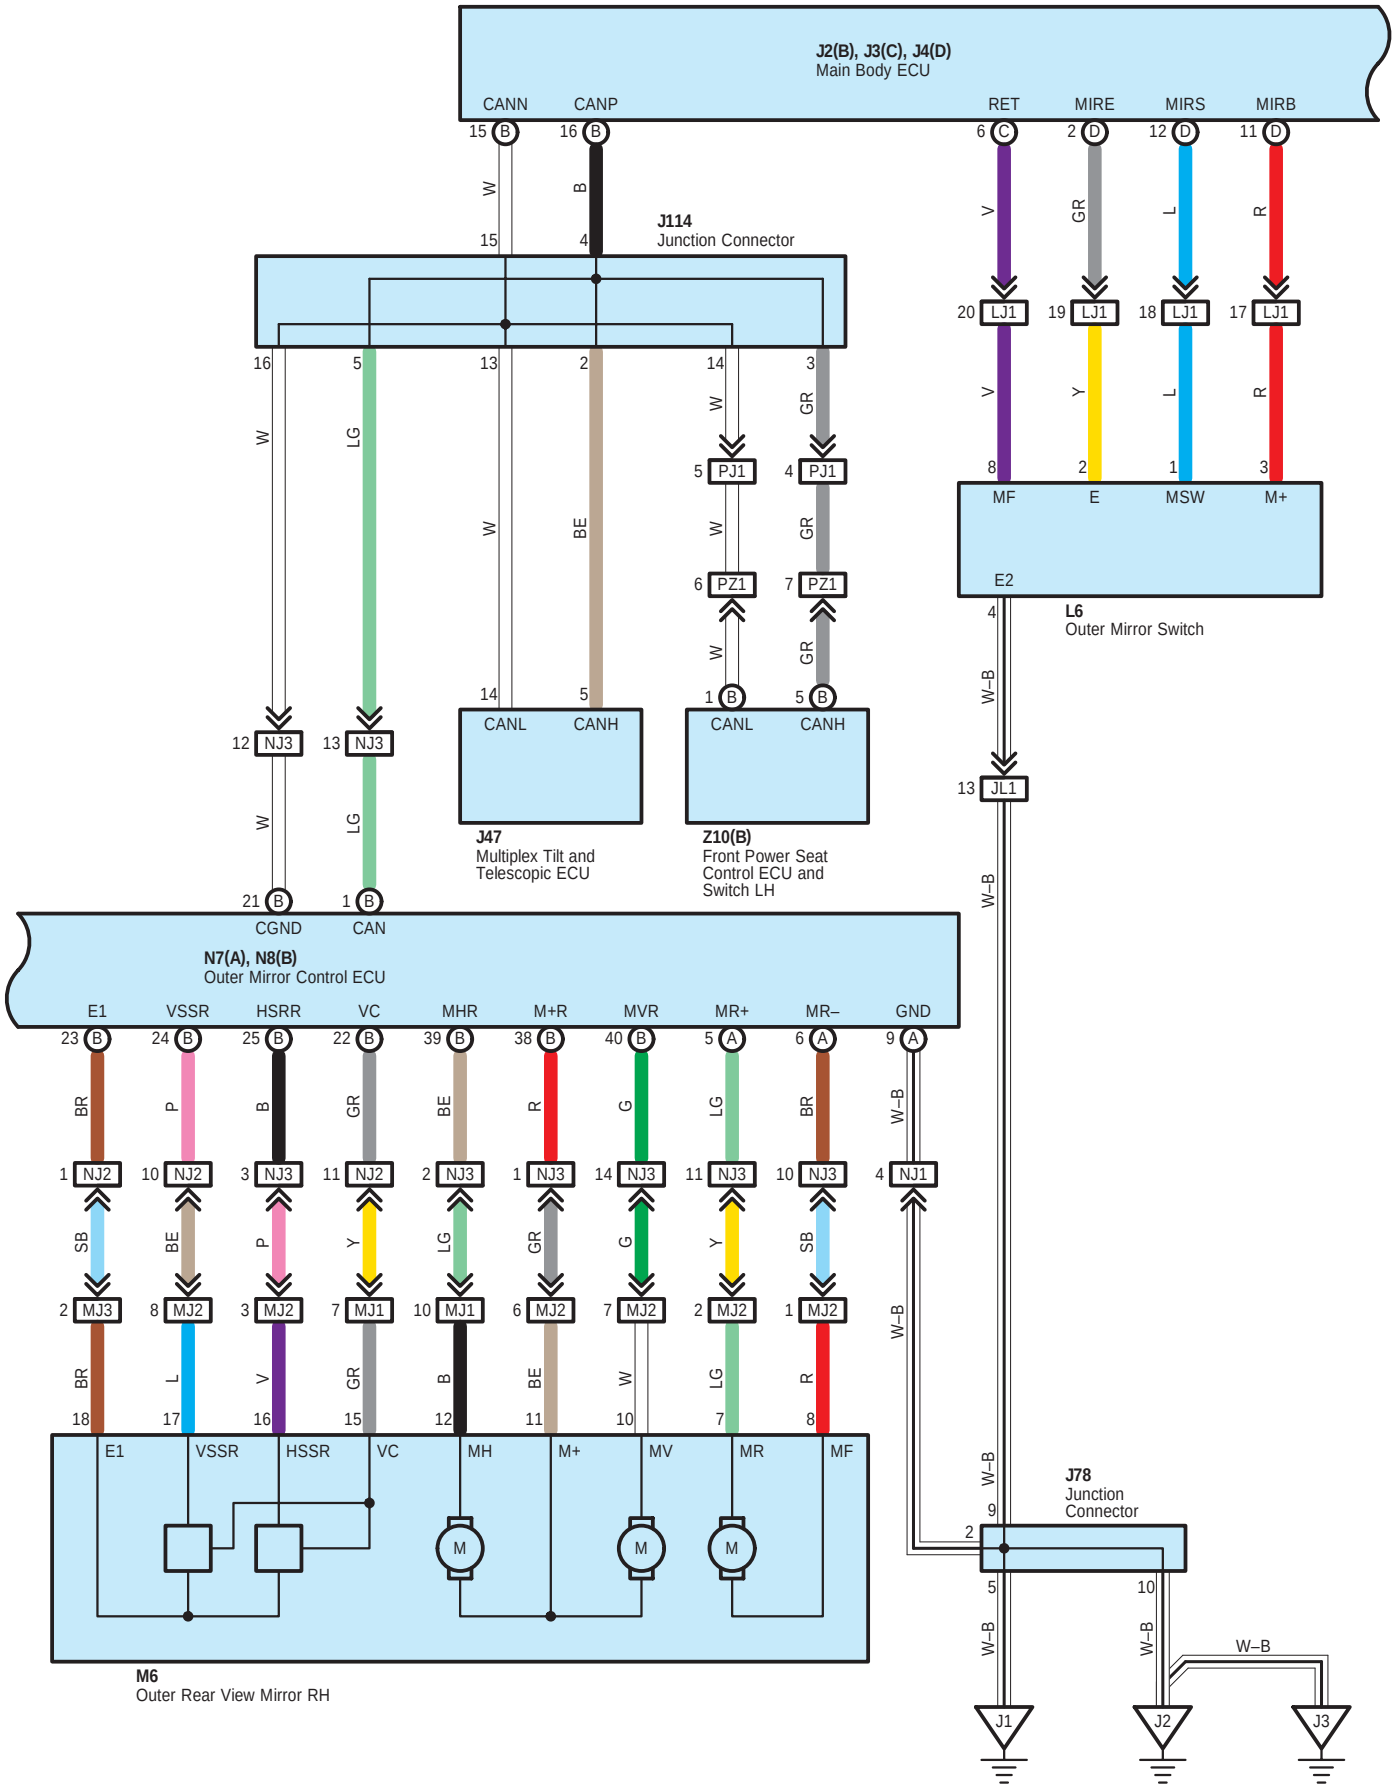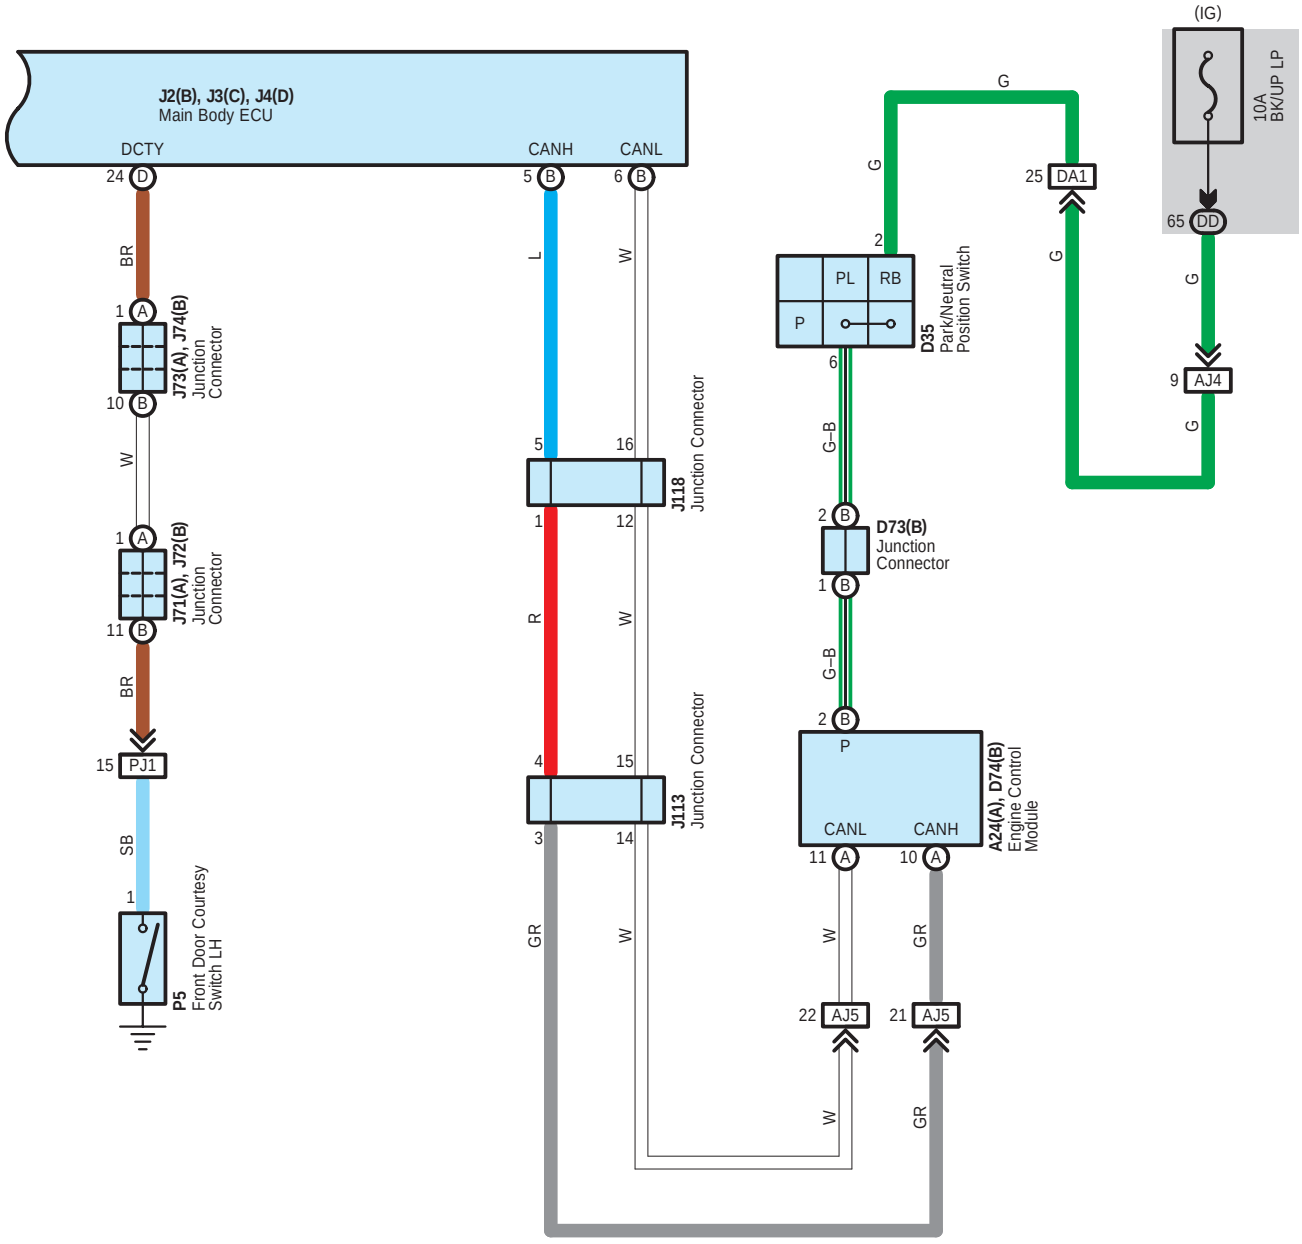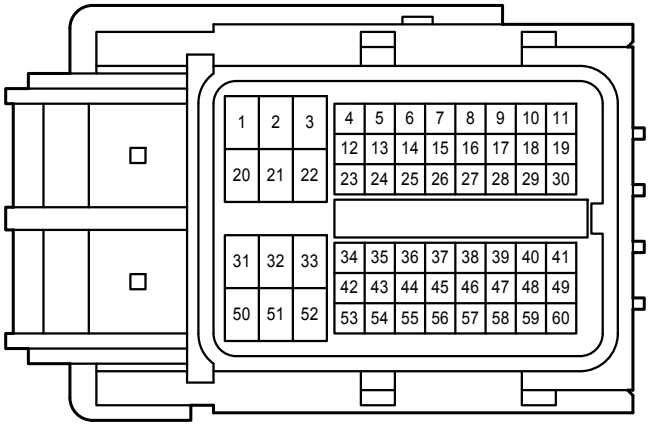


D 35
Gray

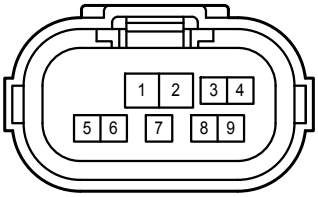


D 73
Blue

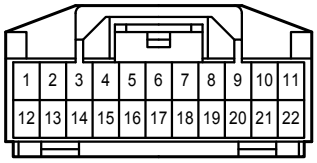


D 74
Black

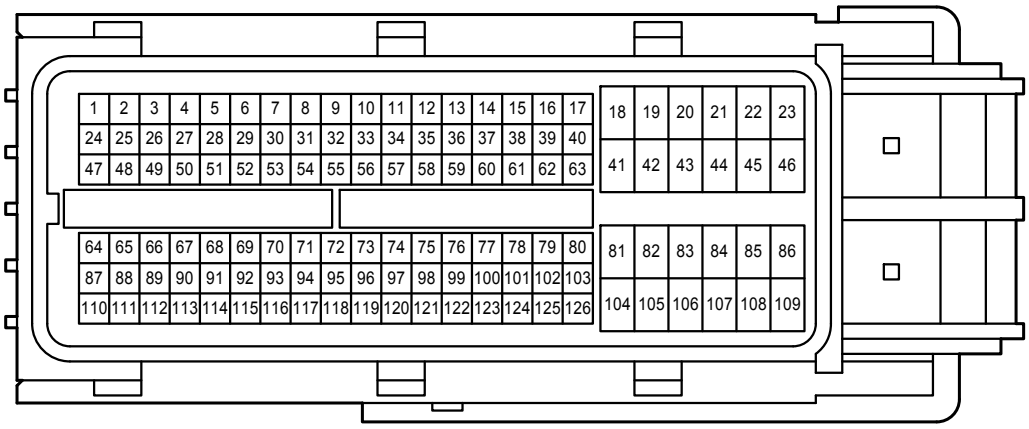


J 2
White

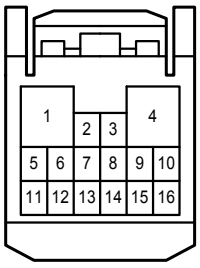


J 3
White

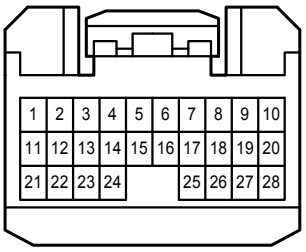


J 4
White

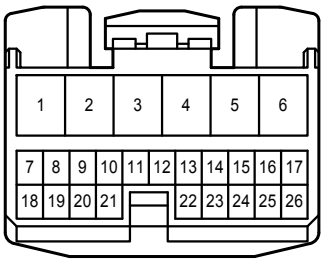


J 47
White

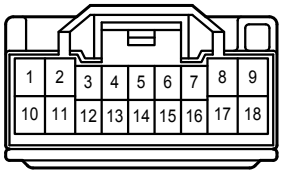


J 71
Black

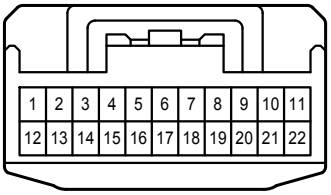


J 72
Black

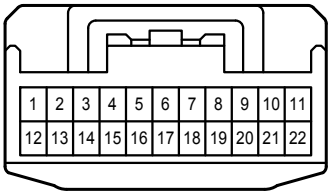


J 73
Black

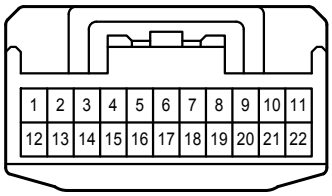


J 74
Black

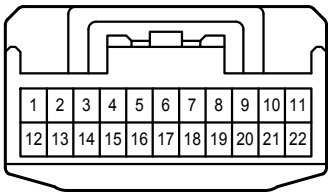


J 78
White

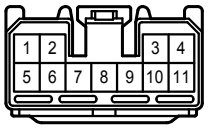


J113
Gray

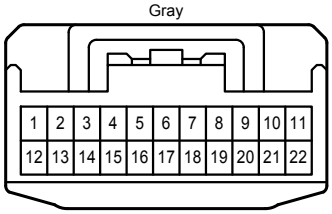


J114
Gray

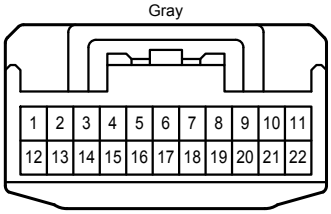


J118
Gray

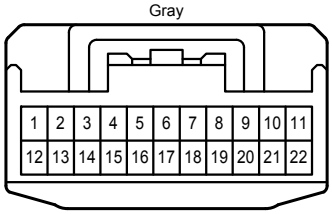


L 6
Black

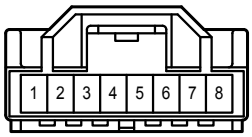


M 6
White

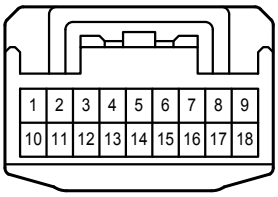


N 5
White

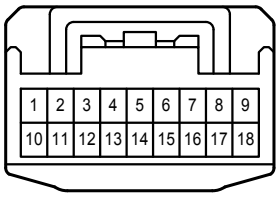


N 6
White



N 7
White

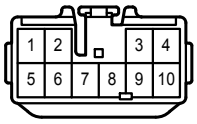


N 8
White

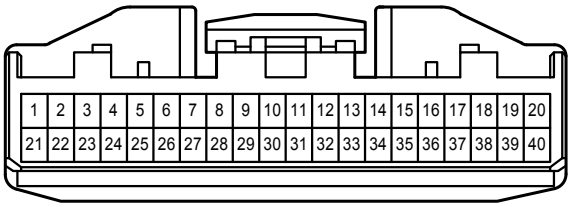


P 5
White




Z 10
White

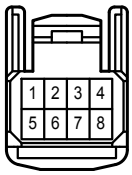


DD
White

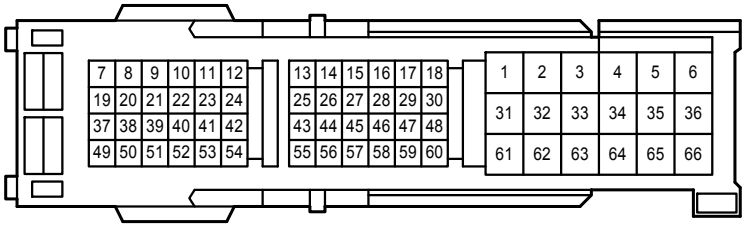


AJ4
White

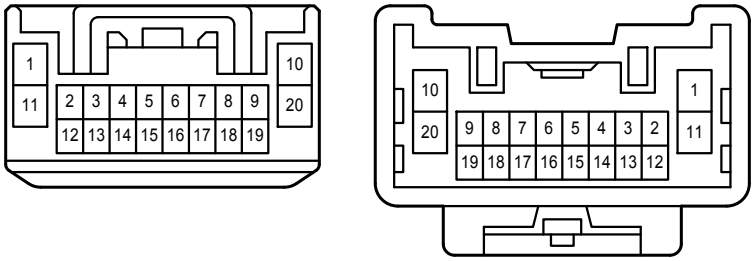


AJ5
White

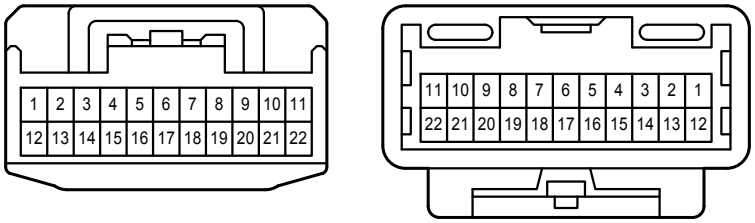


DA1
White

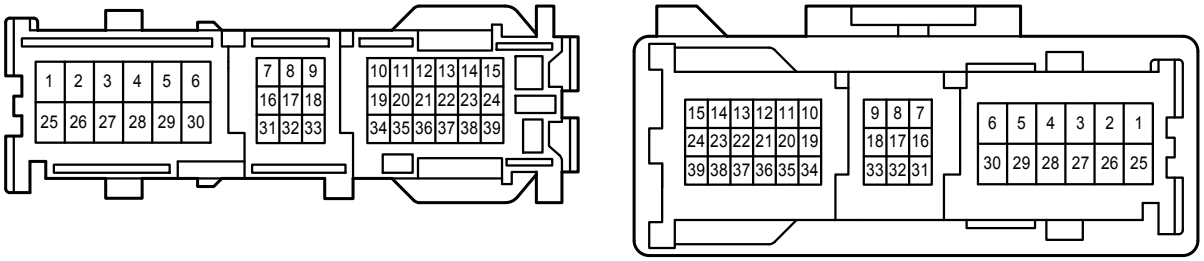


JL1
White

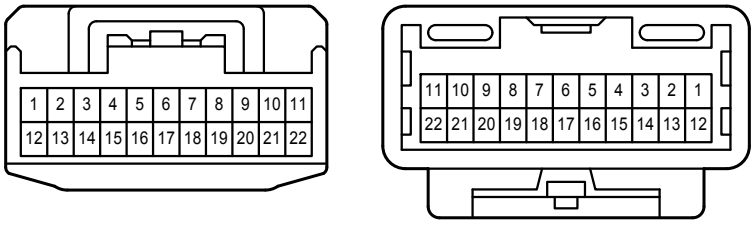


LJ1
White

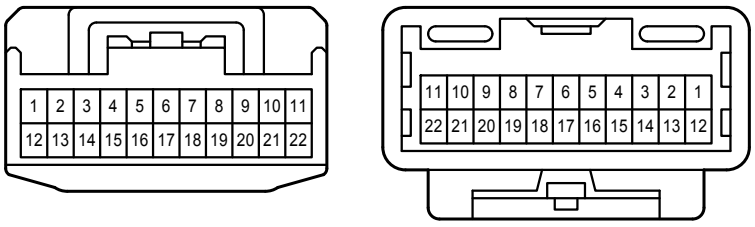


MJ1
Blue

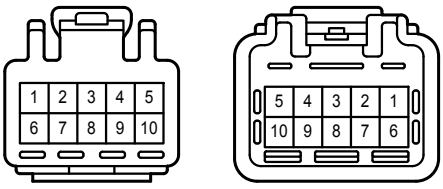


MJ2
Blue

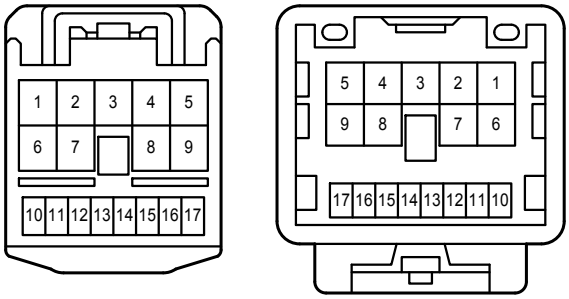


MJ3
Blue

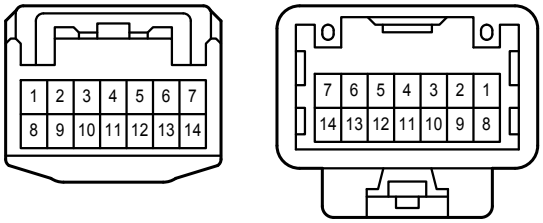


NJ1
Blue

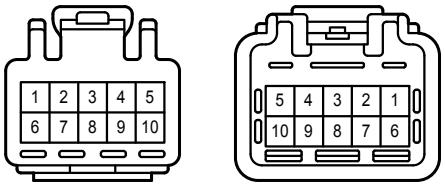


NJ2
Blue

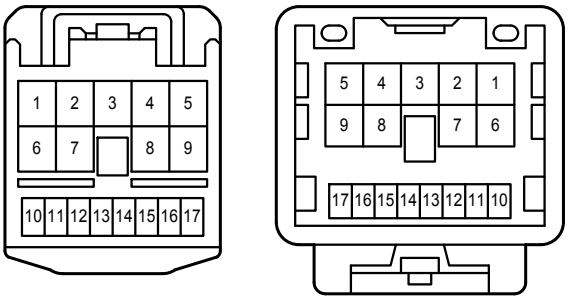


NJ3
Blue

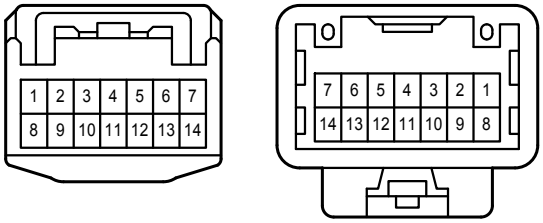

PJ1
Black

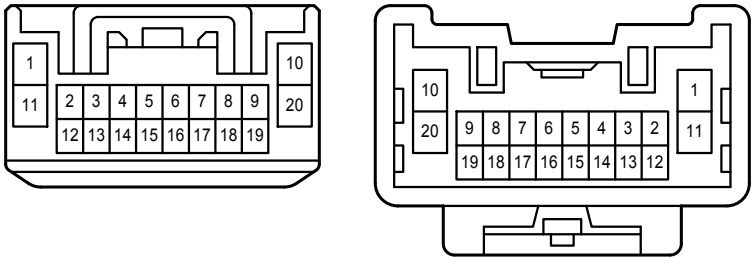

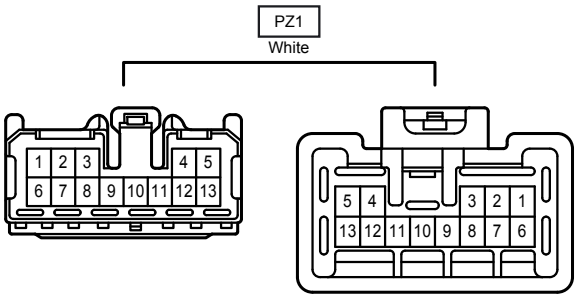
PZ1
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6